




IO-Link Interface and System

Specification

Version 1.1.4
June 2024

Order No: 10.002

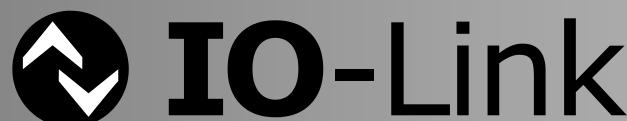

File name: IOL-Interface-Spec_10002_V114_Jun24.pdf

The IO-Link technology is standardized in IEC 61131-9 Edition 2. The IO-Link Community is a D-Liaison member in the corresponding IEC working group. This document covers all Change Requests within the IO-Link CR database up to ID 373.

Any comments, proposals, requests on this document are appreciated. Please use www.io-link-projects.com for your entries and provide name and email address.

Login: **IO-Link-V113**

Password: **Report**

Important notes:

NOTE 1 The IO-Link Community Rules shall be observed prior to the development and marketing of IO-Link products. The document can be downloaded from the www.io-link.com portal.

NOTE 2 Any IO-Link device shall provide an associated IODD file. Easy access to the file and potential updates shall be possible. It is the responsibility of the IO-Link device manufacturer to test the IODD file with the help of the IODD-Checker tool available per download from www.io-link.com.

NOTE 3 Any IO-Link devices shall provide an associated manufacturer declaration on the conformity of the device. A corresponding form with references to relevant documents is available per download from www.io-link.com.

Disclaimer:

The attention of adopters is directed to the possibility that compliance with or adoption of IO-Link Community specifications may require use of an invention covered by patent rights. The IO-Link Community shall not be responsible for identifying patents for which a license may be required by any IO-Link Community specification, or for conducting legal inquiries into the legal validity or scope of those patents that are brought to its attention. IO-Link Community specifications are prospective and advisory only. Prospective users are responsible for protecting themselves against liability for infringement of patents.

The information contained in this document is subject to change without notice. The material in this document details an IO-Link Community specification in accordance with the license and notices set forth on this page. This document does not represent a commitment to implement any portion of this specification in any company's products.

WHILE THE INFORMATION IN THIS PUBLICATION IS BELIEVED TO BE ACCURATE, THE IO-LINK COMMUNITY MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL INCLUDING, BUT NOT LIMITED TO ANY WARRANTY OF TITLE OR OWNERSHIP, IMPLIED WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR PARTICULAR PURPOSE OR USE.

In no event shall the IO-Link Community be liable for errors contained herein or for indirect, incidental, special, consequential, reliance or cover damages, including loss of profits, revenue, data or use, incurred by any user or any third party. Compliance with this specification does not absolve manufacturers of IO-Link equipment, from the requirements of safety and regulatory agencies (TÜV, BIA, UL, CSA, etc.).

 **IO-Link** ® is registered trade mark. The use is restricted for members of the IO-Link Community. More detailed terms for the use can be found in the IO-Link Community Rules on www.io-link.com.

Conventions:

In this specification the following key words (in **bold** text) will be used:

shall:	indicates a mandatory requirement. Designers shall implement such mandatory requirements to ensure interoperability and to claim conformity with this specification.
should:	indicates flexibility of choice with a strongly preferred implementation.
can:	indicates flexibility of choice with no implied preference (possibility and capability).
may:	indicates a permission.
highly recommended:	indicates that a feature shall be implemented except for well-founded cases. Vendor shall document the deviation within the user manual and within the manufacturer declaration.

Publisher:

IO-Link Community
c/o PROFIBUS Nutzerorganisation e.V.
Ohiostrasse 8
76149 Karlsruhe
Germany

Phone: +49 721 / 98 61 97 0
Fax: +49 721 / 98 61 97 11
E-mail: info@io-link.com
Web site: www.io-link.com

© No part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from the publisher.

© Copyright IO-Link Community – All Rights Reserved

CONTENTS

CONTENTS	3
INTRODUCTION.....	23
1 Scope.....	25
2 Normative references	25
3 Terms, definitions, symbols, abbreviated terms and conventions	26
3.1 Terms and definitions.....	26
3.2 Symbols and abbreviated terms	30
3.3 Conventions.....	32
3.3.1 General	32
3.3.2 Service parameters	32
3.3.3 Service procedures.....	33
3.3.4 Service attributes.....	33
3.3.5 Figures	33
3.3.6 Transmission octet order	34
3.3.7 Behavioral descriptions.....	34
4 Overview of SDCI (IO-Link™)	35
4.1 Purpose of technology	35
4.2 Positioning within the automation hierarchy	36
4.3 Wiring, connectors and power	36
4.4 Communication features of SDCI	37
4.5 Role of a Master	39
4.6 SDCI configuration.....	39
4.7 Mapping to fieldbuses and/or other upper level systems	40
4.8 Standard structure	40
5 Physical Layer (PL)	41
5.1 General.....	41
5.1.1 Basics	41
5.1.2 Topology	41
5.2 Physical layer services	42
5.2.1 Overview	42
5.2.2 PL services.....	43
5.3 Transmitter/Receiver.....	44
5.3.1 Description method.....	44
5.3.2 Electrical requirements	44
5.3.3 Timing requirements	49
5.4 Power supply	52
5.4.1 Power supply options.....	52
5.4.2 Port Class B	53
5.4.3 Power-on requirements.....	54
5.5 Medium.....	54
5.5.1 Connectors	54
5.5.2 Cable	55
6 Standard Input and Output (SIO)	56
7 Data link layer (DL).....	56

7.1	General.....	56
7.2	Data link layer services	58
7.2.1	DL-B services	58
7.2.2	DL-A services	68
7.3	Data link layer protocol	72
7.3.1	Overview	72
7.3.2	DL-mode handler	73
7.3.3	Message handler	81
7.3.4	Process Data handler	88
7.3.5	On-request Data handler	91
7.3.6	ISDU handler.....	94
7.3.7	Command handler	98
7.3.8	Event handler	100
8	Application layer (AL)	104
8.1	General.....	104
8.2	Application layer services	105
8.2.1	AL services within Master and Device.....	105
8.2.2	AL Services	105
8.3	Application layer protocol.....	112
8.3.1	Overview	112
8.3.2	On-request Data transfer	112
8.3.3	Event processing	118
8.3.4	Process Data cycles	121
9	System Management (SM).....	122
9.1	General.....	122
9.2	System Management of the Master	122
9.2.1	Overview	122
9.2.2	SM Master services	124
9.2.3	SM Master protocol.....	129
9.3	System Management of the Device	136
9.3.1	Overview	136
9.3.2	SM Device services	138
9.3.3	SM Device protocol	143
10	Device	150
10.1	Overview	150
10.2	Process Data Exchange (PDE)	151
10.3	Parameter Manager (PM).....	151
10.3.1	General	151
10.3.2	Parameter manager state machine	151
10.3.3	Dynamic parameter	153
10.3.4	Single parameter	154
10.3.5	Block Parameter	155
10.3.6	Concurrent parameterization access	158
10.3.7	Command handling.....	158
10.4	Data Storage (DS)	158
10.4.1	General	158
10.4.2	Data Storage state machine.....	159
10.4.3	DS configuration	161

10.4.4	DS memory space	161
10.4.5	DS Index_List	161
10.4.6	DS parameter availability	162
10.4.7	DS without ISDU	162
10.4.8	DS parameter change indication	162
10.5	Event Dispatcher (ED)	162
10.6	Device features	162
10.6.1	General	162
10.6.2	Device backward compatibility	162
10.6.3	Protocol revision compatibility	162
10.6.4	Visual SDCI indication	163
10.6.5	Parameter access locking	163
10.6.6	Data Storage locking	163
10.6.7	Locking of local parameter entries	163
10.6.8	Locking of local user interface	163
10.6.9	Offset time	163
10.6.10	Data Storage concept	164
10.6.11	Block Parameter	164
10.7	Device reset options	164
10.7.1	Overview	164
10.7.2	Device reset	165
10.7.3	Application reset	165
10.7.4	Restore factory settings	166
10.7.5	Back-to-box	166
10.7.6	Explanation on impacted items	166
10.8	Device design rules and constraints	167
10.8.1	General	167
10.8.2	Process Data	167
10.8.3	Communication loss	167
10.8.4	Direct Parameter	167
10.8.5	ISDU communication channel	167
10.8.6	DeviceID rules related to Device variants	168
10.8.7	Protocol constants	168
10.9	IO Device description (IODD)	168
10.10	Device diagnosis	169
10.10.1	Concepts	169
10.10.2	Events	170
10.10.3	Visual indicators	171
10.11	Device connectivity	172
11	Master	172
11.1	Overview	172
11.1.1	Positioning of Master and Gateway Applications	172
11.1.2	Structure, applications, and services of a Master	173
11.1.3	Object view of a Master and its ports	174
11.2	Services of the Standardized Master Interface (SMI)	174
11.2.1	Overview	174
11.2.2	Structure of SMI service arguments	176
11.2.3	Concurrency and prioritization of SMI services	177

11.2.4	SMI_MasterIdentification	177
11.2.5	SMI_PortConfiguration	178
11.2.6	SMI_ReadbackPortConfiguration	180
11.2.7	SMI_PortStatus	181
11.2.8	SMI_DSToParServ	182
11.2.9	SMI_ParServToDS	183
11.2.10	SMI_DeviceWrite	184
11.2.11	SMI_DeviceRead	186
11.2.12	SMI_ParamWriteBatch.....	187
11.2.13	SMI_ParamReadBatch.....	188
11.2.14	SMI_PortPowerOffOn	190
11.2.15	SMI_DeviceEvent	191
11.2.16	SMI_PortEvent	192
11.2.17	SMI_PDIn	193
11.2.18	SMI_PDOut	194
11.2.19	SMI_PDIoNOut	195
11.2.20	SMI_PDIoNIQ	196
11.2.21	SMI_PDOuTlQ.....	197
11.2.22	SMI_PDReadbackOutIQ	199
11.3	Configuration Manager (CM)	200
11.3.1	Coordination of Master applications	200
11.3.2	State machine of the Configuration Manager	202
11.4	Data Storage (DS)	206
11.4.1	Overview	206
11.4.2	DS data object.....	206
11.4.3	Backup and Restore	207
11.4.4	DS state machine	207
11.4.5	Parameter selection for Data Storage	213
11.5	On-request Data exchange (ODE).....	213
11.6	Diagnosis Unit (DU)	214
11.6.1	General	214
11.6.2	Device specific Events.....	214
11.6.3	Port specific Events	215
11.6.4	Dynamic diagnosis status	215
11.6.5	Best practice recommendations	215
11.7	PD Exchange (PDE)	216
11.7.1	General	216
11.7.2	Process Data input mapping	217
11.7.3	Process Data output mapping	218
11.7.4	Process Data invalid/valid qualifier status	219
11.8	Port power switching.....	220
12	Holistic view on Data Storage	221
12.1	User point of view	221
12.2	Operations and preconditions	221
12.2.1	Purpose and objectives	221
12.2.2	Preconditions for the activation of the Data Storage mechanism.....	221
12.2.3	Preconditions for the types of Devices to be replaced	221
12.2.4	Preconditions for the parameter sets	221

12.3	Commissioning	222
12.3.1	On-line commissioning	222
12.3.2	Off-site commissioning	222
12.4	Backup Levels	223
12.4.1	Purpose.....	223
12.4.2	Overview	223
12.4.3	Commissioning ("Disable")	223
12.4.4	Production ("Backup/Restore")	224
12.4.5	Production ("Restore")	224
12.5	Use cases	225
12.5.1	Device replacement (@ "Backup/Restore")	225
12.5.2	Device replacement (@ "Restore").....	225
12.5.3	Master replacement	225
12.5.4	Project replication.....	226
13	Integration	226
13.1	Generic Master model for system integration	226
13.2	Role of gateway applications	226
13.2.1	Clients	226
13.2.2	Coordination.....	227
13.3	Security	227
13.4	Special gateway applications	227
13.4.1	Changing Device configuration including Data Storage	227
13.4.2	Parameter server and recipe control	227
13.5	Port and Device Configuration Tool (PDCT)	227
13.5.1	Strategy.....	227
13.5.2	Accessing Masters via SMI	227
13.5.3	Basic layout examples	228
Annex A (normative)	Codings, timing constraints, and errors	230
A.1	General structure and encoding of M-sequences	230
A.1.1	Overview	230
A.1.2	M-sequence control (MC)	230
A.1.3	Checksum / M-sequence type (CKT).....	231
A.1.4	User data (PD or OD)	231
A.1.5	Checksum / status (CKS).....	232
A.1.6	Calculation of the checksum	232
A.2	M-sequence types.....	233
A.2.1	Overview	233
A.2.2	M-sequence TYPE_0	233
A.2.3	M-sequence TYPE_1_x	234
A.2.4	M-sequence TYPE_2_x	235
A.2.5	M-sequence type 3	237
A.2.6	M-sequence type usage for STARTUP, PREOPERATE and OPERATE modes	237
A.3	Timing constraints.....	239
A.3.1	General	239
A.3.2	Bit time	239
A.3.3	UART frame transmission delay of Master (ports)	240
A.3.4	UART frame transmission delay of Devices	240
A.3.5	Response time of Devices	240

A.3.6	M-sequence time	240
A.3.7	Cycle time	240
A.3.8	Idle time	241
A.3.9	Recovery time	241
A.4	Errors and remedies	241
A.4.1	UART errors	241
A.4.2	Wake-up errors	241
A.4.3	Transmission errors	242
A.4.4	Protocol errors	242
A.5	General structure and encoding of ISDUs	242
A.5.1	Overview	242
A.5.2	I-Service	242
A.5.3	Extended length (ExtLength)	243
A.5.4	Index and Subindex	244
A.5.5	Data	244
A.5.6	Check ISDU (CHKPDU)	244
A.5.7	ISDU examples	245
A.6	General structure and encoding of Events	246
A.6.1	General	246
A.6.2	StatusCode type 1 (no details)	246
A.6.3	StatusCode type 2 (with details)	247
A.6.4	EventQualifier	248
A.6.5	EventCode	249
Annex B (normative)	Parameter and commands	250
B.1	Direct Parameter page 1 and 2	250
B.1.1	Overview	250
B.1.2	MasterCommand	251
B.1.3	MasterCycleTime and MinCycleTime	252
B.1.4	M-sequenceCapability	253
B.1.5	RevisionID (RID)	253
B.1.6	ProcessDataIn	254
B.1.7	ProcessDataOut	255
B.1.8	VendorID (VID)	255
B.1.9	DeviceID (DID)	255
B.1.10	FunctionID (FID)	255
B.1.11	SystemCommand	255
B.1.12	Device specific Direct Parameter page 2	255
B.2	Predefined Device parameters	255
B.2.1	Overview	255
B.2.2	SystemCommand	258
B.2.3	DataStorageIndex	259
B.2.4	DeviceAccessLocks	261
B.2.5	ProfileCharacteristic	262
B.2.6	PDIInputDescriptor	262
B.2.7	PDOOutputDescriptor	262
B.2.8	VendorName	262
B.2.9	VendorText	262
B.2.10	ProductName	263

B.2.11	ProductID	263
B.2.12	ProductText	263
B.2.13	SerialNumber	263
B.2.14	HardwareRevision	263
B.2.15	FirmwareRevision	263
B.2.16	ApplicationSpecificTag	263
B.2.17	FunctionTag	263
B.2.18	LocationTag	263
B.2.19	ProductURI	263
B.2.20	ErrorCount	264
B.2.21	DeviceStatus	264
B.2.22	DetailedDeviceStatus	265
B.2.23	ProcessDataInput	265
B.2.24	ProcessDataOutput	265
B.2.25	OffsetTime	265
B.2.26	Profile parameter (reserved)	266
B.2.27	Preferred Index	266
B.2.28	Extended Index	266
B.2.29	Profile specific Index (reserved)	266
Annex C (normative) ErrorTypes (ISDU errors)		267
C.1	General	267
C.2	Application related ErrorTypes	267
C.2.1	Overview	267
C.2.2	Device application error – no details	268
C.2.3	Index not available	268
C.2.4	Subindex not available	268
C.2.5	Service temporarily not available	268
C.2.6	Service temporarily not available – local control	268
C.2.7	Service temporarily not available – device control	268
C.2.8	Access denied	268
C.2.9	Parameter value out of range	268
C.2.10	Parameter value above limit	268
C.2.11	Parameter value below limit	269
C.2.12	Parameter length overrun	269
C.2.13	Parameter length underrun	269
C.2.14	Function not available	269
C.2.15	Function temporarily unavailable	269
C.2.16	Invalid parameter set	269
C.2.17	Inconsistent parameter set	269
C.2.18	Application not ready	269
C.2.19	Vendor specific	269
C.3	Derived ErrorTypes	270
C.3.1	Overview	270
C.3.2	Master – Communication error	270
C.3.3	Master – ISDU timeout	270
C.3.4	Device Event – ISDU error	270
C.3.5	Device Event – ISDU illegal service primitive	270
C.3.6	Master – ISDU checksum error	270

C.3.7	Master – ISDU illegal service primitive.....	270
C.3.8	Device Event – ISDU buffer overflow	271
C.4	SMI related ErrorTypes	271
C.4.1	Overview	271
C.4.2	ArgBlock unknown	271
C.4.3	Incorrect ArgBlock content type	271
C.4.4	Device not communicating	271
C.4.5	Service unknown	271
C.4.6	Process Data not accessible	271
C.4.7	Insufficient memory	271
C.4.8	Incorrect Port number	271
C.4.9	Incorrect ArgBlock content.....	272
C.4.10	Incorrect ArgBlock length.....	272
C.4.11	Master busy.....	272
C.4.12	Inconsistent DS data	272
C.4.13	Device/Master error	272
Annex D (normative)	EventCodes (diagnosis information)	273
D.1	General.....	273
D.2	EventCodes for Devices	273
D.3	EventCodes for Ports	275
Annex E (normative)	Coding of ArgBlocks.....	278
E.1	General.....	278
E.2	MasterIdent.....	279
E.3	PortConfigList	280
E.4	PortStatusList	281
E.5	On-request_Data	283
E.6	DS_Data	283
E.7	DeviceParBatch	284
E.8	IndexList	284
E.9	PortPowerOffOn.....	285
E.10	PDIn	285
E.11	PDOOut.....	286
E.12	PDInOut.....	286
E.13	PDInIQ.....	287
E.14	PDOOutIQ	287
E.15	DeviceEvent	288
E.16	PortEvent.....	288
E.17	VoidBlock	288
E.18	JobError.....	288
Annex F (normative)	Data types	290
F.1	General.....	290
F.2	Basic data types	290
F.2.1	General	290
F.2.2	BooleanT	290
F.2.3	UIntegerT	290
F.2.4	IntegerT	291
F.2.5	Float32T	292
F.2.6	StringT	293

F.2.7	OctetStringT	294
F.2.8	TimeT	294
F.2.9	TimeSpanT	295
F.3	Composite data types	296
F.3.1	General	296
F.3.2	ArrayT	296
F.3.3	RecordT	297
Annex G (normative)	Structure of the Data Storage data object	300
Annex H (normative)	Master and Device conformity	301
H.1	Electromagnetic compatibility requirements (EMC)	301
H.1.1	General	301
H.1.2	Operating conditions	301
H.1.3	Performance criteria	301
H.1.4	Required immunity tests	302
H.1.5	Required emission tests	303
H.1.6	Test configurations for Master	303
H.1.7	Test configurations for Devices	304
H.2	Test strategies for conformity	306
H.2.1	Test of a Device	306
H.2.2	Test of a Master	306
Annex I (informative)	Residual error probabilities	307
I.1	Residual error probability of the SDCI data integrity mechanism	307
I.2	Derivation of EMC test conditions	307
Annex J (informative)	Example sequence of an ISDU transmission	309
Annex K (informative)	Recommended methods for detecting parameter changes	311
K.1	CRC signature	311
K.2	Revision counter	311
Bibliography	312
Figure 1 – Example of a confirmed service	33	
Figure 2 – Memory storage and transmission order for WORD based data types	34	
Figure 3 – Example of a nested state	34	
Figure 4 – SDCI compatibility with IEC 61131-2	35	
Figure 5 – Domain of the SDCI technology within the automation hierarchy	36	
Figure 6 – Generic Device model for SDCI (Master's view)	37	
Figure 7 – Relationship between nature of data and transmission types	38	
Figure 8 – Object transfer at the application layer level (AL)	39	
Figure 9 – Logical structure of Master and Device	40	
Figure 10 – Three wire connection system	41	
Figure 11 – Topology of SDCI	41	
Figure 12 – Physical layer (Master)	42	
Figure 13 – Physical layer (Device)	42	
Figure 14 – Line driver reference schematics	45	
Figure 15 – Receiver reference schematics	45	
Figure 16 – Reference schematics for SDCI 3-wire connection system	45	

Figure 17 – Voltage level definitions	46
Figure 18 – Switching thresholds	47
Figure 19 – Inrush current and charge (example)	48
Figure 20 – Power-on timing for Power 1	49
Figure 21 – Format of an SDCI UART frame	49
Figure 22 – Eye diagram for the 'H' and 'L' detection	50
Figure 23 – Eye diagram for the correct detection of a UART frame	50
Figure 24 – Wake-up request	52
Figure 25 – Class A and B port definitions	53
Figure 26 – Pin layout front view	55
Figure 27 – Reference schematic for effective line capacitance and loop resistance	56
Figure 28 – Structure and services of the data link layer (Master)	57
Figure 29 – Structure and services of the data link layer (Device)	58
Figure 30 – State machines of the data link layer	72
Figure 31 – Example of an attempt to establish communication	73
Figure 32 – Failed attempt to establish communication	74
Figure 33 – Retry strategy to establish communication	74
Figure 34 – Fallback procedure	75
Figure 35 – State machine of the Master DL-mode handler	76
Figure 36 – Submachine 1 to establish communication	77
Figure 37 – State machine of the Device DL-mode handler	79
Figure 38 – SDCI message sequences	81
Figure 39 – Overview of M-sequence types	82
Figure 40 – State machine of the Master message handler	83
Figure 41 – Submachine "Response 3" of the message handler	84
Figure 42 – Submachine "Response 8" of the message handler	84
Figure 43 – Submachine "Response 15" of the message handler	84
Figure 44 – State machine of the Device message handler	87
Figure 45 – Interleave mode for the segmented transmission of Process Data	89
Figure 46 – State machine of the Master Process Data handler	89
Figure 47 – State machine of the Device Process Data handler	90
Figure 48 – State machine of the Master On-request Data handler	92
Figure 49 – State machine of the Device On-request Data handler	93
Figure 50 – Structure of the ISDU	94
Figure 51 – State machine of the Master ISDU handler	95
Figure 52 – State machine of the Device ISDU handler	97
Figure 53 – State machine of the Master command handler	98
Figure 54 – State machine of the Device command handler	99
Figure 55 – State machine of the Master Event handler	101
Figure 56 – State machine of the Device Event handler	102
Figure 57 – Structure and services of the application layer (Master)	104
Figure 58 – Structure and services of the application layer (Device)	104
Figure 59 – OD state machine of the Master AL	113

Figure 60 – OD state machine of the Device AL	114
Figure 61 – Sequence diagram for the transmission of On-request Data	116
Figure 62 – Sequence diagram for On-request Data in case of errors	117
Figure 63 – Sequence diagram for On-request Data in case of timeout	117
Figure 64 – Event state machine of the Master AL	118
Figure 65 – Event state machine of the Device AL	119
Figure 66 – Single Event scheduling	120
Figure 67 – Sequence diagram for output Process Data	121

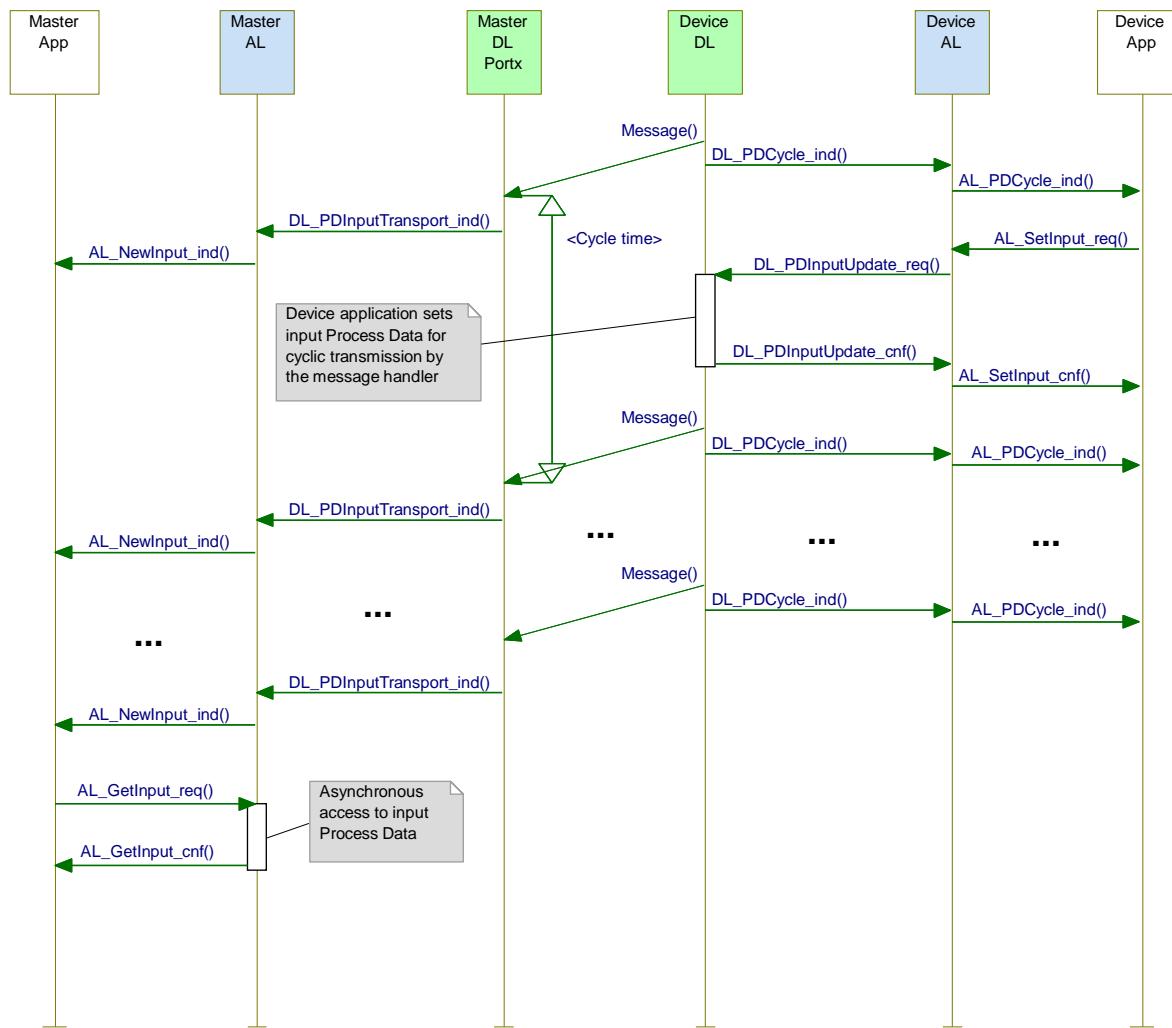


Figure 68 – Sequence diagram for input Process Data 122

Figure 69 – Structure and services of the Master System Management.....	123
Figure 70 – Sequence chart of the use case "port x setup"	124
Figure 71 – Main state machine of the Master System Management	130

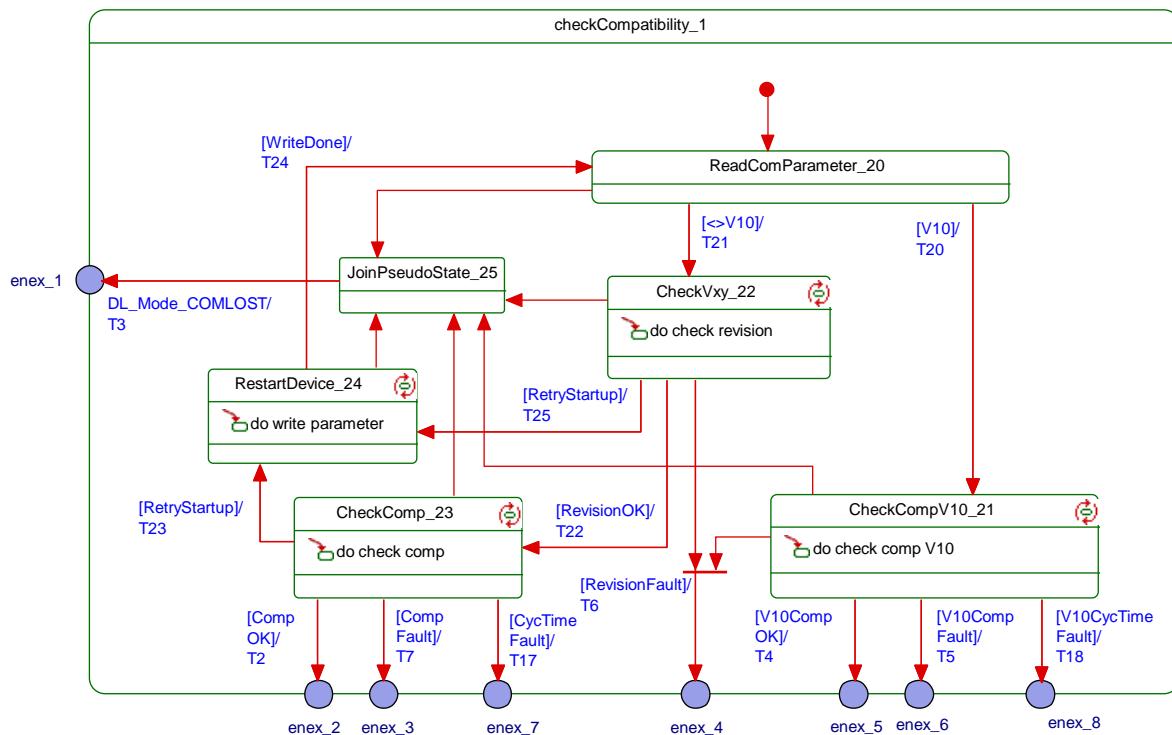


Figure 72 – SM Master submachine CheckCompatibility_1 132

Figure 73 – Activity for state "CheckVxy"	133
Figure 74 – Activity for state "CheckCompV10"	134
Figure 75 – Activity for state "CheckComp"	134
Figure 76 – Activity (write parameter) in state "RestartDevice"	135
Figure 77 – SM Master submachine checkSerNum_3.....	135
Figure 78 – Activity (check SerialNumber) for state CheckSerNum_31	136
Figure 79 – Structure and services of the System Management (Device)	137
Figure 80 – Sequence chart of the use case "INACTIVE – SIO – SDCI – SIO"	138
Figure 81 – State machine of the Device System Management	144
Figure 82 – Sequence chart of a regular Device startup	147
Figure 83 – Sequence chart of a Device startup in compatibility mode	148
Figure 84 – Sequence chart of a Device startup when compatibility fails.....	149
Figure 85 – Structure and services of a Device	150
Figure 86 – The Parameter Manager (PM) state machine	152
Figure 87 – Positive and negative parameter checking result	154
Figure 88 – Positive Block Parameter download with Data Storage request	156
Figure 89 – Negative Block Parameter download	157
Figure 90 – The Data Storage (DS) state machine	159
Figure 91 – Data Storage request message sequence	161
Figure 92 – Cycle timing	164
Figure 93 – Event flow in case of successive errors	170
Figure 94 – Device LED indicator timing	171
Figure 95 – Generic relationship of SDCI and automation technology	173
Figure 96 – Structure, applications, and services of a Master	173

Figure 97 – Object model of Master and Ports	174
Figure 98 – SMI services	175
Figure 99 – Coordination of Master applications	200
Figure 100 – Sequence diagram of start-up via Configuration Manager.....	202
Figure 101 – State machine of the Configuration Manager	203
Figure 102 – Activity for state "CheckPortMode_0"	206
Figure 103 – Main state machine of the Data Storage mechanism	207
Figure 104 – Submachine "UpDownload_2" of the Data Storage mechanism	208
Figure 105 – Data Storage submachine "Upload_7"	209
Figure 106 – Data Storage upload sequence diagram	209
Figure 107 – Data Storage submachine "Download_10"	210
Figure 108 – Data Storage download sequence diagram.....	210
Figure 109 – State machine of the On-request Data Exchange	213
Figure 110 – DeviceEvent flow control	215
Figure 111 – Port Event flow control	215
Figure 112 – SDCI diagnosis information propagation via Events.....	216
Figure 113 – Principles of Process Data Input mapping	217
Figure 114 – Port Qualifier Information (PQI)	217
Figure 115 – Principles of Process Data Output mapping	218
Figure 116 – Propagation of PD qualifier status between Master and Device	219
Figure 117 – Port power state machine.....	220
Figure 118 – Active and backup parameter	222
Figure 119 – Off-site commissioning	222
Figure 120 – Generic Master Model for system integration	226
Figure 121 – PDCT via gateway application	228
Figure 122 – Example 1 of a PDCT display layout.....	228
Figure 123 – Example 2 of a PDCT display layout.....	229
Figure A.1 – M-sequence control	230
Figure A.2 – Checksum/M-sequence type octet	231
Figure A.3 – Checksum/status octet.....	232
Figure A.4 – Principle of the checksum calculation and compression	233
Figure A.5 – M-sequence TYPE_0	234
Figure A.6 – M-sequence TYPE_1_1	234
Figure A.7 – M-sequence TYPE_1_2	234
Figure A.8 – M-sequence TYPE_1_V	235
Figure A.9 – M-sequence TYPE_2_1	235
Figure A.10 – M-sequence TYPE_2_2	236
Figure A.11 – M-sequence TYPE_2_3	236
Figure A.12 – M-sequence TYPE_2_4	236
Figure A.13 – M-sequence TYPE_2_5	237
Figure A.14 – M-sequence TYPE_2_V	237
Figure A.15 – M-sequence timing.....	240
Figure A.16 – I-Service octet	242

Figure A.17 – Check of ISDU integrity via CHKPDU	244
Figure A.18 – Examples of request formats for ISDUs.....	245
Figure A.19 – Examples of response ISDUs.....	246
Figure A.20 – Examples of read and write request ISDUs	246
Figure A.21 – Structure of StatusCode type 1	247
Figure A.22 – Structure of StatusCode type 2	247
Figure A.23 – Indication of activated Events	248
Figure A.24 – Structure of the EventQualifier	248
Figure B.1 – Classification and mapping of Direct Parameters	250
Figure B.2 – MinCycleTime	252
Figure B.3 – M-sequenceCapability.....	253
Figure B.4 – RevisionID	254
Figure B.5 – ProcessDataIn	254
Figure B.6 – Index space for ISDU data objects	256
Figure B.7 – Structure of the OffsetTime	266
Figure E.1 – Assignment of ArgBlock identifiers	278
Figure F.1 – Coding example of small UIntegerT	290
Figure F.2 – Coding example of large UIntegerT	291
Figure F.3 – Coding examples of IntegerT	292
Figure F.4 – Singular access of StringT	294
Figure F.5 – Coding example of OctetStringT	294
Figure F.6 – Definition of TimeT.....	295
Figure F.7 – Example of an ArrayT data structure	297
Figure F.8 – Example 2 of a RecordT structure	298
Figure F.9 – Example 3 of a RecordT structure	298
Figure F.10 – Write requests for example 3	299
Figure H.1 – Test setup for electrostatic discharge (Master)	303
Figure H.2 – Test setup for RF electromagnetic field (Master).....	303
Figure H.3 – Test setup for fast transients (Master)	304
Figure H.4 – Test setup for RF common mode (Master)	304
Figure H.5 – Test setup for electrostatic discharges (Device).....	305
Figure H.6 – Test setup for RF electromagnetic field (Device).....	305
Figure H.7 – Test setup for fast transients (Device)	305
Figure H.8 – Test setup for RF common mode (Device)	305
Figure I.1 – Residual error probability for the SDCI data integrity mechanism	307
Figure J.1 – Example for ISDU transmissions (1 of 2)	309
 Table 1 – Service assignments of Master and Device	43
Table 2 – PL_SetMode	43
Table 3 – PL_WakeUp	43
Table 4 – PL_Transfer	44
Table 5 – Electrical characteristics of a receiver	46
Table 6 – Electrical characteristics of a Master port	47

Table 7 – Electrical characteristics of a Device	48
Table 8 – Power-on timing	49
Table 9 – Dynamic characteristics of the transmission	51
Table 10 – Wake-up request characteristics.....	52
Table 11 – Electrical characteristic of a Master port class B.....	54
Table 12 – Master pin assignments.....	54
Table 13 – Device pin assignments.....	55
Table 14 – Cable characteristics	56
Table 15 – Cable conductor assignments.....	56
Table 16 – Service assignments within Master and Device	58
Table 17 – DL_ReadParam.....	59
Table 18 – DL_WriteParam	60
Table 19 – DL_Read	60
Table 20 – DL_Write	61
Table 21 – DL_ISDUTransport	62
Table 22 – DL_ISDUAabort.....	63
Table 23 – DL_PDOoutputUpdate	63
Table 24 – DL_PDOoutputTransport	63
Table 25 – DL_PDIinputUpdate	64
Table 26 – DL_PDIinputTransport.....	64
Table 27 – DL_PDCycle	65
Table 28 – DL_SetMode	65
Table 29 – DL_Mode	66
Table 30 – DL_Event	66
Table 31 – DL_EventConf	67
Table 32 – DL_EventTrigger	67
Table 33 – DL_Control	67
Table 34 – DL-A services within Master and Device	68
Table 35 – OD	69
Table 36 – PD	70
Table 37 – EventFlag.....	71
Table 38 – PDIInStatus	71
Table 39 – MHInfo	71
Table 40 – ODTrig	72
Table 41 – PDTTrig.....	72
Table 42 – Wake-up procedure and retry characteristics	74
Table 43 – Fallback timing characteristics.....	75
Table 44 – State transition tables of the Master DL-mode handler	77
Table 45 – State transition tables of the Device DL-mode handler	80
Table 46 – State transition table of the Master message handler	84
Table 47 – State transition tables of the Device message handler.....	88
Table 48 – State transition tables of the Master Process Data handler	90
Table 49 – State transition tables of the Device Process Data handler	91

Table 50 – State transition tables of the Master On-request Data handler	92
Table 51 – State transition tables of the Device On-request Data handler	93
Table 52 – FlowCTRL definitions	95
Table 53 – State transition tables of the Master ISDU handler	96
Table 54 – State transition tables of the Device ISDU handler	97
Table 55 – Control codes	98
Table 56 – State transition tables of the Master command handler.....	99
Table 57 – State transition tables of the Device command handler.....	100
Table 58 – Event memory	100
Table 59 – State transition tables of the Master Event handler.....	102
Table 60 – State transition tables of the Device Event handler.....	103
Table 61 – AL services within Master and Device	105
Table 62 – AL_Read	105
Table 63 – AL_Write	106
Table 64 – AL_Abort	107
Table 65 – AL_GetInput	108
Table 66 – AL_NewInput.....	108
Table 67 – AL_SetInput	109
Table 68 – AL_PDCycle	109
Table 69 – AL_GetOutput	110
Table 70 – AL_NewOutput	110
Table 71 – AL_SetOutput.....	110
Table 72 – AL_Event	111
Table 73 – AL_Control	112
Table 74 – States and transitions for the OD state machine of the Master AL	113
Table 75 – States and transitions for the OD state machine of the Device AL	115
Table 76 – State and transitions of the Event state machine of the Master AL.....	118
Table 77 – State and transitions of the Event state machine of the Device AL.....	119
Table 78 – SM services within the Master	125
Table 79 – SM_SetPortConfig.....	125
Table 80 – Definition of the InspectionLevel (IL)	126
Table 81 – Definitions of the Target Modes	126
Table 82 – SM_GetPortConfig	127
Table 83 – SM_PortMode	128
Table 84 – SM_Operate	128
Table 85 – State transition tables of the Master System Management.....	130
Table 86 – State transition tables of the Master submachine CheckCompatibility_1	132
Table 87 – State transition tables of the Master submachine checkSerNum_3	135
Table 88 – SM services within the Device	138
Table 89 – SM_SetDeviceCom	139
Table 90 – SM_GetDeviceCom	140
Table 91 – SM_SetDeviceIdent	141
Table 92 – SM_GetDeviceIdent	142

Table 93 – SM_SetDeviceMode	143
Table 94 – SM_DeviceMode	143
Table 95 – State transition tables of the Device System Management	145
Table 96 – State transition tables of the PM state machine	152
Table 97 – Sequence of parameter checks	155
Table 98 – Steps and rules for Block Parameter checking	157
Table 99 – Prioritized ISDU responses on command parameters	158
Table 100 – State transition table of the Data Storage state machine	159
Table 101 – Overview on reset options and their impact on Devices	165
Table 102 – Overview of the protocol constants for Devices	168
Table 103 – Classification of Device diagnosis incidents	169
Table 104 – Timing for LED indicators	172
Table 105 – SMI services.....	175
Table 106 – SMI_MasterIdentification	177
Table 107 – SMI_PortConfiguration	178
Table 108 – SMI_ReadbackPortConfiguration	180
Table 109 – SMI_PortStatus	181
Table 110 – SMI_DSToParServ	182
Table 111 – SMI_ParServToDS	183
Table 112 – SMI_DeviceWrite	185
Table 113 – SMI_DeviceRead.....	186
Table 114 – SMI_ParamWriteBatch	187
Table 115 – SMI_ParamReadBatch	189
Table 116 – SMI_PortPowerOffOn	190
Table 117 – SMI_DeviceEvent	191
Table 118 – SMI_PortEvent	192
Table 119 – SMI_PDIn	193
Table 120 – SMI_PDOOut	194
Table 121 – SMI_PDInOut	195
Table 122 – SMI_PDIInIQ	196
Table 123 – SMI_PDOOutIQ.....	198
Table 124 – SMI_PDReadbackOutIQ	199
Table 125 – Internal variables and Events controlling Master applications	200
Table 126 – State transition tables of the Configuration Manager.....	203
Table 127 – States and transitions of the Data Storage state machines	211
Table 128 – State transition table of the ODE state machine	214
Table 129 – States and Transitions of the Port power state machine	220
Table 130 – Recommended Data Storage Backup Levels	223
Table 131 – Criteria for backing up parameters ("Backup/Restore")	224
Table 132 – Criteria for backing up parameters ("Restore").....	225
Table A.1 – Values of communication channel	230
Table A.2 – Values of R/W	230
Table A.3 – Values of M-sequence types	231

Table A.4 – Data types for user data.....	231
Table A.5 – Values of PD status	232
Table A.6 – Values of the Event flag	232
Table A.7 – M-sequence types for the STARTUP mode	237
Table A.8 – M-sequence types for the PREOPERATE mode	238
Table A.9 – M-sequence types for the OPERATE mode (legacy protocol)	238
Table A.10 – M-sequence types for the OPERATE mode	239
Table A.11 – Recommended MinCycleTimes	241
Table A.12 – Definition of the nibble "I-Service"	242
Table A.13 – ISDU syntax.....	243
Table A.14 – Definition of nibble Length and octet ExtLength.....	243
Table A.15 – Use of Index formats	244
Table A.16 – Mapping of EventCodes (type 1)	247
Table A.17 – Values of INSTANCE	248
Table A.18 – Values of SOURCE	249
Table A.19 – Values of TYPE.....	249
Table A.20 – Values of MODE	249
Table B.1 – Direct Parameter page 1 and 2	251
Table B.2 – Types of MasterCommands.....	251
Table B.3 – Possible values of MasterCycleTime and MinCycleTime	253
Table B.4 – Values of ISDU	253
Table B.5 – Values of SIO.....	254
Table B.6 – Permitted combinations of BYTE and Length	254
Table B.7 – Implementation rules for parameters and commands.....	256
Table B.8 – Index assignment of data objects (Device parameter)	256
Table B.9 – Coding of SystemCommand	259
Table B.10 – DataStorageIndex assignments	259
Table B.11 – Structure of Index_List	261
Table B.12 – Device locking possibilities.....	261
Table B.13 – DeviceStatus parameter.....	264
Table B.14 – DetailedDeviceStatus (Index 0x0025).....	265
Table B.15 – Time base coding and values of OffsetTime	266
Table C.1 – ErrorTypes.....	267
Table C.2 – Derived ErrorTypes.....	270
Table C.3 – SMI related ErrorTypes	271
Table D.1 – EventCodes for Devices.....	273
Table D.2 – EventCodes for Ports	275
Table E.1 – ArgBlock types and their ArgBlockIDs	278
Table E.2 – MasterIdent.....	279
Table E.3 – PortConfigList	280
Table E.4 – PortStatusList	281
Table E.5 – On-request_Data	283
Table E.6 – DS_Data	284

Table E.7 – DeviceParBatch	284
Table E.8 – IndexList	285
Table E.9 – PortPowerOffOn	285
Table E.10 – PDIn	285
Table E.11 – PDOOut	286
Table E.12 – PDInOut	286
Table E.13 – PDInIQ	287
Table E.14 – PDOOutIQ	288
Table E.15 – DeviceEvent	288
Table E.16 – PortEvent	288
Table E.17 – VoidBlock	288
Table E.18 – JobError	289
Table F.1 – BooleanT	290
Table F.2 – BooleanT coding	290
Table F.3 – UIntegerT	291
Table F.4 – IntegerT	291
Table F.5 – IntegerT coding (8 octets)	291
Table F.6 – IntegerT coding (4 octets)	292
Table F.7 – IntegerT coding (2 octets)	292
Table F.8 – IntegerT coding (1 octet)	292
Table F.9 – Float32T	293
Table F.10 – Coding of Float32T	293
Table F.11 – StringT	293
Table F.12 – OctetStringT	294
Table F.13 – TimeT	295
Table F.14 – Coding of TimeT	295
Table F.15 – TimeSpanT	295
Table F.16 – Coding of TimeSpanT	296
Table F.17 – Structuring rules for ArrayT	296
Table F.18 – Example for the access of an ArrayT	296
Table F.19 – Structuring rules for RecordT	297
Table F.20 – Example 1 for the access of a RecordT	297
Table F.21 – Example 2 for the access of a RecordT	298
Table F.22 – Example 3 for the access of a RecordT	298
Table G.1 – Structure of the stored DS data object	300
Table G.2 – Associated header information for stored DS data objects	300
Table H.1 – EMC test conditions for SDCI	301
Table H.2 – EMC test levels	302
Table K.1 – Proper CRC generator polynomials	311

Revision Log

Version	Date	Change Note / History / Reason
V1.0	January 2009	First released version
V1.1	November 2010	Released version in line with IEC 61131-9
V1.1.1	October 2011	Released version
V1.1.2	November 2012	Released version for package 2015
V1.1.3	June 2019	Released version for package 2020
D1.1.4-03	May 2024	Version V1.1.4 with markups and CRs
V1.1.4	June 2024	Released version for package 2024

1 INTRODUCTION

2 **0.1 General**

3 IEC 61131-9 is part of a series of standards on programmable controllers and the associated
4 peripherals and should be read in conjunction with the other parts of the series.

5 Where a conflict exists between this and other IEC standards (except basic safety standards),
6 the provisions of this standard should be considered to govern in the area of programmable
7 controllers and their associated peripherals.

8 The increased use of micro-controllers embedded in low-cost sensors and actuators has
9 provided opportunities for adding diagnosis and configuration data to support increasing
10 application requirements.

11 The driving force for the SDCI (IO-Link™¹) technology is the need of these low-cost sensors
12 and actuators to exchange this diagnosis and configuration data with a controller (PC or PLC)
13 using a low-cost, digital communication technology while maintaining backward compatibility
14 with the current DI/DO signals.

15 In fieldbus concepts, the SDCI technology defines a generic interface for connecting sensors
16 and actuators to a Master unit, which may be combined with gateway capabilities to become a
17 fieldbus remote I/O node.

18 Any SDCI compliant Device can be attached to any available interface port of the Master.
19 SDCI compliant Devices perform physical to digital conversion in the Device, and then
20 communicate the result directly in a standard format using "coded switching" of the 24 V I/O
21 signalling line, thus removing the need for different DI, DO, AI, AO modules and a variety of
22 cables.

23 Physical topology is point-to-point from each Device to the Master using 3 wires over
24 distances up to 20 m. The SDCI physical interface is backward compatible with the usual
25 24 V I/O signalling specified in IEC 61131-2. Transmission rates of 4,8 kbit/s, 38,4 kbit/s and
26 230,4 kbit/s are supported.

27 The Master of the SDCI interface detects, identifies and manages Devices plugged into its
28 ports.

29 Tools allow the association of Devices with their corresponding electronic I/O Device Des-
30 crections (IODD) and their subsequent configuration to match the application requirements.

31 The SDCI technology specifies three different levels of diagnostic capabilities: for immediate
32 response by automated needs during the production phase, for medium term response by
33 operator intervention, or for longer term commissioning and maintenance via extended
34 diagnosis information.

35 The structure of this standard is described in 4.8.

36 Conformity with IEC 61131-9 cannot be claimed unless the requirements of Annex H are met.

37 Terms of general use are defined in IEC 61131-1 or in the IEC 60050 series. More specific
38 terms are defined in each part.

39 **0.2 Patent declaration**

40 The International Electrotechnical Commission (IEC) draws attention to the fact that it is
41 claimed that compliance with this document may involve the use of patents concerning the
42 point-to-point serial communication interface for small sensors and actuators as follows,
43 where the [xx] notation indicates the holder of the patent right:

¹ IO-Link™ is a trade name of the "IO-Link Community". This information is given for the convenience of users of this international Standard and does not constitute an endorsement by IEC of the trade name holder or any of its products. Compliance to this standard does not require use of the registered logos for IO-Link™. Use of the registered logos for IO-Link™ requires permission of the "IO-Link Community".

DE 102 119 39 A1 US 2003/0200323 A1	[SK]	Coupling apparatus for the coupling of devices to a bus system
DE10201100203883	[SK]	Filling level sensor for determination of filling level in toroidal container, has evaluation unit determining total filling level measurement value, and total filling level output outputting total filling level measurement values
DE102016114600B3	[SK]	IO-Link capable sensor and method of communication
DE202016104342U1	[SK]	IO-Link-capable sensor

- 44 IEC takes no position concerning the evidence, validity and scope of these patent rights.
- 45 The holders of these patents' rights have assured the IEC that they are willing to negotiate
46 licences either free of charge or under reasonable and non-discriminatory terms and conditions
47 with applicants throughout the world. In this respect, the statements of the holders of
48 these patent rights are registered with IEC.

49 Information may be obtained from:

[SK]	Sick AG Waldkirch Germany
------	---------------------------------

50 Attention is drawn to the possibility that some of the elements of this document may be the
51 subject of patent rights other than those identified above. IEC shall not be held responsible for
52 identifying any or all such patent rights.

53 ISO (www.iso.org/patents) and IEC (<http://patents.iec.ch>) maintain on-line data bases of
54 patents relevant to their standards. Users are encouraged to consult the databases for the
55 most up to date information concerning patents.

56

57 PROGRAMMABLE CONTROLLERS — 58

59 Part 9: Single-drop digital communication interface 60 for small sensors and actuators (SDCI) 61

62 1 Scope

64 This part of IEC 61131 specifies a single-drop digital communication interface technology for
65 small sensors and actuators SDCI (commonly known as IO-Link™²), which extends the
66 traditional digital input and digital output interfaces as defined in IEC 61131-2 towards a point-
67 to-point communication link for the exchange of complex data in both directions. This
68 technology also enables the transfer of parameters to or from Devices and the delivery of
69 identification and diagnostic information from the Devices to the automation system.

70 This technology is mainly intended for use with simple sensors and actuators in factory
71 automation, which include small and cost-effective microcontrollers.

72 This part specifies the SDCI communication services and protocol (physical layer, data link
73 layer and application layer in accordance with the ISO/OSI reference model) for both SDCI
74 Masters and Devices.

75 This part also includes EMC test requirements.

76 This part does not cover communication interfaces or systems incorporating multiple point or
77 multiple drop linkages, or integration of SDCI into higher level systems such as fieldbuses.

78 2 Normative references

79 The following documents, in whole or in part, are normatively referenced in this document and
80 are indispensable for its application. For dated references, only the edition cited applies. For
81 undated references, the latest edition of the referenced document (including any
82 amendments) applies.

83 IEC 60947-5-2, *Low-voltage switchgear and controlgear – Part 5-2: Control circuit devices
84 and switching elements – Proximity switches*

85 IEC 61000-4-2, *Electromagnetic compatibility (EMC) – Part 4-2: Testing and measurement
86 techniques – Electrostatic discharge immunity test*

87 IEC 61000-4-3, *Electromagnetic compatibility (EMC) – Part 4-3: Testing and measurement
88 techniques – Radiated, radiofrequency, electromagnetic field immunity test*

89 IEC 61000-4-4, *Electromagnetic compatibility (EMC) – Part 4-4: Testing and measurement
90 techniques – Electrical fast transient/burst immunity test*

91 IEC 61000-4-5, *Electromagnetic compatibility (EMC) – Part 4-5: Testing and measurement
92 techniques – Surge immunity test*

93 IEC 61000-4-6, *Electromagnetic compatibility (EMC) – Part 4-6: Testing and measurement
94 techniques – Immunity to conducted disturbances, induced by radio-frequency fields*

95 IEC 61000-4-11, *Electromagnetic compatibility (EMC) – Part 4-11: Testing and measurement
96 techniques – Voltage dips, short interruptions and voltage variations immunity tests*

² IO-Link™ is a trade name of the "IO-Link Community". This information is given for the convenience of users of this international Standard and does not constitute an endorsement by IEC of the trade name holder or any of its products. Compliance to this standard does not require use of the registered logos for IO-Link™. Use of the registered logos for IO-Link™ requires permission of the "IO-Link Community".

- 97 IEC 61000-6-2, *Electromagnetic compatibility (EMC) – Part 6-2: Generic standards –*
98 *Immunity for industrial environments*
- 99 IEC 61000-6-4, *Electromagnetic compatibility (EMC) – Part 6-4: Generic standards –*
100 *Emission standard for industrial environments*
- 101 IEC 61076-2-101, *Connectors for electronic equipment – Product requirements – Part 2-101:*
102 *Circular connectors – Detail specification for M12 connectors with screw-locking*
- 103 IEC 61131-1, *Programmable controllers – Part 1: General information*
- 104 IEC 61131-2, *Programmable controllers – Part 2: Equipment requirements and tests*
- 105 IEC/TR 62390, *Common automation device – Profile guideline*
- 106 ISO/IEC 646:1991, *Information technology – ISO 7-bit coded character set for information*
107 *interchange*
- 108 ISO/IEC 2022, *Information technology – Character code structure and extension techniques*
- 109 ISO/IEC 10646, *Information technology – Universal Multiple-Octet Coded Character Set*
110 (*UCS*)
- 111 ISO/IEC 10731, *Information technology – Open Systems Interconnection – Basic Reference*
112 *Model – Conventions for the definition of OSI services*
- 113 ISO/IEC 19505 (all parts), *Information technology – Object Management Group Unified*
114 *Modeling Language (OMG UML)*
- 115 ISO 1177, *Information processing – Character structure for start/stop and synchronous*
116 *character-oriented transmission*
- 117 ANSI/IEEE Std 754-1985, *IEEE Standard for Floating-Point Arithmetic*
- 118 Internet Engineering Task Force (IETF): RFC 1305 – *Network Time Protocol Version 4:*
119 *Specification, Implementation and Analysis; available at <www.ietf.org>*
- 120

121 **3 Terms, definitions, symbols, abbreviated terms and conventions**

122 **3.1 Terms and definitions**

123 For the purposes of this document, the terms and definitions given in IEC 61131-1 and
124 IEC 61131-2, as well as the following apply.

125 **3.1.1**

address

127 part of the M-sequence control to reference data within data categories of a communication
128 channel

129 **3.1.2**

application layer

131 AL

132 <SDCI> part of the protocol responsible for the transmission of Process Data objects and On-
133 request Data objects

134 **3.1.3**

Block Parameter

136 consistent parameter access via multiple Indices or Subindices

137 **3.1.4**

138 **checksum**

139 <SDCI> complementary part of the overall data integrity measures in the data link layer in
140 addition to the UART parity bit

141 **3.1.5**

142 **CHKPDU**

143 integrity protection data within an ISDU communication channel generated through XOR
144 processing the octets of a request or response

145 **3.1.6**

146 **coded switching**

147 SDCI communication, based on the standard binary signal levels of IEC 61131-2

148 **3.1.7**

149 **COM1**

150 SDCI communication mode with transmission rate of 4,8 kbit/s

151 **3.1.8**

152 **COM2**

153 SDCI communication mode with transmission rate of 38,4 kbit/s

154 **3.1.9**

155 **COM3**

156 SDCI communication mode with transmission rate of 230,4 kbit/s

157 **3.1.10**

158 **COMx**

159 one out of three possible SDCI communication modes COM1, COM2, or COM3

160 **3.1.11**

161 **communication channel**

162 logical connection between Master and Device

163 Note 1 to entry: Four communication channels are defined: process channel, page and ISDU channel (for
164 parameters), and diagnosis channel.

165 **3.1.12**

166 **communication error**

167 unexpected disturbance of the SDCI transmission protocol

168 **3.1.13**

169 **cycle time**

170 time to transmit an M-sequence between a Master and its Device including the following idle
171 time

172 **3.1.14**

173 **Device**

174 single passive peer to a Master such as a sensor or actuator

175 Note 1 to entry: Uppercase "Device" is used for SDCI equipment, while lowercase "device" is used in a generic
176 manner.

177 **3.1.15**

178 **Direct Parameters**

179 directly (page) addressed parameters transferred acyclically via the page communication
180 channel without acknowledgment

181 **3.1.16**

182 **dynamic parameter**

183 part of a Device's parameter set defined by on-board user interfaces such as teach-in buttons
184 or control panels in addition to the static parameters

3.1.17**Event**

instance of a change of conditions in a Device

Note 1 to entry: Uppercase "Event" is used for SDCI Events, while lowercase "event" is used in a generic manner.

Note 2 to entry: An Event is indicated via the Event flag within the Device's status cyclic information, then acyclic transfer of Event data (typically diagnosis information) is conveyed through the diagnosis communication channel.

3.1.18**fallback**

transition of a port from coded switching to switching signal mode

3.1.19**inspection level**

degree of verification for the Device identity

3.1.20**interleave**

segmented cyclic data exchange for Process Data with more than 2 octets through subsequent cycles

3.1.21**input**

information transport in direction from Device to Master

3.1.22**ISDU**

indexed service data unit used for acyclic acknowledged transmission of parameters that can be segmented in a number of M-sequences

3.1.23**legacy (Device or Master)**

Device or Master designed in accordance with [8]³

3.1.24**M-sequence**

sequence of two messages comprising a Master message and its subsequent Device message

3.1.25**M-sequence control**

first octet in a Master message indicating the read/write operation, the type of the communication channel, and the address, for example offset or flow control

3.1.26**M-sequence error**

unexpected or wrong message content, or no response

3.1.27**M-sequence type**

one particular M-sequence format out of a set of specified M-sequence formats

3.1.28**Master**

active peer connected through ports to one up to n Devices and which provides an interface to the gateway to the upper level communication systems or PLCs

Note 1 to entry: Uppercase "Master" is used for SDCI equipment, while lowercase "master" is used in a generic manner.

³ Numbers in square brackets refer to the Bibliography.

3.1.29**message**

<SDCI> sequence of UART frames transferred either from a Master to its Device or vice versa following the rules of the SDCI protocol

3.1.30**On-request Data**

OD

acyclically transmitted data upon request of the Master application consisting of parameters or Event data

3.1.31**output**

information transport in direction from Master to Device

3.1.32**physical layer**

first layer of the ISO-OSI reference model, which provides the mechanical, electrical, functional and procedural means to activate, maintain, and de-activate physical connections for bit transmission between data-link entities

Note 1 to entry: Physical layer also provides means for wake-up and fallback procedures.

[SOURCE: ISO/IEC 7498-1, 7.7.2, modified — text extracted from subclause, note added]

3.1.33**port**

communication medium interface of the Master to one Device

3.1.34**Process Data**

PD

input or output (seen from Master's view) values from or to a discrete or continuous automation process cyclically transferred with high priority and in a configured schedule automatically between Master and Device

3.1.35**Process Data cycle**

complete transfer of all Process Data from or to an individual Device that may comprise several cycles in case of segmentation (interleave)

3.1.36**single parameter**

independent parameter access via one single Index or Subindex

3.1.37**SIO**

port operation mode in accordance with digital input and output defined in IEC 61131-2 (seen from Master's view) that is established after power-up or fallback or unsuccessful communication attempts

3.1.38**static parameter**

part of a Device's parameter set to be saved in a Master for the case of replacement without engineering tools

3.1.39**switching signal**

binary signal from or to a Device when in SIO mode (as opposed to the "coded switching" SDCI communication)

3.1.40**System Management**

SM

<SDCI> means to control and coordinate the internal communication layers and the exceptions within the Master and its ports, and within each Device

3.1.41**UART frame**

<SDCI> bit sequence starting with a start bit, followed by eight bits carrying a data octet, followed by an even parity bit and ending with one stop bit

3.1.42**wake-up**

procedure for causing a Device to change its mode from SIO to SDCI

3.1.43**wake-up request**

WURQ

physical layer service used by the Master to initiate wake-up of a Device, and put it in a receive ready state

3.2 Symbols and abbreviated terms

Δf_{DTRM}	permissible deviation from data transfer rate (measured in %)
ΔV_S	power supply ripple (measured in V)
AL	application layer
BEP	bit error probability
C/Q	connection for communication (C) or switching (Q) signal (SIO)
CL_{eff}	effective total cable capacity (measured in nF)
C_Q	input capacity at C/Q connection (measured in nF)
DI	digital input (Master's view)
DL	data link layer
DO	digital output (Master's view)
f_{DTR}	data transfer rate (measured in bit/s)
H/L	high/low signal at receiver output
I/O	input/output
ILL	input load current at input C/Q to V_0 (measured in A)
IODD	IO Device Description (see 10.9)
$IP24_M$	extra DC supply current for Devices
I_Q	driver current in saturated operating status ON (measured in A)
I_{QH}	driver current on high-side driver in saturated operating status ON (measured in A)
I_{QL}	driver current on low-side driver in saturated operating status ON (measured in A)
I_{QPK}	maximum driver current in unsaturated operating status ON (measured in A)
I_{QPKH}	maximum driver current on high-side driver in unsaturated operating status ON (measured in A)
I_{QPKL}	maximum driver current on low-side driver in unsaturated operating status ON (measured in A)
I_{QQ}	quiescent current at input C/Q to V_0 with inactive output drivers (measured in A)
I_{QWU}	amplitude of Master's wake-up request current (measured in A)
I_S	supply current at V_+ (measured in A)
$ISIR$	current pulse supply capability at V_+ (measured in A)
LED	light emitting diode
L-	power supply (-)

L+	power supply (+)	
N24	24 V extra power supply (-)	
n_{WU}	wake-up retry count	
On/Off	driver's ON/OFF switching signal	
OD	On-request Data	
OVD	signal overload detect	
P24	24 V extra power supply (+)	
PD	Process Data	
PDCT	port and Device configuration tool	
PL	physical layer	
PLC	programmable logic controller	
PS	power supply (measured in V)	
QIS_D	power-up charge consumption	
r	time to reach a stable level with reference to the beginning of the start bit (measured in T_{BIT})	
RL_{eff}	loop resistance of cable (measured in Ω)	
s	time to exit a stable level with reference to the beginning of the start bit (measured in T_{BIT})	
SDCI	single-drop digital communication interface	
SIO	standard input output (digital switching mode, Master's view)	[IEC 61131-2]
SM	system management	
SMI	standardized Master interface	
t_1	UART frame transfer delay on Master (measured in T_{BIT})	
t_2	UART frame transfer delay on Device (measured in T_{BIT})	
t_A	response delay on Device (measured in T_{BIT})	
T_{BIT}	bit time (measured in s)	
t_{CYC}	cycle time on M-sequence level (measured in s)	
t_{DF}	fall time (measured in s)	
T_{DMT}	delay time while establishing Master port communication (measured in T_{BIT})	
T_{DR}	rise time (measured in s)	
T_{DSIO}	delay time on Device for transition to SIO mode following wake-up request (measured in s)	
T_{DWU}	wake-up retry delay (measured in s)	
$t_{M\text{-sequence}}$	M-sequence duration (measured in T_{BIT})	
t_{idle}	idle time between two M-sequences (measured in s)	
t_H	detection time for high level (measured in s)	
t_L	detection time for low level (measured in s)	
t_{ND}	noise suppression time (measured in s)	
T_{RDL}	wake-up readiness following power ON (measured in s)	
T_{REN}	receive enable (measured in s)	
T_{SD}	device detect time (measured in s)	
T_{WU}	pulse duration of wake-up request (measured in s)	
UART	universal asynchronous receiver transmitter	
UML	Unified Modelling Language	[ISO/IEC 19505]
V_+	voltage at L+	
V_0	voltage at L-	
VD_{+L}	voltage drop on the line between the L+ connections on Master and Device (measured in V)	

VDO_L	voltage drop on the line between the L- connections on Master and Device (measured in V)
VDQ_L	voltage drop on the line between the C/Q connections on Master and Device (measured in V)
$VHYS$	hysteresis of receiver threshold voltage (measured in V)
VI	input voltage at connection C/Q with reference to $V0$ (measured in V)
VIH	input voltage range at connection C/Q for high signal (measured in V)
VIL	input voltage range at connection C/Q for low signal (measured in V)
$VP24_M$	extra DC supply voltage for Devices
VRQ	residual voltage on driver in saturated operating status ON (measured in V)
$VRQH$	residual voltage on high-side driver in operating status ON (measured in V)
$VRQL$	residual voltage on low-side driver in saturated operating status ON (measured in V)
VTH	threshold voltage of receiver with reference to $V0$ (measured in V)
$VTHH$	threshold voltage of receiver for safe detection of a high signal (measured in V)
$VTHL$	threshold voltage of receiver for safe detection of a low signal (measured in V)
$WURQ$	wake-up request pulse

297

298 **3.3 Conventions**299 **3.3.1 General**300 The service model, service primitives, and the diagrams shown in this standard are entirely
301 abstract descriptions. The implementation of the services may reflect individual issues and
302 can be different.303 **3.3.2 Service parameters**304 Service primitives are used to represent service provider/consumer interactions
305 (ISO/IEC 10731). They convey parameters which indicate the information available in the
306 provider/consumer interaction. In any particular interface, not each and every parameter
307 needs to be explicitly stated.308 The service specification in this standard uses a tabular format to describe the component
309 parameters of the service primitives. The parameters which apply to each group of service
310 primitives are set out in tables. Each table consists of up to five columns:

- 311 1) parameter name;
- 312 2) request primitive (.req);
- 313 3) indication primitive (.ind);
- 314 4) response primitive (.rsp); and
- 315 5) confirmation primitive (.cnf).

316 One parameter (or component of it) is listed in each row of each table. Under the appropriate
317 service primitive columns, a code is used to specify the type of usage of the parameter on the
318 primitive specified in the column.

- 319 M Parameter is mandatory for the primitive.
- 320 U Parameter is a user option and can or cannot be provided depending on dynamic
321 usage of the service user. When not provided a default value for the parameter is
322 assumed.
- 323 C Parameter is conditional upon other parameters or upon the environment of the service
324 user.
 - 325 – Parameter is never present.
 - 326 S Parameter is a selected item.

327

- 328 Some entries are further qualified by items in brackets. These may be:
- 329 a) a parameter-specific constraint "(=)" indicates that the parameter is semantically equivalent to the parameter in the service primitive to its immediate left in the table;
- 330 b) an indication that some note applies to the entry "(n)" indicates that the following note "n"
- 331 contains additional information related to the parameter and its use.

3.3.3 Service procedures

334 The procedures are defined in terms of:

- 335 • the interactions between application entities through the exchange of protocol data units;
- 336 and
- 337 • the interactions between a communication layer service provider and a communication
- 338 layer service consumer in the same system through the invocation of service primitives.

339 These procedures are applicable to instances of communication between systems which

340 support time-constrained communications services within the communication layers.

3.3.4 Service attributes

342 The nature of the different (Master and Device) services is characterized by attributes. All

343 services are defined from the view of the affected layer towards the layer above.

- 344 I Initiator of a service (towards the layer above)
- 345 R Receiver (responder) of a service (from the layer above)


3.3.5 Figures

347 For figures that show the structure and services of protocol layers, the following conventions

348 are used:

- 349 • an arrow with just a service name represents both a request and the corresponding
- 350 confirmation, with the request being in the direction of the arrow;
- 351 • a request without confirmation, as well as all indications and responses are labelled as
- 352 such (i.e. service.req, service.ind, service.rsp).

353 Figure 1 shows the example of a confirmed service.

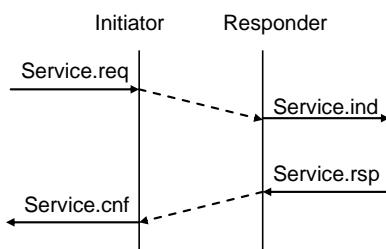

354
355 **Figure 1 – Example of a confirmed service**

356

3.3.6 Transmission octet order

Figure 2 shows how WORD based data types are transferred from memory to transmission medium and vice versa (i.e. most significant octet transmitted first, see 7.3.3.2 and 7.3.6.1).

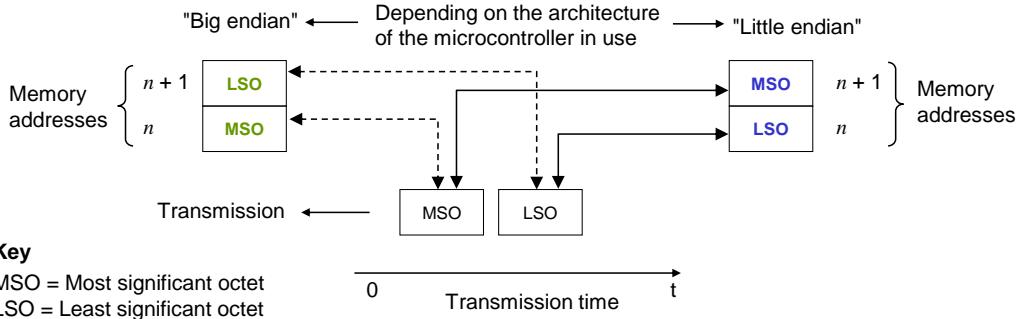


Figure 2 – Memory storage and transmission order for WORD based data types

3.3.7 Behavioral descriptions

For the behavioral descriptions, the notations of UML 2 (ISO/IEC 19505) are used (e.g. state, sequence, activity, timing diagrams, guard conditions).

State diagrams are the primary source for implementations whereas sequence charts illustrate certain use cases.

Characteristics of state diagrams are

- triggers/events coming from external requests ("calls") or internal changes such as timeouts;
- [guard(s)] as Boolean expressions for exits of states;
- numbered transitions describing actions in addition to the triggers within separate state-transition tables.

The layout of these tables is following IEC/TR 62390.

In this document, the concept of "nested states" with superstates and substates is used as shown in the example of Figure 3.

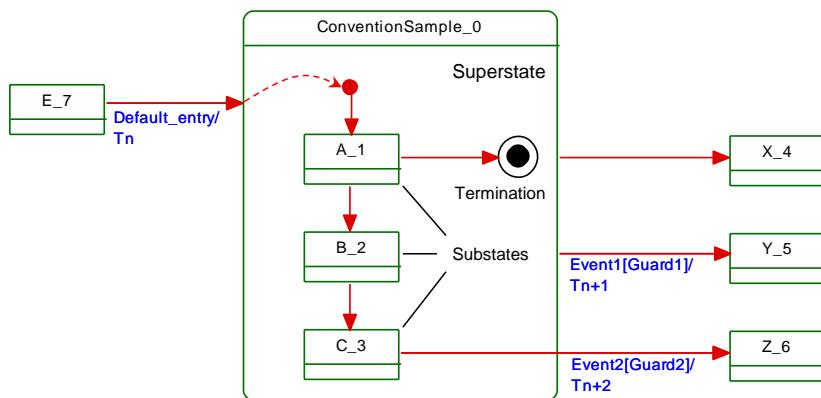


Figure 3 – Example of a nested state

UML 2 allows hierarchies of states with superstates and substates. The highest superstate represents the entire state machine.

This concept allows for simplified modelling since the content of superstates can be moved to a separate drawing. An eyeglasses icon usually represents this content.

382 Compared to "flat" state machines, a particular set of rules shall be observed for "nested
 383 states":

- 384 a) A transition to the edge of a superstate (e.g. Default_entry) implies transition to the initial
 385 substate (e.g. A_1).
- 386 b) Transition to a termination state inside a superstate implies a transition without event and
 387 guard to a state outside (e.g. X_4). The superstate will become inactive.
- 388 c) A transition from any of the substates (e.g. A_1, B_2, or C_3) to a state outside (Y_5) can
 389 take place whenever Event1 occurs and Guard1 is true. This is helpful in case of common
 390 errors within the substates. The superstate will become inactive.
- 391 d) A transition from a particular substate (e.g. C_3) to a state outside (Z_6) can take place
 392 whenever Event2 occurs and Guard2 is true. The superstate will become inactive.

393 Due to UML design tool restrictions the following exceptions apply.

394 For state diagrams, a service parameter (in capital letters) is attached to the service name via
 395 an underscore character, such as for example in DL_SetMode_INACTIVE.

396 For sequence diagrams, the service primitive is attached via an underscore character instead
 397 of a dot, and the service parameter is added in parenthesis, such as for example in
 398 DL_Event_ind (OPERATE).


399 Timing constraints are labelled "tm(time in ms)".

400 Asynchronously received service calls are not modelled in detail within state diagrams.

4 Overview of SDCI (IO-LinkTM⁴)

4.1 Purpose of technology

403 Figure 4 shows the basic concept of SDCI.

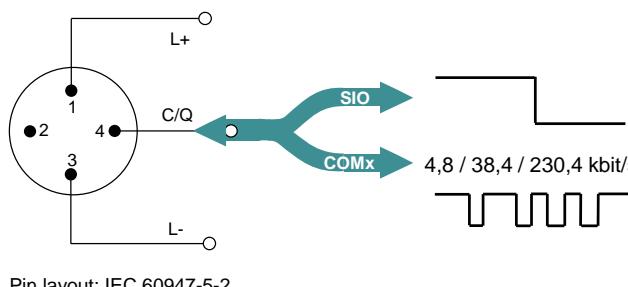

Pin	Signal	Definition	Standard
1	L+	24 V	IEC 61131-2
2	I/Q	Not connected, DI, or DO	IEC 61131-2
3	L-	0 V	IEC 61131-2
4	Q	"Switching signal" (SIO)	IEC 61131-2
	C	"Coded switching" (COM1, COM2, COM3)	IEC 61131-9

405 **Figure 4 – SDCI compatibility with IEC 61131-2**


406 The single-drop digital communication interface technology for small sensors and actuators
 407 SDCI (commonly known as IO-LinkTM) defines a migration path from the existing digital input
 408 and digital output interfaces for switching 24 V Devices as defined in IEC 61131-2 towards a
 409 point-to-point communication link. Thus, for example, digital I/O modules in existing fieldbus
 410 peripherals can be replaced by SDCI Master modules providing both classic DI/DO interfaces
 411 and SDCI. Analog transmission technology can be replaced by SDCI combining its robust-
 412 ness, parameterization, and diagnostic features with the saving of digital/analog and
 413 analog/digital conversion efforts.

404

4 IO-LinkTM is a trade name of the "IO-Link Community". This information is given for the convenience of users of this international Standard and does not constitute an endorsement by IEC of the trade name holder or any of its products. Compliance to this standard does not require use of the registered logos for IO-LinkTM. Use of the registered logos for IO-LinkTM requires permission of the "IO-Link Community".

415 4.2 Positioning within the automation hierarchy

416 Figure 5 shows the domain of the SDCI technology within the automation hierarchy.

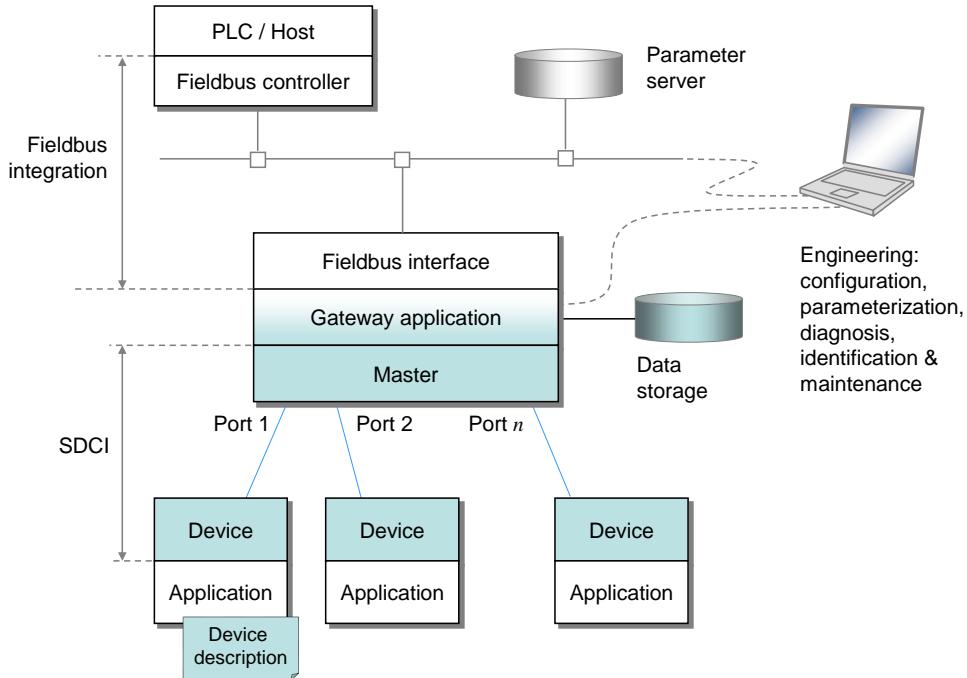

417 **Figure 5 – Domain of the SDCI technology within the automation hierarchy**

418 The SDCI technology defines a generic interface for connecting sensors and actuators to a Master unit, which may be combined with gateway capabilities to become a fieldbus remote I/O node.

419 Starting point for the design of SDCI is the classic 24 V digital input (DI) defined in IEC 61131-2 and output interface (DO) specified in Table 6. Thus, SDCI offers connectivity of classic 24 V sensors ("switching signals") as a default operational mode. Additional connectivity is provided for actuators when a port has been configured into "single-drop communication mode".

420 Many sensors and actuators nowadays are already equipped with microcontrollers offering a UART interface that can be extended by addition of a few hardware components and protocol software to support SDCI communication. This second operational mode uses "coded switching" of the 24 V I/O signalling line. Once activated, the SDCI mode supports parameterization, cyclic data exchange, diagnosis reporting, identification & maintenance information, and external parameter storage for Device backup and fast reload of replacement devices. Sensors and actuators with SDCI capability are referred to as "Devices" in this standard. To improve start-up performance these Devices usually provide non-volatile storage for parameters.

421 NOTE Configuration and parameterization of Devices is supported through an XML-based device description (see [6]), which is not part of this standard.

438 4.3 Wiring, connectors and power

422 The default connection (port class A) comprises 4 pins (see Figure 4). The default wiring for port class A complies with IEC 60947-5-2 and uses only three wires for 24 V, 0 V, and a signal line. The fourth wire may be used as an additional signal line complying with IEC 61131-2.


423 Five pins connections (port class B) are specified for Devices requiring additional power from an independent 24 V power supply.

424 NOTE A port class A Device using the fourth wire is not compatible with a port class B Master.

425 Maximum length of cables is 20 m, shielding is not required.

447 4.4 Communication features of SDCI

448 The generic Device model is shown in Figure 6 and explained in the following paragraphs.

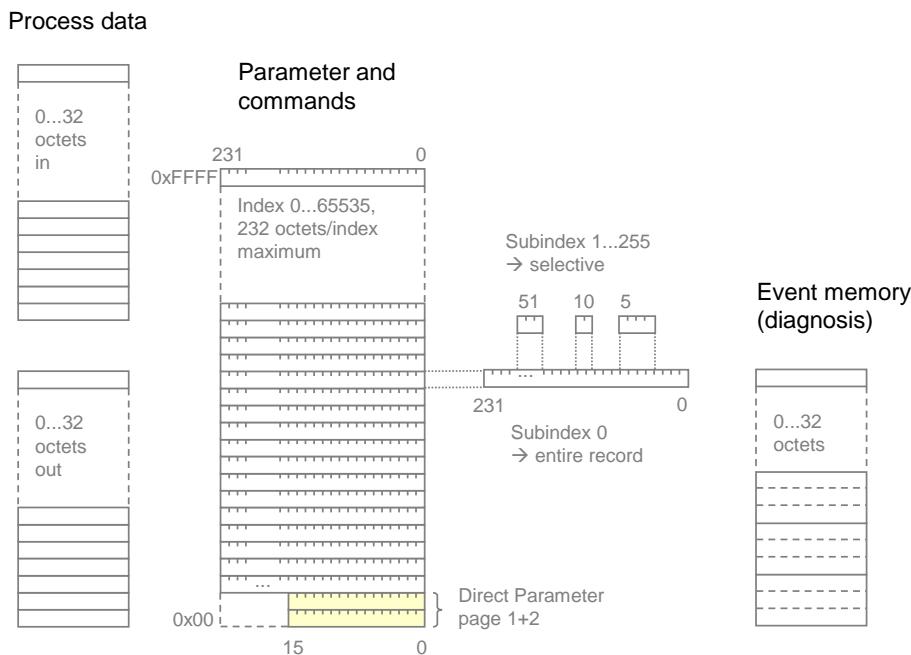

449

450 **Figure 6 – Generic Device model for SDCI (Master's view)**

451 A Device may receive Process Data (out) to control a discrete or continuous automation
 452 process or send Process Data (in) representing its current state or measurement values. The
 453 Device usually provides parameters enabling the user to configure its functions to satisfy
 454 particular needs. To support this case a large parameter space is defined with access via an
 455 Index (0 to 65535; with a predefined organization) and a Subindex (0 to 255).

456 The first two index entries 0 and 1 are reserved for the Direct Parameter page 1 and 2 with a
 457 maximum of 16 octets each. Parameter page 1 is mainly dedicated to Master commands such
 458 as Device startup and fallback, retrieval of Device specific operational and identification
 459 information. Parameter page 2 allows for a maximum of 16 octets of Device specific
 460 parameters.


461 The other indices (2 to 65535) each allow access to one record having a maximum size of 232
 462 octets. Subindex 0 specifies transmission of the complete record addressed by the Index,
 463 other subindices specify transfer of selected data items within the record.

464 Within a record, individual data items may start on any bit offset, and their length may range
 465 from 1 bit to 232 octets, but the total number of data items in the record cannot exceed 255.
 466 The organization of data items within a record is specified in the IO Device Description
 467 (IODD).

468 All changes of Device condition that require reporting or intervention are stored within an
 469 Event memory before transmission. An Event flag is then set in the cyclic data exchange to
 470 indicate the existence of an Event.

471 Communication between a Master and a Device is point-to-point and is based on the principle
 472 of a Master first sending a request message and then a Device sending a response message
 473 (see Figure 38). Both messages together are called an M-sequence. Several M-sequence
 474 types are defined to support user requirements for data transmission (see Figure 39).

475 Data of various categories are transmitted through separate communication channels within
 476 the data link layer, as shown in Figure 7.

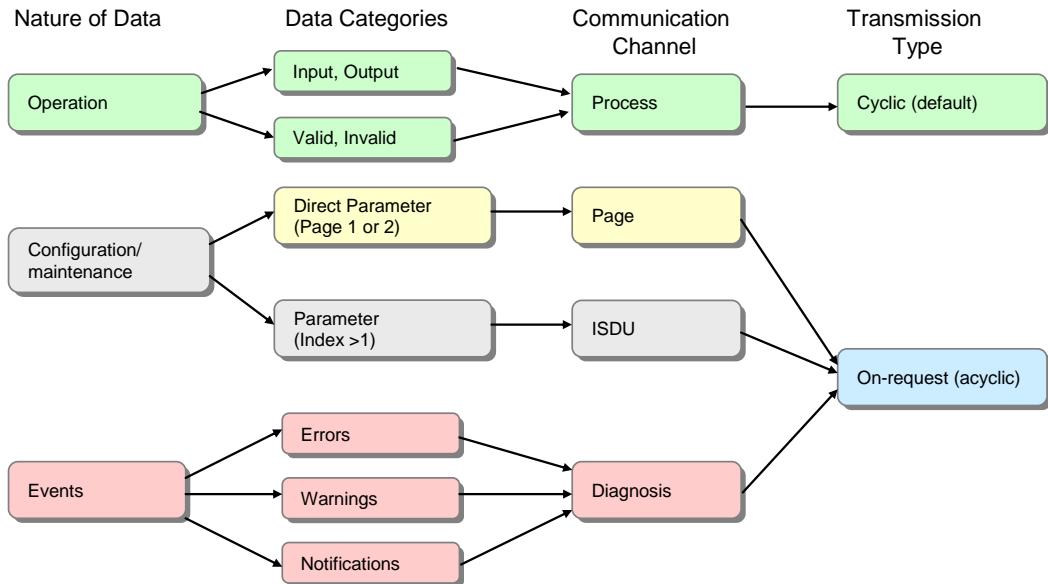

477


478 **Figure 7 – Relationship between nature of data and transmission types**

- 479 • Operational data such as Device inputs and outputs is transmitted through a process
480 channel using cyclic transfer. Operational data may also be associated with qualifiers such
481 as valid/invalid.
- 482 • Configuration and maintenance parameters are transmitted using acyclic transfers. A page
483 channel is provided for direct access to parameter pages 1 and 2, and an ISDU channel is
484 used for accessing additional parameters and commands.
- 485 • Device events are transmitted using acyclic transfers through a diagnostic channel. Device
486 events are reported using 3 severity levels, error, warning, and notification.

487 The first octet of a Master message controls the data transfer direction (read/write) and the
488 type of communication channel.

489 Figure 8 shows each port of a Master has its own data link layer which interfaces to a
490 common master application layer. Within the application layer, the services of the data link
491 layer are translated into actions on Process Data objects (input/output), On-request Data
492 objects (read/write), and events. Master applications include a Configuration Manager (CM),
493 Data Storage mechanism (DS), Diagnosis Unit (DU), On-request Data Exchange (ODE), and a
494 Process Data Exchange (PDE).

495 System Management checks identification of the connected Devices and adjusts ports and
496 Devices to match the chosen configuration and the properties of the connected Devices. It
497 controls the state machines in the application (AL) and data link layers (DL), for example at
498 start-up.

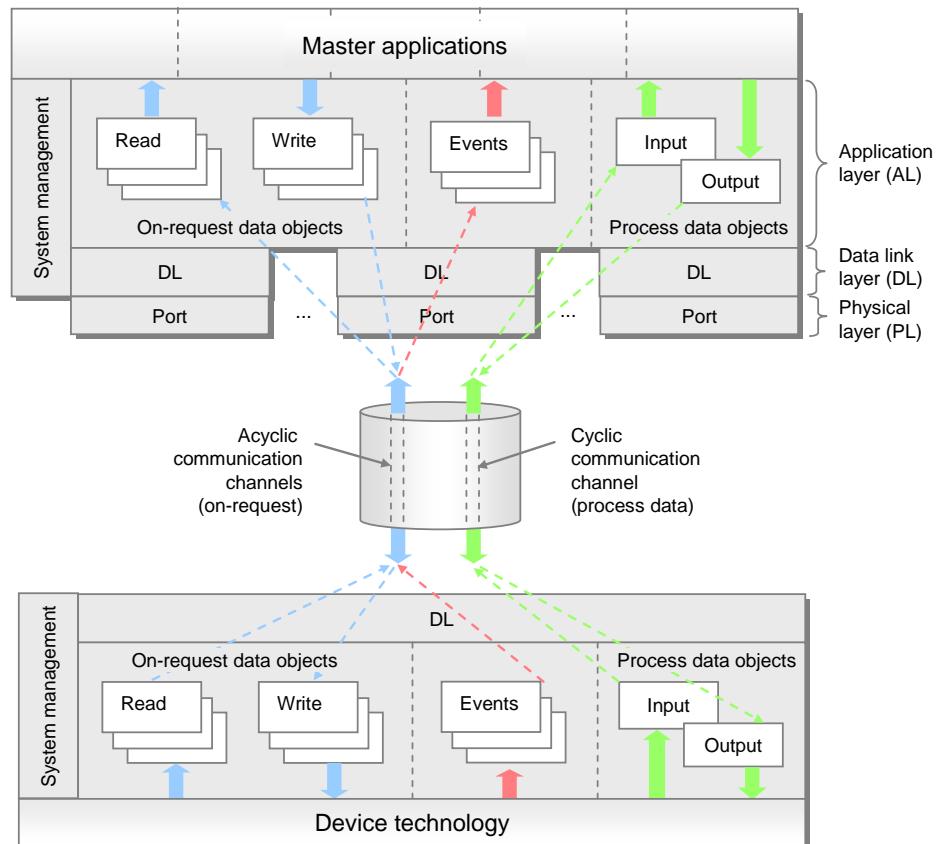

499

500

Figure 8 – Object transfer at the application layer level (AL)**4.5 Role of a Master**

A Master accommodates 1 to n ports and their associated data link layers. During start-up it changes the ports to the user-selected port modes, which can be DEACTIVATED, IOL_MANUAL, IOL_AUTOSTART, DI_C/Q, or DO_C/Q. If communication is requested, the Master uses a special wake-up current pulse to initiate communication with the Device. The Master then auto-adjusts the transmission rate to COM1, COM2, or COM3 (see Table 9) and checks the "personality" of the connected Device, i.e. its VendorID, DeviceID, and communication properties.

If there is a mismatch between the Device parameters and the stored parameter set within the Master, the parameters in the Device are overwritten (see 11.4) or the stored parameters within the master are updated depending on the configuration.

The Master is responsible for the assembling and disassembling of all data from or to the Devices (see Clause 11).

The Master provides a Data Storage area of at least 2 048 octets per Device for backup of Device data (see 11.4). The Master may combine this Device data together with all other relevant data for its own operation, and make this data available for higher level applications for Master backup purpose or recipe control (see 13.4.2).

4.6 SDCT configuration

Engineering support for a Master is usually provided by a Port and Device Configuration Tool (PDCT). The PDCT configures both port properties and Device properties (see parameters shown in Figure 6). It combines both an interpreter of the I/O Device Description (IODD) and a configurator (see 13). The IODD provides all the necessary properties to establish communication and the necessary parameters and their boundaries to establish the desired function of a sensor or actuator. The PDCT also supports the compilation of the Process Data for propagation on the fieldbus and vice versa.

526 4.7 Mapping to fieldbuses and/or other upper level systems


527 Specifications for integration of Masters into upper level systems such as a fieldbus system,
 528 i.e. the definition of gateway functions for exchanging data with upper level entities, is out of
 529 scope of this standard. However, all functions of this standard are mandatory to be made
 530 available to the users by a particular integration according to the capability level of the upper
 531 level system technology except for those functions that are declared explicitly as optional.

532 EXAMPLE These functions include mapping of the Process Data exchange, realization of program-controlled
 533 parameterization or a remote parameter server, or the propagation of diagnosis information.

534 The integration of a PDCT into engineering tools of a particular fieldbus or other upper level
 535 system is out of scope of this standard.

536 4.8 Standard structure

537 Figure 9 shows the logical structure of the Master and Device. Clause 5 specifies the Physical
 538 Layer (PL) of SDCI, Clause 6 specifies details of the SIO mode. Clause 7 specifies Data Link
 539 Layer (DL) services, protocol, wake-up, M-sequences, and the DL layer handlers. Clause 0
 540 specifies the services and the protocol of the Application Layer (AL) and clause 9 the System
 541 Management responsibilities (SM).

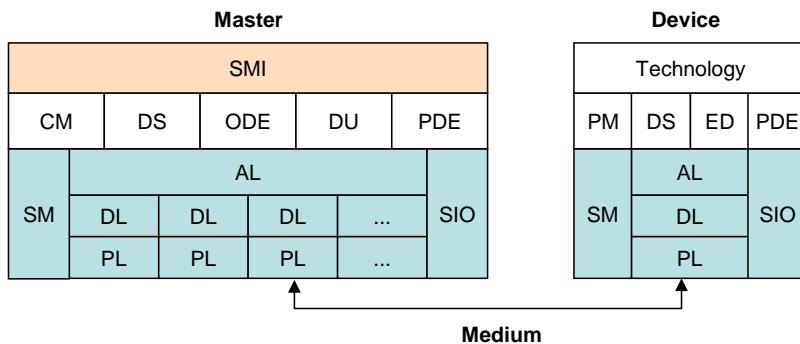

542 **Figure 9 – Logical structure of Master and Device**

543 Clause 10 specifies Device applications and features. These include Process Data Exchange
 544 (PDE), Parameter Management (PM), Data Storage (DS), and Event Dispatcher (ED).
 545 Technology specific Device applications are not part of this standard. They may be specified
 546 in profiles for particular Device families.

547 Clause 11 specifies Master applications and features. These include Process Data Exchange
 548 (PDE), On-request Data Exchange (ODE), Configuration Management (CM), Data Storage
 549 (DS) and Diagnosis Unit (DU). A Standardized Master Interface (SMI) ensures uniform
 550 behavior via specified services and allows for usage of one PDCT (Master tool) for different
 551 Master brands.

552 Clause 12 provides a holistic best practice view on Data Storage behavior of both Master and
 553 Device.

554 Clause 13 outlines integration aspects of IO-Link into various automation and IT realms.


555 Several normative and informative annexes are included. Annex A defines the available M-
 556 sequence types. Annex B describes the parameters of the Direct Parameter page and the
 557 fixed Device parameters. Annex C lists the error types in case of acyclic transmissions and
 558 Annex D the EventCodes (diagnosis information of Devices). Annex E specifies the coding of
 559 argument blocks for the SMI services. Annex F specifies the available basic and composite
 560 data types. Annex G defines the structure of Data Storage objects. Annex H deals with
 561 conformity and electromagnetic compatibility test requirements and Annex I provides graphs
 562 of residual error probabilities, demonstrating the level of SDCI's data integrity. The
 563 informative Annex J provides an example of the sequence of acyclic data transmissions. The
 564 informative Annex K explains two recommended methods for detecting parameter changes in
 565 the context of Data Storage.

567 **5 Physical Layer (PL)**

568 **5.1 General**

569 **5.1.1 Basics**

570 The 3-wire connection system of SDCI is based on the specifications in IEC 60947-5-2. The
 571 three lines are used as follows: (L+) for the 24 V power supply, (L-) for the ground line, and
 572 (C/Q) for the switching signal (Q) or SDCI communication (C), as shown in Figure 10.

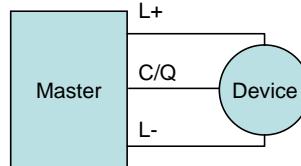

573

574 **Figure 10 – Three wire connection system**

575 NOTE Binary sensors compliant with IEC 60947-5-2 are compatible with the SDCI 3-wire connection system
 576 (including from a power consumption point of view).

577 Support of the SDCI 3-wire connection system is mandatory for Master. Ports with this
 578 characteristic are called port class A.


579 Port class A uses a four-pin connector. The fourth wire may be used as an additional signal
 580 line complying with IEC 61131-2. Its support is optional in both Masters and Devices.

581 Five wire connections (port class B) are specified for Devices requiring additional power from
 582 an independent 24 V power supply (see 5.5.1).

583 NOTE A port class A Device using the fourth wire is not compatible with a port class B Master.

584 **5.1.2 Topology**

585 The SDCI system topology uses point-to-point links between a Master and its Devices as
 586 shown in Figure 11. The Master may have multiple ports for the connection of Devices. Only
 587 one Device shall be connected to each port.

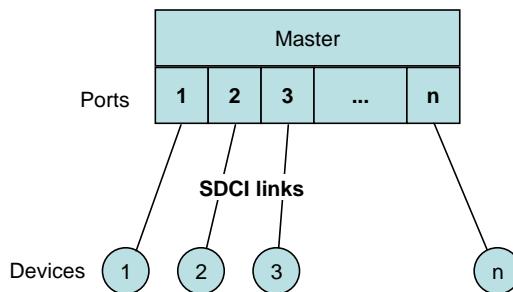

588


589 **Figure 11 – Topology of SDCI**

590

591 5.2 Physical layer services

592 5.2.1 Overview

593 Figure 12 shows an overview of the Master's physical layer and its service primitives.

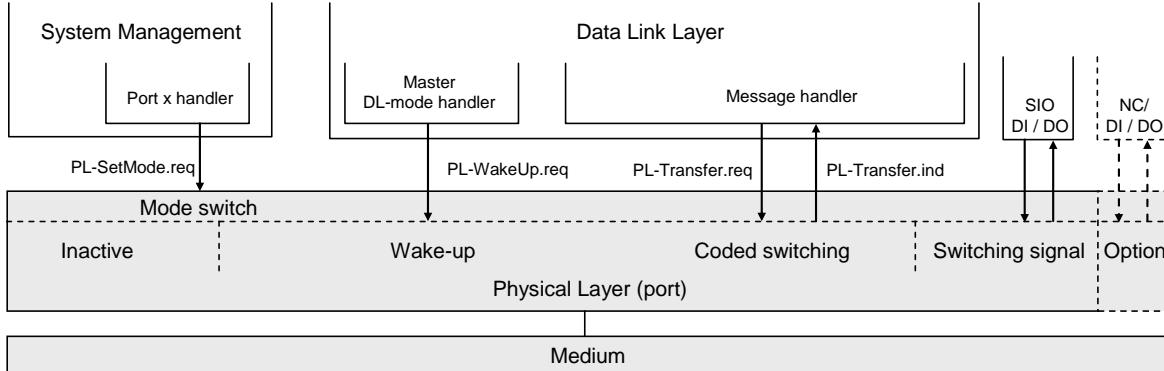

594 **Figure 12 – Physical layer (Master)**


595 The physical layer specifies the operation of the C/Q line in Figure 4 and the associated line driver (transmitter) and receiver of a particular port. The Master operates this line in three main modes (see Figure 12): inactive, "Switching signal" (DI/DO), or "Coded switching" (COMx). The service PL-SetMode.req is responsible for switching into one of these modes.

600 If the port is in inactive mode, the C/Q line shall be high impedance (floating). In SIO mode, 601 the port can be used as a standard input or output interface according to the definitions of 602 IEC 61131-2 or in Table 6 respectively. The communication layers of SDCI are bypassed as 603 shown in Figure 12; the signals are directly processed within the Master application. In SDCI 604 mode, the service PL_WakeUp.req creates a special signal pattern (current pulse) that can be 605 detected by an SDCI enabled Device connected to this port (see 5.3.3.3).

606 Figure 13 shows an overview of the Device's physical layer and its service primitives.

607 The physical layer of a Device according to Figure 13 follows the same principle, except that 608 there is no inactive state. By default, at power on or cable reconnection, the Device shall 609 operate in the SIO mode, as a digital input (from a Master's point of view). The Device shall 610 always be able to detect a wake up except during a permanent inactive state. The service 611 PL_WakeUp.ind reports successful detection of the wake-up request (usually a 612 microcontroller interrupt), which is required for the Device to switch to the SDCI mode.

613 A special MasterCommand (fallback) sent via SDCI causes the Device to switch back to SIO 614 mode.

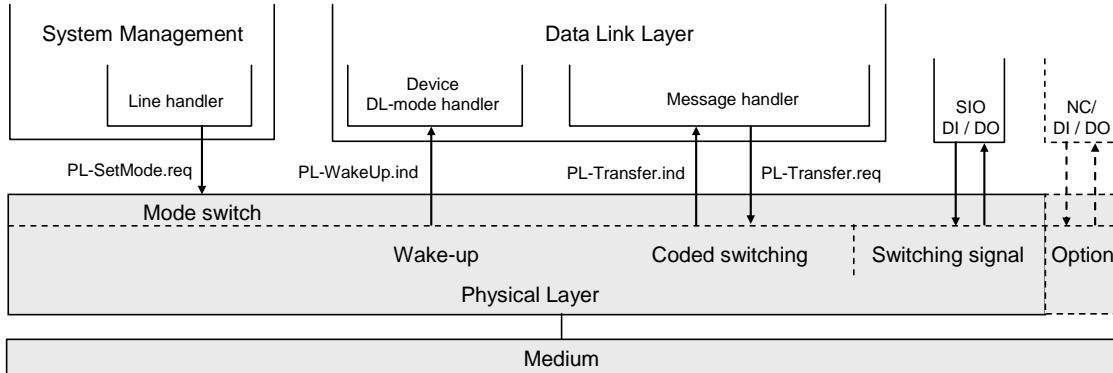

615 **Figure 13 – Physical layer (Device)**

616 Subsequently, the services are specified that are provided by the PL to System Management 617 and to the Data Link Layer (see Figure 85 and Figure 96 for a complete overview of all the

619 services). Table 1 lists the assignments of Master and Device to their roles as initiator or
 620 receiver for the individual PL services.

621 **Table 1 – Service assignments of Master and Device**

Service name	Master	Device
PL-SetMode	R	R
PL-WakeUp	R	I
PL-Transfer	I / R	R / I
Key (see 3.3.4)		
I Initiator of service		
R Receiver (Responder) of service		

622

623 **5.2.2 PL services**

624 **5.2.2.1 PL_SetMode**

625 The PL-SetMode service is used to setup the electrical characteristics and configurations of
 626 the Physical Layer. The parameters of the service primitives are listed in Table 2.

627 **Table 2 – PL_SetMode**

Parameter name	.req
Argument	M
TargetMode	M

628

629 **Argument**

630 The service-specific parameters of the service request are transmitted in the argument.

631 **TargetMode**

632 This parameter indicates the requested operation mode

633 Permitted values:

634 INACTIVE (C/Q line in high impedance),
 635 DI (C/Q line in digital input mode),
 636 DO (C/Q line in digital output mode),
 637 COM1 (C/Q line in COM1 mode),
 638 COM2 (C/Q line in COM2 mode),
 639 COM3 (C/Q line in COM3 mode)

640

641 **5.2.2.2 PL_WakeUp**

642 The PL-WakeUp service initiates or indicates a specific sequence which prepares the
 643 Physical Layer to send and receive communication requests (see 5.3.3.3). This unconfirmed
 644 service has no parameters. Its success can only be verified by a Master by attempting to
 645 communicate with the Device. The service primitives are listed in Table 3.

646 **Table 3 – PL_WakeUp**

Parameter name	.req	.ind
<none>		

647

648 **5.2.2.3 PL_Transfer**

649 The PL-Transfer service is used to exchange the SDCI data between Data Link Layer and
 650 Physical Layer. The parameters of the service primitives are listed in Table 4.

651

Table 4 – PL_Transfer

Parameter name	.req	ind.
Argument Data	M	M
Result (+)		S
Result (-) Status		S M

652

Argument

653 The service-specific parameters of the service request are transmitted in the argument.

Data

654 This parameter contains the data value which is transferred over the SDCI interface.

655 Permitted values: 0...255

Result (+):

656 This selection parameter indicates that the service request has been executed successfully.

Result (-):

657 This selection parameter indicates that the service request failed.

Status

658 This parameter contains supplementary information on the transfer status.

659 Permitted values:

PARITY_ERROR	(UART detected a parity error),
FRAMING_ERROR	(invalid UART stop bit detected),
OVERRUN	(octet collision within the UART)

660

5.3 Transmitter/Receiver**5.3.1 Description method**

661 The physical layer is specified by means of electrical and timing requirements. Electrical requirements specify signal levels and currents separately for Master and Device in the form of reference schematics. Timing requirements specify the signal transmission process (specifically the receiver) and a special signal detection function.

5.3.2 Electrical requirements**5.3.2.1 General**

662 The line driver is specified by a reference schematic corresponding to Figure 14. On the Master side, a transmitter comprises a combination of two line drivers and one current sink. On the Device side, in its simplest form, the transmitter takes the form of a p-switching driver. As an option there can be an additional n-switching or non-switching driver (this also allows the option of push-pull output operation).

663 In operating status ON the descriptive variables are the residual voltage VRQ , the standard driver current IQ , and the peak current $IQPK$. The source is controlled by the On/Off signal. An overload current event is indicated at the “Overload” output (OVD). This feature can be used for the current pulse detection (wake-up).

664

665

666

667

668

669

670

671

672

673

674

675

676

677

678

679

680


681

682

683

684


685

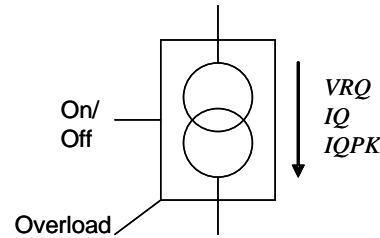

686

Figure 14 – Line driver reference schematics


688 The receiver is specified by a reference schematic according to Figure 15. It performs the
 689 function of a comparator and is specified by its switching thresholds VTH and a hysteresis
 690 $VHYS$ between the switching thresholds. The output indicates the logic level (High or Low) at
 691 the receiver input.

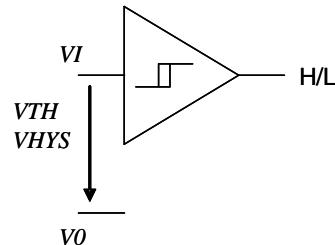

692

Figure 15 – Receiver reference schematics

694 Figure 16 shows the reference schematics for the interconnection of Master and Device for
 695 the SDCI 3-wire connection system.

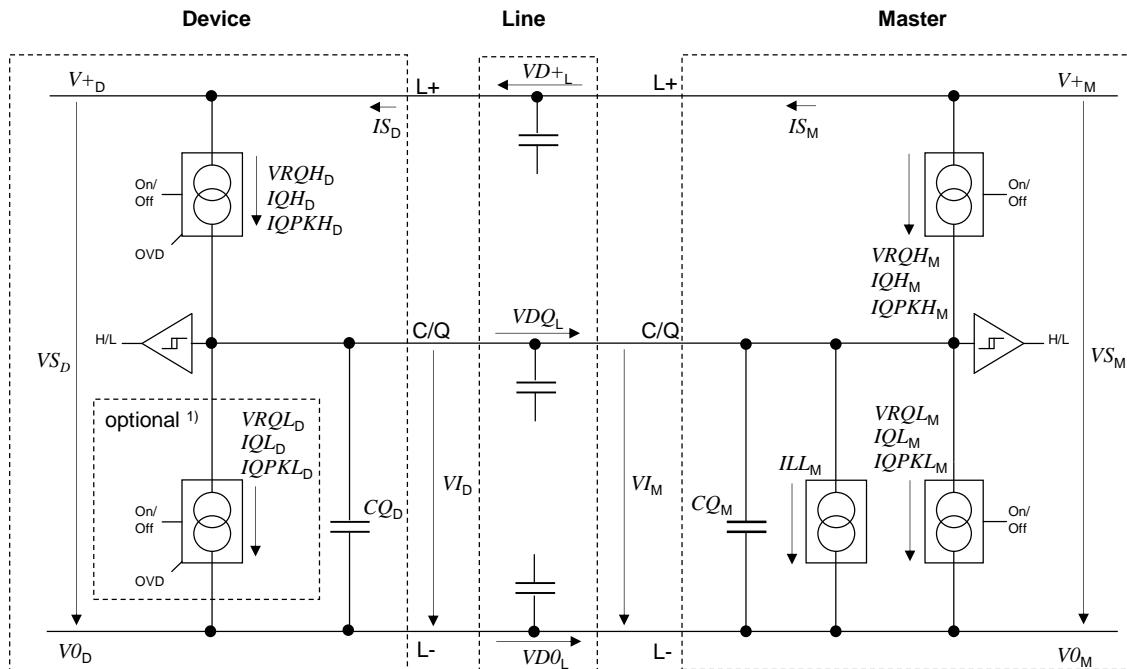


696

697 1) Optional: low-side driver (push-pull only)

Figure 16 – Reference schematics for SDCI 3-wire connection system

699

700 The subsequent illustrations and parameter tables refer to the voltage level definitions in
 701 Figure 17. The parameter indices refer to the Master (M), Device (D) or line (L). The voltage
 702 drops on the line $VD+L$, VDQ_L and $VD0_L$ are implicitly specified in 5.5 through cable
 703 parameters.

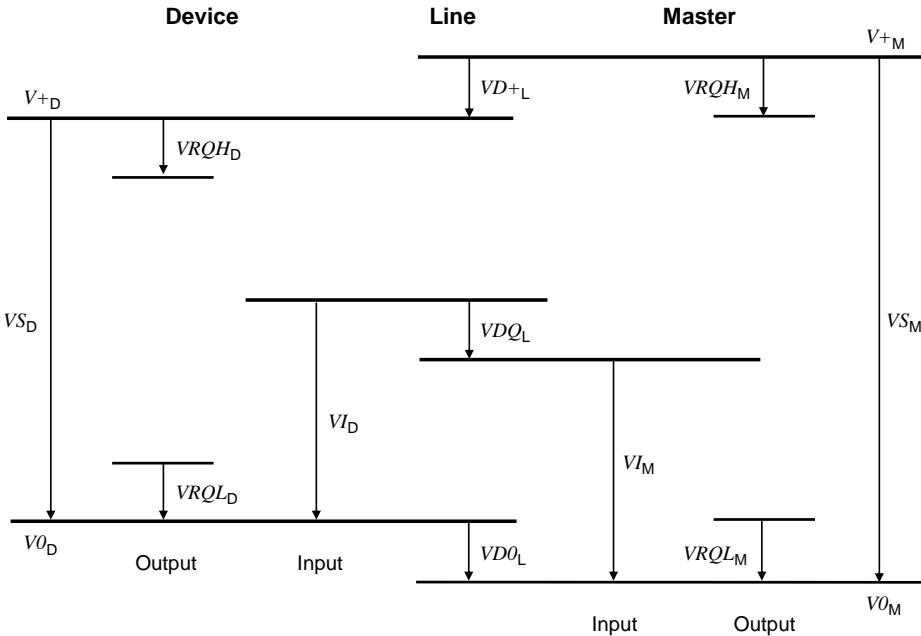

704

705 **Figure 17 – Voltage level definitions**

706 **5.3.2.2 Receiver**

707 The voltage range and switching threshold definitions are the same for Master and Device.
 708 The definitions in Table 5 apply (see also 5.4.1).

709 **Table 5 – Electrical characteristics of a receiver**

Property	Designation	Minimum	Typical	Maximum	Unit	Remark	
$VTHH_{D,M}$	Input threshold 'H'	10,5	n/a	13	V	See NOTE 1	
$VTHL_{D,M}$	Input threshold 'L'	8	n/a	11,5	V	See NOTE 1	
$vhys_{D,M}$	Hysteresis between input thresholds 'H' and 'L'	0	n/a	n/a	V	Shall not be negative See NOTE 2	
VIL_D	Permissible voltage range 'L'	$VO_D - 1,0$	n/a	n/a	V	With reference to relevant negative supply voltage See NOTE 3	
VIL_M	Permissible voltage range 'L'	VO_M	n/a	n/a	V		
VIH_D	Permissible voltage range 'H'	n/a	n/a	$V+D + 1,0$	V	With reference to relevant positive supply voltage. See NOTE 3	
VIH_M	Permissible voltage range 'H'	n/a	n/a	$V+M$	V		
NOTE 1 Thresholds are compatible with the definitions of type 1 digital inputs in IEC 61131-2.							
NOTE 2 Hysteresis voltage $vhys = VTHH - VTHL$							
NOTE 3 Due to 5.4.1 the Master receiver signals VI_M are always within permitted supply ranges.							

710

711 Figure 18 demonstrates the switching thresholds for the detection of Low and High signals.

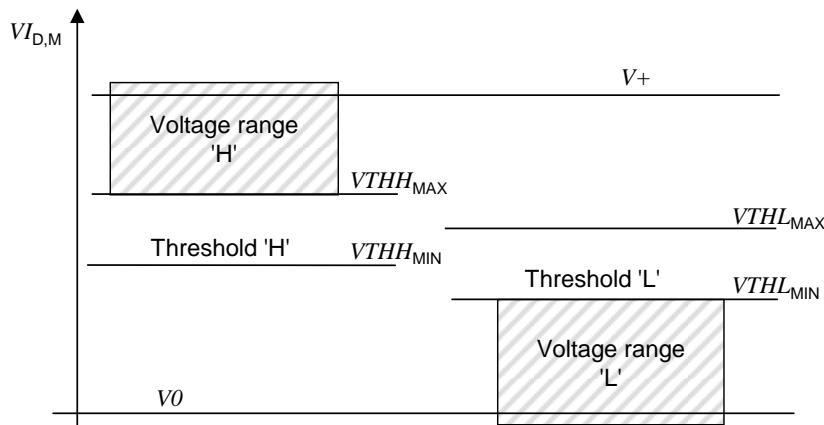


Figure 18 – Switching thresholds


5.3.2.3 Master port

The definitions in Table 6 are valid for the electrical characteristics of a Master port.

Table 6 – Electrical characteristics of a Master port

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
V_{SM}	Supply voltage for Devices	20	24	30	V	See Figure 17
I_{SM}	Supply current for Devices	200	n/a	n/a	mA	See 5.4.1
I_{SIRM}	Current pulse capability for Devices	400	n/a	n/a	mA	See Figure 19
ILL_M	Load or discharge current for $0 \text{ V} < VI_M < 5 \text{ V}$ $5 \text{ V} < VI_M < 15 \text{ V}$ $15 \text{ V} < VI_M < 30 \text{ V}$	0 5/2 5	n/a n/a n/a	15 15 15	mA mA mA	See NOTE 1
$VRQHM$	Residual voltage 'H'	n/a	n/a	3	V	Voltage drop relating to V^{+}_M at maximum driver current $IQHM$
$VRQLM$	Residual voltage 'L'	n/a	n/a	3	V	Voltage drop relating to V^{0}_M at maximum driver current $IQLM$
$IQHM$	DC driver current 'H'	100	n/a	n/a	mA	
$IOPKH_M$	Output peak current 'H'	500	n/a	n/a	mA	Absolute value See NOTE 2
$IQLM$	DC driver current 'L'	100	n/a	n/a	mA	
$IOPKLM$	Output peak current 'L'	500	n/a	n/a	mA	Absolute value See NOTE 2
CQM	Input capacitance	n/a	n/a	1,0	nF	$f=0 \text{ MHz}$ to 4 MHz

717 The Master shall provide a charge of $400 \text{ mA} \times 50 \text{ ms} = 20 \text{ mAs}$ within the first 50 ms after
 718 power-on without any overload-shutdown. After 50 ms, the specific current limitation of the
 719 Master or system applies.

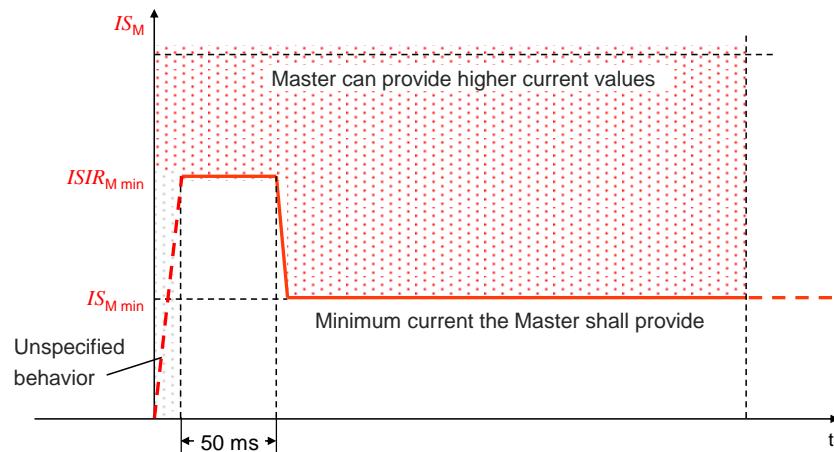

720

721 **Figure 19 – Inrush current and charge (example)**

722 **5.3.2.4 Device**

723 The definitions in Table 7 are valid for the electrical characteristics of a Device.

724 **Table 7 – Electrical characteristics of a Device**


Property	Designation	Minimum	Typical	Maximum	Unit	Remark
V_{SD}	Supply voltage	18	24	30	V	See Figure 17
QIS_D	Power-up charge consumption	n/a	n/a	70	mAs	See equation (1) and Table 8
ΔV_{SD}	Ripple	n/a	n/a	1,3	V _{pp}	Peak-to-peak absolute value limits shall not be exceeded. $f_{\text{ripple}} = \text{DC to } 100 \text{ kHz}$
$VRQH_D$	Residual voltage 'H'	n/a	n/a	3	V	Voltage drop compared with V^+D (IEC 60947-5-2)
$VRQL_D$	Residual voltage 'L'	n/a	n/a	3	V	Voltage drop compared with V_0D
IQH_D	DC driver current P-switching output ("On" state)	50	n/a	minimum ($IQPKL_M$)	mA	Minimum value due to fallback to digital input in accordance with IEC 61131-2, type 2
IQL_D	DC driver current N-switching output ("On" state)	0	n/a	minimum ($IQPKH_M$)	mA	Only for push-pull output stages
IQQ_D	Quiescent current to V_0D ("Off" state)	0	n/a	15	mA	Pull-down or residual current with deactivated output driver stages
CQ_D	Input capacitance	0	n/a	1,0	nF	Effective capacitance between C/Q and L+ or L- of Device in receive state

725

726 The Device shall be able to reach a stable operational state (ready for Wake-up) consuming
 727 the maximum charge according to equation (1).

$$QIS_D = ISIR_M \times 50 \text{ ms} + (T_{RDL} - 50 \text{ ms}) \times IS_M \quad (1)$$

728 Figure 20 shows how the power-on behavior of a Device is defined by the ramp-up time of the
 729 Power 1 supply and by the Device internal time to get ready for the wake-up operation.

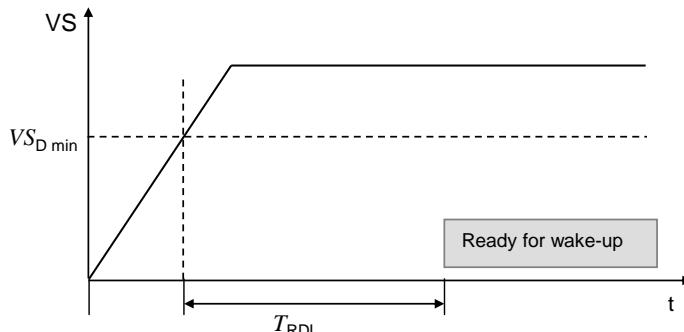

730

731 **Figure 20 – Power-on timing for Power 1**

732 Upon power-on it is mandatory for a Device to reach the wake-up ready state within the time
 733 limits specified in Table 8.

734 **Table 8 – Power-on timing**

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
T_{RDL}	Wake-up readiness following power-on	n/a	n/a	300	ms	Device ramp-up time until it is ready for wake-up signal detection (See NOTE)

NOTE Equivalent to the time delay before availability in IEC 60947-5-2.

735

736 The value of 1 nF for input capacitance CQ_D is applicable for a transmission rate of 230,4
 737 kbit/s. It can be relaxed to a maximum of 10 nF in case of push-pull stage design when
 738 operating at lower transmission rates, provided that all dynamic parameter requirements in
 739 5.3.3.2 are met.


740 **5.3.3 Timing requirements**

741 **5.3.3.1 Transmission method**

742 The "Non Return to Zero" (NRZ) modulation is used for the bit-by-bit coding. A logic value "1"
 743 corresponds to a voltage difference of 0 V between the C/Q line and L- line. A logic value "0"
 744 corresponds to a voltage difference of +24 V between the C/Q line and L- line.

745 The open-circuit level on the C/Q line is 0 V with reference to L-. A start bit has logic value
 746 "0", i.e. +24 V with reference to L-.

747 A UART frame is used for the "data octet"-by-"data octet" coding. The format of the SDCI
 748 UART frame is a bit string structured as shown in Figure 21.

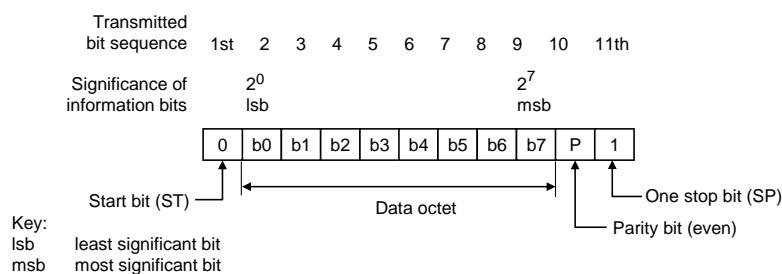

749

750 **Figure 21 – Format of an SDCI UART frame**


751 The definition of the UART frame format is based on ISO 1177 and ISO/IEC 2022.

752 5.3.3.2 Transmission characteristics

753 The timing characteristics of transmission are demonstrated in the form of an eye diagram
754 with the permissible signal ranges (see Figure 22). These ranges are applicable for receiver
755 in both the Master and the Device.

756 Regardless of boundary conditions, the transmitter shall generate a voltage characteristic on
757 the receiver's C/Q connection that is within the permissible range of the eye diagram.

758 The receiver shall detect bits as a valid signal shape within the permissible range of the eye
759 diagram on the C/Q connection. Signal shapes in the "no detection" areas (below $VTHL_{MAX}$ or
760 above $VTHH_{MIN}$ and within t_{ND}) shall not lead to invalid bits.

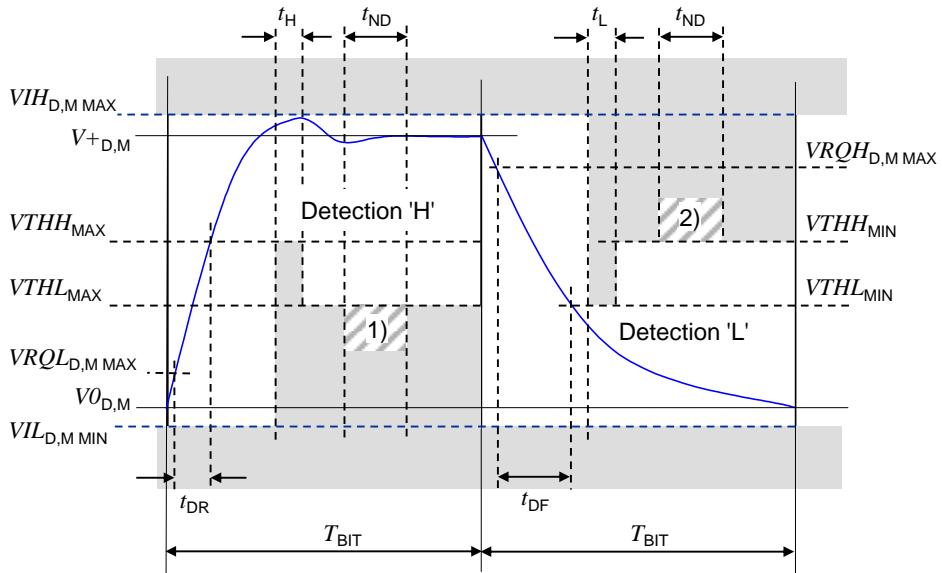

761 NOTE In the figure, 1) = no detection 'L'; and 2) = no detection 'H'

Figure 22 – Eye diagram for the 'H' and 'L' detection

762 In order for a UART frame to be detected correctly, a signal characteristic as demonstrated in
763 Figure 23 is required on the receiver side. The signal delay time between the C/Q signal and
764 the UART input shall be considered. Time T_{BIT} always indicates the receiver's bit rate.

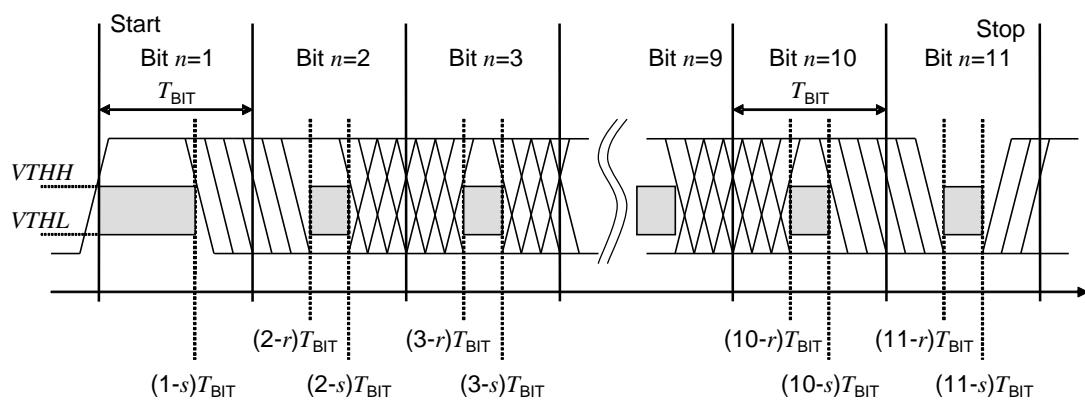


Figure 23 – Eye diagram for the correct detection of a UART frame

765 For every bit n in the bit sequence ($n = 1 \dots 11$) of a UART frame, the time $(n-r)T_{BIT}$ (see Table
766 9 for values of r) designates the time at the end of which a correct level shall be reached in
767 the 'H' or 'L' ranges as demonstrated in the eye diagram in Figure 22. The time $(n-s)T_{BIT}$ (see

772 Table 9 for values of s) describes the time, which shall elapse before the level changes.
 773 Reference shall always be made to the eye diagram in Figure 22, where signal characteristics
 774 within a bit time are concerned.

775 This representation permits a variable weighting of the influence parameters "transmission
 776 rate accuracy", "bit-width distortion", and "slew rate" of the receiver.

777 Table 9 specifies the dynamic characteristics of the transmission.

778 **Table 9 – Dynamic characteristics of the transmission**

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
f_{DTR}	transmission rate	n/a	4,8 38,4 230,4	n/a	kbit/s	COM1 COM2 COM3
T_{BIT}	Bit time at 4,8 kbit/s at 38,4 kbit/s at 230,4 kbit/s		208,33 26,04 4,34		μs μs μs	
Δf_{DTRM}	Master transmission rate accuracy at 4,8 kbit/s at 38,4 kbit/s at 230,4 kbit/s	-0,1 -0,1 -0,1	n/a n/a n/a	+0,1 +0,1 +0,1	% % %	Tolerance of the transmission rate of the Master $\Delta T_{BIT}/T_{BIT}$
r	Start of detection time within a bit with reference to the raising edge of the start bit	0,65	n/a	n/a	-	Calculated in each case from the end of a bit at a UART sampling rate of 8
s	End of detection time within a bit with reference to the raising edge of the start bit	n/a	n/a	0,22	-	Calculated in each case from the end of a bit at a UART sampling rate of 8
T_{DR}	Rise time at 4,8 kbit/s at 38,4 kbit/s at 230,4 kbit/s	0 0 0 0	n/a n/a n/a n/a	0,20 41,7 5,2 869	T_{BIT} μs μs ns	With reference to the bit time unit. The minimum values could be critical to meet the requirements in H.1.5
t_{DF}	Fall time at 4,8 kbit/s at 38,4 kbit/s at 230,4 kbit/s	0 0 0 0	n/a n/a n/a n/a	0,20 41,7 5,2 869	T_{BIT} μs μs ns	With reference to the bit time unit. The minimum values could be critical to meet the requirements in H.1.5
t_{ND}	Noise suppression time	n/a	n/a	1/16	T_{BIT}	Permissible duration of a receive signal above/below the detection threshold without detection taking place
t_H	Detection time High	1/16	n/a	n/a	T_{BIT}	Duration of a receive signal above the detection threshold for 'H' level
t_L	Detection time Low	1/16	n/a	n/a	T_{BIT}	Duration of a receive signal below the detection threshold for 'H' level

779
 780 The parameters ' r ' and ' s ' apply to the respective Master or Device receiver side. This
 781 definition allows for a more flexible definition of oscillator accuracy, bit distortion and slewrate
 782 on the Device side. The overall bit-width distortion on the last bit of the UART frame shall
 783 provide a correct level in the range of Figure 23.

5.3.3.3 Wake-up current pulse

The wake-up feature is used to request that a Device goes to the COMx mode.

A service call (PL_WakeUp.req) from the DL initiates the wake-up process (see 5.2.2.2).

The wake-up request (WURQ) starts with a current pulse induced by the Master (port) for a time T_{WU} . The wake-up request comprises the following phases (see Figure 24):

a) Injection of a current I_{QWU} by the Master depending on the level of the C/Q connection. For an input signal equivalent to logic “1” this is a current source; for an input signal equivalent to logic “0” this is a current sink.

b) Delay time of the Device until it is ready to receive.

The wake-up request pulse can be detected by the Device through a voltage change on the C/Q line or evaluation of the current of the respective driver element within the time T_{WU} .

Figure 24 shows examples for Devices with low output power.

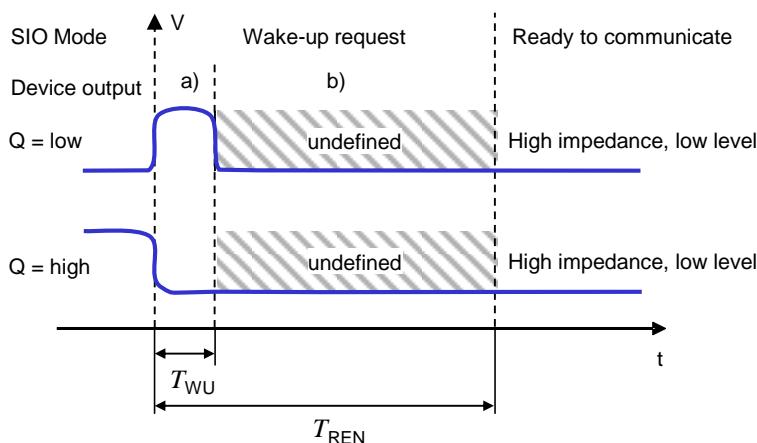


Figure 24 – Wake-up request

Table 10 specifies the current and timing properties associated with the wake-up request. See Table 6 for values of I_{QPKL_M} and I_{QPKH_M} .

Table 10 – Wake-up request characteristics

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
I_{QWU}	Amplitude of Master's wake-up current pulse	I_{QPKL_M} or I_{QPKH_M}	n/a	n/a	mA	Current pulse followed by switching status of Device
T_{WU}	Duration of Master's wake-up current pulse	75	n/a	85	μs	Master property
T_{REN}	Receive enable delay	n/a	n/a	500	μs	Device property

5.4 Power supply

5.4.1 Power supply options

The SDCI connection system provides dedicated power lines in addition to the signal line. The communication section of a Device shall always be powered by the Master using the power lines defined in the 3-wire connection system (Power 1).

807 Manufacturers/vendors shall emphasize this requirement within the user manual of the
 808 Master. Any additional measure for further increased robustness is within the responsibility of
 809 the designer/manufacturer of the Master.

810 The minimum supply current available from a Master port is specified in Table 6.

811 The application section of the Device may be powered in one of three ways:

- 812 • via the power lines of the SDCI 3-wire connection system (class A ports), using Power 1
- 813 • via the extra power lines of the SDCI 5-wire connection system (class B ports), using an
 814 extra power supply at the Master (Power 2) that shall be nonreactive, that means no
 815 impact on voltages and currents of Power 1 and on SDCI communications
- 816 • via a local power supply at the Device (design specific) that shall be nonreactive to
 817 Power 1, thus guaranteeing correct communication even in case of failing local power
 818 supply

819 It is recommended for Devices not to consume more than the minimum current a Master shall
 820 support (see Table 6). This ensures easiest handling of Master/Device systems without
 821 inquiries, checking, and calculations. Whenever a Device requires more than the minimum
 822 current the capabilities of the respective Master port and of its cabling shall be checked.

823 **5.4.2 Port Class B**


824 Figure 25 shows the layout of the two port classes A and B. Class B ports shall be marked to
 825 distinguish from Class A ports due to risks deriving from incompatibilities on pin 2 and pin 5.

826 Power 2 on port class B shall meet the following requirements

- 827 • electrical isolation of Power 2 from Power 1;
- 828 • degree of isolation according to IEC 60664 (clearance and creepage distances);
- 829 • electrical safety (SELV) according to IEC 61010-2-201:2017;
- 830 • direct current with P24 (+) and N24 (-);
- 831 • Device shall continue communicating correctly even in case of failing Power 2.

832 NOTE: EMC tests should consider maximum ripple and load switching

833
 834 A Device designer shall ensure that Power 1 and Power 2 are always electrically isolated
 835 even in particular deployments/applications at the customer's site. Violation of this rule at one
 836 port can have impact on all other ports.

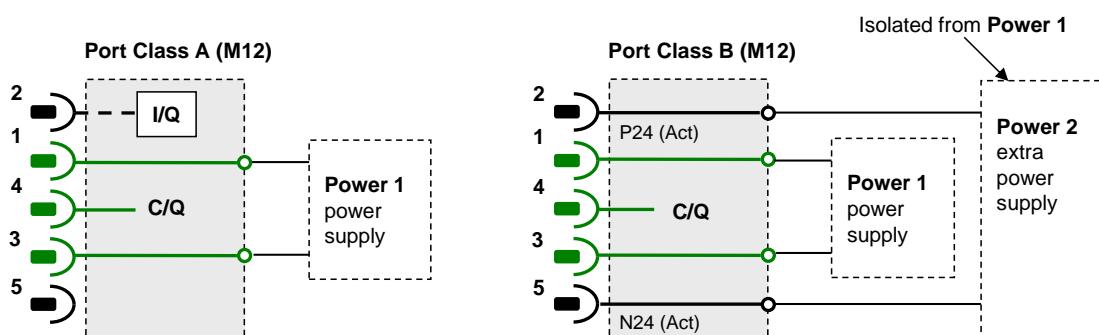

838 **Figure 25 – Class A and B port definitions**

839 Table 11 shows the electrical characteristics of a Master port class B (M12).

840

Table 11 – Electrical characteristic of a Master port class B

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
<i>VP24M</i>	Extra DC supply voltage for Devices	20 ^{a)}	24	30	V	
<i>IP24M</i>	Extra DC supply current for Devices	1,6 ^{b)}	n/a	3,5 ^{c)}	A	
a) A minimum voltage shall be guaranteed for testing at maximum recommended supply current. At the Device side 18 V shall be available in this case. b) Minimum current in order to guarantee a high degree of interoperability. c) The recommended maximum current for a wire gauge of 0,34 mm ² and standard M12 connector is 3,5 A. Maximum current depends on the type of connector, the wire gauge, maximum temperature, and simultaneity factor of the ports (check user manual of a Master).						

841

842 In general, the requirements of Devices shall be checked whether they meet the available
 843 capabilities of the Master. In case a simultaneity factor for Master ports exists, it shall be
 844 documented in the user manual and be observed by the user of the Master.

845 **5.4.3 Power-on requirements**

846 The power-on requirements are specified in 5.3.2.3 and 5.3.2.4.

847 **5.5 Medium**

848 **5.5.1 Connectors**

849 The Master and Device pin assignment is based on the specifications in IEC 60947-5-2, with
 850 extensions specified in the paragraphs below.

851 Ports class A use M5, M8, and M12 connectors, with a maximum of five pins.

852 Ports class B only use M12 connectors with 5 pins.

853 M12 connectors are mechanically A-coded according to IEC 61076-2-101.

854 NOTE For legacy or compatibility reasons, direct wiring or different types of connectors can be used instead,
 855 provided that they do not violate the electrical characteristics and use signal naming specified in this standard.

856 Female connectors are assigned to the Master. Table 12 lists the pin assignments and

857 Figure 26 shows the layout and mechanical coding for M12, M8, and M5 connections.

858


Table 12 – Master pin assignments

Pin	Signal	Designation	Remark
1	L+	Power supply (+)	See Table 6
2	I/Q	NC/DI(OSSDe)/DO (port class A)	Option 1: NC (not connected) Option 2: DI Option 3: DI, then configured DO Option 4: OSSDe (see [10])
	P24	P24 (port class B)	Extra power supply for power Devices (port class B)
3	L-	Power supply (-)	See Table 6
4	C/Q	SIO(OSSDe)/SDCI	Standard I/O mode (DI/DO) or SDI (see Table 6 for electrical characteristics of DO). See [10] for OSSDe definitions.
5	NC	NC (port class A)	Shall not be connected on the Master side (port class A).
	N24	N24 (port class B)	Reference potential to the extra power supply (port class B)
NOTE M12 is always a 5-pin version on the Master side (female).			

859

860

861 Figure 26 shows the layout of the two port classes A and B. Class B ports shall be marked to
 862 distinguish them from Class A ports, because of risks deriving from incompatibilities.

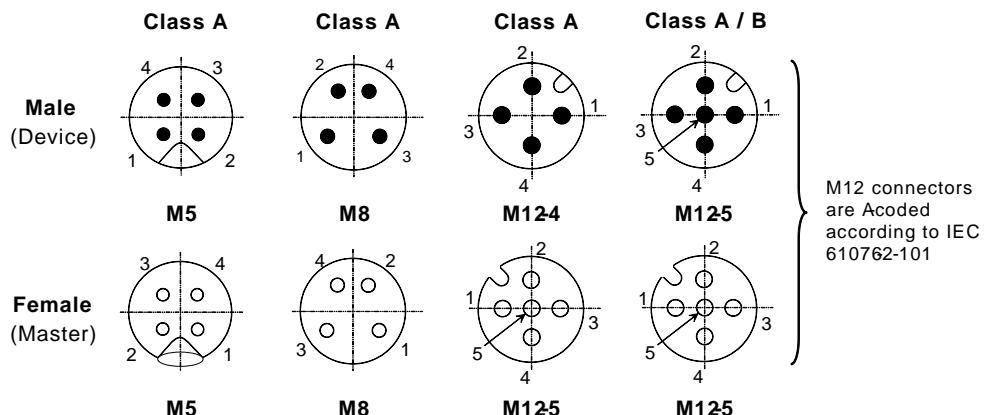

864 **Figure 26 – Pin layout front view**

865 Male connectors are assigned to the Device. Table 13 lists the pin assignments.

866 **Table 13 – Device pin assignments**

Pin	Signal	Designation	Remark
1	L+	Power supply (+)	See Table 7
2	I/Q a)	NC/DI(OSSDe)/DO/ AI/AO (port class A)	Option 1: NC (not connected) Option 2: DI (Master's view) Option 3: DO (Master's view) Option 4: Analog signal (I / U) d) Option 5: OSSDe (see [10])
	P24 b)	P24 (port class B)	Extra power supply for power Devices (port class B)
3	L-	Power supply (-)	See Table 7
4	C/Q c)	SIO(OSSDe)/SDCI	Standard I/O mode (DI/DO) or SDCI (see Table 6 for electrical characteristics of DO). See [10] for OSSDe definitions.
5	Q	ANY (port class A)	ANY (any functionality) e)
	N24 b)	N24 (port class B)	Reference to the extra power supply (port class B)

a) Device signals shall not interfere with the I/Q functionality of a Master. Devices shall withstand permanent DC (see Table 6) or P24 (see 5.4.2) on the Master side.
 b) Devices relying on Port class A shall use 3-wire connection in this case in order to avoid bypassing electrical isolation
 c) A Master shall always be able to establish and maintain SDCI communication without interferences
 d) Typical for U is 0-10V, 1-5V, and for I is 0-20mA, 4-20mA
 e) Device signals shall not interfere with the communication on the C/Q input of a Master. Devices shall withstand permanent N24 (see 5.4.2) on the Master side. Device output shall not impact the integrity of any Master.

867 **5.5.2 Cable**

870 The transmission medium for SDCI communication is a multi-wired cable with 3 or more wires.
 871 The definitions in the following paragraphs implicitly cover the static voltage definitions in
 872 Table 5 and Figure 17. To ensure functional reliability, the cable properties shall comply with
 873 Table 14.

874

Table 14 – Cable characteristics

Property	Minimum	Typical	Maximum	Unit
Length L	0	n/a	20	m
Overall loop resistance RL_{eff} a)	n/a	n/a	6,0 (for a current of 200 mA) 1,2 (for a current of 1000 mA)	Ω
Effective line capacitance CL_{eff}	n/a	n/a	3,0	nF (<1 MHz)
a) The overall loop resistance shall be rated such that minimum Device supply voltages are guaranteed at maximum supply current (see Table 7).				

875

876 The loop resistance RL_{eff} and the effective line capacitance CL_{eff} may be measured as
 877 demonstrated in Figure 27.



878

Figure 27 – Reference schematic for effective line capacitance and loop resistance

880 Table 15 shows the cable conductors and their assigned color codes.

Table 15 – Cable conductor assignments

Signal	Designation	Color	Remark
L-	Power supply (-)	Blue ^{a)}	SDCI 3-wire connection system
C/Q	Communication signal	Black ^{a)}	SDCI 3-wire connection system
L+	Power supply (+)	Brown ^{a)}	SDCI 3-wire connection system
I/Q	DI or DO	White ^{a)}	Optional
P24	Extra power supply (+)	Any other	Optional
N24	Extra power supply (-)	Any other	Optional

a) Corresponding to IEC 60947-5-2

882

6 Standard Input and Output (SIO)

884 Figure 85 and Figure 96 demonstrate how the SIO mode allows a Device to bypass the SDI
 885 communication layers and to map the DI or DO signal directly into the data exchange mes-
 886 sage of the upper level fieldbus or system. Changing between the SDI and SIO mode is
 887 defined by the user configuration or implicitly by the services of the Master applications. The
 888 System Management takes care of the corresponding initialization or deactivation of the SDI
 889 communication layers and the physical layer (mode switch). The characteristics of the
 890 interfaces for the DI and DO signals are derived from the characteristics specified in
 891 IEC 61131-2 for type 1.

7 Data link layer (DL)


7.1 General

894 The data link layers of SDI are concerned with the delivery of messages between a Master
 895 and a Device across the physical link. It uses several M-sequence ("message sequence")
 896 types for different data categories.

897 A set of DL-services is available to the application layer (AL) for the exchange of Process
 898 Data (PD) and On-request Data (OD). Another set of DL-services is available to System
 899 Management (SM) for the retrieval of Device communication and identification parameters
 900 and the setting of state machines within the DL. The DL uses PL-Services for controlling the
 901 physical layer (PL) and for exchanging UART frames. The DL takes care of the error detection
 902 of messages (whether internal or reported from the PL) and the appropriate remedial
 903 measures (e.g. retry).

904 The data link layers are structured due to the nature of the data categories into Process Data
 905 handlers and On-request Data handlers which are in turn using a message handler to deal
 906 with the requested transmission of messages. The special modes of Master ports such as
 907 wake-up, COMx, and SIO (disable communication) require a dedicated DL-mode handler
 908 within the Master DL. The special wake-up signal modulation requires signal detection on the
 909 Device side and thus a DL-mode handler within the Device DL. Each handler comprises its
 910 own state machine.

911 The data link layer is subdivided in a DL-A section with its own internal services and a DL-B
 912 section with the external services. The DL uses additional internal administrative calls
 913 between the handlers which are defined in the "internal items" section of the associated state-
 914 transition tables. Figure 28 shows an overview of the structure and the services of the
 915 Master's data link layer.

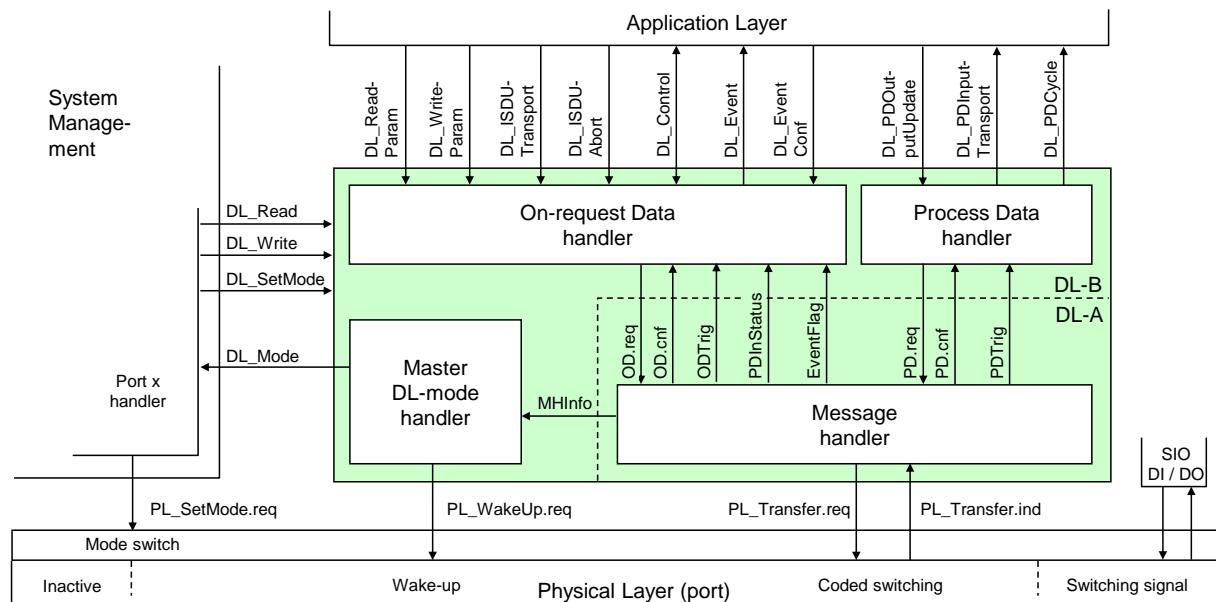


916 NOTE This figure uses the conventions in 3.3.5.

Figure 28 – Structure and services of the data link layer (Master)

919

920 Figure 29 shows an overview of the structure and the services of the Device's data link layer.

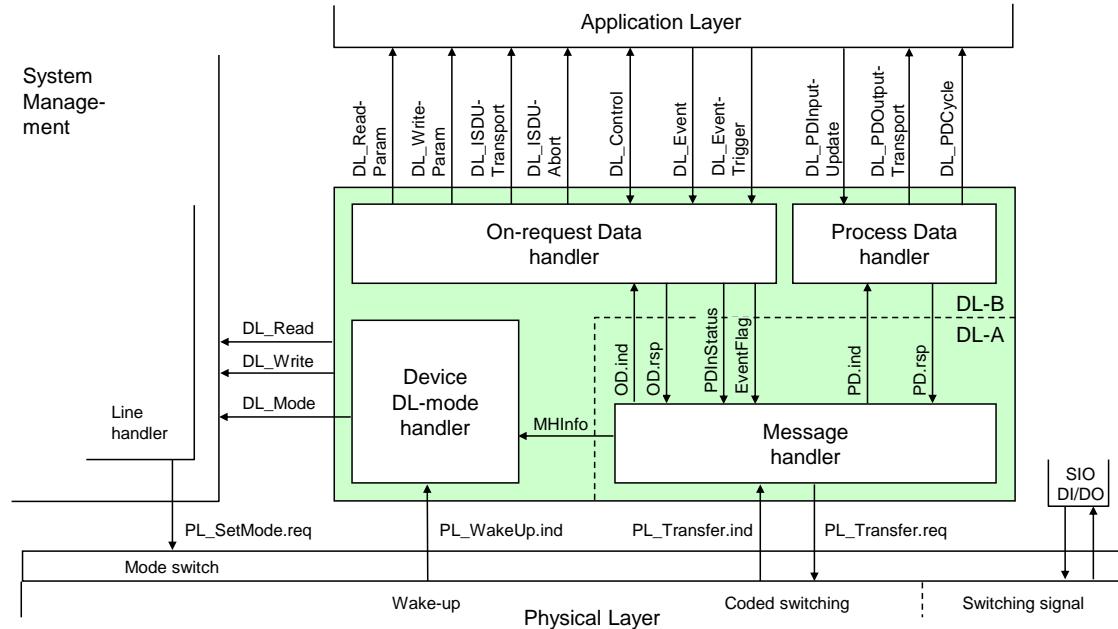

921

922 **Figure 29 – Structure and services of the data link layer (Device)**

923 **7.2 Data link layer services**

924 **7.2.1 DL-B services**

925 **7.2.1.1 Overview of services within Master and Device**

926 This clause defines the services of the data link layer to be provided to the application layer
 927 and System Management via its external interfaces. Table 16 lists the assignments of Master
 928 and Device to their roles as initiator or receiver for the individual DL services. Empty fields
 929 indicate no availability of this service on Master or Device.

930 **Table 16 – Service assignments within Master and Device**

Service name	Master	Device
DL_ReadParam	R	I
DL_WriteParam	R	I
DL_ISDUTransport	R	I
DL_ISDUAbrt	R	I
DL_PDOOutputUpdate	R	
DL_PDOOutputTransport		I
DL_PDIInputUpdate		R
DL_PDIInputTransport	I	
DL_PDCycle	I	I
DL_SetMode	R	
DL_Mode	I	I
DL_Event	I	R
DL_EventConf	R	
DL_EventTrigger		R
DL_Control	I / R	R / I
DL_Read	R	I
DL_Write	R	I

Service name	Master	Device
Key (see 3.3.4)		
I Initiator of service		
R Receiver (responder) of service		

931

932 See 3.3 for conventions and how to read the service descriptions in 7.2, 8.2, 9.2.2, and 9.3.2.

933 **7.2.1.2 DL_ReadParam**934 The DL_ReadParam service is used by the AL to read a parameter value from the Device via
935 the page communication channel. The parameters of the service primitives are listed in Table
936 17.937 **Table 17 – DL_ReadParam**

Parameter name	.req	.cnf	.ind	.rsp
Argument	M		M	
Address	M		M	
Result (+) Value		S M		S M
Result (-) ErrorInfo		S M		

938

Argument

939 The service-specific parameters are transmitted in the argument.

941 **Address**942 This parameter contains the address of the requested Device parameter, i.e. the Device
943 parameter addresses within the page communication channel (see Table B.1).

944 Permitted values: 0 to 31

945 **Result (+):**

946 This selection parameter indicates that the service has been executed successfully.

947 **Value**

948 This parameter contains read Device parameter values.

949 **Result (-):**

950 This selection parameter indicates that the service failed.

951 **ErrorInfo**

952 This parameter contains error information.

953 Permitted values:

954 NO_COMM (no communication available),
955 STATE_CONFLICT (service unavailable within current state)

956

957 7.2.1.3 DL_WriteParam

958 The DL_WriteParam service is used by the AL to write a parameter value to the Device via
 959 the page communication channel. The parameters of the service primitives are listed in Table
 960 18.

961 **Table 18 – DL_WriteParam**

Parameter name	.req	.cnf	.ind
Argument	M		M
Address	M		M
Value	M		M
Result (+)		S	
Result (-)		S	
ErrorInfo		M	

962 **Argument**

963 The service-specific parameters are transmitted in the argument.

965 **Address**

966 This parameter contains the address of the requested Device parameter, i.e. the Device
 967 parameter addresses within the page communication channel.

968 Permitted values: 16 to 31, in accordance with Device parameter access rights

969 **Value**

970 This parameter contains the Device parameter value to be written.

971 **Result (+):**

972 This selection parameter indicates that the service has been executed successfully.

973 **Result (-):**

974 This selection parameter indicates that the service failed.

975 **ErrorInfo**

976 This parameter contains error information.

977 Permitted values:

NO_COMM	(no communication available),
STATE_CONFLICT	(service unavailable within current state)

980 **7.2.1.4 DL_Read**

981 The DL_Read service is used by System Management to read a Device parameter value via
 982 the page communication channel. The parameters of the service primitives are listed in Table
 983 19.

984 **Table 19 – DL_Read**

Parameter name	.req	.cnf	.ind	.rsp
Argument	M		M	
Address	M		M	
Result (+)		S		
Value		M		
Result (-)		S		
ErrorInfo		M		

985 **Argument**

986 The service-specific parameters are transmitted in the argument.

988 **Address**

989 This parameter contains the address of the requested Device parameter, i.e. the Device
 990 parameter addresses within the page communication channel (see Table B.1).

991 Permitted values: 0 to 15, in accordance with Device parameter access rights

992 **Result (+):**

993 This selection parameter indicates that the service has been executed successfully.

994 **Value**

995 This parameter contains read Device parameter values.

996 **Result (-):**

997 This selection parameter indicates that the service failed.

998 **ErrorInfo**

999 This parameter contains error information.

1000 Permitted values:

1001 NO_COMM (no communication available),
 1002 STATE_CONFLICT (service unavailable within current state)

1003 **7.2.1.5 DL_Write**

1004 The DL_Write service is used by System Management to write a Device parameter value to
 1005 the Device via the page communication channel. The parameters of the service primitives are
 1006 listed in Table 20.

1007 **Table 20 – DL_Write**

Parameter name	.req	.cnf	.ind
Argument	M		M
Address	M		M
Value	M		M
Result (+)		S	
Result (-)		S	
ErrorInfo		M	

1008 **Argument**

1009 The service-specific parameters are transmitted in the argument.

1011 **Address**

1012 This parameter contains the address of the requested Device parameter, i.e. the Device
 1013 parameter addresses within the page communication channel.

1014 Permitted values: 0 to 15, in accordance with parameter access rights

1015 **Value**

1016 This parameter contains the Device parameter value to be written.

1017 **Result (+):**

1018 This selection parameter indicates that the service has been executed successfully.

1019 **Result (-):**

1020 This selection parameter indicates that the service failed.

1021 **ErrorInfo**

1022 This parameter contains error information.

1023 Permitted values:

1024 NO_COMM (no communication available),
 1025 STATE_CONFLICT (service unavailable within current state)

1026 **7.2.1.6 DL_ISDUTransport**

1027 The DL_ISDUTransport service is used to transport an ISDU. This service is used by the
 1028 Master to send a service request from the Master application layer to the Device. It is used by
 1029 the Device to send a service response to the Master from the Device application layer. The
 1030 parameters of the service primitives are listed in Table 21.

1031

Table 21 – DL_ISDUTransport

Parameter name	.req	.ind	.cnf	.rsp
Argument ValueList	M M	M M		
Result (+) Data Qualifier			S C M	S C M
Result (-) ISDUTransportErrorInfo			S M	S M

1032

Argument

1033 The service-specific parameters are transmitted in the argument.

ValueList

1036 This parameter contains the relevant operating parameters

1037 Parameter type: Record

Index

1039 Permitted values: 2 to 65535 (See B.2.1 for constraints)

Subindex

1041 Permitted values: 0 to 255

Data

1043 Parameter type: Octet string

Direction

1045 Permitted values:

1046 READ (Read operation),
1047 WRITE (Write operation)**Result (+):**

1048 This selection parameter indicates that the service has been executed successfully.

Data

1051 Parameter type: Octet string

Qualifier

1053 Permitted values: an I-Service Device response according to Table A.12

Result (-):

1054 This selection parameter indicates that the service failed.

ISDUTransportErrorInfo

1057 This parameter contains error information.

1058 Permitted values:

1059 NO_COMM (no communication available),
1060 STATE_CONFLICT (service unavailable within current state),
1061 ISDU_TIMEOUT (ISDU acknowledgment time elapsed, see Table 102),
1062 ISDU_NOT_SUPPORTED (ISDU not implemented),
1063 VALUE_OUT_OF_RANGE (Service parameter value violates range definitions)**7.2.1.7 DL_ISDUAbrort**

1064 The DL_ISDUAbrort service aborts the current ISDU transmission. This service has no parameters. The service primitives are listed in Table 22.

1067

Table 22 – DL_ISDUAbr0t

Parameter name	.req	.cnf
<none>		

1068

1069 The service returns with the confirmation after abortion of the ISDU transmission.

1070 **7.2.1.8 DL_PDOOutputUpdate**1071 The Master's application layer uses the DL_PDOOutputUpdate service to update the output
1072 data (Process Data from Master to Device) on the data link layer. The parameters of the
1073 service primitives are listed in Table 23.

1074

Table 23 – DL_PDOOutputUpdate

Parameter name	.req	.cnf
Argument OutputData	M M	
Result (+) TransportStatus		S M
Result (-) ErrorInfo		S M

1075

Argument

1076 The service-specific parameters are transmitted in the argument.

1077 **OutputData**

1078 This parameter contains the Process Data provided by the application layer.

1079 Parameter type: Octet string

1080 **Result (+):**

1081 This selection parameter indicates that the service has been executed successfully.

1082 **TransportStatus**1083 This parameter indicates whether the data link layer is in a state permitting data to be
1084 transferred to the communication partner(s).

1085 Permitted values:

1086 YES (data transmission permitted),
1087 NO (data transmission not permitted),1088 **Result (-):**

1089 This selection parameter indicates that the service failed.

1090 **ErrorInfo**

1091 This parameter contains error information.

1092 Permitted values:

1093 NO_COMM (no communication available),
1094 STATE_CONFLICT (service unavailable within current state)1095 **7.2.1.9 DL_PDOOutputTransport**1096 The data link layer on the Device uses the DL_PDOOutputTransport service to transfer the
1097 content of output Process Data to the application layer (from Master to Device). The
1098 parameters of the service primitives are listed in Table 24.
1099

1100

Table 24 – DL_PDOOutputTransport

Parameter name	.ind
Argument OutputData	M M

Argument

The service-specific parameters are transmitted in the argument.

OutputData

This parameter contains the Process Data to be transmitted to the application layer.

Parameter type: Octet string

7.2.1.10 DL_PDIInputUpdate

The Device's application layer uses the DL_PDIInputUpdate service to update the input data (Process Data from Device to Master) on the data link layer. The parameters of the service primitives are listed in Table 25.

Table 25 – DL_PDIInputUpdate

Parameter name	.req	.cnf
Argument InputData	M M	
Result (+) TransportStatus		S M
Result (-) ErrorInfo		S M

Argument

The service-specific parameters are transmitted in the argument.

InputData

This parameter contains the Process Data provided by the application layer.

Result (+):

This selection parameter indicates that the service has been executed successfully.

TransportStatus

This parameter indicates whether the data link layer is in a state permitting data to be transferred to the communication partner(s).

Permitted values:

YES (data transmission permitted),
NO (data transmission not permitted),

Result (-):

This selection parameter indicates that the service failed.

ErrorInfo

This parameter contains error information.

Permitted values:

NO_COMM (no communication available),
STATE_CONFLICT (service unavailable within current state)

7.2.1.11 DL_PDIInputTransport

The data link layer on the Master uses the DL_PDIInputTransport service to transfer the content of input data (Process Data from Device to Master) to the application layer. The parameters of the service primitives are listed in Table 26.

Table 26 – DL_PDIInputTransport

Parameter name	.ind
Argument InputData	M M

Argument

The service-specific parameters are transmitted in the argument.

InputData

This parameter contains the Process Data to be transmitted to the application layer.

Parameter type: Octet string

7.2.1.12 DL_PDCycle

The data link layer uses the DL_PDCycle service to indicate the end of a Process Data cycle to the application layer. This service has no parameters. The service primitives are listed in Table 27.

Table 27 – DL_PDCycle

Parameter name	.ind
<none>	

1148

7.2.1.13 DL_SetMode

The DL_SetMode service is used by System Management to set up the data link layer's state machines and to send the characteristic values required for operation to the data link layer. The parameters of the service primitives are listed in Table 28.

Table 28 – DL_SetMode

Parameter name	.req	.cnf
Argument	M	
Mode	M	
ValueList	U	
Result (+)		S
Result (-)		S
ErrorInfo		M

1154

Argument

The service-specific parameters are transmitted in the argument.

Mode

This parameter indicates the requested mode of the Master's DL on an individual port.

Permitted values:

INACTIVE (handler shall change to the INACTIVE state),
 STARTUP (handler shall change to STARTUP state),
 PREOPERATE (handler shall change to PREOPERATE state),
 OPERATE (handler shall change to OPERATE state)

ValueList

This parameter contains the relevant operating parameters.

Data structure: record

M-sequenceTime: (to be propagated to message handler)

M-sequenceType: (to be propagated to message handler)

Permitted values:

TYPE_0,
 TYPE_1_1, TYPE_1_2, TYPE_1_V,
 TYPE_2_1, TYPE_2_2, TYPE_2_3, TYPE_2_4, TYPE_2_5, TYPE_2_V
 (TYPE_1_1 forces interleave mode of Process and On-request Data transmission,
 see 7.3.4.2)

PDIInputLength: (to be propagated to message handler)

1177 **PDOOutputLength:** (to be propagated to message handler)

1179 **OnReqDataLengthPerMessage:** (to be propagated to message handler)

1180 **Result (+):**

1181 This selection parameter indicates that the service has been executed successfully.

1184 **Result (-):**

1185 This selection parameter indicates that the service failed.

1186 **ErrorInfo**

1187 This parameter contains error information.

1188 Permitted values:

1189 STATE_CONFLICT (service unavailable within current state),
 1190 PARAMETER_CONFLICT (consistency of parameter set violated)

1191 **7.2.1.14 DL_Mode**

1192 The DL uses the DL_Mode service to report to System Management that a certain operating
 1193 status has been reached. The parameters of the service primitives are listed in Table 29.

1194 **Table 29 – DL_Mode**

Parameter name	.ind
Argument RealMode	M M

1195 **Argument**

1196 The service-specific parameters are transmitted in the argument.

1198 **RealMode**

1199 This parameter indicates the status of the DL-mode handler.

1200 Permitted values:

1201 INACTIVE (Handler changed to the INACTIVE state)
 1202 COM1 (COM1 mode established)
 1203 COM2 (COM2 mode established)
 1204 COM3 (COM3 mode established)
 1205 COMLOST (Lost communication)
 1206 ESTABCOM (Handler changed to the EstablishCom state)
 1207 STARTUP (Handler changed to the STARTUP state)
 1208 PREOPERATE (Handler changed to the PREOPERATE state)
 1209 OPERATE (Handler changed to the OPERATE state)

1210 **7.2.1.15 DL_Event**

1211 The service DL_Event indicates a pending status or error information. The cause for an Event
 1212 is located in a Device and the Device application triggers the Event transfer. The parameters
 1213 of the service primitives are listed in Table 30.

1214 **Table 30 – DL_Event**

Parameter name	.req	.ind
Argument	M	M
Instance	M	M
Type	M	M
Mode	M	M
EventCode	M	M
EventsLeft		M

Argument

The service-specific parameters are transmitted in the argument.

Instance

This parameter indicates the Event source.

Permitted values: Application (see Table A.17)

Type

This parameter indicates the Event category.

Permitted values: ERROR, WARNING, NOTIFICATION (see Table A.19)

Mode

This parameter indicates the Event mode.

Permitted values: SINGLESHTOT, APPEARS, DISAPPEARS (see Table A.20)

EventCode

This parameter contains a code identifying a certain Event (see Table D.1).

Parameter type: 16-bit unsigned integer

EventsLeft

This parameter indicates the number of unprocessed Events.

7.2.1.16 DL_EventConf

The DL_EventConf service confirms the transmitted Events via the Event handler. This service has no parameters. The service primitives are listed in Table 31.

Table 31 – DL_EventConf

Parameter name	.req	.cnf
<none>		

7.2.1.17 DL_EventTrigger

The DL_EventTrigger request starts the Event signaling (see Event flag in Figure A.3) and freezes the Event memory within the DL. The confirmation is returned after the activated Events have been processed. Additional DL_EventTrigger requests are ignored until the previous one has been confirmed (see 7.3.8, 8.3.3 and Figure 66). This service has no parameters. The service primitives are listed in Table 32.

Table 32 – DL_EventTrigger

Parameter name	.req	.cnf
<none>		

7.2.1.18 DL_Control

The Master uses the DL_Control service to convey control information via the MasterCommand mechanism to the corresponding Device application and to get control information via the PD status flag mechanism (see A.1.5) and the PDInStatus service (see 7.2.2.5). The parameters of the service primitives are listed in Table 33.

Table 33 – DL_Control

Parameter name	.req	.ind
Argument ControlCode	M M	M M(=)

Argument

The service-specific parameters are transmitted in the argument.

ControlCode

This parameter indicates the qualifier status of the Process Data (PD)

Permitted values:

VALID (Input Process Data valid; see 7.2.2.5, 8.2.2.12)

INVALID (Input Process Data invalid)

PDOUTVALID (Output Process Data valid; see 7.3.7.1)

PDOUTINVALID (Output Process Data invalid or missing)

7.2.2 DL-A services**7.2.2.1 Overview**

According to 7.1 the data link layer is split into the upper layer DL-B and the lower layer DL-A. The layer DL-A comprises the message handler as shown in Figure 28 and Figure 29.

The Master message handler encodes commands and data into messages and sends these to the connected Device via the physical layer. It receives messages from the Device via the physical layer and forwards their content to the corresponding handlers in the form of a confirmation. When the "Event flag" is set in a Device message (see A.1.5), the Master message handler invokes an EventFlag service to prompt the Event handler.

The Master message handler shall employ a retry strategy following a corrupted message, i.e. upon receiving an incorrect checksum from a Device, or no checksum at all. In these cases, the Master shall repeat the Master message two times (see Table 102). If the retries are not successful, a negative confirmation shall be provided, and the Master shall re-initiate the communication via the Port-x handler beginning with a wake-up.

After a start-up phase the message handler performs cyclic operation with the M-sequence type and cycle time provided by the DL_SetMode service.

Table 34 lists the assignment of Master and Device to their roles as initiator (I) or receiver (R) in the context of the execution of their individual DL-A services.

Table 34 – DL-A services within Master and Device

Service name	Master	Device
OD	R	I
PD	R	I
EventFlag	I	R
PDIInStatus	I	R
MHInfo	I	I
ODTrig	I	
PDTTrig	I	

1280

7.2.2.2 OD

The OD service is used to set up the On-request Data for the next message to be sent. In turn, the confirmation of the service contains the data from the receiver. The parameters of the service primitives are listed in Table 35.

1285

Table 35 – OD

Parameter name	.req	.ind	.rsp	.cnf
Argument	M	M		
RWDirection	M	M		
ComChannel	M	M		
AddressCtrl	M	M		
Length	M	M		
Data	C	C		
Result (+)			S	S
Data			C	C(=)
Length			M	M
Result (-)			S	S
ErrorInfo			M	M(=)

1286

Argument

1287 The service-specific parameters are transmitted in the argument.

1289

RWDirection

1290 This parameter indicates the read or writes direction.

1291

Permitted values:

1292 READ (Read operation),
1293 WRITE (Write operation)

1294

ComChannel

1295 This parameter indicates the selected communication channel for the transmission.

1296

Permitted values: DIAGNOSIS, PAGE, ISDU (see Table A.1)

1297

AddressCtrl

1298 This parameter contains the address or flow control value (see A.1.2).

1299

Permitted values: 0 to 31

1300

Length

1301 This parameter contains the length of data to transmit.

1302

Permitted values: 0 to 32

1303

Data

1304 This parameter contains the data to transmit.

1305

Data type: Octet string

1306

Result (+):

1307 This selection parameter indicates that the service has been executed successfully.

1308

Data

1309 This parameter contains the read data values.

1310

Length

1311 This parameter contains the length of the received data package.

1312

Permitted values: 0 to 32

1313

Result (-):

1314 This selection parameter indicates that the service failed.

1315

ErrorInfo

1316 This parameter contains error information.

1317

Permitted values:

1318 NO_COMM (no communication available),
1319 STATE_CONFLICT (service unavailable within current state)

1320 **7.2.2.3 PD**

1321 The PD service is used to setup the Process Data to be sent through the process
 1322 communication channel. The confirmation of the service contains the data from the receiver.
 1323 The parameters of the service primitives are listed in Table 36.

1324 **Table 36 – PD**

Parameter name	.req	.ind	.rsp	.cnf
Argument	M	M		
PDInAddress	C	C(=)		
PDInLength	C	C(=)		
PDOOut	C	C(=)		
PDOOutAddress	C	C(=)		
PDOOutLength	C	C(=)		
Result (+)			S	S
PDIn			C	C(=)
Result (-)			S	S
ErrorInfo			M	M(=)

1325 **Argument**

1326 The service-specific parameters are transmitted in the argument.

1328 **PDInAddress**

1329 This parameter contains the address of the requested input Process Data (see 7.3.4.2).

1330 **PDInLength**

1331 This parameter contains the length of the requested input Process Data.

1332 Permitted values: 0 to 32

1333 **PDOOut**

1334 This parameter contains the Process Data to be transferred from Master to Device.

1335 Data type: Octet string

1336 **PDOOutAddress**

1337 This parameter contains the address of the transmitted output Process Data (see 7.3.4.2).

1338 **PDOOutLength**

1339 This parameter contains the length of the transmitted output Process Data.

1340 Permitted values: 0 to 32

1341 **Result (+)**

1342 This selection parameter indicates that the service has been executed successfully.

1343 **PDIn**

1344 This parameter contains the Process Data to be transferred from Device to Master.

1345 Data type: Octet string

1346 **Result (-)**

1347 This selection parameter indicates that the service failed.

1348 **ErrorInfo**

1349 This parameter contains error information.

1350 Permitted values:

1351 NO_COMM (no communication available),

1352 STATE_CONFLICT (service unavailable within current state)

1353 **7.2.2.4 EventFlag**

1354 The EventFlag service sets or signals the status of the "Event flag" (see A.1.5) during cyclic
 1355 communication. The parameters of the service primitives are listed in Table 37.

1356

Table 37 – EventFlag

Parameter name	.ind	.req
Argument Flag	M	M

1357

Argument

1359 The service-specific parameters are transmitted in the argument.

1360

Flag

1361 This parameter contains the value of the "Event flag".

1362

Permitted values:

1363 TRUE ("Event flag" = 1)
1364 FALSE ("Event flag" = 0)**7.2.2.5 PDIInStatus**1366 The service PDIInStatus sets and signals the validity qualifier of the input Process Data. The
1367 parameters of the service primitives are listed in Table 38.

1368

Table 38 – PDIInStatus

Parameter name	.req	.ind
Argument Status	M	M

1369

Argument

1371 The service-specific parameters are transmitted in the argument.

1372

Status

1373 This parameter contains the validity indication of the transmitted input Process Data.

1374

Permitted values:

1375 VALID (Input Process Data valid based on PD status flag (see A.1.5); see 7.2.1.18)
1376 INVALID (Input Process Data invalid)**7.2.2.6 MHInfo**1378 The service MHInfo signals an exceptional operation within the message handler. The
1379 parameters of the service are listed in Table 39.

1380

Table 39 – MHInfo

Parameter name	.ind
Argument MHInfo	M

1381

Argument

1383 The service-specific parameters are transmitted in the argument.

1384

MHInfo

1385 This parameter contains the exception indication of the message handler.

1386

Permitted values:

1387 COMLOST (lost communication),
1388 ILLEGAL_MESSAGE TYPE (unexpected M-sequence type detected)
1389 CHECKSUM_MISMATCH (Checksum error detected)**7.2.2.7 ODTrig**1391 The service ODTrig is only available on the Master. The service triggers the On-request Data
1392 handler and the ISDU, Command, or Event handler currently in charge to provide the On-

1393 request Data (via the OD service) for the next Master message. The parameters of the service
 1394 are listed in Table 40.

1395 **Table 40 – ODTrig**

Parameter name	.ind
Argument DataLength	M

1396 **Argument**

1397 The service-specific parameters are transmitted in the argument.

1399 **DataLength**

1400 This parameter contains the available space for On-request Data (OD) per message.

1401 **7.2.2.8 PDTTrig**

1402 The service PDTTrig is only available on the Master. The service triggers the Process Data
 1403 handler to provide the Process Data (PD) for the next Master message.

1404 The parameters of the service are listed in Table 41.

1405 **Table 41 – PDTTrig**

Parameter name	.ind
Argument DataLength	M

1406 **Argument**

1407 The service-specific parameters are transmitted in the argument.

1409 **DataLength**


1410 This parameter contains the available space for Process Data (PD) per message.

1411 **7.3 Data link layer protocol**

1412 **7.3.1 Overview**

1413 Figure 28 and Figure 29 are showing the structure of the data link layer and its components; a
 1414 DL-mode handler, a message handler, a Process Data handler, and an On-request Data
 1415 handler to provide the specified services. Subclauses 7.3.2 to 7.3.8 define the behaviour
 1416 (dynamics) of these handlers by means of UML state machines and transition tables.

1417 The On-request Data handler supports three independent types of data: ISDU, command and
 1418 Event. Therefore, three additional state machines are working together with the On-request
 1419 Data handler state machine as shown in Figure 30.

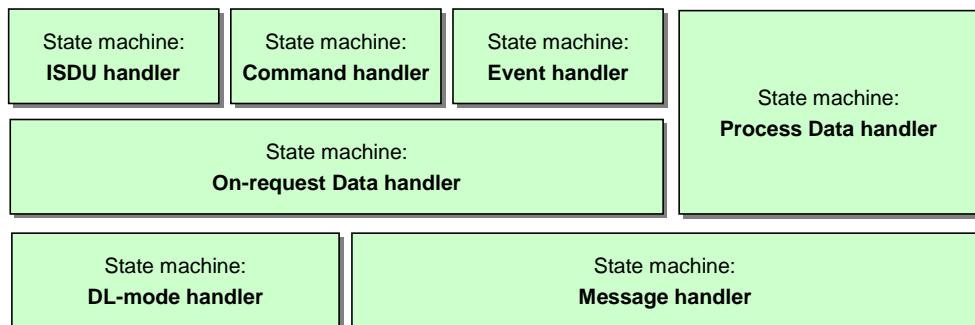

1421 **Figure 30 – State machines of the data link layer**

1422 Supplementary sequence or activity diagrams are demonstrating certain use cases. See
 1423 IEC/TR 62390 and ISO/IEC 19505.

1424 The elements each handler is dealing with, such as messages, wake-up procedures,
 1425 interleave mode, ISDU (Indexed Service Data Units), and Events are defined within the
 1426 context of the respective handler.

1427 7.3.2 DL-mode handler

1428 7.3.2.1 General


1429 The Master DL-mode handler shown in Figure 28 is responsible to setup the SDCI
 1430 communication using services of the Physical Layer (PL) and internal administrative calls to
 1431 control and monitor the message handler as well as the states of other handlers.

1432 The Device DL-mode handler shown in Figure 29 is responsible to detect a wake-up request
 1433 and to establish communication. It receives MasterCommands to synchronize with the Master
 1434 DL-mode handler states STARTUP, PREOPERATE, and OPERATE and manages the
 1435 activation and de-activation of handlers as appropriate.

1436 7.3.2.2 Wake-up procedures and Device conformity rules

1437 System Management triggers the following actions on the data link layer with the help of the
 1438 DL_SetMode service (requested mode = STARTUP).

1439 The Master DL-mode handler tries to establish communication via a wake-up request
 1440 (PL_WakeUp.req) followed by a test message with M-sequence TYPE_0 (read
 1441 "MinCycleTime") according to the sequence shown in Figure 31.

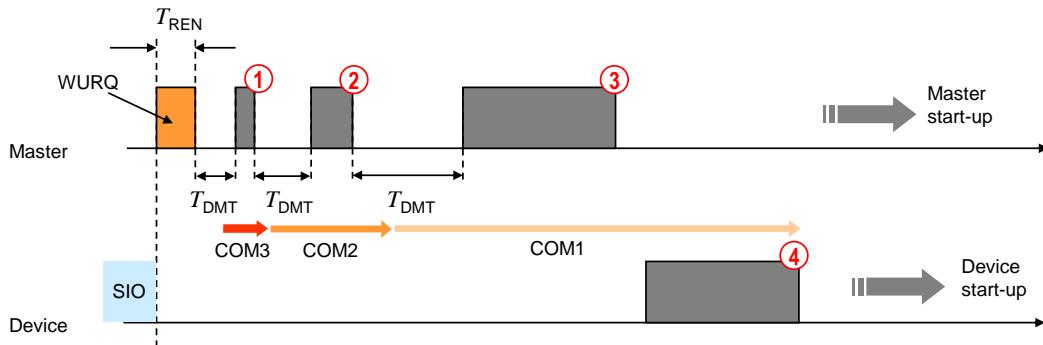

1443 **Figure 31 – Example of an attempt to establish communication**

1444 After the wake-up request (WURQ), specified in 5.3.3.3, the DL-mode handler requests the
 1445 message handler to send the first test message after a time T_{REN} (see Table 10) and T_{DMT}
 1446 (see Table 42). The specified transmission rates of COM1, COM2, and COM3 are used in
 1447 descending order until a response is obtained, as shown in the example of Figure 31:

1448 Step ①: Master message with transmission rate of COM3 (see Table 9).

1449 Step ②: Master message with transmission rate of COM2 (see Table 9).

1450 Step ③: Master message with transmission rate of COM1 (see Table 9).


1451 Step ④: Device response message with transmission rate of COM1.

1452 Before initiating a (new) message, the DL-mode handler shall wait at least for a time of T_{DMT} .
 1453 T_{DMT} is specified in Table 42.


1454 The following conformity rule applies for Devices regarding support of transmission rates:

- 1455 • a Device shall support only one of the transmission rates of COM1, COM2, or COM3.

1456 If an attempt to establish communication fails, the Master DL-mode handler shall not start a
 1457 new retry wake-up procedure until after a time T_{DWU} as shown in Figure 32 and specified in
 1458 Table 42.

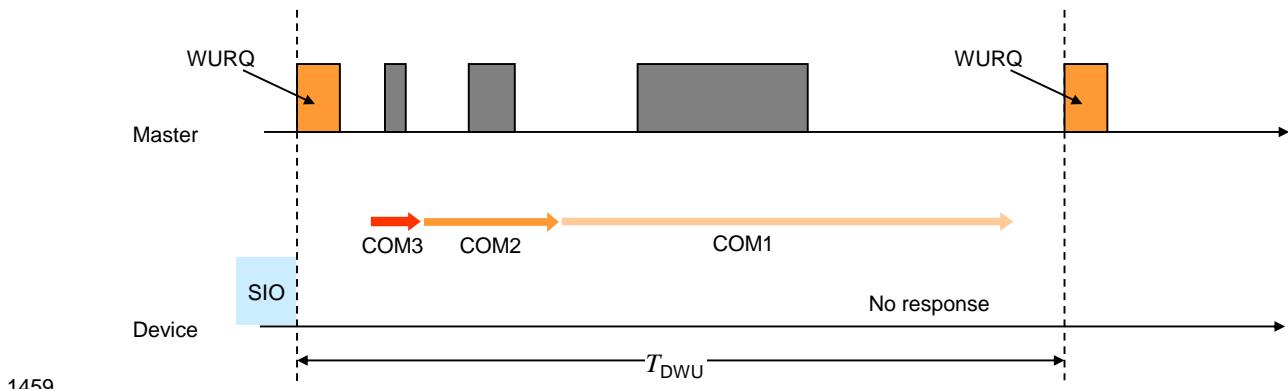1459
1460 **Figure 32 – Failed attempt to establish communication**

1461 The Master shall make up to $n_{WU}+1$ successive wake-up requests as shown in Figure 33. If
 1462 this initial wake-up retry sequence fails, the Device shall reset its C/Q line to SIO mode after a
 1463 time T_{DSIO} (T_{DSIO} is retrigged in the Device after each detected WURQ). The Master shall not
 1464 trigger a new wake-up retry sequence until after a time T_{SD} .

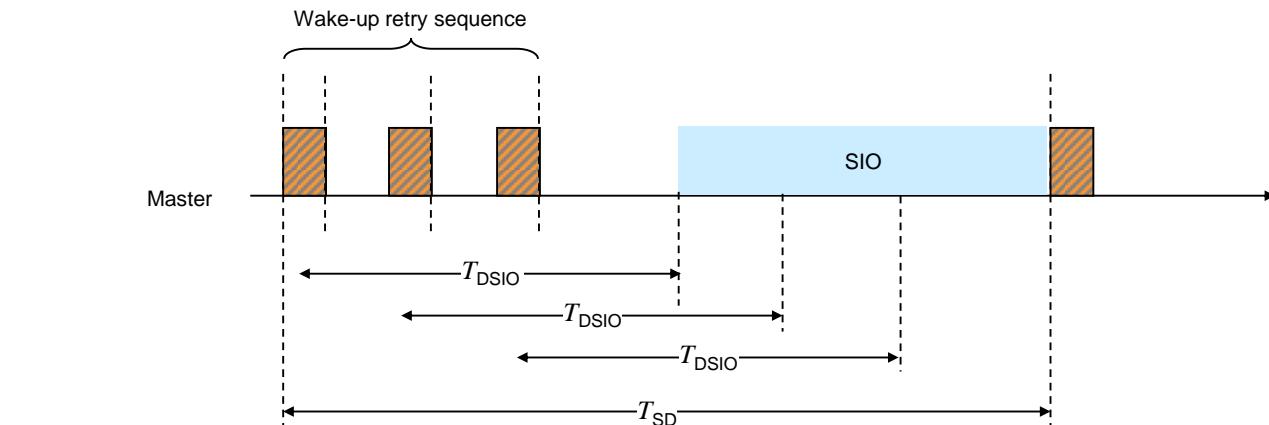1465
1466 **Figure 33 – Retry strategy to establish communication**

1467 The DL of the Master shall request the PL to go to Inactive mode after a failed wake-up retry
 1468 sequence.

1469 The values for the timings of the wake-up procedures and retries are specified in Table 10
 1470 and Table 42. They are defined from a Master's point of view.

1471 **Table 42 – Wake-up procedure and retry characteristics**

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
T_{DMT}	Master message delay	27	n/a	37	T_{BIT}	Bit time of subsequent data transmission rate
T_{DSIO}	Standard IO delay	60	n/a	300	ms	After T_{DSIO} the Device falls back to SIO mode (if supported)
T_{DWU}	Wake-up retry delay	30	n/a	50	ms	After T_{DWU} the Master repeats the wake-up request
n_{WU}	Wake-up retry count	2	2	2		Number of wake-up request retries
T_{SD}	Device detection time	0,5	n/a	1	s	Time between 2 wake-up request sequences (See NOTE)

NOTE Characteristic of the Master.


1472 The Master's data link layer shall stop the establishing communication procedure once it finds
 1473 a communicating Device and shall report the detected COMx-Mode to System Management
 1474 using a DL_Mode indication. If the procedure fails, a corresponding error is reported using the
 1475 same service.

1476 7.3.2.3 Fallback procedure

1477 System Management induces the following actions on the data link layer with the help of the
 1478 DL_SetMode service (mode = INACTIVE):

- 1479 • A MasterCommand "Fallback" (see Table B.2) forces the Device to change to the SIO
 1480 mode.
- 1481 • The Device shall accomplish the transition to the SIO mode after 3 MasterCycleTimes
 1482 and/or within maximum T_{FBD} after the MasterCommand "Fallback". This allows for
 1483 possible retries if the MasterCommand failed indicated through a negative Device
 1484 response.
- 1485 • The Master shall ensure waiting at least maximum T_{FBD} before initiating the next start-up
 1486 procedure.

1487 Figure 34 shows the fallback procedure and its retry and timing constraints.

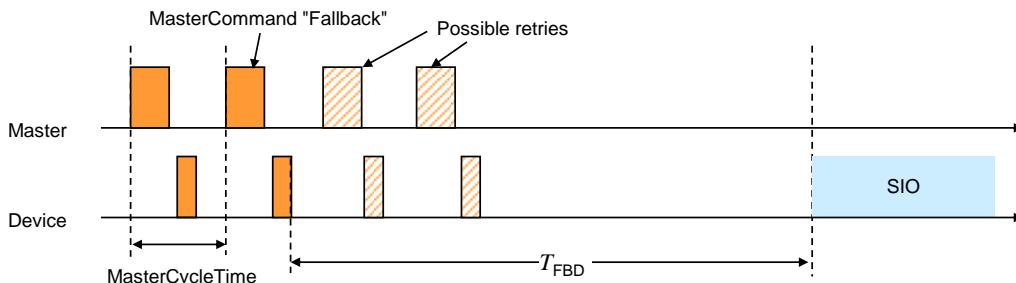

1488 **Figure 34 – Fallback procedure**

1489 Table 43 specifies the fallback timing characteristics. See A.2.6 for details.

1491 **Table 43 – Fallback timing characteristics**

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
T_{FBD}	Fallback delay	3 MasterCycle-Times (OPERATE) or $3 T_{initcyc}$ (PREOPERATE)	n/a	500	ms	After a time T_{FBD} the Device shall be switched to SIO mode (see Figure 34)

1492

1493 7.3.2.4 State machine of the Master DL-mode handler


1494 Figure 35 shows the state machine of the Master DL-mode handler.

1495 NOTE The conventions of the UML diagram types are defined in 3.3.7.

1496 After reception of the service DL_SetMode_STARTUP from System Management, the DL-
 1497 mode handler shall first create a wake-up current pulse via the PL_WakeUp service and then
 1498 establish communication. This procedure is specified in submachine 1 in Figure 36.

1499 The purpose of state "Startup_2" is to check a Device's identity via the data of the Direct
 1500 Parameter page (see Figure 6). In state "PreOperate_3", the Master assigns parameters to
 1501 the Device using ISDUs. Cyclic exchange of Process Data is performed in state "Operate".
 1502 Within this state additional On-request Data such as ISDUs, commands, and Events can be
 1503 transmitted using appropriate M-sequence types (see Figure 39).


1504 In state PreOperate_3 and Operate_4 different sets of handlers within the Master are
 1505 activated.

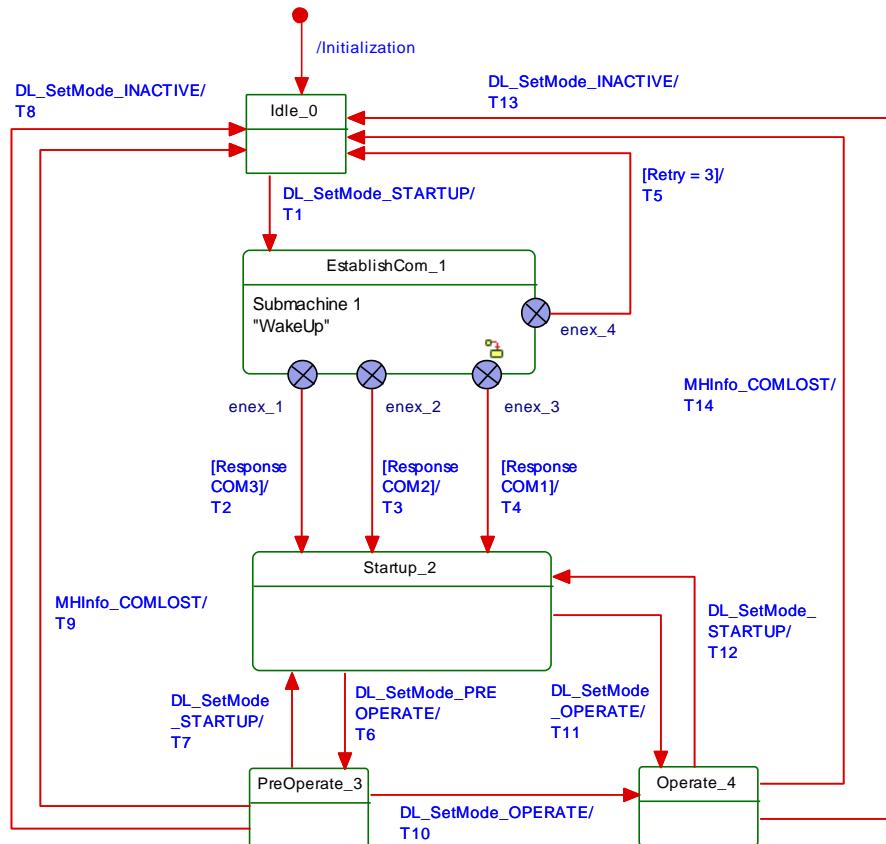

1506

1507

Figure 35 – State machine of the Master DL-mode handler

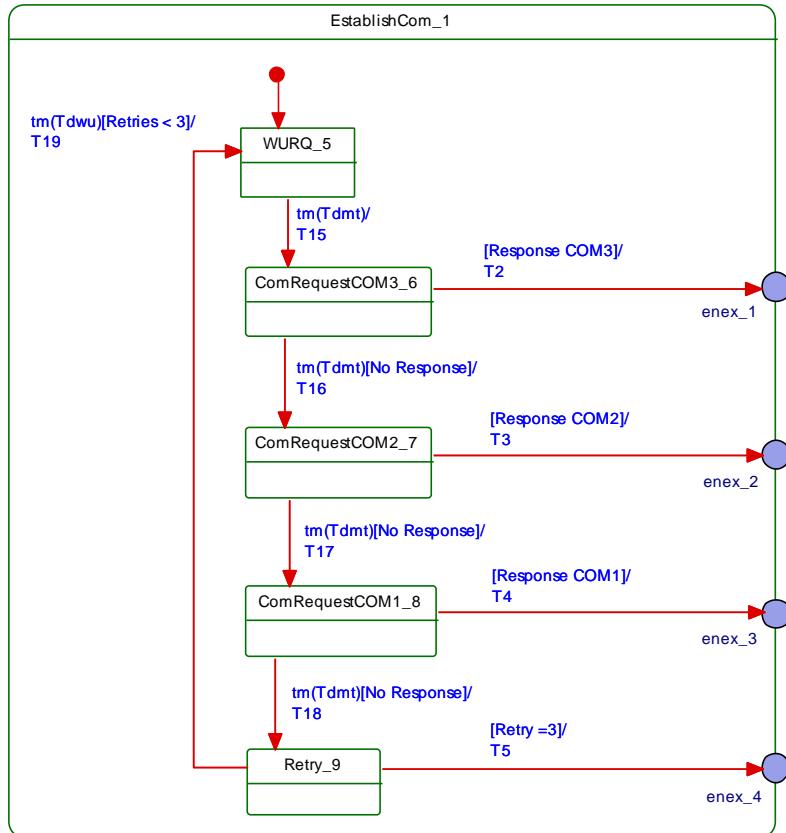

1508

1509

Figure 36 – Submachine 1 to establish communication

1510 Table 44 shows the state transition tables of the Master DL-mode handler.

1511

Table 44 – State transition tables of the Master DL-mode handler

STATE NAME	STATE DESCRIPTION		
Idle_0	Waiting on wakeup request from System Management (SM): DL_SetMode (STARTUP)		
EstablishComm_1	Perform wakeup procedure (submachine 1)		
Startup_2	System Management uses the STARTUP state for Device identification, check, and communication configuration (see Figure 71)		
Preoperate_3	On-request Data exchange (parameter, commands, Events) without Process Data		
Operate_4	Process Data and On-request Data exchange (parameter, commands, Events)		
SM: WURQ_5	Create wakeup current pulse: Invoke service PL-Wake-Up (see Figure 12 and 5.3.3.3) and wait T_{DMT} (see Table 42).		
SM: ComRequestCOM3_6	Try test message with transmission rate of COM3 via the message handler: Call MH_Conf_COMx (see Figure 40) and wait T_{DMT} (see Table 42).		
SM: ComRequestCOM2_7	Try test message with transmission rate of COM2 via the message handler: Call MH_Conf_COMx (see Figure 40) and wait T_{DMT} (see Table 42).		
SM: ComRequestCOM1_8	Try test message with transmission rate of COM1 via the message handler: Call MH_Conf_COMx (see Figure 40) and wait T_{DMT} (see Table 42).		
SM: Retry_9	Check number of Retries		
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	Set Retry = 0.

1512

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T2	1	2	Transmission rate of COM3 successful. Message handler activated and configured to COM3 (see Figure 40, Transition T2). Activate command handler (call CH_Conf_ACTIVE in Figure 53). Return DL_Mode.ind (STARTUP) and DL_Mode.ind (COM3) to SM.
T3	1	2	Transmission rate of COM2 successful. Message handler activated and configured to COM2 (see Figure 40, Transition T2). Activate command handler (call CH_Conf_ACTIVE in Figure 53). Return DL_Mode.ind (STARTUP) and DL_Mode.ind (COM2) to SM.
T4	1	2	Transmission rate of COM1 successful. Message handler activated and configured to COM1 (see Figure 40, Transition T2). Activate command handler (call CH_Conf_ACTIVE in Figure 53). Return DL_Mode.ind (STARTUP) and DL_Mode.ind (COM1) to SM.
T5	1	0	Return DL_Mode.ind (INACTIVE) to SM.
T6	2	3	SM requested the PREOPERATE state. Activate On-request Data (call OH_Conf_ACTIVE in Figure 48), ISDU (call IH_Conf_ACTIVE in Figure 51), and Event handler (call EH_Conf_ACTIVE in Figure 55). Change message handler state to PREOPERATE (call MH_Conf_PREOPERATE in Figure 40). Return DL_Mode.ind (PREOPERATE) to SM.
T7	3	2	SM requested the STARTUP state. Change message handler state to STARTUP (call MH_Conf_STARTUP in Figure 40). Deactivate On-request Data (call OH_Conf_INACTIVE in Figure 48), ISDU (call IH_Conf_INACTIVE in Figure 51), and Event handler (call EH_Conf_INACTIVE in Figure 55). Return DL_Mode.ind (STARTUP) to SM.
T8	3	0	SM requested the SIO mode. Deactivate all handlers (call xx_Conf_INACTIVE). Return DL_Mode.ind (INACTIVE) to SM. See 7.3.2.3.
T9	3	0	Message handler informs about lost communication via the DL-A service MHInfo (COMLOST). Deactivate all handlers (call xx_Conf_INACTIVE). Return DL_Mode.ind (COMLOST) to SM.
T10	3	4	SM requested the OPERATE state. Activate the Process Data handler (call PD_Conf_SINGLE if M-sequence type = TYPE_2_x, or PD_Conf_INTERLEAVE if M-sequence type = TYPE_1_1 in Figure 46). Change message handler state to OPERATE (call MH_Conf_OPERATE in Figure 40). Return DL_Mode.ind (OPERATE) to SM.
T11	2	4	SM requested the OPERATE state. Activate the Process Data handler (call PD_Conf_SINGLE or PD_Conf_INTERLEAVE in Figure 46 according to the Master port configuration). Activate On-request Data (call OH_Conf_ACTIVE in Figure 48), ISDU (call IH_Conf_ACTIVE in Figure 51), and Event handler (call EH_Conf_ACTIVE in Figure 55). Change message handler state to OPERATE (call MH_Conf_OPERATE in Figure 40). Return DL_Mode.ind (OPERATE) to SM.
T12	4	2	SM requested the STARTUP state. Change message handler state to STARTUP (call MH_Conf_STARTUP in Figure 40). Deactivate Process Data (call PD_Conf_INACTIVE in Figure 46), On-request Data (call OH_Conf_INACTIVE in Figure 48), ISDU (call IH_Conf_INACTIVE in Figure 51), and Event handler (call EH_Conf_INACTIVE in Figure 55). Return DL_Mode.ind (STARTUP) to SM.
T13	4	0	SM requested the SIO state. Deactivate all handlers (call xx_Conf_INACTIVE). Return DL_Mode.ind (INACTIVE) to SM. See 7.3.2.3.
T14	4	0	Message handler informs about lost communication via the DL-A service MHInfo (COMLOST). Deactivate all handlers (call xx_Conf_INACTIVE). Return DL_Mode.ind (COMLOST) to SM.
T15	5	6	Set transmission rate of COM3 mode.
T16	6	7	Set transmission rate of COM2 mode.
T17	7	8	Set transmission rate of COM1 mode.
T18	8	9	Increment Retry
T19	9	5	-

INTERNAL ITEMS	TYPE	DEFINITION
MH_Conf_COMx	Call	This call causes the message handler to send a message with the requested transmission rate of COMx and with M-sequence TYPE_0 (see Table 46).
MH_Conf_STARTUP	Call	This call causes the message handler to switch to the STARTUP state (see Figure 40)
MH_Conf_PREOPERATE	Call	This call causes the message handler to switch to the PREOPERATE state (see Figure 40)
MH_Conf_OPERATE	Call	This call causes the message handler to switch to the OPERATE state (see Figure 40)
xx_Conf_ACTIVE	Call	These calls activate the respective handler. xx is substitute for MH (message handler), OH (On-request Data handler), IH (ISDU handler), CH (Command handler), and/or EH (Event handler)
xx_Conf_INACTIVE	Call	These calls deactivate the respective handler. xx is substitute for MH (message handler), OH (On-request Data handler), IH (ISDU handler), CH (Command handler), and/or EH (Eventhandler)
Retry	Variable	Number of retries to establish communication

1514

7.3.2.5 State machine of the Device DL-mode handler


Figure 37 shows the state machine of the Device DL-mode handler.

In state PreOperate_3 and Operate_4 different sets of handlers within the Device are activated.

The Master uses MasterCommands (see Table 44) to change the Device to SIO, STARTUP, PREOPERATE, and OPERATE states.

Whenever the message handler detects illegal (unexpected) M-sequence types, it will cause the DL-mode handler to change to the STARTUP state and to indicate this state to its system management (see 9.3.3.2) for the purpose of synchronization of Master and Device.

1524

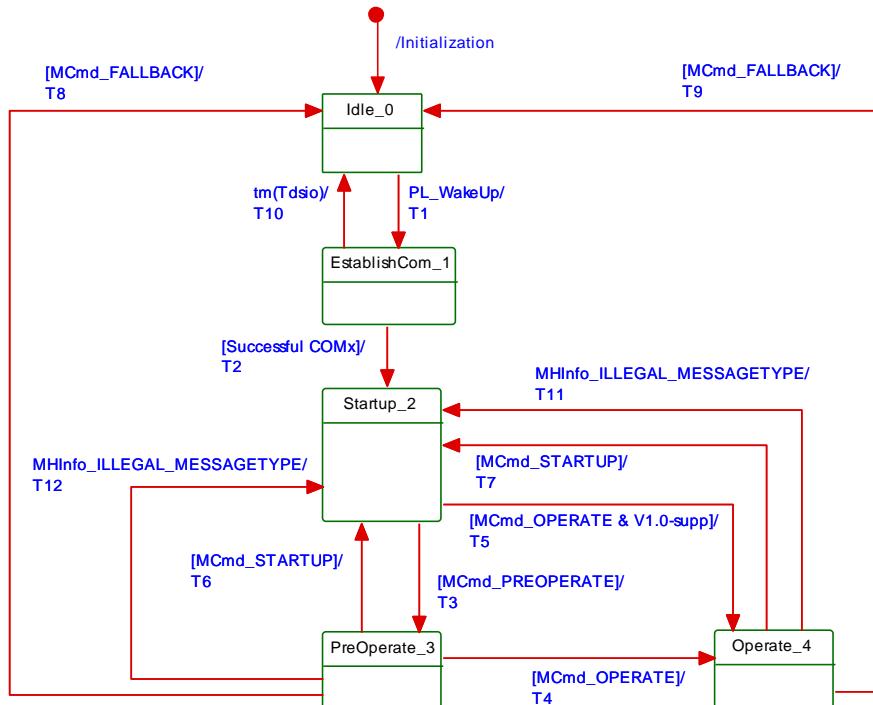

1525

Figure 37 – State machine of the Device DL-mode handler

1526

1527 Table 45 shows the state transition tables of the Device DL-mode handler.

1528 **Table 45 – State transition tables of the Device DL-mode handler**

STATE NAME		STATE DESCRIPTION	
Idle_0		Waiting on a detected wakeup current pulse (PL_WakeUp.ind).	
EstablishComm_1		Message handler activated and waiting for the COMx test messages (see Table 44)	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	Wakeup current pulse detected. Activate message handler (call MH_Conf_ACTIVE in Figure 44). Indicate state via service DL_Mode.ind (ESTABCOM) to SM.
T2	1	2	One out of the three transmission rates of COM3, COM2, or COM1 mode established. Activate On-request Data (call OH_Conf_ACTIVE in Figure 49) and command handler (call CH_Conf_ACTIVE in Figure 54). Indicate state via service DL_Mode.ind (COM1, COM2, or COM3) to SM.
T3	2	3	Device command handler received MasterCommand (MCmd_PREOPERATE). Activate ISDU (call IH_Conf_ACTIVE in Figure 52) and Event handler (call EH_Conf_ACTIVE in Figure 56). Indicate state via service DL_Mode.ind (PREOPERATE) to SM.
T4	3	4	Device command handler received MasterCommand (MCmd_OPERATE). Activate Process Data handler (call PD_Conf_ACTIVE in Figure 47). Indicate state via service DL_Mode.ind (OPERATE) to SM.
T5	2	4	Device command handler received MasterCommand (MCmd_OPERATE). Activate Process Data handler (call PD_Conf_ACTIVE in Figure 47), ISDU (call IH_Conf_ACTIVE in Figure 52), and Event handler (call EH_Conf_ACTIVE in Figure 56). Indicate state via service DL_Mode.ind (OPERATE) to SM.
T6	3	2	Device command handler received MasterCommand (MCmd_STARTUP). Deactivate ISDU (call IH_Conf_INACTIVE in Figure 52) and Event handler (call EH_Conf_INACTIVE in Figure 56). Indicate state via service DL_Mode.ind (STARTUP) to SM.
T7	4	2	Device command handler received MasterCommand (MCmd_STARTUP). Deactivate Process Data handler (call PD_Conf_INACTIVE in Figure 47), ISDU (call IH_Conf_INACTIVE in Figure 52), and Event handler (call EH_Conf_INACTIVE in Figure 56). Indicate state via service DL_Mode.ind (STARTUP) to SM.
T8	3	0	Device command handler received MasterCommand (MCmd_FALLBACK). Wait until T_{FBD} elapsed, and then deactivate all handlers (call xx_Conf_INACTIVE). Indicate state via service DL_Mode.ind (INACTIVE) to SM (see Figure 81 and Table 95).
T9	4	0	Device command handler received MasterCommand (MCmd_FALLBACK). Wait until T_{FBD} elapsed, and then deactivate all handlers (call xx_Conf_INACTIVE). Indicate state via service DL_Mode.ind (INACTIVE) to SM (see Figure 81 and Table 95).
T10	1	0	After unsuccessful wakeup procedures (see Figure 32) the Device establishes the configured SIO mode after an elapsed time T_{DSIO} (see Figure 33). Deactivate all handlers (call xx_Conf_INACTIVE). Indicate state via service DL_Mode.ind (INACTIVE) to SM.
T11	4	2	Message handler detected an illegal M-sequence type. Deactivate Process Data (call PD_Conf_INACTIVE in Figure 47), ISDU (call IH_Conf_INACTIVE in Figure 52), and Event handler (call EH_Conf_INACTIVE in Figure 56). Indicate state via service DL_Mode.ind (STARTUP) to SM (see Figure 81 and Table 95).

TRANSITION	SOURCE STATE	TARGET STATE	ACTION	
1530	T12	3	2	Message handler detected an illegal M-sequence type. Deactivate ISDU (call IH_Conf_INACTIVE in Figure 52) and Event handler (call EH_Conf_INACTIVE in Figure 56). Indicate state via service DL_Mode.ind (STARTUP) to SM (see Figure 81 and Table 95).
INTERNAL ITEMS		TYPE	DEFINITION	
	T_{FBD}	Time	See Table 43	
	T_{DSIO}	Time	See Figure 33	
	MCmd_XXXXXX	Call	Any MasterCommand received by the Device command handler (see Table 44 and Figure 54, state "CommandHandler_2")	
	V1.0-supp	Flag	Device supports V1.0 mode	

1531

1532 7.3.3 Message handler

1533 7.3.3.1 General


1534 The role of the message handler is specified in 7.1 and 7.2.2.1. This subclause specifies the
1535 structure and types of M-sequences and the behaviour (dynamics) of the message handler.

1536 7.3.3.2 M-sequences

1537 A Master and its Device exchange data by means of a sequence of messages (M-sequence).
1538 An M-sequence comprises a message from the Master followed by a message from the
1539 Device as shown in Figure 38. Each message consists of UART frames.

1540 All the multi-octet data types shall be transmitted as a big-endian sequence, i.e. the most
1541 significant octet (MSO) shall be sent first, followed by less significant octets in descending
1542 order, with the least significant octet (LSO) being sent last, as shown in Figure 2.

1543 The Master message starts with the "M-sequence Control" (MC) octet, followed by the
1544 "CHECK/TYPE" (CKT) octet, and optionally followed by either "Process Data" (PD) and/or
1545 "On-request Data" (OD) octets. The Device message in turn starts optionally with "Process
1546 Data" (PD) octets and/or "On-request Data" (OD) octets, followed by the "CHECK/STAT"
1547 (CKS) octet.

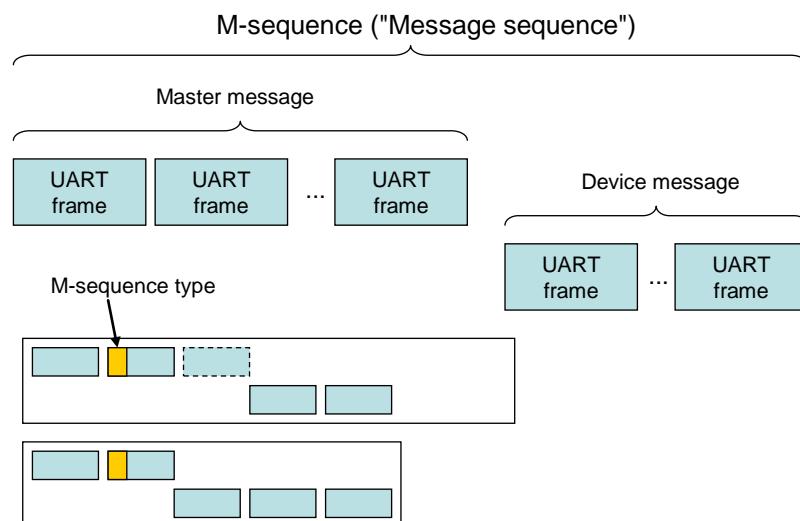


1548

1549 **Figure 38 – SDCI message sequences**

1550 Various M-sequence types can be selected to meet the particular needs of an actuator or
1551 sensor (scan rate, amount of Process Data). The length of Master and Device messages may
1552 vary depending on the type of messages and the data transmission direction, see Figure 38.

1553 Figure 39 presents an overview of the defined M-sequence types. Parts within dotted lines
 1554 depend on the read or write direction within the M-sequence control octet.

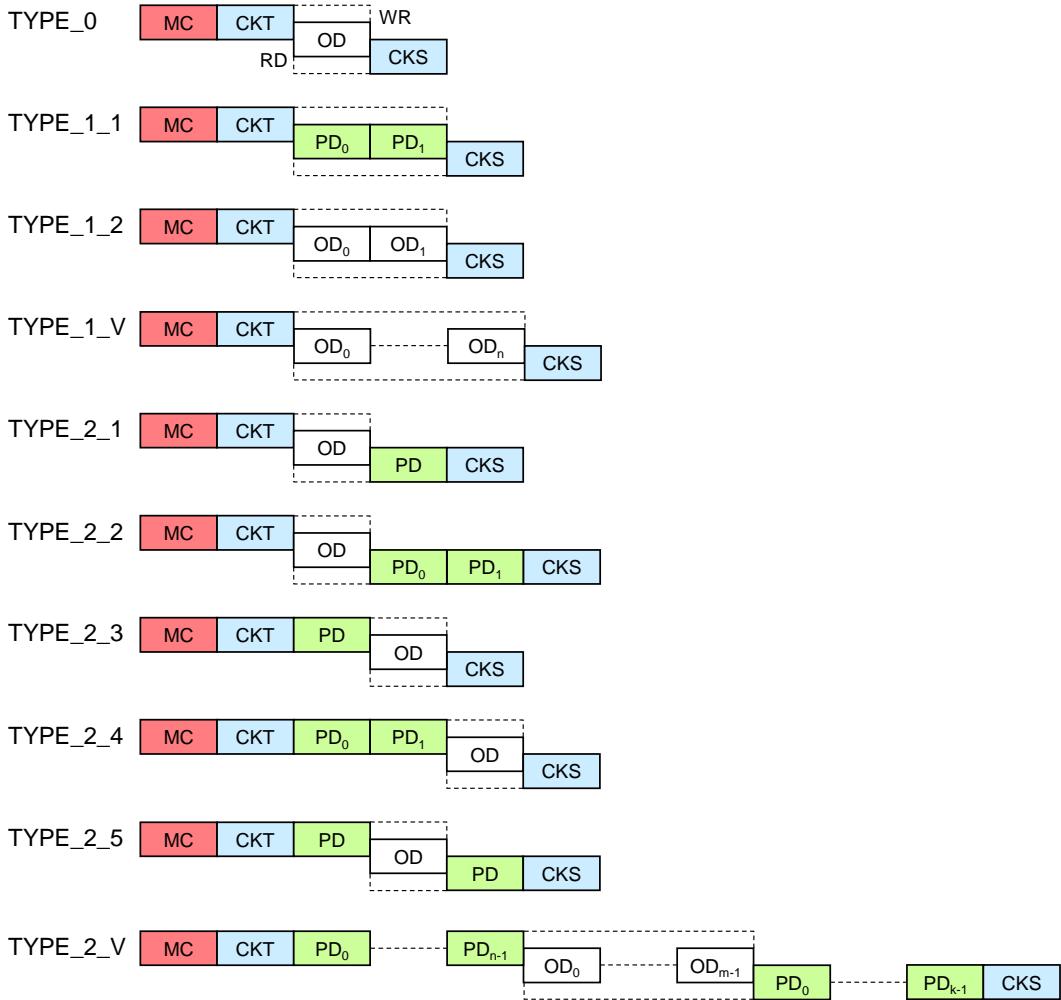

1555
 1556 **Figure 39 – Overview of M-sequence types**

1557 The fixed M-sequence types consist of TYPE_0, TYPE_1_1, TYPE_1_2, and TYPE_2_1
 1558 through TYPE_2_5. Caution: The former TYPE_2_6 is no more supported. The variable M-
 1559 sequence types consist of TYPE_1_V and TYPE_2_V.

1560 The different M-sequence types meet the various requirements of sensors and actuators
 1561 regarding their Process Data width and respective conditions. See A.2 for details of M-
 1562 sequence types. See A.3 for the timing constraints with M-sequences.

1563 **7.3.3.3 MasterCycleTime constraints**

1564 Within state STARTUP and PREOPERATE a Device is able to communicate in an acyclic
 1565 manner. In order to detect the disconnecting of Devices it is highly recommended for the
 1566 Master to perform from this point on a periodic communication ("keep-alive message") via
 1567 acyclic M-sequences through the data link layer. The minimum recovery times for acyclic
 1568 communication specified in A.2.6 shall be considered.


1569 After these phases, cyclic Process Data communication can be started by the Master via the
 1570 DL_SetMode (OPERATE) service. M-sequence types for the cyclic data exchange shall be
 1571 used in this communication phase to exchange Process Data (PD) and On-request Data with
 1572 a Device (see Table A.9 and Table A.10).

1573 The Master shall use for time t_{CYC} the value indicated in the Device parameter
 1574 "MasterCycleTime" (see Table B.1) with a relative tolerance of -1 % to +10 % (including jitter).

1575 In cases, where a Device has to be switched back to SIO mode after parameterization, the
 1576 Master shall send a command "Fallback" (see Table B.2), which is followed by a confirmation
 1577 from the Device.

1578 7.3.3.4 State machine of the Master message handler

1579 Figure 40 shows the Master state machine of the Master message handler. Three
 1580 submachines describing reactions on communication errors are shown in Figure 41, Figure
 1581 42, and Figure 43.

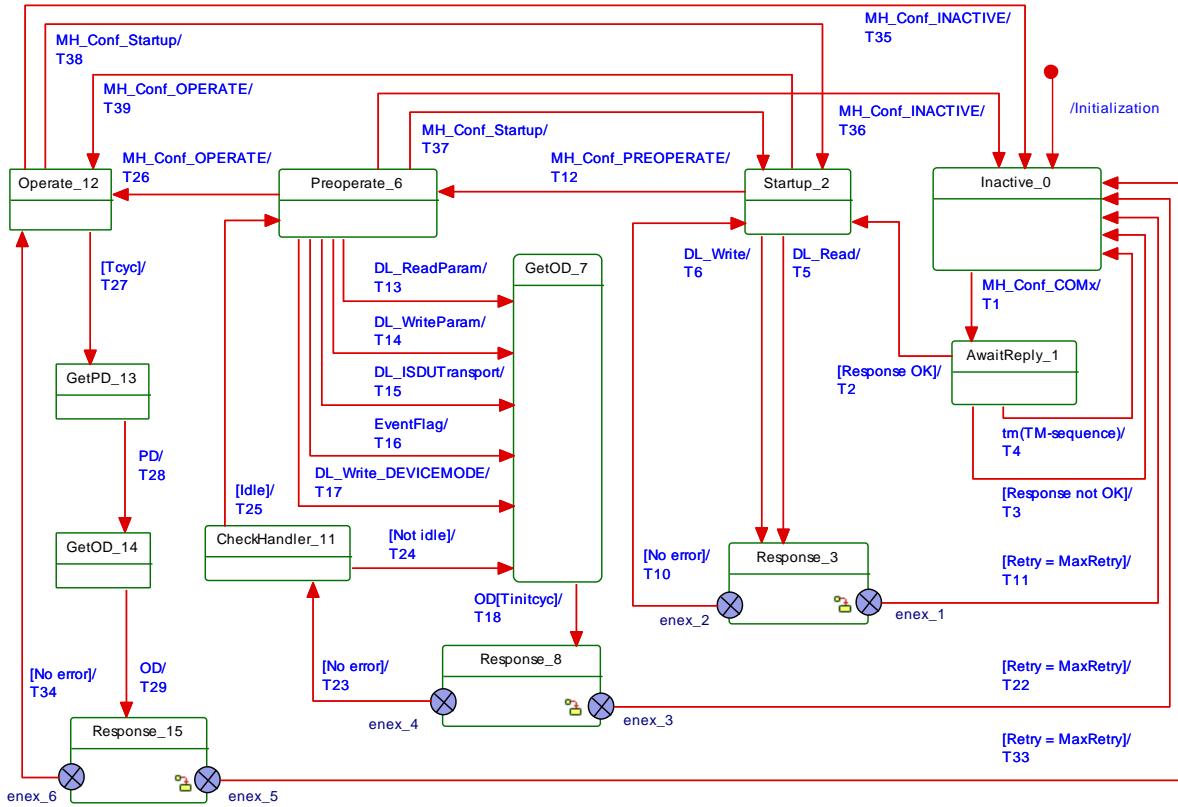

1582


1583 **Figure 40 – State machine of the Master message handler**

1584 The message handler takes care of the special communication requirements within the states
 1585 "EstablishCom", "Startup", "PreOperate", and "Operate" of the DL-Mode handler. An internal
 1586 administrative call MH_Conf_COMx in state "Inactive_0" causes the message handler to send
 1587 "test" messages with M-sequence TYPE_0 and different transmission rates of COM3, COM2,
 1588 or COM1 during the establish communication sequence.

1589 The state "Startup_2" provides all the communication means to support the identity checks of
 1590 System Management with the help of DL_Read and DL_Write services. The message handler
 1591 waits on the occurrence of these services to send and receive messages (acyclic
 1592 communication). The state "Preoperate_6" is the checkpoint for all On-request Data activities
 1593 such as ISDUs, commands, and Events for parameterization of the Device. The message
 1594 handler waits on the occurrence of the services shown in Figure 40 to send and receive
 1595 messages (acyclic communication). The state "Operate_12" is the checkpoint for cyclic
 1596 Process Data exchange. Depending on the M-sequence type the message handler generates
 1597 Master messages with Process Data acquired from the Process Data handler via the PD
 1598 service and optionally On-request Data acquired from the On-request Data handler via the OD
 1599 service.

1600


1601 Figure 41 shows the submachine of state "Response 3".

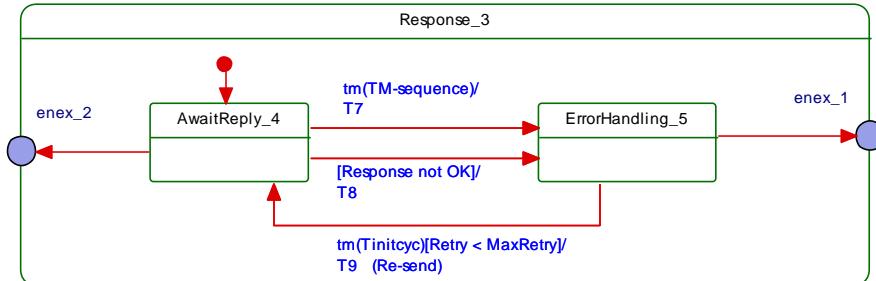

1602

Figure 41 – Submachine "Response 3" of the message handler


1603 Figure 42 shows the submachine of state "Response 8".

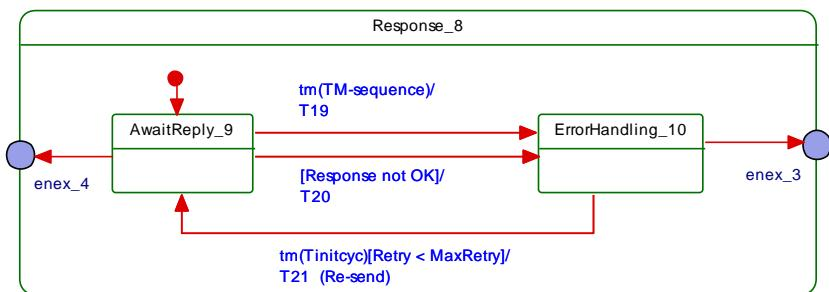

1604

Figure 42 – Submachine "Response 8" of the message handler

1605 Figure 43 shows the submachine of state "Response 15".

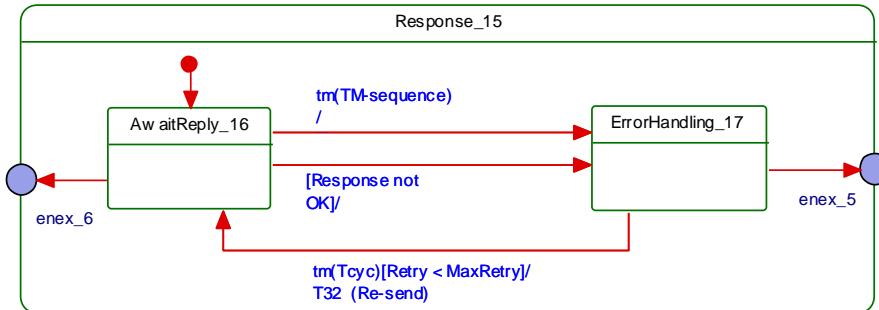

1606

Figure 43 – Submachine "Response 15" of the message handler

1607 Table 46 shows the state transition tables of the Master message handler.

Table 46 – State transition table of the Master message handler

STATE NAME	STATE DESCRIPTION
Inactive_0	Waiting on demand for a "test" message via MH_Conf_COMx call (see Figure 36 and Table 44) from DL-mode handler.
AwaitReply_1	Waiting on response from the Device to the "test" message. Return to Inactive_0 state whenever the time $T_{M\text{-sequence}}$ elapsed without response from the Device or the response to the "test" message could not be decoded. In case of a correct response from the Device, the message handler changes to the Startup_2 state.
Startup_2	When entered via transition T2, this state is responsible to control acyclic On-request Data exchange according to conditions specified in Table A.7. Any service DL_Write or DL_Read from System Management causes a transition.
Response_3	The OD service caused the message handler to send a corresponding message. The submachine in this pseudo state waits on the response and checks its correctness.

STATE NAME	STATE DESCRIPTION		
SM: AwaitReply_4	This state checks whether the time $T_{M\text{-sequence}}$ elapsed and the response is correct.		
SM: ErrorHandling_5	In case of an incorrect response the message handler will re-send the message after a waiting time T_{initcyc} . After too many retries the message handler will change to the Inactive_0 state.		
Preoperate_6	Upon reception of a call MH_Conf_PREOPERATE the message handler changed to this state. The message handler is now responsible to control acyclic On-request Data exchange according to conditions specified in Table A.8. Any service DL_ReadParam, DL_WriteParam, DL_ISDUTransport, DL_Write, or EventFlag causes a transition.		
GetOD_7	The message handler used the ODTrig service to aquire OD from the On-request Data handler. The message handler waits on the OD service to send a message after a time T_{initcyc} .		
Response_8	The OD service caused the message handler to send a corresponding message. The submachine in this pseudo state waits on the response and checks its correctness.		
SM: AwaitReply_9	This state checks whether the time $T_{M\text{-sequence}}$ elapsed and the response is correct.		
SM: ErrorHandling_10	In case of an incorrect response the message handler will re-send the message after a waiting time T_{initcyc} . After too many retries the message handler will change to the Inactive_0 state.		
CheckHandler_11	Some services require several OD acquisition cycles to exchange the OD. Whenever the affected OD, ISDU, or Event handler returned to the idle state, the message handler can leave the OD acquisition loop.		
Operate_12	Upon reception of a call MH_Conf_OPERATE the message handler changed to this state and after an initial time T_{initcyc} , it is responsible to control cyclic Process Data and On-request Data exchange according to conditions specified in Table A.9 and Table A.10. The message handler restarts on its own a new message cycle after the time t_{CYC} elapsed.		
GetPD_13	The message handler used the PDTTrig service to aquire PD from the Process Data handler. The message handler waits on the PD service and then changes to state GetOD_14.		
GetOD_14	The message handler used the ODTrig service to aquire OD from the On-request Data handler. The message handler waits on the OD service to complement the already acquired PD and to send a message with the acquired PD/OD.		
Response_15	The message handler sent a message with the acquired PD/OD. The submachine in this pseudo state waits on the response and checks its correctness.		
SM: AwaitReply_16	This state checks whether the time $T_{M\text{-sequence}}$ elapsed and the response is correct.		
SM: ErrorHandling_17	In case of an incorrect response the message handler will re-send the message after a waiting time t_{CYC} . After too many retries the message handler will change to the Inactive_0 state.		
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	Send a message with the requested transmission rate of COMx and with M-sequence TYPE_0: Read Direct Parameter page 1, address 0x02 ("MinCycleTime"), compiling into an M-sequence control MC = 0xA2 (see A.1.2). Start timer with $T_{M\text{-sequence}}$.
T2	1	2	Return value of "MinCycleTime" via DL_Read service confirmation.
T3	1	0	Reset timer ($T_{M\text{-sequence}}$).
T4	1	0	Reset timer ($T_{M\text{-sequence}}$).
T5	2	3	Send message using the established transmission rate, the page communication channel, and the read access option (see A.1.2). Start timer with $T_{M\text{-sequence}}$.
T6	2	3	Send message using the established transmission rate, the page communication channel, and the write access option (see A.1.2). Start timer with $T_{M\text{-sequence}}$.
T7	4	5	Reset timer ($T_{M\text{-sequence}}$).
T8	4	5	Reset timer ($T_{M\text{-sequence}}$).
T9	5	4	Re-send message after a time T_{initcyc} . Restart timer with $T_{M\text{-sequence}}$.

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T10	3	2	Return DL_Read or DL_Write service confirmation respectively to System Management.
T11	3	0	Message handler returns MH_Info (COMLOST) to DL-mode handler.
T12	2	6	-
T13	6	7	The Message handler invokes the ODTrig service for the On-request handler (see Figure 48), which is in state "ISDU_1". In this state it causes the ISDU handler to provide the OD service in correspondence to the DL_ReadParam service (see Figure 51, Transition T13).
T14	6	7	The Message handler invokes the ODTrig service for the On-request handler (see Figure 48), which is in state "ISDU_1". In this state it causes the ISDU handler to provide the OD service in correspondence to the DL_WriteParam service (see Figure 51, Transition T13).
T15	6	7	The Message handler invokes the ODTrig service for the On-request handler (see Figure 48), which is in state "ISDU_1". In this state it causes the ISDU handler to provide the OD service in correspondence to the DL_ISDUTransport service (see Figure 51, Transition T2). The message handler may need several cycles until the ISDU handler returns to the "idle" state.
T16	6	7	The Message handler invokes the ODTrig service for the On-request handler (see Figure 48), which is in state "Event_3". In this state it causes the Event handler to provide the OD service in correspondence to the EventFlag service (see Figure 55, Transition T2). The message handler may need several cycles until the Event handler returns to the "idle" state.
T17	6	7	The Message handler invokes the ODTrig service for the On-request handler (see Figure 48), which is in state "ISDU_1". In this state it causes the ISDU handler to provide the OD service in correspondence to the DL_Write service (see Figure 51, Transition T13).
T18	7	8	Send message after a recovery time $T_{initcyc}$ caused by the OD.req service. Start timer with $T_{M-sequence}$.
T19	9	10	Reset timer ($T_{M-sequence}$).
T20	9	10	Reset timer ($T_{M-sequence}$).
T21	10	9	Re-send message after a time $T_{initcyc}$. Restart timer with $T_{M-sequence}$.
T22	8	0	Message handler changes to state Inactive_0 and returns MH_Info (COMLOST) to DL-mode handler.
T23	8	11	-
T24	11	7	Acquire OD through invocation of the ODTrig service to the On-request Data handler, which in turn triggers the current handler in charge via the ISDU or EventTrig call.
T25	11	6	Return result via service primitive OD.cnf
T26	6	12	Message handler changes to state Operate_12.
T27	12	13	Start the t_{CYC} -timer. Acquire PD through invocation of the PDTTrig service to the Process Data handler (see Figure 46).
T28	13	14	Acquire OD through invocation of the ODTrig service to the On-request Data handler (see Figure 48).
T29	14	15	PD and OD ready through PD.req service from PD handler and OD.req service via the OD handler. Message handler sends message. Start timer with $T_{M-sequence}$.
T30	16	17	Reset timer ($T_{M-sequence}$).
T31	16	17	Reset timer ($T_{M-sequence}$).
T32	17	16	Re-send message after a time t_{CYC} . Restart timer with $T_{M-sequence}$.
T33	15	0	Message handler changes to state Inactive_0 and returns MH_Info (COMLOST) to DL-mode handler.

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T34	15	12	Device response message is correct. Return PD via service PD.cnf and via call PDTrig to the PD handler (see Table 48). Return OD via service OD.cnf and via call ODTrig to the On-request Data hander, which redirects it to the ISDU (see Table 53), Command (see Table 56), or Event handler (see Table 59) in charge.
T35	12	0	Message handler changes to state Inactive_0 and returns MH_Info (COMLOST) to the DL-mode handler.
T36	6	0	Message handler changes to state Inactive_0 and returns MH_Info (COMLOST) to the DL-mode handler.
T37	6	2	-
T38	12	2	-
T39	2	12	-


INTERNAL ITEMS	TYPE	DEFINITION
Retry	Variable	Retry counter
MaxRetry	Constant	MaxRetry = 2, see Table 102
$t_{M\text{-sequence}}$	Time	See equation (A.6)
t_{CYC}	Time	The DL_SetMode service provides this value with its parameter "M-sequenceTime". See equation (A.7)
$t_{initcyc}$	Time	See A.2.6
MH_Conf_xxx	Call	See Table 44

1613

1614

7.3.3.5 State machine of the Device message handler

Figure 44 shows the state machine of the Device message handler.

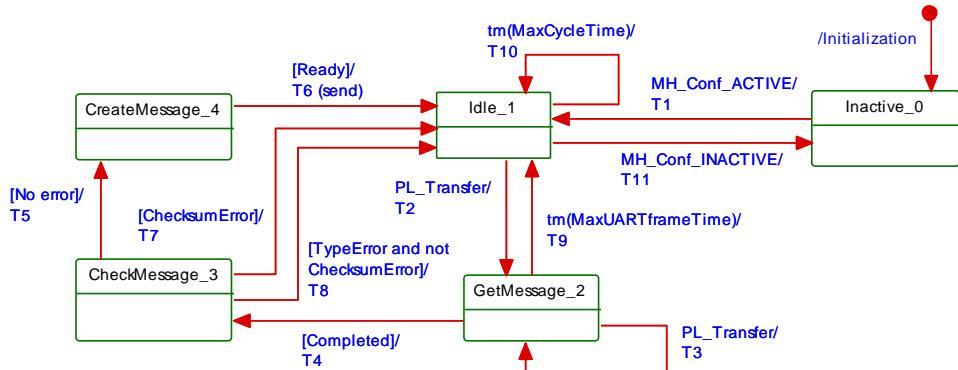

1617

1618

Figure 44 – State machine of the Device message handler

1619 Table 47 shows the state transition tables of the Device message handler.

1620 **Table 47 – State transition tables of the Device message handler**

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting for activation by the Device DL-mode handler through MH_Conf_ACTIVE (see Table 45, Transition T1).	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	–
T2	1	2	Start "MaxUARTframeTime" and "MaxCycleTime" when in OPERATE.
T3	2	2	Restart timer "MaxUARTframeTime".
T4	2	3	Reset timer "MaxUARTframeTime".
T5	3	4	Invoke OD.ind and PD.ind service indications
T6	4	1	Compile and invoke PL_Transfer.rsp service response (Device sends response message)
T7	3	1	–
T8	3	1	Indicate error to DL-mode handler via MHInfo (ILLEGAL_MESSAGE_TYPE)
T9	2	1	Reset both timers "MaxUARTframeTime" and "MaxCycleTime".
T10	1	1	Indicate error to actuator technology that shall observe this information and take corresponding actions (see 10.2 and 10.8.3).
T11	1	0	Device message handler changes state to Inactive_0.
INTERNAL ITEMS		TYPE	DEFINITION
MaxUARTFrameTime		Time	Time for the transmission of a UART frame ($11 T_{BIT}$) plus maximum of t_1 ($1 T_{BIT}$) = $12 T_{BIT}$.
MaxCycleTime		Time	The purpose of the timer "MaxCycleTime" is to check, whether cyclic Process Data exchange took too much time or has been interrupted. (see A.3.7). See NOTE for implementation hint.
TypeError		Guard	One of the possible errors detected: ILLEGAL_MESSAGE_TYPE, or COMLOST
ChecksumError		Guard	Checksum error of message detected
NOTE: To achieve the expected failure reaction, the loss of communication check should be placed in Figure 47 with a timeout supervision, respecting all possible retries, relevant errors and MasterCycleTime. Upcoming specifications will define this type of detection.			

1623

1624 **7.3.4 Process Data handler**


1625 **7.3.4.1 General**

1626 The transport of output Process Data is performed using the DL_OutputUpdate services and
 1627 for input Process Data using the DL_InputTransport services (see Figure 28). A Process Data
 1628 cycle is completed when the entire set of Process Data has been transferred between Master
 1629 and Device in the requested direction. Such a cycle can last for more than one M-sequence.

1630 All Process Data are transmitted within one M-sequence when using M-sequences of
 1631 TYPE_2_x (see Figure 39). In this case the execution time of a Process Data cycle is equal to
 1632 the cycle time t_{CYC} .

1633 7.3.4.2 Interleave mode

1634 All Process Data and On-request Data are transmitted in this case with multiple alternating M-
 1635 sequences TYPE_1_1 (Process Data) and TYPE_1_2 (On-request Data) as shown in Figure
 1636 45. It demonstrates the Master messages writing output Process Data to a Device. The
 1637 service parameter PDOOutAddress indicates the partition of the output PD to be transmitted
 1638 (see 7.2.2.3). For input Process Data the service parameter PDIInAddress correspondingly
 1639 indicates the partition of the input PD. Within a Process Data cycle all input PD shall be read
 1640 first followed by all output PD to be written. A Process Data cycle comprises all cycle times
 1641 required to transmit the complete Process Data.

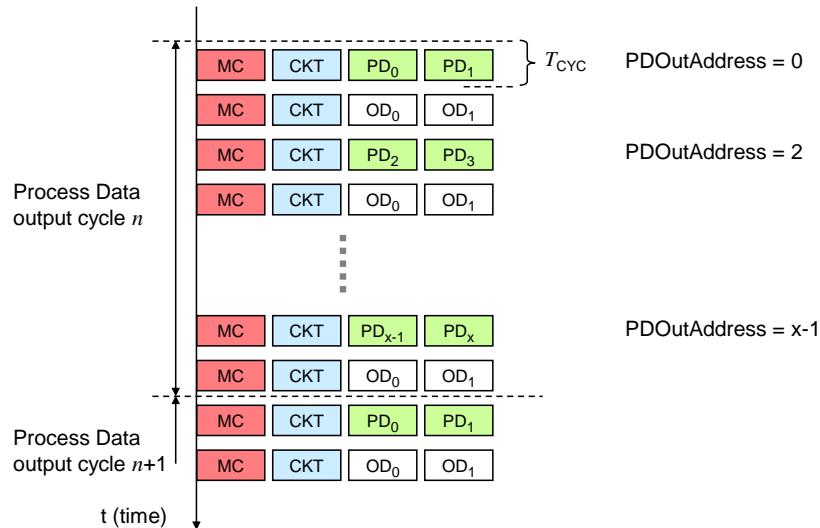


1642

Figure 45 – Interleave mode for the segmented transmission of Process Data

1643 Interleave mode is for legacy Devices only.

1644 7.3.4.3 State machine of the Master Process Data handler

1645 Figure 46 shows the state machine of the Master Process Data handler.

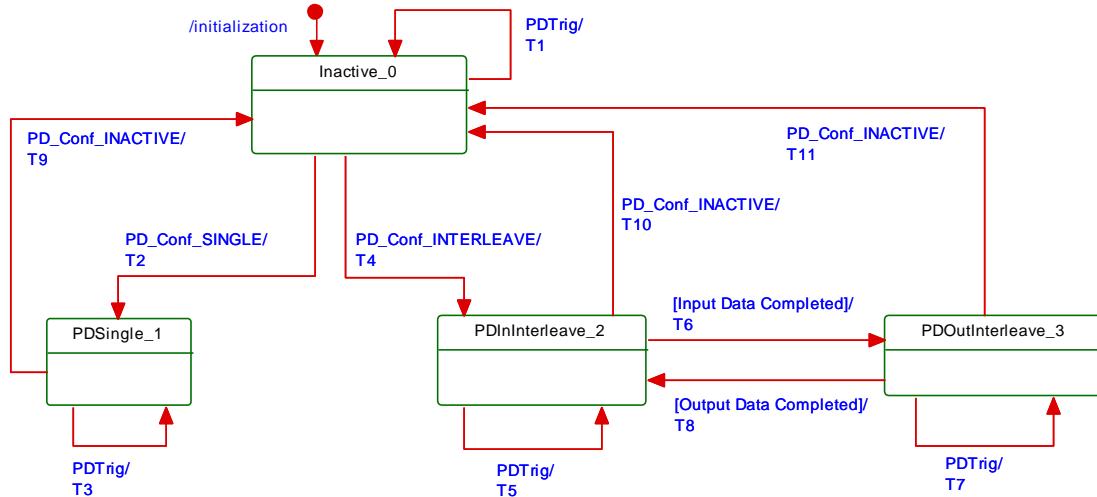

1646

Figure 46 – State machine of the Master Process Data handler

1647 Table 48 shows the state transition tables of the Master Process Data handler.

1650


Table 48 – State transition tables of the Master Process Data handler

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting for activation	
PDSingle_1		Process Data communication within one single M-sequence	
PDInInterleave_2		Input Process Data communication in interleave mode	
PDOOutInterleave_3		Output Process Data communication in interleave mode	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	0	Invoke PD.req with no Process Data
T2	0	1	NOTE The DL-mode handler configured the Process Data handler for single PD transmission (see Table 44, T10 or T11).
T3	1	1	Take data from DL_PDOOutputUpdate service and invoke PD.req to propagate output PD to the message handler. Take data from PD.cnf and invoke DL_PDIInputTransport.ind and DL_PDCycle.ind to propagate input PD to the AL.
T4	0	2	NOTE Configured for interleave PD transmission (see Table 44, T10 or T11).
T5	2	2	Invoke PD.req and use PD.cnf to prepare DL_PDIInputTransport.ind.
T6	2	3	Invoke DL_PDIInputTransport.ind and DL_PDCycle.ind to propagate input PD to the AL (see 7.2.1.11).
T7	3	3	Take data from DL_PDOOutputUpdate service and invoke PD.req to propagate output PD to the message handler.
T8	3	2	Invoke DL_PDCycle.ind to indicate end of Process Data cycle to the AL (see 7.2.1.12).
T9	1	0	-
T10	2	0	-
T11	3	0	-
INTERNAL ITEMS	TYPE	DEFINITION	
<None>			

1653

7.3.4.4 State machine of the Device Process Data handler

Figure 47 shows the state machine of the Device Process Data handler.

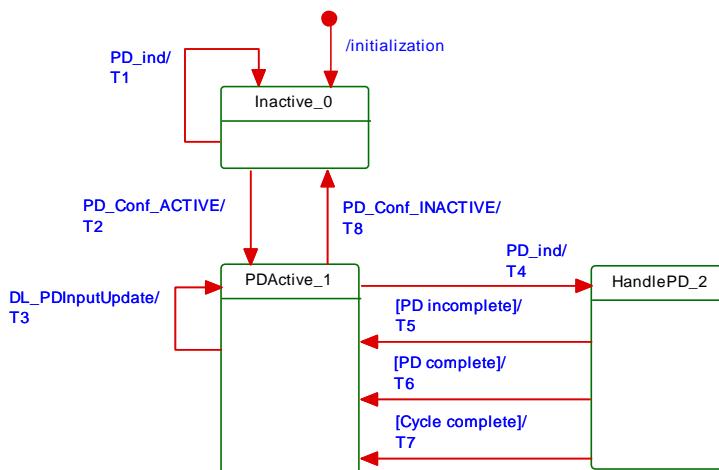

1656

Figure 47 – State machine of the Device Process Data handler

See sequence diagrams in Figure 67 and Figure 68 for context.

1659 Table 49 shows the state transition tables of the Device Process Data handler

1660 **Table 49 – State transition tables of the Device Process Data handler**

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting on activation	
PDActive_1		Handler active and waiting on next message handler demand via PD service or DL_PDIInputUpdate service from AL.	
HandlePD_2		Check Process Data for completeness in interleave mode	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	0	Ignore Process Data
T2	0	1	-
T3	1	1	Prepare input Process Data for PD.rsp for next message handler demand
T4	1	2	Message handler demands input PD via a PD.ind service and delivers output PD or segment of output PD. Invoke PD.rsp with input Process Data when in non-interleave mode (see 7.2.2.3).
T5	2	1	-
T6	2	1	Invoke DL_PDOOutputTransport.ind (see 7.2.1.9)
T7	2	1	Invoke DL_PDCycle.ind (see 7.2.1.12)
T8	1	0	-
INTERNAL ITEMS	TYPE	DEFINITION	
PD_ind	Label	Invocation of service PD.ind occurred from message handler	

1663

1664 **7.3.5 On-request Data handler**

1665 **7.3.5.1 General**

1666 The Master On-request Data handler is a subordinate state machine active in the "Startup_2",
 1667 "PreOperate_3", and "Operate_4" state of the DL-mode handler (see Figure 35). It controls
 1668 three other state machines, the so-called ISDU handler, the command handler, and the Event
 1669 handler. It always starts with the ISDU handler by default.


1670 Whenever an EventFlag.ind is received, the state machine will change to the Event handler.
 1671 After the complete readout of the Event information it will return to the ISDU handler state.

1672 Whenever a DL_Control.req or PDInStatus.ind service is received while in the ISDU handler
 1673 or in the Event handler, the state machine will change to the command handler. Once the
 1674 command has been served, the state machine will return to the previously active state (ISDU
 1675 or Event).

1676 **7.3.5.2 State machine of the Master On-request Data handler**

1677 Figure 48 shows the Master state machine of the On-request Data handler.

1678 The On-request Data handler redirects the ODTrig.ind service primitive for the next message
 1679 content to the currently active subsidiary handler (ISDU, command, or Event). This is
 1680 performed through one of the ISDUTrig, CommandTrig, or EventTrig calls.

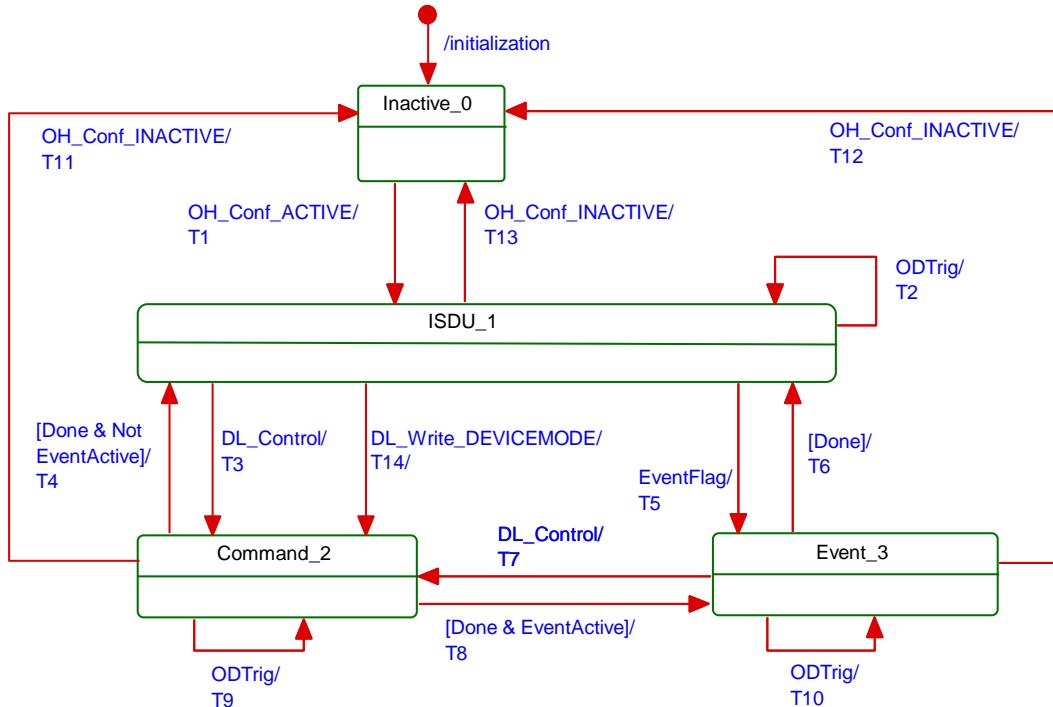

1681

1682

Figure 48 – State machine of the Master On-request Data handler

1683

Table 50 shows the state transition tables of the Master On-request Data handler.

1684

Table 50 – State transition tables of the Master On-request Data handler

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting on activation	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	1	On-request Data handler propagates the ODTrig.ind service now named ISDUTrig to the ISDU handler (see Figure 51). In case of DL_Read, DL_Write, DL_ReadParam, or DL_WriteParam services, the ISDU handler will use a separate transition (see Figure 51, T13).
T3	1	2	-
T4	2	1	-
T5	1	3	EventActive = TRUE
T6	3	1	EventActive = FALSE
T7	3	2	-
T8	2	3	-
T9	2	2	On-request Data handler propagates the ODTrig.ind service now named CommandTrig to the command handler (see Figure 53)
T10	3	3	On-request Data handler propagates the ODTrig.ind service now named EventTrig to the Event handler (see Figure 55)
T11	2	0	-

1685


TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T12	3	0	-
T13	1	0	-
T14	1	2	-
INTERNAL ITEMS		TYPE	DEFINITION
EventActive		Bool	Flag to indicate return direction after interruption of Event processing by a high priority command request

7.3.5.3 State machine of the Device On-request Data handler

Figure 49 shows the state machine of the Device On-request Data handler.

The Device On-request Data handler obtains information on the communication channel and the parameter or FlowCTRL address via the OD.ind service. The communication channels are totally independent. In case of a valid access, the corresponding ISDU, command or Event state machine is addressed via the associated communication channel.

The Device shall respond to read requests to not implemented address ranges with the value "0". It shall ignore write requests to not implemented address ranges.

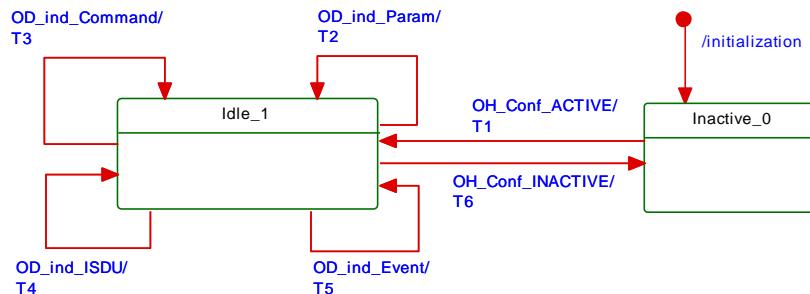

1695

Figure 49 – State machine of the Device On-request Data handler

In case of an ISDU access in a Device without ISDU support, the Device shall respond with "No Service" (see Table A.12). An error message is not created.

NOTE OD.ind (R, ISDU, FlowCTRL = IDLE) is the default message if there are no On-request Data pending for transmission.

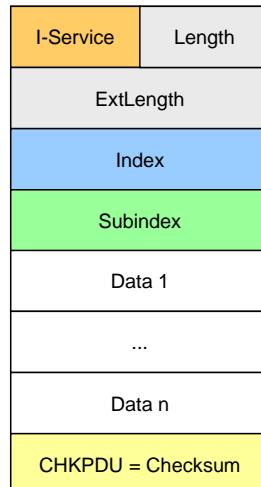
Table 51 shows the state transition tables of the Device On-request Data handler.

Table 51 – State transition tables of the Device On-request Data handler

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting on activation	
Idle_1		Waiting on messages with On-request Data via service OD indication. Decomposition and analysis.	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	1	Provide data content of requested parameter or perform appropriate write action
T3	1	1	Redirect to command handler
T4	1	1	Redirect to ISDU handler
T5	1	1	Redirect to Event handler
T6	1	0	-

INTERNAL ITEMS	TYPE	DEFINITION
OD_ind_Param	Service	Alias for Service OD.ind (R/W, PAGE, 1 to 31, Data) in case of DL_ReadParam or DL_WriteParam
OD_ind_Command	Service	Alias for Service OD.ind (W, PAGE, 0, MasterCommand)
OD_ind_ISDU	Service	Alias for Service OD.ind (R/W, ISDU, FlowCtrl, Data)
OD_ind_Event	Service	Alias for Service OD.ind (R/W, DIAGNOSIS, n, Data)

1705

1706 **7.3.6 ISDU handler**1707 **7.3.6.1 Indexed Service Data Unit (ISDU)**1708 The general structure of an ISDU is demonstrated in Figure 50 and specified in detail in
1709 Clause A.5.

1710

Figure 50 – Structure of the ISDU1712 The sequence of the elements corresponds to the transmission sequence. The elements of an
1713 ISDU can take various forms depending on the type of I-Service (see A.5.2 and Table A.12).1714 The ISDU allows accessing data objects (parameters and commands) to be transmitted (see
1715 Figure 6). The data objects shall be addressed by the "Index" element.1716 All multi-octet data types shall be transmitted as a big-endian sequence, i.e. the most
1717 significant octet (MSO) shall be sent first, followed by less significant octets in descending
1718 order, with the least significant octet (LSO) being sent last, as shown in Figure 2.1719 **7.3.6.2 Transmission of ISDUs**1720 An ISDU is transmitted via the ISDU communication channel (see Figure 8 and A.1.2). A
1721 number of messages are typically required to perform this transmission (segmentation). The
1722 Master transfers an ISDU by sending an I-Service (Read/Write) request to the Device via the
1723 ISDU communication channel. It then receives the Device's response via the same channel.1724 In the ISDU communication channel, the "Address" element within the M-sequence control
1725 octet accommodates a counter (= FlowCTRL). FlowCTRL is controlling the segmented data
1726 flow (see A.1.2) by counting the M-sequences necessary to transmit an ISDU.1727 The receiver of an ISDU expects a FlowCTRL + 1 in the next message in case of undisturbed
1728 communication. If FlowCTRL is unchanged, the previously transmitted message is repeated.
1729 In any other case the ISDU structure is violated.1730 The Master uses the "Length" element of the ISDU and FlowCTRL to check the
1731 accomplishment of the complete transmission.

1732 Permissible values for FlowCTRL are specified in Table 52.

Table 52 – FlowCTRL definitions


FlowCTRL	Definition
0x00 to 0x0F	COUNT M-sequence counter within an ISDU. Increments beginning with 1 after an ISDU START. Jumps back from 15 to 0 in the Event of an overflow.
0x10	START Start of an ISDU I-Service, i.e., start of a request or a response. For the start of a request, any previously incomplete services may be rejected. For a start request associated with a response, a Device shall send “No Service” until its application returns response data (see Table A.12).
0x11	IDLE 1 No request for ISDU transmission.
0x12	IDLE 2: Reserved for future use No request for ISDU transmission.
0x13 to 0x1E	Reserved
0x1F	ABORT Abort entire service. The Master responds by rejecting received response data. The Device responds by rejecting received request data and may generate an abort.

1734

1735 In state Idle_1, values 0x12 to 0x1F shall not lead to a communication error.

7.3.6.3 State machine of the Master ISDU handler

1737 Figure 51 shows the state machine of the Master ISDU handler.

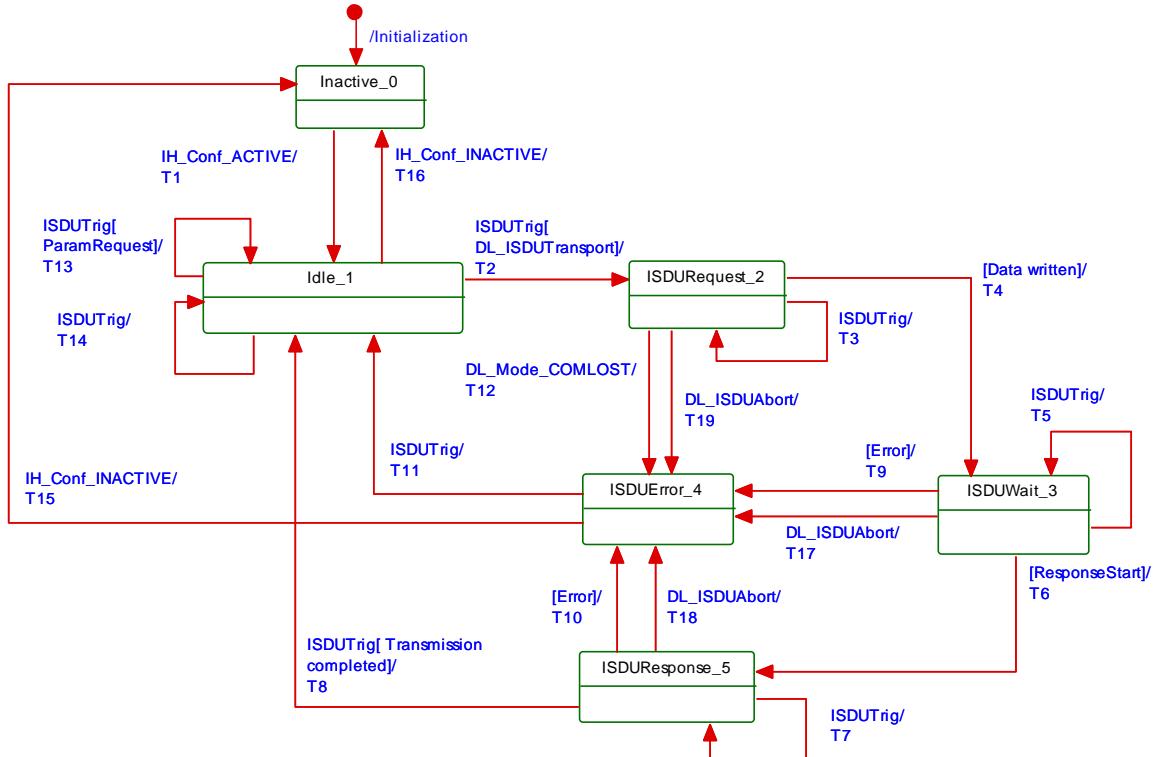

1738

Figure 51 – State machine of the Master ISDU handler

1739

1740

1741 Table 53 shows the state transition tables of the Master ISDU handler.


1742 **Table 53 – State transition tables of the Master ISDU handler**

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting on activation	
Idle_1		Waiting on transmission of next On-request Data	
ISDUREquest_2		Transmission of ISDU request data	
ISDUEWait_3		Waiting on response from Device. Observe ISDUTime	
ISDUError_4		Error handling after detected errors: Invoke negative DL_ISDUTransport response with ISDUTransportErrorInfo	
ISDUREsponse_5		Get response data from Device	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	2	Invoke OD.req with ISDU write start condition: OD.req (W, ISDU, flowCtrl = START, data)
T3	2	2	Invoke OD.req with ISDU data write and FlowCTRL under conditions of Table 52
T4	2	3	Start timer (ISDUTime)
T5	3	3	Invoke OD.req with ISDU read start condition: OD.req (R, ISDU, flowCtrl = START)
T6	3	5	Stop timer (ISDUTime)
T7	5	5	Invoke OD.req with ISDU data read and FlowCTRL under conditions of Table 52
T8	5	1	OD.req (R, ISDU, flowCtrl = IDLE) Invoke positive DL_ISDUTransport confirmation
T9	3	4	-
T10	5	4	-
T11	4	1	Invoke OD.req with ISDU abortion: OD.req (R, ISDU, flowCtrl = ABORT). Invoke negative DL_ISDUTransport confirmation
T12	2	4	-
T13	1	1	Invoke OD.req with appropriate data. Invoke positive DL_ReadParam/DL_WriteParam confirmation
T14	1	1	Invoke OD.req with idle message: OD.req (R, ISDU, flowCtrl = IDLE)
T15	4	1	In case of lost communication, the message handler informs the DL_Mode handler which in turn uses the administrative call IH_Conf_INACTIVE. No actions during this transition required.
T16	1	0	-
T17	3	4	-
T18	5	4	-
T19	2	4	-
INTERNAL ITEMS	TYPE	DEFINITION	
ISDUTime	Time	Measurement of Device response time (watchdog, see Table 102)	
ResponseStart	Service	OD.cnf without "busy" indication (see Table A.14)	
ParamRequest	Service	DL_ReadParam or DL_WriteParam	
Error	Variable	Any detectable error within the ISDU transmission or DL_ISDUAabort requests, or any violation of the ISDU acknowledgment time (see Table 102)	

1745

1746 **7.3.6.4 State machine of the Device ISDU handler**

1747 Figure 52 shows the state machine of the Device ISDU handler.

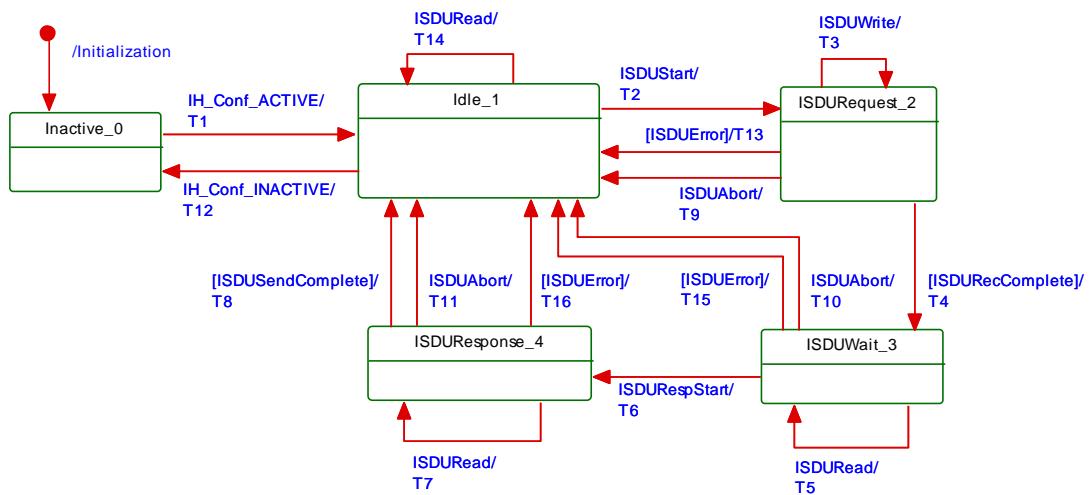

1748

1749 **Figure 52 – State machine of the Device ISDU handler**

1750 Table 54 shows the state transition tables of the Device ISDU handler.

1751 **Table 54 – State transition tables of the Device ISDU handler**

STATE NAME		STATE DESCRIPTION	
Inactive_0			Waiting on activation
Idle_1			Waiting on next ISDU transmission
ISDUREquest_2			Reception of ISDU request
ISDUEWait_3			Waiting on data from application layer to transmit (see DL_ISDUTransport)
ISDUREsponse_4			Transmission of ISDU response data
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	2	Start receiving of ISDU request data
T3	2	2	Receive ISDU request data
T4	2	3	Invoke DL_ISDUTransport.ind to AL (see 7.2.1.6)
T5	3	3	Invoke OD.rsp with "busy" indication (see Table A.14)
T6	3	4	-
T7	4	4	Invoke OD.rsp with ISDU response data
T8	4	1	-
T9	2	1	-
T10	3	1	Invoke DL_ISDUAbrt
T11	4	1	Invoke DL_ISDUAbrt
T12	1	0	-
T13	2	1	Invoke DL_ISDUAbrt
T14	1	1	Invoke OD.rsp with "no service" indication (see Table A.12 and Table A.14)
T15	3	1	Invoke DL_ISDUAbrt
T16	4	1	Invoke DL_ISDUAbrt

1753

INTERNAL ITEMS	TYPE	DEFINITION
ISDUSTart	Service	OD.ind(W, ISDU, Start, Data)
ISDUMrite	Service	OD.ind(W, ISDU, FlowCtrl, Data)
ISDUREcComplete	Guard	If OD.ind(R, ISDU, Start, ...) received
ISDURespStart	Service	DL_ISDUTransport.rsp()
ISDUREad	Service	OD.ind(R, ISDU, Start or FlowCtrl, ...)
ISDUSendComplete	Guard	If OD.ind(R, ISDU, IDLE, ...) received
ISDUAabort	Service	OD.ind(R/W, ISDU, Abort, ...)
ISDUError	Guard	If ISDU structure is incorrect or FlowCTRL error detected

1754

7.3.7 Command handler

7.3.7.1 General

The command handler passes the control code (PDOUTVALID or PDOUTINVALID) contained in the DL_Control.req service primitive to the cyclically operating message handler via the OD.req service and MasterCommands. The message handler uses the page communication channel.

The permissible control codes for output Process Data are listed in Table 55.

Table 55 – Control codes

Control code	MasterCommand	Description
PDOUTVALID	ProcessDataOutputOperate	Output Process Data valid
PDOUTINVALID	DeviceOperate	Output Process Data invalid or missing


1763

The command handler receives input Process Data status information via the PDIstatus service and propagates it within a DL_Control.ind service primitive.

In addition, the command handler translates Device mode change requests from System Management into corresponding MasterCommands (see Table B.2).

7.3.7.2 State machine of the Master command handler

Figure 53 shows the state machine of the Master command handler.

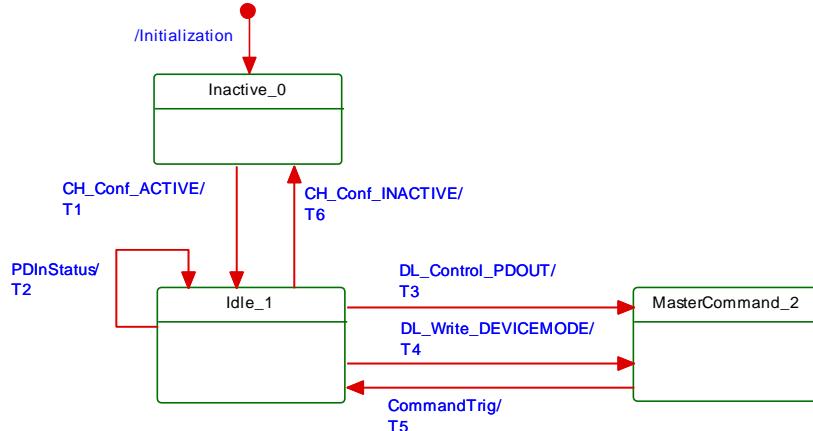

1770

Figure 53 – State machine of the Master command handler

Table 56 shows the state transition tables of the Master command handler.

1773


Table 56 – State transition tables of the Master command handler

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting on activation by DL-mode handler	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	1	If service PDInStatus.ind = VALID invoke DL_Control.ind (VALID) to signal valid input Process Data to AL. If service PDInStatus.ind = INVALID invoke DL_Control.ind (INVALID) to signal invalid input Process Data to AL.
T3	1	1	If service DL_Control.req = PDOUTVALID invoke OD.req (WRITE, PAGE, 0, 1, MasterCommand = 0x98). If service DL_Control.req = PDOUTINVALID invoke OD.req (WRITE, PAGE, 0, 1, MasterCommand = 0x99). See Table B.2.
T4	1	2	The services DL_Write_DEVICEMODE translate into: INACTIVE: OD.req (WRITE, PAGE, 0, 1, MasterCommand = 0x5A) STARTUP: OD.req (WRITE, PAGE, 0, 1, MasterCommand = 0x97) PREOPERATE: OD.req (WRITE, PAGE, 0, 1, MasterCommand = 0x9A) OPERATE: OD.req (WRITE, PAGE, 0, 1, MasterCommand = 0x99)
T5	2	1	A call CommandTrig from the OD handler causes the command handler to invoke the OD.req service primitive and subsequently the message handler to send the appropriate MasterCommand to the Device.
T6	1	0	-
INTERNAL ITEMS		TYPE	DEFINITION
DEVICEMODE		Label	Any of the Device modes: INACTIVE, STARTUP, PREOPERATE, or OPERATE
PDOOUT		Label	Any of the two output control codes: PDOUTVALID or PDOUTINVALID (see Table 55)

1776

7.3.7.3 State machine of the Device command handler

Figure 54 shows the Device state machine of the command handler. It is mainly driven by MasterCommands from the Master's command handler to control the Device modes and the status of output Process Data. It also controls the status of input Process Data via the PDInStatus service.

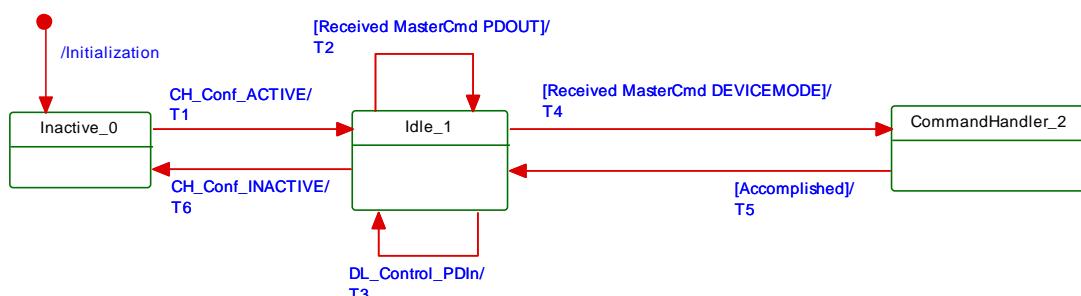

1782

Figure 54 – State machine of the Device command handler

1783

1785 Table 57 shows the state transition tables of the Device command handler.

1786 **Table 57 – State transition tables of the Device command handler**

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting on activation	
Idle_1		Waiting on next MasterCommand	
CommandHandler_2		Decompose MasterCommand and invoke specific actions (see B.1.2): If MasterCommand = 0x5A then change Device state to INACTIVE. If MasterCommand = 0x97 then change Device state to STARTUP. If MasterCommand = 0x9A then change Device state to PREOPERATE. If MasterCommand = 0x99 then change Device state to OPERATE.	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	1	Invoke DL_Control.ind (PDOUTVALID) if received MasterCommand = 0x98. Invoke DL_Control.ind (PDOUTINVALID) if received MasterCommand = 0x99.
T3	1	1	If service DL_Control.req (VALID) then invoke PDInStatus.req (VALID). If service DL_Control.req (INVALID) then invoke PDInStatus.req (INVALID). Message handler uses PDInStatus service to set/reset the PD status flag (see A.1.5)
T4	1	2	-
T5	2	1	-
T6	1	0	-
INTERNAL ITEMS		TYPE	DEFINITION
<none>			

1789

1790

1791 **7.3.8 Event handler**

1792 **7.3.8.1 Events**

1793 There are two types of Events, one without details, and another one with details. Events
1794 without details may have been implemented in legacy Devices, but they shall not be used for
1795 Devices in accordance with this standard. However, all Masters shall support processing of
1796 both Events with details and Events without details.

1797 The general structure and coding of Events is specified in A.6. Event codes without details
1798 are specified in Table A.16. EventCodes with details are specified in Annex D. The structure
1799 of the Event memory for EventCodes with details within a Device is specified in Table 58.

1800 **Table 58 – Event memory**

Address	Event slot number	Parameter Name	Description
0x00		StatusCode	Summary of status and error information. Also used to control read access for individual messages.
0x01	1	EventQualifier 1	Type, mode and source of the Event
0x02		EventCode 1	16-bit EventCode of the Event
0x03	2	EventQualifier 2	Type, mode and source of the Event
0x04		EventCode 2	16-bit EventCode of the Event
0x05			
0x06			
...			

Address	Event slot number	Parameter Name	Description
0x10	6	EventQualifier 6	Type, mode and source of the Event
0x11		EventCode 6	16-bit EventCode of the Event
0x12			
0x13 to 0x1F			Reserved for future use

1801

1802 **7.3.8.2 Event processing**

1803 The Device AL writes an Event to the Event memory and then sets the "Event flag" bit, which
 1804 is sent to the Master in the next message within the CKS octet (see 7.3.3.2 and A.1.5).

1805 Upon reception of a Device reply message with the "Event flag" bit = 1, the Master shall
 1806 switch from the ISDU handler to the Event handler. The Event handler starts reading the
 1807 StatusCode.


1808 If the "Event Details" bit is set (see Figure A.22), the Master shall read the Event details of
 1809 the Events indicated in the StatusCode from the Event memory. Once it has read an Event
 1810 detail, it shall invoke the service DL_Event.ind. After reception of the service DL_EventConf,
 1811 the Master shall write any data to the StatusCode to reset the "Event flag" bit. The Event
 1812 handling on the Master shall be completed regardless of the contents of the Event data
 1813 received (EventQualifier, EventCode).

1814 If the "Event Details" bit is not set (see Figure A.21) the Master Event handler shall generate
 1815 the standardized Events according to Table A.16 beginning with the most significant bit in the
 1816 EventCode.

1817 Write access to the StatusCode indicates the end of Event processing to the Device. The
 1818 Device shall ignore the data of this Master Write access. The Device then resets the "Event
 1819 flag" bit and may now change the content of the fields in the Event memory.

1820 **7.3.8.3 State machine of the Master Event handler**

1821 Figure 55 shows the Master state machine of the Event handler.

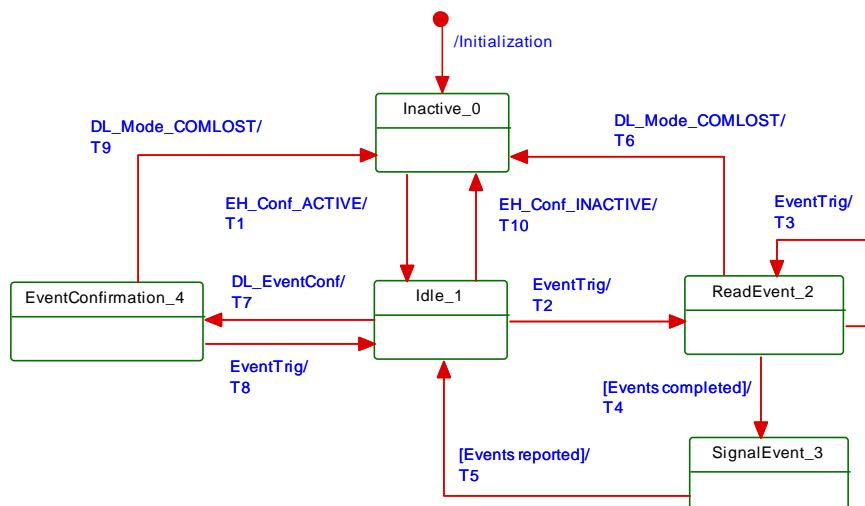

1822

1823 **Figure 55 – State machine of the Master Event handler**

1824

1825 Table 59 shows the state transition tables of the Master Event handler.


1826 **Table 59 – State transition tables of the Master Event handler**

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting on activation	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	2	Read Event StatusCode octet via service OD.req (R, DIAGNOSIS, Event memory address = 0, 1)
T3	2	2	Read octets from Event memory via service OD.req (R, DIAGNOSIS, incremented Event memory address, 1)
T4	2	3	-
T5	3	1	-
T6	2	0	-
T7	1	4	-
T8	4	1	Invoke OD.req (W, DIAGNOSIS, 0, 1, any data) with Write access to "StatusCode" (see Table 58) to confirm Event readout to Device
T9	4	0	-
T10	1	0	-
INTERNAL ITEMS		DEFINITION	
<None>			

1829

1830 7.3.8.4 State machine of the Device Event handler

1831 Figure 56 shows the state machine of the Device Event handler.

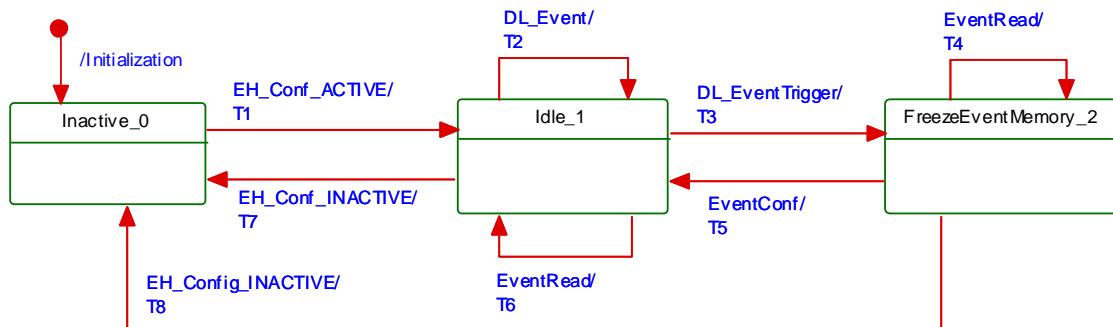

1832

1833 **Figure 56 – State machine of the Device Event handler**

1834

1835 Table 60 shows the state transition tables of the Device Event handler.

1836 **Table 60 – State transition tables of the Device Event handler**

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting on activation	
Idle_1		Waiting on DL-Event service from AL providing Event data and the DL_EventTrigger service to fire the "Event flag" bit (see A.1.5)	
FreezeEventMemory_2		Waiting on readout of the Event memory and on Event memory readout confirmation through write access to the StatusCode	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	1	Change Event memory entries with new Event data (see Table 58)
T3	1	2	Invoke service EventFlag.req (Flag = TRUE) to indicate Event activation to the Master via the "Event flag" bit. Mark all Event slots in memory as not changeable.
T4	2	2	Master requests Event memory data via EventRead (= OD.ind). Send Event data by invoking OD.rsp with Event data of the requested Event memory address.
T5	2	1	Invoke service EventFlag.req (Flag = FALSE) to indicate Event deactivation to the Master via the "Event flag" bit. Mark all Event slots in memory as invalid according to A.6.3.
T6	1	1	Send contents of Event memory by invoking OD.rsp with Event data
T7	1	0	-
T8	2	0	Discard Event memory data
INTERNAL ITEMS		DEFINITION	
EventRead		Service	OD.ind (R, DIAGNOSIS, Event memory address, length, data)
EventConf		Service	OD.ind (W, DIAGNOSIS, address = 0, data = don't care)


1839

1840

1841 8 Application layer (AL)

1842 8.1 General


1843 Figure 57 shows an overview of the structure and services of the Master application layer
1844 (AL).

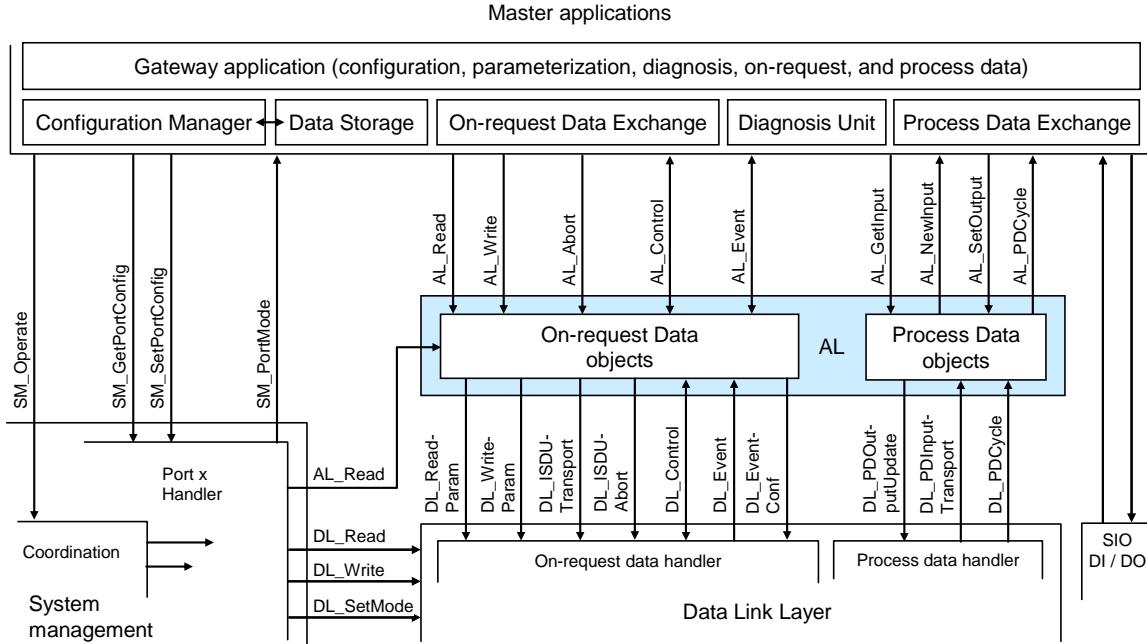

1846 **Figure 57 – Structure and services of the application layer (Master)**

1847

1848 Figure 58 shows an overview of the structure and services of the Device application layer
1849 (AL).

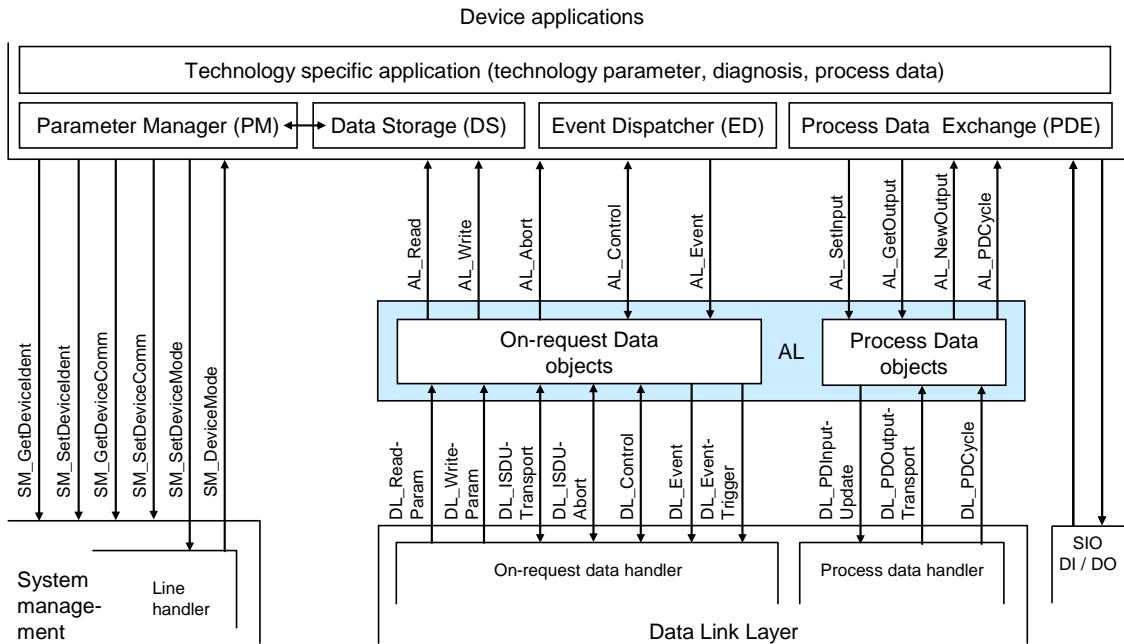

1851 **Figure 58 – Structure and services of the application layer (Device)**

8.2 Application layer services

8.2.1 AL services within Master and Device

This clause defines the services of the application layer (AL) to be provided to the Master and Device applications and System Management via its external interfaces. Table 61 lists the assignments of Master and Device to their roles as initiator or receiver for the individual AL services. Empty fields indicate no availability of this service on Master or Device.

Table 61 – AL services within Master and Device

Service name	Master	Device
AL_Read	R	I
AL_Write	R	I
AL_Abort	R	I
AL_GetInput	R	
AL_NewInput	I	
AL_SetInput		R
AL_PDCycle	I	I
AL_GetOutput		R
AL_NewOutput		I
AL_SetOutput	R	
AL_Event	I / R	R
AL_Control	I / R	R / I
Key (see 3.3.4)		
I Initiator of service		
R Receiver (Responder) of service		

1859

8.2.2 AL Services

8.2.2.1 AL_Read

The AL_Read service is used to read On-request Data from a Device connected to a specific port. The parameters of the service primitives are listed in Table 62.

1864

Table 62 – AL_Read

Parameter name	.req	.ind	.rsp	.cnf
Argument	M	M		
Port	M	M		
Index	M	M		
Subindex	M	M		
Result (+)			S	S(=)
Port			M	M
Data			M	M(=)
Result (-)			S	S(=)
Port			M	M
ErrorInfo				M(=)

1865

Argument

The service-specific parameters are transmitted in the argument.

Port

This parameter contains the port number for the On-request Data to be read.

Parameter type: Unsigned8

Index

1872 This parameter indicates the address of On-request Data objects to be read from the
 1873 Device. Index 0 in conjunction with Subindex 0 addresses the entire set of Direct
 1874 Parameters from 0 to 15 (see Direct Parameter page 1 in Table B.1) or in conjunction with
 1875 Subindices 1 to 16 the individual parameters from 0 to 15. Index 1 in conjunction with
 1876 Subindex 0 addresses the entire set of Direct Parameters from addresses 16 to 31 (see
 1877 Direct Parameter page 2 in Table B.1) or in conjunction with Subindices 1 to 16 the
 1878 individual parameters from 16 to 31. It uses the page communication channel (see Figure
 1879 7) for both and always returns a positive result. For all the other indices (see B.2) the ISDU
 1880 communication channel is used.

1881 Permitted values: 0 to 65535 (See B.2.1 for constraints)

Subindex

1882 This parameter indicates the element number within a structured On-request Data object. A
 1883 value of 0 indicates the entire set of elements.

1885 Permitted values: 0 to 255

Result (+):

1886 This selection parameter indicates that the service has been executed successfully.

Port

1889 This parameter contains the port number of the requested On-request Data.

Data

1891 This parameter contains the read values of the On-request Data.

1892 Parameter type: Octet string

Result (-):

1893 This selection parameter indicates that the service failed.

Port

1896 This parameter contains the port number for the requested On-request Data.

ErrorInfo

1898 This parameter contains error information.

1899 Permitted values: see Annex C

1900 NOTE The AL maps DL ErrorInfos into its own AL ErrorInfos using Annex C.

1901

8.2.2.2 AL_Write

1903 The AL_Write service is used to write On-request Data to a Device connected to a specific
 1904 port. The parameters of the service primitives are listed in Table 63.

1905

Table 63 – AL_Write

Parameter name	.req	.ind	.rsp	.cnf
Argument	M	M		
Port	M			
Index	M	M		
Subindex	M	M		
Data	M	M(=)		
Result (+)			S	S(=)
Port				M
Result (-)			S	S(=)
Port				M
ErrorInfo			M	M(=)

1906

Argument

1907 The service-specific parameters are transmitted in the argument.

1908

Port

1910 This parameter contains the port number for the On-request Data to be written.

1911 Parameter type: Unsigned8

1912 **Index**

1913 This parameter indicates the address of On-request Data objects to be written to the
 1914 Device. Index 0 always returns a negative result except for use in conjunction with
 1915 Subindex 16 at Devices without ISDU support. Index 1 in conjunction with Subindex 0
 1916 addresses the entire set of Direct Parameters from addresses 16 to 31 (see Direct
 1917 Parameter page 2 in Table B.1) or in conjunction with Subindices 1 to 16 the individual
 1918 parameters from 16 to 31. It uses the page communication channel (see Figure 7) in case
 1919 of Index 1 and always returns a positive result. For all other Indices (see B.2) the ISDU
 1920 communication channel is used.

1921 Permitted values: 1 to 65535 (see Table 102)

1922 **Subindex**

1923 This parameter indicates the element number within a structured On-request Data object. A
 1924 value of 0 indicates the entire set of elements.

1925 Permitted values: 0 to 255

1926 **Data**

1927 This parameter contains the values of the On-request Data.

1928 Parameter type: Octet string

1929 **Result (+):**

1930 This selection parameter indicates that the service has been executed successfully.

1931 **Port**

1932 This parameter contains the port number of the On-request Data.

1933 **Result (-):**

1934 This selection parameter indicates that the service failed.

1935 **Port**

1936 This parameter contains the port number of the On-request Data.

1937 **ErrorInfo**

1938 This parameter contains error information.

1939 Permitted values: see Annex C

1941 **8.2.2.3 AL_Abort**

1942 The AL_Abort service is used to abort a current AL_Read or AL_Write service on a specific
 1943 port. Invocation of this service abandons the response to an AL_Read or AL_Write service in
 1944 progress on the Master. The parameters of the service primitives are listed in Table 64.

1945 **Table 64 – AL_Abort**

Parameter name	.req	.ind
Argument Port	M M	M

1946 **Argument**

1947 The service-specific parameter is transmitted in the argument.

1949 **Port**

1950 This parameter contains the port number of the service to be abandoned.

8.2.2.4 AL_GetInput

The AL_GetInput service reads the input data within the Process Data provided by the data link layer of a Device connected to a specific port. The parameters of the service primitives are listed in Table 65.

Table 65 – AL_GetInput

Parameter name	.req	.cnf
Argument	M	
Port	M	
Result (+)		S
Port		M
InputData		M
Result (-)		S
Port		M
ErrorInfo		M

Argument

The service-specific parameters are transmitted in the argument.

Port

This parameter contains the port number for the Process Data to be read.

Result (+):

This selection parameter indicates that the service has been executed successfully.

Port

This parameter contains the port number for the Process Data.

InputData

This parameter contains the values of the requested process input data of the specified port.

Parameter type: Octet string

Result (-):

This selection parameter indicates that the service failed.

Port

This parameter contains the port number for the Process Data.

ErrorInfo

This parameter contains error information.

Permitted values:

NO_DATA (DL did not provide Process Data)

8.2.2.5 AL_NewInput

The AL_NewInput local service indicates the receipt of updated input data within the Process Data of a Device connected to a specific port. The parameters of the service primitives are listed in Table 66.

Table 66 – AL_NewInput

Parameter name	.ind
Argument	M
Port	M

Argument

The service-specific parameter is transmitted in the argument.

Port

This parameter specifies the port number of the received Process Data.

8.2.2.6 AL_SetInput

The AL_SetInput local service updates the input data within the Process Data of a Device. The parameters of the service primitives are listed in Table 67.

Table 67 – AL_SetInput

Parameter name	.req	.cnf
Argument InputData	M M	
Result (+)		S
Result (-) ErrorInfo		S M

Argument

The service-specific parameters are transmitted in the argument.

InputData

This parameter contains the Process Data values of the input data to be transmitted.

Parameter type: Octet string

Result (+):

This selection parameter indicates that the service has been executed successfully.

Result (-):

This selection parameter indicates that the service failed.

ErrorInfo

This parameter contains error information.

Permitted values:

STATE_CONFLICT (Service unavailable within current state)

8.2.2.7 AL_PDCycle

The AL_PDCycle local service indicates the end of a Process Data cycle. The Device application can use this service to transmit new input data to the application layer via AL_SetInput. The parameters of the service primitives are listed in Table 68.

Table 68 – AL_PDCycle

Parameter name	.ind
Argument Port	O

Argument

The service-specific parameter is transmitted in the argument.

Port

This parameter contains the port number of the received new Process Data (Master only).

8.2.2.8 AL_GetOutput

The AL_GetOutput service reads the output data within the Process Data provided by the data link layer of the Device. The parameters of the service primitives are listed in Table 69.

2019

Table 69 – AL_GetOutput

Parameter name	.req	.cnf
Argument	M	
Result (+) OutputData		S M
Result (-) ErrorInfo		S M

2020

Argument

2021 The service-specific parameters are transmitted in the argument.

2022

Result (+):

2023 This selection parameter indicates that the service has been executed successfully.

2024

OutputData

2025 This parameter contains the Process Data values of the requested output data.

2027

Parameter type: Octet string

2028

Result (-):

2029 This selection parameter indicates that the service failed.

2030

ErrorInfo

2031 This parameter contains error information.

2032

Permitted values:

2033 NO_DATA (DL did not provide Process Data)

2034

8.2.2.9 AL_NewOutput2035 The AL_NewOutput local service indicates the receipt of updated output data within the
2036 Process Data of a Device. This service has no parameters. The service primitives are shown
2037 in Table 70.

2038

Table 70 – AL_NewOutput

Parameter name	.ind
<None>	

2039

8.2.2.10 AL_SetOutput2040 The AL_SetOutput local service updates the output data within the Process Data of a Master.
2041 The parameters of the service primitives are listed in Table 71.

2043

Table 71 – AL_SetOutput

Parameter name	.req	.cnf
Argument	M	
Port	M	
OutputData	M	
Result (+) Port		S M
Result (-) Port		S M
ErrorInfo		M

2044

Argument

2045 The service-specific parameters are transmitted in the argument.

2046

Port

2048 This parameter contains the port number of the Process Data to be written.

OutputData

2050 This parameter contains the output data to be written at the specified port.

2051 Parameter type: Octet string

Result (+):

2053 This selection parameter indicates that the service has been executed successfully.

Port

2055 This parameter contains the port number for the Process Data.

Result (-):

2057 This selection parameter indicates that the service failed.

Port

2059 This parameter contains the port number for the Process Data.

ErrorInfo

2061 This parameter contains error information.

2062 Permitted values:

2063 STATE_CONFLICT (Service unavailable within current state)

8.2.2.11 AL_Event

2065 The AL_Event service indicates up to 6 pending status or error messages. The source of one
 2066 Event can be local (Master) or remote (Device). The Event can be triggered by a
 2067 communication layer or by an application. The parameters of the service primitives are listed
 2068 in Table 72.

2069 **Table 72 – AL_Event**

Parameter name	.req	.ind	.rsp	.cnf
Argument	M	M	M	M
Port	M	M	M	M
EventCount	M	M		
Event(1)	M	M		
Instance	M	M		
Mode	M	M		
Type	M	M		
Origin		M		
EventCode	M	M		
...				
Event(n)	M	M		
Instance	M	M		
Mode	M	M		
Type	M	M		
Origin		M		
EventCode	M	M		

2070

Argument

2072 The service-specific parameters are transmitted in the argument.

Port

2074 This parameter contains the port number of the Event data.

EventCount

2076 This parameter indicates the number n (1 to 6) of Events in the Event memory.

Event(x)

2078 Depending on EventCount this parameter exists n times. Each instance contains the
 2079 following elements.

Instance

2081 This parameter indicates the Event source.

2082 Permitted values: Application (see Table A.17)

Mode

2084 This parameter indicates the Event mode.
 2085 Permitted values: SINGLESOT, APPEARS, DISAPPEARS (see Table A.20)
2086 Type
 2087 This parameter indicates the Event category.
 2088 Permitted values: ERROR, WARNING, NOTIFICATION (see Table A.19)
2089 Origin
 2090 This parameter indicates whether the Event was generated in the local communication section or remotely (in the Device).
 2092 Permitted values: LOCAL, REMOTE
2093 EventCode
 2094 This parameter contains a code identifying a certain Event.
 2095 Permitted values: see Annex D

2096 8.2.2.12 AL_Control

2097 The AL_Control service contains the Process Data qualifier status information transmitted to
 2098 and from the Device application. This service shall be synchronized with AL_GetInput and
 2099 AL_SetOutput respectively (see 11.7.2.1). The parameters of the service primitives are listed
 2100 in Table 73.

2101 **Table 73 – AL_Control**

Parameter name	.req	.ind
Argument	M	M
Port	C	C
ControlCode	M	M

2102 **Argument**
 2103 The service-specific parameters are transmitted in the argument.

2105 **Port**
 2106 This parameter contains the number of the related port.

2107 **ControlCode**
 2108 This parameter contains the qualifier status of the Process Data (PD).

2109 Permitted values:
 2110 VALID (Input Process Data valid)
 2111 INVALID (Input Process Data invalid)
 2112 PDOUTVALID (Output Process Data valid, see Table 55)
 2113 PDOUTINVALID (Output Process Data invalid, see Table 55)

2114 8.3 Application layer protocol

2115 8.3.1 Overview

2116 Figure 8 shows that the application layer offers services for data objects which are
 2117 transformed into the special communication channels of the data link layer.


2118 The application layer manages the data transfer with all its assigned ports. That means, AL
 2119 service calls need to identify the particular port they are related to.

2120 8.3.2 On-request Data transfer

2121 8.3.2.1 OD state machine of the Master AL

2122 Figure 59 shows the state machine for the handling of On-request Data (OD) within the
 2123 application layer.

2124 "AL_Service" represents any AL service in Table 61 related to OD. "Portx" indicates a
 2125 particular port number.

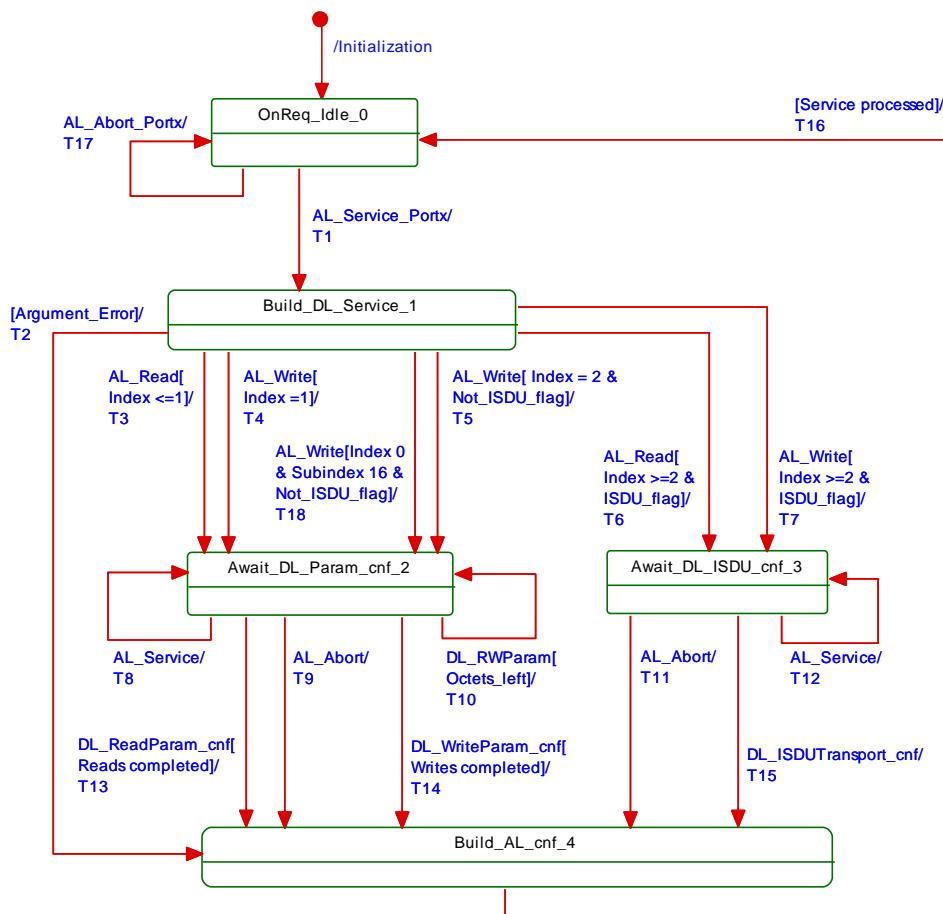

2126

2127

Figure 59 – OD state machine of the Master AL

2128 Table 74 shows the states and transitions for the OD state machine of the Master AL.

2129 **Table 74 – States and transitions for the OD state machine of the Master AL**

STATE NAME	STATE DESCRIPTION		
OnReq_Idle_0	AL service invocations from the Master applications or from the SM Portx handler (see Figure 57) can be accepted within this state.		
Build_DL_Service_1	Within this state AL service calls are checked, and corresponding DL services are created within the subsequent states. In case of an error in the arguments of the AL service a negative AL confirmation is created and returned.		
Await_DL_Param_cnf_2	Within this state the AL service call is transformed in a sequence of as many DL_ReadParam or DL_WriteParam calls as needed (Direct Parameter page access; see page communication channel in Figure 7). All asynchronously occurred AL service invocations except AL_Abort are rejected (see 3.3.7).		
Await_DL_ISDU_cnf_3	Within this state the AL service call is transformed in a DL_ISDUTransport service call (see ISDU communication channel in Figure 7). All asynchronously occurred AL service invocations except AL_Abort are rejected (see 3.3.7).		
Build_AL_cnf_4	Within this state an AL service confirmation is created depending on an argument error, the DL service confirmation, or an AL_Abort.		
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	Memorize the port number "Portx".
T2	1	4	Prepare negative AL service confirmation.
T3	1	2	Prepare DL_ReadParam for Index 0 or 1.
T4	1	2	Prepare DL_WriteParam for Index 1.


2130

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T5	1	2	Prepare DL_Write for Address 0x0F if the Device does not support ISDU.
T6	1	3	Prepare DL_ISDUTransport (read)
T7	1	3	Prepare DL_ISDUTransport (write)
T8	2	2	Return negative AL service confirmation on this asynchronous service call.
T9	2	4	All current DL service actions are abandoned, and a negative AL service confirmation is prepared.
T10	2	2	Call next DL_ReadParam or DL_WriteParam service if not all OD are transferred.
T11	3	4	All current DL service actions are abandoned, and a negative AL service confirmation is prepared.
T12	3	3	Return negative AL service confirmation on this asynchronous service call.
T13	2	4	Prepare positive AL service confirmation.
T14	2	4	Prepare positive AL service confirmation.
T15	3	4	Prepare positive AL service confirmation.
T16	4	0	Return positive AL service confirmation with port number "Portx".
T17	0	0	Return negative AL service confirmation with port number "Portx".
T18	1	2	Prepare DL_Write for Address 0x0F if the Device does not support ISDU.
2131	INTERNAL ITEMS	TYPE	DEFINITION
	Argument_Error	Bool	Illegal values within the service body, for example "Port number or Index out of range"
	DL_RWParam	Label	"DL_RWParam": DL_WriteParam_cnf or DL_ReadParam_cnf
	Completed	Bool	No more OD left for transfer
	Octets_left	Bool	More OD for transfer
	Portx	Variable	Service body variable indicating the port number
	ISDU_Flag	Bool	Device supports ISDU
	AL_Service	Label	"AL_Service" represents any AL service in Table 61 related to OD

2132

2133 8.3.2.2 OD state machine of the Device AL

2134 Figure 60 shows the state machine for the handling of On-request Data (OD) within the
2135 application layer of a Device.

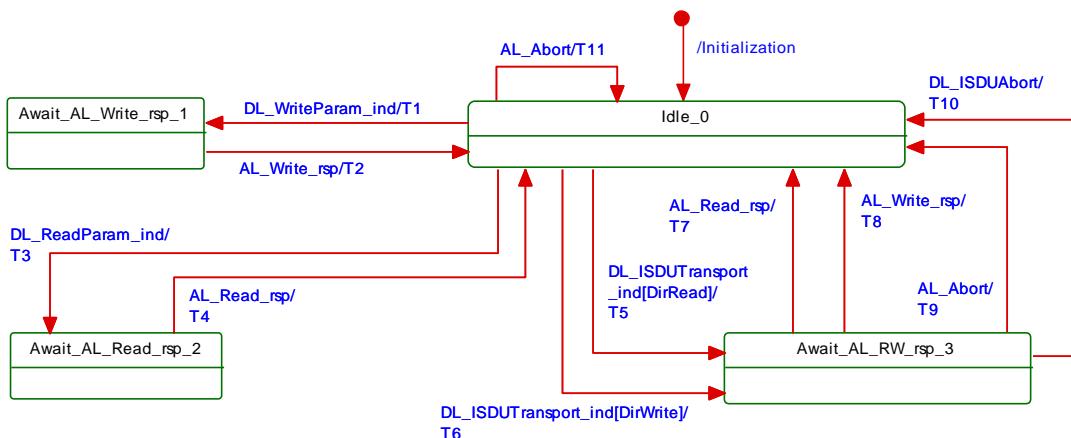

2136

2137 **Figure 60 – OD state machine of the Device AL**

2138 Table 75 shows the states and transitions for the OD state machine of the Device AL.

2139 **Table 75 – States and transitions for the OD state machine of the Device AL**


STATE NAME		STATE DESCRIPTION	
Idle_0		The Device AL is waiting on subordinated DL service calls triggered by Master messages.	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	Invoke AL_Write.
T2	1	0	Invoke DL_WriteParam (16 to 31).
T3	0	2	Invoke AL_Read.
T4	2	0	Invoke DL_ReadParam (0 to 31).
T5	0	3	Invoke AL_Read.
T6	0	3	Invoke AL_Write.
T7	3	0	Invoke DL_ISDUTransport (read)
T8	3	0	Invoke DL_ISDUTransport (write)
T9	3	0	Current AL_Read or AL_Write abandoned upon this asynchronous AL_Abort service call. Return negative DL_ISDUTransport (see 3.3.7).
T10	3	0	Current waiting on AL_Read or AL_Write abandoned.
T11	0	0	Current DL_ISDUTransport abandoned. All OD are set to "0".
INTERNAL ITEMS		TYPE	DEFINITION
DirRead		Bool	Access direction: DL_ISDUTransport (read) causes an AL_Read
DirWrite		Bool	Access direction: DL_ISDUTransport (write) causes an AL_Read

2142

2143 **8.3.2.3 Sequence diagrams for On-request Data**

2144 Figure 61 through Figure 63 demonstrate complete interactions between Master and Device
2145 for several On-request Data exchange use cases.

2146 Figure 61 demonstrates two examples for the exchange of On-request Data. For Indices > 1
2147 this is performed with the help of ISDUs and corresponding DL services (ISDU communication
2148 channel according to Figure 7). Access to Direct Parameter pages 0 and 1 uses different DL
2149 services (page communication channel according to Figure 7)

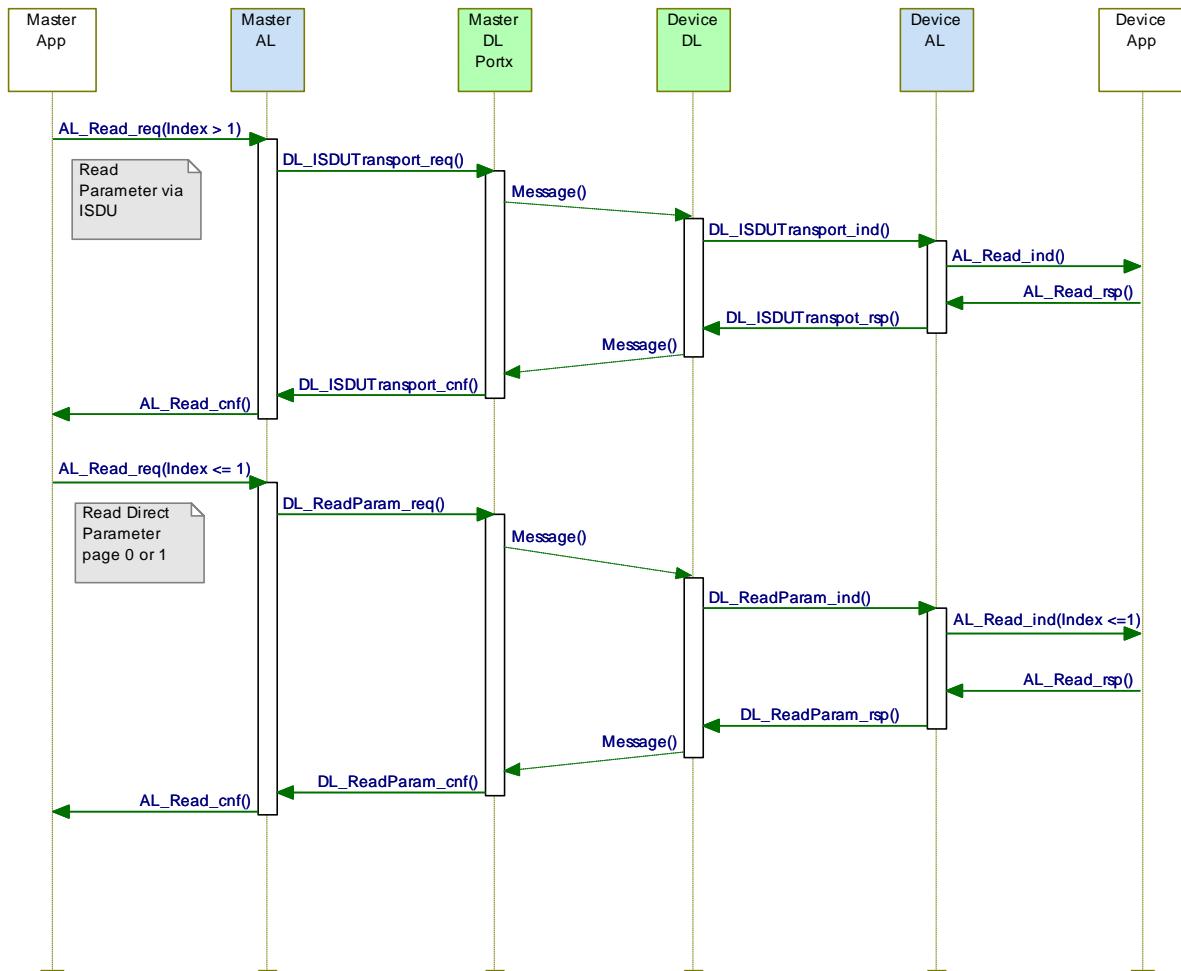


2150

Figure 61 – Sequence diagram for the transmission of On-request Data

2151 Figure 62 demonstrates the behaviour of On-request Data exchange in case of an error such
 2152 as requested Index not available (see Table C.1).

2153 Another possible error occurs when the Master application (gateway) tries to read an Index >
 2154 1 from a Device, which does not support ISDU. The Master AL would respond immediately
 2155 with "NO_ISDU_SUPPORTED" as the features of the Device are acquired during start-up
 2156 through reading the Direct Parameter page 1 via the parameter "M-sequence Capability" (see
 2157 Table B.1).
 2158

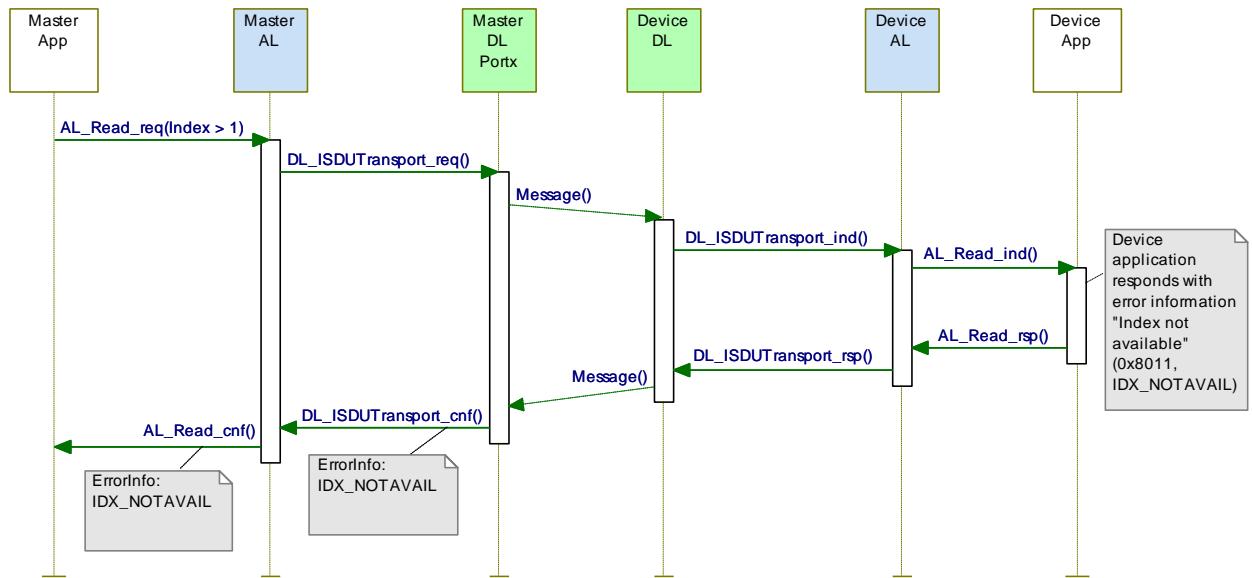


2159

Figure 62 – Sequence diagram for On-request Data in case of errors

2161 Figure 63 demonstrates the behaviour of On-request Data exchange in case of an ISDU
 2162 timeout (5 000 ms). A Device shall respond within less than the "ISDU acknowledgment time"
 2163 (see 10.8.5).

2164 NOTE See Table 102 for system constants such as "ISDU acknowledgment time".

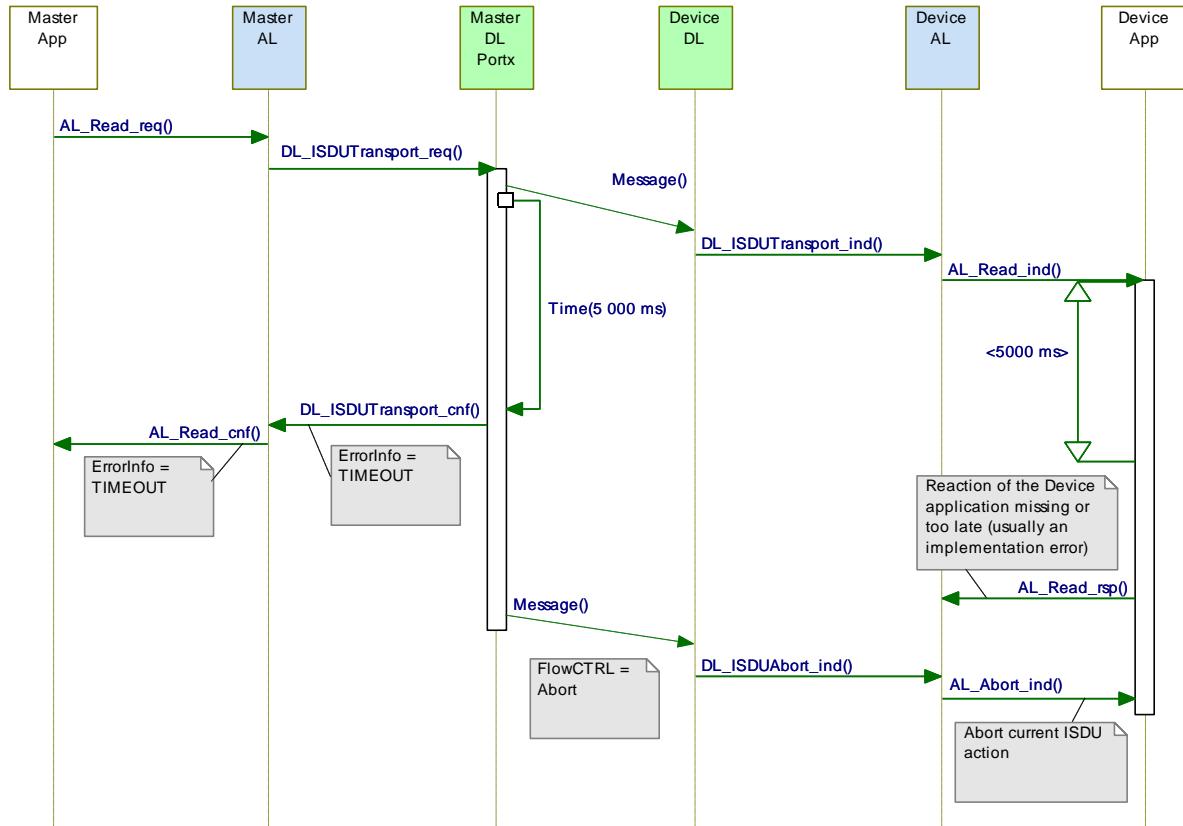


2165

Figure 63 – Sequence diagram for On-request Data in case of timeout

2167 **8.3.3 Event processing**

2168 **8.3.3.1 Event state machine of the Master AL**

2169 Figure 64 shows the Event state machine of the Master application layer.

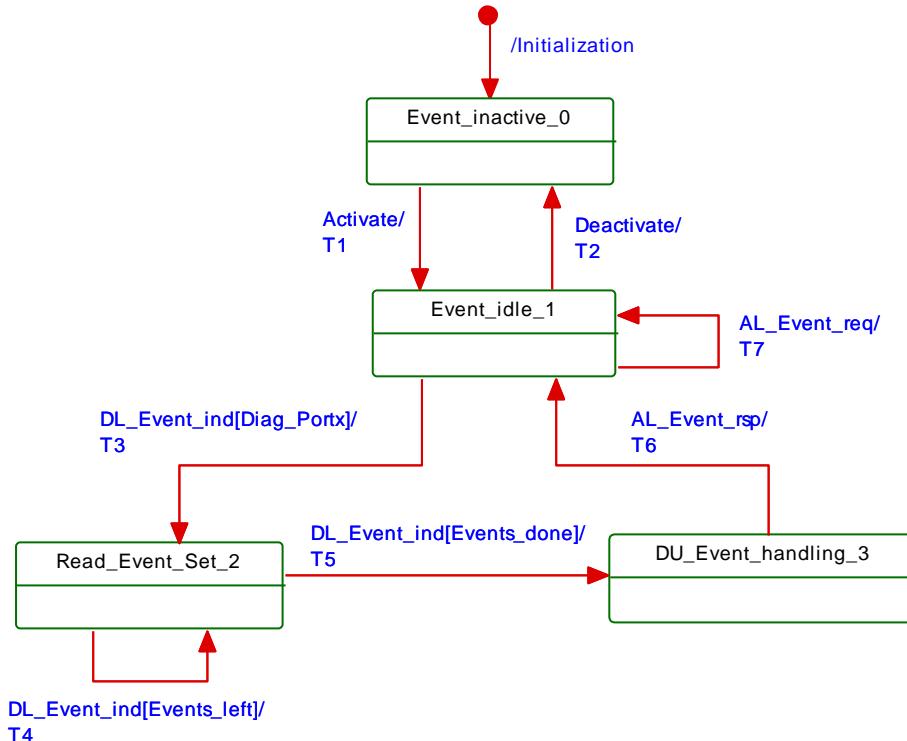

2170

2171 **Figure 64 – Event state machine of the Master AL**

2172 Table 76 specifies the states and transitions of the Event state machine of the Master
2173 application layer.

2174 **Table 76 – State and transitions of the Event state machine of the Master AL**

STATE NAME		STATE DESCRIPTION	
Event_inactive_0			The AL Event handling of the Master is inactive.
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	0	-
T3	1	2	-
T4	2	2	-
T5	2	3	AL_Event.ind
T6	3	1	DL_EventConf.req
T7	1	1	AL_Event.ind


2176

INTERNAL ITEMS	TYPE	DEFINITION
Diag_Portx	Bool	Event set contains diagnosis information with details.
Events_done	Bool	Event set is processed.
Events_left	Bool	Event set not yet completed.

2177

2178 **8.3.3.2 Event state machine of the Device AL**

2179 Figure 65 shows the Event state machine of the Device application layer

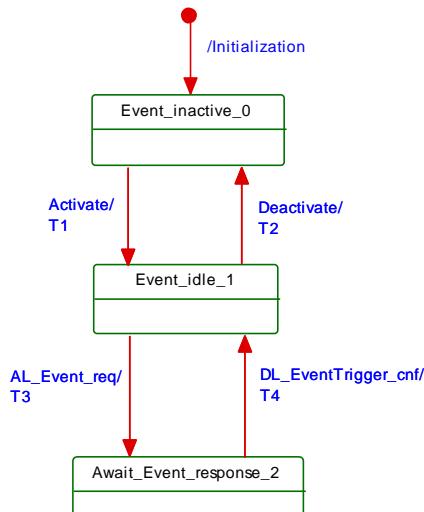

2180

Figure 65 – Event state machine of the Device AL2182 Table 77 specifies the states and transitions of the Event state machine of the Device application layer.
2183**Table 77 – State and transitions of the Event state machine of the Device AL**


STATE NAME		STATE DESCRIPTION	
Event_inactive_0		The AL_Event handling of the Device is inactive.	
Event_idle_1		The Device AL is ready to accept AL_Events (diagnosis information) from the technology specific Device applications for the transfer to the DL. The Device applications can create new Events during this time.	
Await_event_response_2		The Device AL propagated an AL_Event with diagnosis information and waits on a DL_EventTrigger confirmation of the DL. The Device AL shall not accept any new AL_Event during this time.	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	1	0	-
T3	1	2	An AL_Event request triggers a DL_Event and the corresponding DL_EventTrigger service. The DL_Event carries the diagnosis information from AL to DL. The DL_EventTrigger sets the Event flag within the cyclic data exchange (see A.1.5).
T4	2	1	A DL_EventTrigger confirmation triggers an AL_Event confirmation.
INTERNAL ITEMS		TYPE	DEFINITION
none			

2187

2188 8.3.3.3 Single Event scheduling

2189 Figure 66 shows how a single Event from a Device is processed, in accordance with the
 2190 relevant state machines.

- 2191 • The Device application creates an Event request (Step 1), which is passed from the AL to
 2192 the DL and buffered within the Event memory (see Table 58).
- 2193 • The Device AL activates the EventTrigger service to raise the Event flag, which causes
 2194 the Master to read the Event from the Event memory.
- 2195 • The Master then propagates this Event to the gateway application (Step 2), and waits for
 2196 an Event acknowledgment.
- 2197 • Once the Event acknowledgment is received (Step 3), it is indicated to the Device by
 2198 writing to the StatusCode (Step 4).
- 2199 • The Device confirms the original Event request to its application (Step 5), which may now
 2200 initiate a new Event request.

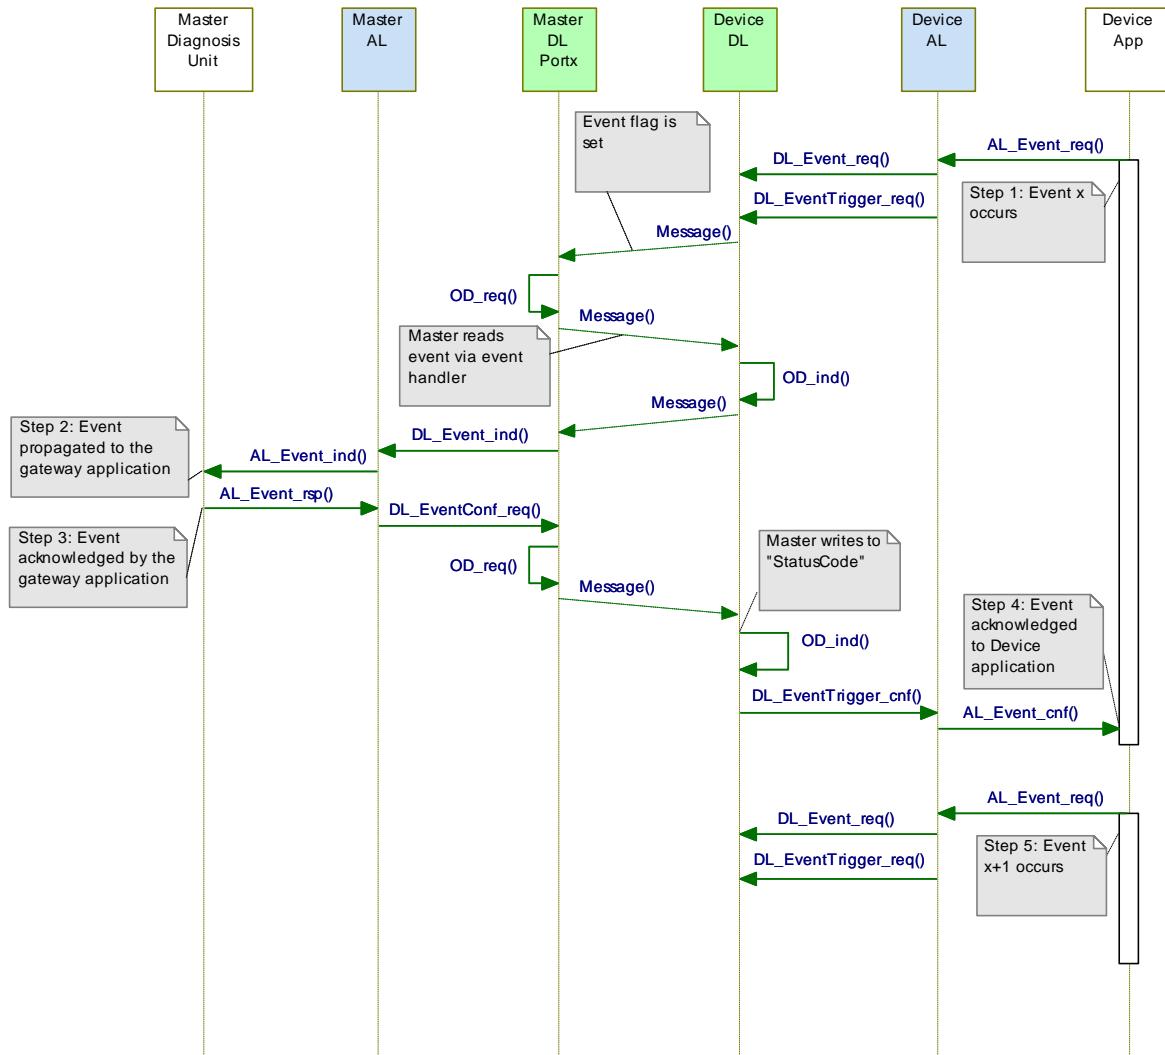

2202 **Figure 66 – Single Event scheduling**

2203 8.3.3.4 Multi Event transport (legacy Devices only)

2204 Besides the method specified in 0 in which each single Event is conveyed through the layers
 2205 and acknowledged by the gateway application, all Masters shall support a so-called "multi
 2206 Event transport" which allows up to 6 Events to be transferred at a time. The Master AL
 2207 transfers the Event set as a single diagnosis indication to the gateway application and returns
 2208 a single acknowledgment for the entire set to the legacy Device application.

2209 Figure 66 also applies for the multi Event transport, except that this transport uses one
 2210 DL_Event indication for each Event memory slot, and a single AL_Event indication for the
 2211 entire Event set.


2212 One AL_Event.req carries up to 6 Events and one AL_Event.ind indicates up to 6 pending
 2213 Events. AL_Event.rsp and AL_Event.cnf refer to the indicated entire Event set.

2214

2215 8.3.4 Process Data cycles

2216 Figure 67 and Figure 68 demonstrate complete interactions between Master and Device for
 2217 output and input Process Data use cases.

2218 Figure 67 demonstrates how the AL and DL services of Master and Device are involved in the
 2219 cyclic exchange of output Process Data. The Device application is able to acquire the current
 2220 values of output PD via the AL_GetOutput service.

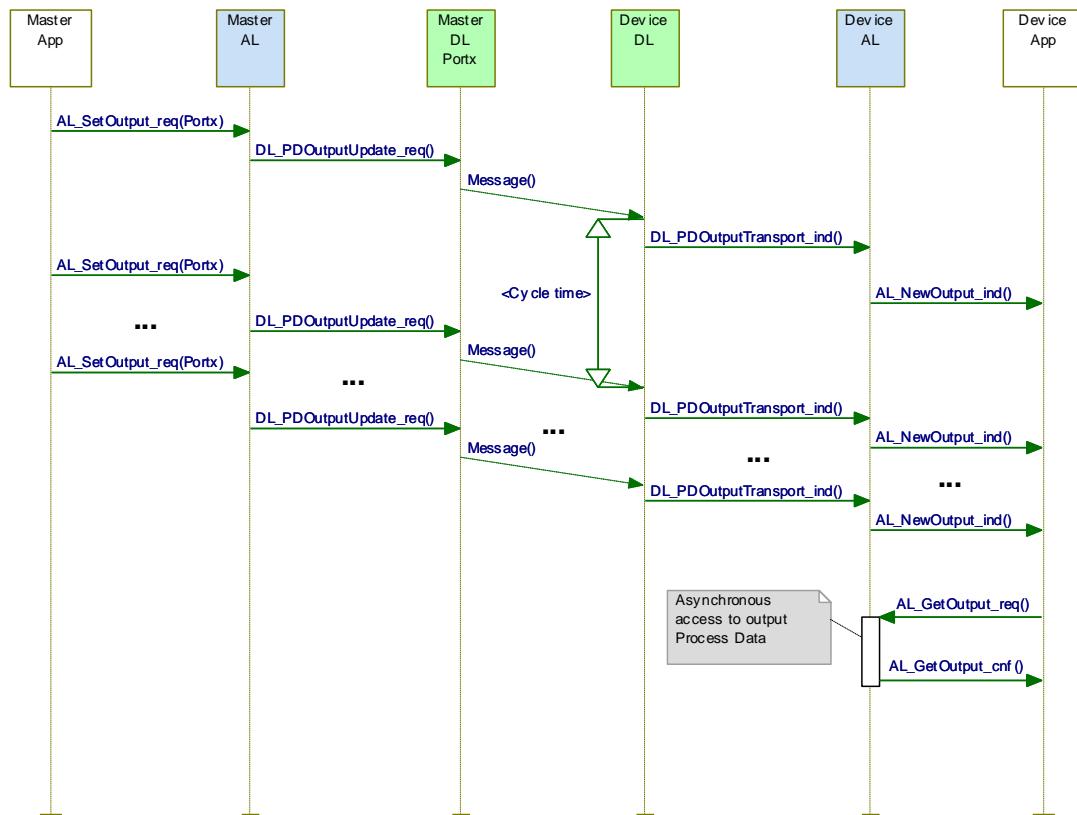

2221
 2222 **Figure 67 – Sequence diagram for output Process Data**

2223 Figure 68 demonstrates how the AL and DL services of Master and Device are involved in the
 2224 cyclic exchange of input Process Data. The Master application is able to acquire the current
 2225 values of input PD via the AL_GetInput service.

2226

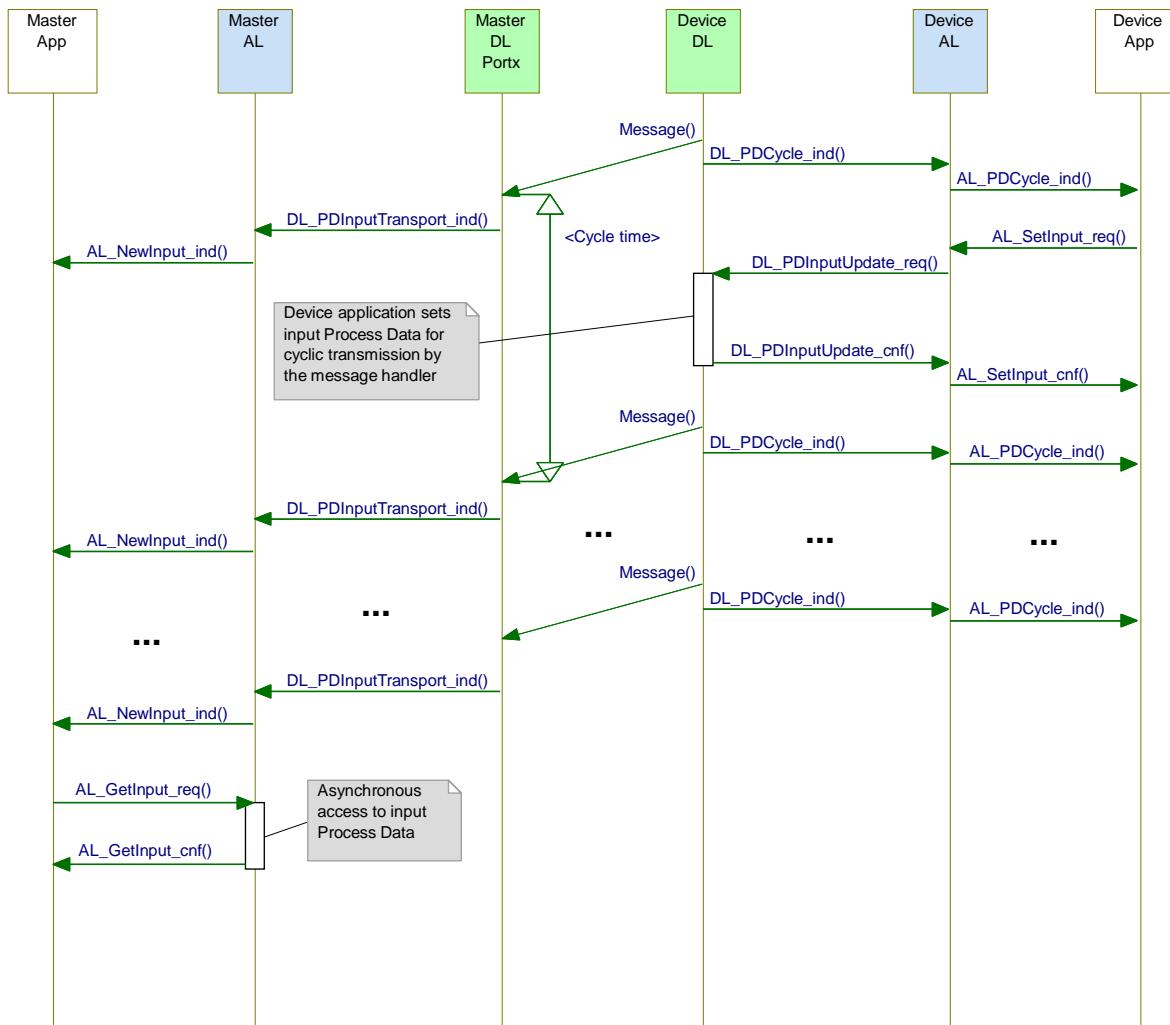


Figure 68 – Sequence diagram for input Process Data

2227
2228

2229

2230 **9 System Management (SM)**2231 **9.1 General**

2232 The SDCI System Management is responsible for the coordinated startup of the ports within
 2233 the Master and the corresponding operations within the connected Devices. The difference
 2234 between the SM of the Master and the Device is more significant than with the other layers.
 2235 Consequently, the structure of this clause separates the services and protocols of Master and
 2236 Device.

2237 **9.2 System Management of the Master**2238 **9.2.1 Overview**

2239 The Master System Management services are used to set up the Master ports and the system
 2240 for all possible operational modes.

2241 The Master SM adjusts ports through


- 2242 • establishing the required communication protocol revision
- 2243 • checking the Device compatibility (actual Device identifications match expected values)
- 2244 • adjusting adequate Master M-sequence types and MasterCycleTimes

2245 For this it uses the following services shown in Figure 69:

- SM_SetPortConfig transfers the necessary Device parameters (configuration data) from Configuration Management (CM) to System Management (SM). The port is then started implicitly.
- SM_PortMode reports the positive result of the port setup back to CM in case of correct port setup and inspection. It reports the negative result back to CM via corresponding "errors" in case of mismatching revisions and incompatible Devices.
- SM_GetPortConfig reads the actual and effective parameters.
- SM_Operate switches a single port into the "OPERATE" mode.

Figure 69 provides an overview of the structure and services of the Master System Management.

The Master System Management needs one application layer service (AL_Read) to acquire data (communication and identification parameter) from special Indices for inspection.

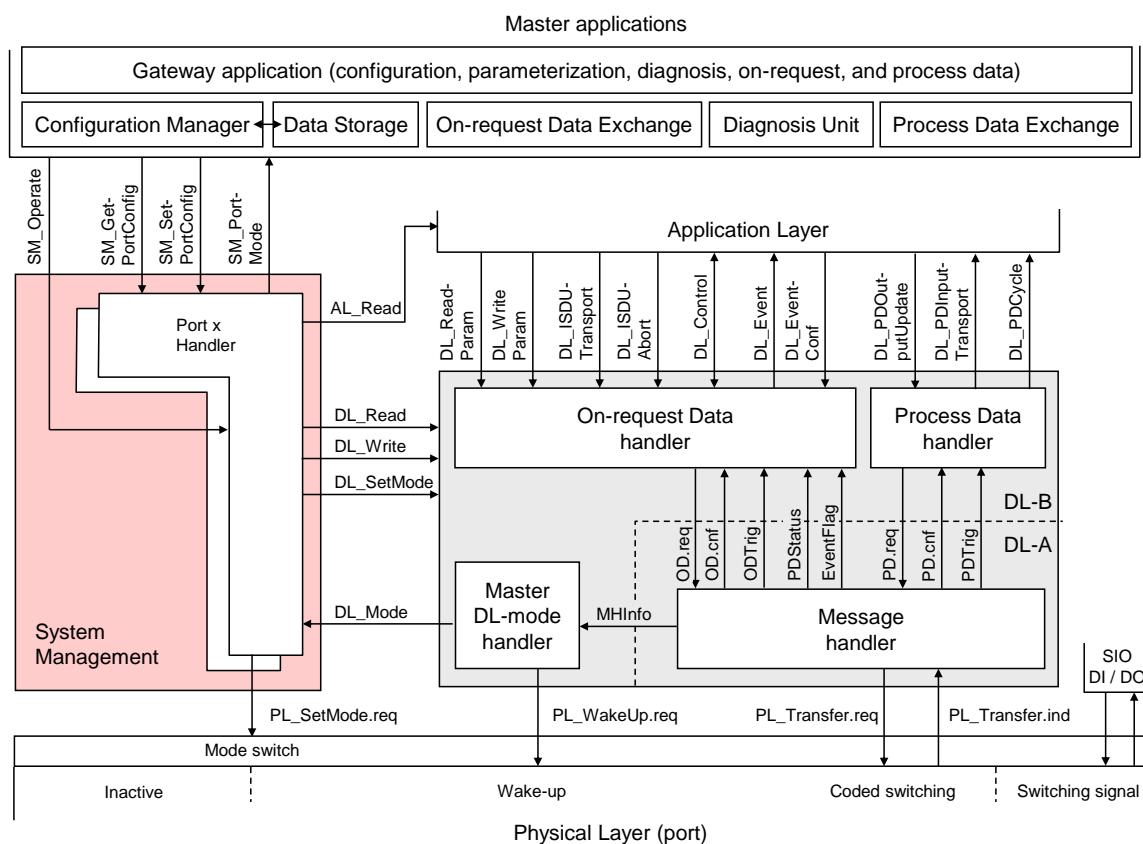

2258

Figure 69 – Structure and services of the Master System Management

2260 Figure 70 demonstrates the actions between the layers Master application (Master App),
2261 Configuration Management (CM), System Management (SM), Data Link (DL) and Application
2262 Layer (AL) for the startup use case of a particular port.

2263 This particular use case is characterized by the following statements:

- The Device for the available configuration is connected and inspection is successful
- The Device uses the correct protocol version according to this specification
- The configured InspectionLevel is "type compatible" (SerialNumber is read out of the Device and not checked).

2268

2269 Dotted arrows in Figure 70 represent response services to an initial service.

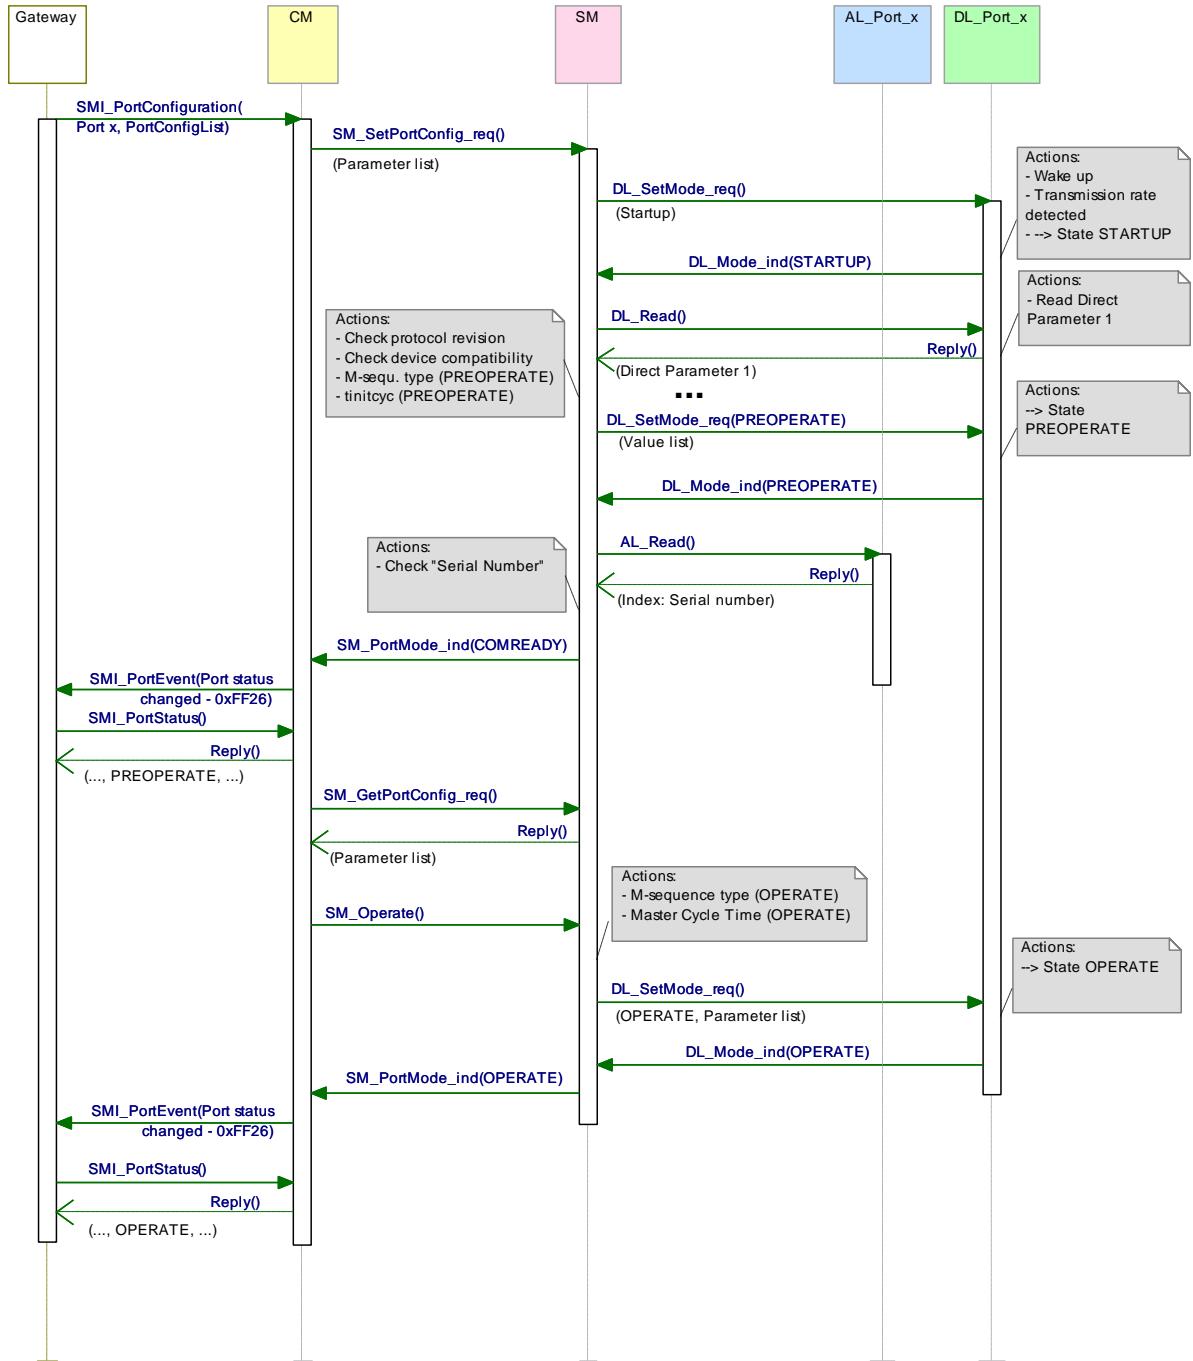


Figure 70 – Sequence chart of the use case "port x setup"

2270

2271

2272

2273 9.2.2 SM Master services

2274 9.2.2.1 Overview

2275 System Management provides the SM Master services to the user via its upper interface.
 2276 Table 78 lists the assignment of the Master to its role as initiator or receiver for the individual
 2277 SM services.

2278

Table 78 – SM services within the Master

Service name	Master
SM_SetPortConfig	R
SM_GetPortConfig	R
SM_PortMode	I
SM_Operate	R
Key (see 3.3.4)	
I	Initiator of service
R	Receiver (Responder) of service

2279

9.2.2.2 SM_SetPortConfig

The SM_SetPortConfig service is used to set up the requested Device configuration. The parameters of the service primitives are listed in Table 79.

2283

Table 79 – SM_SetPortConfig

Parameter name	.req	.cnf
Argument ParameterList	M M	
Result (+) Port Number		S M
Result (-) Port Number ErrorInfo		S M M

2284

Argument

The service-specific parameters are transmitted in the argument.

ParameterList

This parameter contains the configured port and Device parameters of a Master port.

Parameter type: Record

Record Elements:

Port Number

This parameter contains the port number

ConfiguredCycleTime

This parameter contains the requested cycle time for the OPERATE mode

Permitted values:

0 (FreeRunning)
Time (see Table B.3)

TargetMode

This parameter indicates the requested operational mode of the port

Permitted values: INACTIVE, DI, DO, CFGCOM, AUTOCOM (see Table 81)

ConfiguredRevisionID (CRID):

Data length: 1 octet for the protocol version (see B.1.5)

InspectionLevel:

Permitted values: NO_CHECK, TYPE_COMP, IDENTICAL (see Table 80)

ConfiguredVendorID (CVID)

Data length: 2 octets

NOTE VendorIDs are assigned by the IO-Link community

ConfiguredDeviceID (CDID)

Data length: 3 octets

2310 **ConfiguredFunctionID (CFID)**

2311 Data length: 2 octets

2312 **ConfiguredSerialNumber (CSN)**

2313 Data length: up to 16 octets (see Table 80)

2314 **Result (+):**

2315 This selection parameter indicates that the service has been executed successfully

2316 **Port Number**

2317 This parameter contains the port number

2318 **Result (-):**

2319 This selection parameter indicates that the service failed

2320 **Port Number**

2321 This parameter contains the port number

2322 **ErrorInfo**

2323 This parameter contains error information

2324 Permitted values:

2325 PARAMETER_CONFLICT (consistency of parameter set violated)

2326 Table 80 specifies the coding of the different inspection levels (values of the InspectionLevel parameter). See 9.2.3.2 and 11.3.2.

2328 **Table 80 – Definition of the InspectionLevel (IL)**

Parameter	InspectionLevel (IL)		
	NO_CHECK	TYPE_COMP	IDENTICAL
DeviceID (DID) (compatible)	-	Yes (RDID=CDID)	Yes (RDID=CDID)
VendorID (VID)	-	Yes (RVID=CVID)	Yes (RVID=CVID)
SerialNumber (SN)	-	-	Yes (RSN = CSN)

NOTE "IDENTICAL" = optional (not recommended for new developments)

2329

2330 Table 81 specifies the coding of the different Target Modes.

2331 **Table 81 – Definitions of the Target Modes**

Target Mode	Definition
CFGCOM	Device communicating in mode CFGCOM after successful inspection
AUTOCOM	Device communicating in mode AUTOCOM without inspection
INACTIVE	Communication disabled, no DI, no DO
DI	Port in digital input mode (SIO)
DO	Port in digital output mode (SIO)

2332

2333 CFGCOM is a Target Mode based on a user configuration (for example with the help of an IODD) and consistency checking of RID, VID, DID.

2335 AUTOCOM is a Target Mode without configuration. That means no checking of CVID and CDID. The CRID is set to the highest revision the Master is supporting. AUTOCOM should only be selectable together with Inspection Level "NO_CHECK" (see Table 80).

2338 **9.2.2.3 SM_GetPortConfig**

2339 The SM_GetPortConfig service is used to acquire the real (actual) Device configuration. The
 2340 parameters of the service primitives are listed in Table 82.

2341 **Table 82 – SM_GetPortConfig**

Parameter name	.req	.cnf
Argument Port Number	M M	
Result (+) Parameterlist		S(=) M
Result (-) Port Number ErrorInfo		S(=) M M

2342

Argument

2343 The service-specific parameters are transmitted in the argument.

2345 **Port Number**

2346 This parameter contains the port number

2347 **Result (+):**

2348 This selection parameter indicates that the service request has been executed successfully.

2349 **ParameterList**

2350 This parameter contains the configured port and Device parameter of a Master port.

2351 Parameter type: Record

2352 Record Elements:

2353 **PortNumber**

2354 This parameter contains the port number.

2355 **TargetMode**

2356 This parameter indicates the operational mode

2357 Permitted values: INACTIVE, DI, DO, CFGCOM, AUTOCOM (see Table 81)

2358 **RealBaudrate**

2359 This parameter indicates the actual transmission rate

2360 Permitted values:

2361 COM1 (transmission rate of COM1)

2362 COM2 (transmission rate of COM2)

2363 COM3 (transmission rate of COM3)

2364 **RealCycleTime**

2365 This parameter contains the real (actual) cycle time

2366 **RealRevision (RRID)**

2367 Data length: 1 octet for the protocol version (see B.1.5)

2368 **RealVendorID (RVID)**

2369 Data length: 2 octets

2370 NOTE VendorIDs are assigned by the IO-Link community

2371 **RealDeviceID (RDID)**

2372 Data length: 3 octets

2373 **RealFunctionID (RFID)**

2374 Data length: 2 octets

2375 **RealSerialNumber (RSN)**

2376 Data length: up to 16 octets

Result (-):

2377 This selection parameter indicates that the service failed

Port Number

This parameter contains the port number

ErrorInfo

This parameter contains error information

Permitted values:

PARAMETER_CONFLICT (consistency of parameter set violated)

All parameters shall be set to "0" if there is no information available.

9.2.2.4 SM_PortMode

The SM_PortMode service is used to indicate changes or faults of the local communication mode. These shall be reported to the Master application. The parameters of the service primitives are listed in Table 83.

Table 83 – SM_PortMode

Parameter name	.ind
Argument	M
Port Number	M
Mode	M

Argument

The service-specific parameters are transmitted in the argument.

Port Number

This parameter contains the port number

Mode

Permitted values:

INACTIVE	(Communication disabled, no DI, no DO)
DI	(Port in digital input mode (SIO))
DO	(Port in digital output mode (SIO))
COMREADY	(Communication established and inspection successful)
SM_OPERATE	(Port is ready to exchange Process Data)
COMLOST	(Communication failed, new wake-up procedure required)
REVISION_FAULT	(Incompatible protocol revision)
COMP_FAULT	(Incompatible Device or Legacy-Device according to the Inspection Level)
SERNUM_FAULT	(Mismatching SerialNumber according to the InspectionLevel)
CYCTIME_FAULT	(Device does not support the configured cycle time)

9.2.2.5 SM_Operate

The SM_Operate service prompts System Management to calculate the MasterCycleTime for the ports if the service is acknowledged positively with Result (+). This service is effective at the indicated port. The parameters of the service primitives are listed in Table 84.

Table 84 – SM_Operate

Parameter name	.req	.cnf
Argument	M	
Port number	M	
Result (+)		S
Result (-)		S
Port Number		M
ErrorInfo		M

2414

Argument

The service-specific parameters are transmitted in the argument.

2415

2416

2417 Port Number

2418 This parameter contains the port number

2419 Result (+):

2420 This selection parameter indicates that the service has been executed successfully.

2421 Result (-):

2422 This selection parameter indicates that the service failed.

2423 Port Number

2424 This parameter contains the port number

2425 ErrorInfo

2426 This parameter contains error information.

2427 Permitted values:

2428 STATE_CONFLICT (service unavailable within current state, for example if port is
2429 already in OPERATE state)

2430 9.2.3 SM Master protocol**2431 9.2.3.1 Overview**

2432 Due to the comprehensive configuration, parameterization, and operational features of SDCI
2433 the description of the behavior with the help of state diagrams becomes rather complex.
2434 Similar to the DL state machines clause 9.2.3 uses the possibility of submachines within the
2435 main state machines.

2436 Comprehensive compatibility check methods are performed within the submachine states.
2437 These methods are indicated by "do *method*" fields within the state graphs, for example in
2438 Figure 72.

2439 The corresponding decision logic is demonstrated via activity diagrams (see Figure 73, Figure
2440 74, Figure 75, and Figure 78).

2441 9.2.3.2 SM Master state machine

2442 Figure 71 shows the main state machine of the System Management Master.

2443 Two submachines for the compatibility and serial number check are specified in subsequent
2444 sections.

2445 In case of communication disruption the System Management is informed via the service
2446 DL_Mode (COMLOST).

2447 Only the SM_SetPortConfig service allows reconfiguration of a port.

2448 The service SM_Operate causes no effect in any state except in state "wait_4".

2449

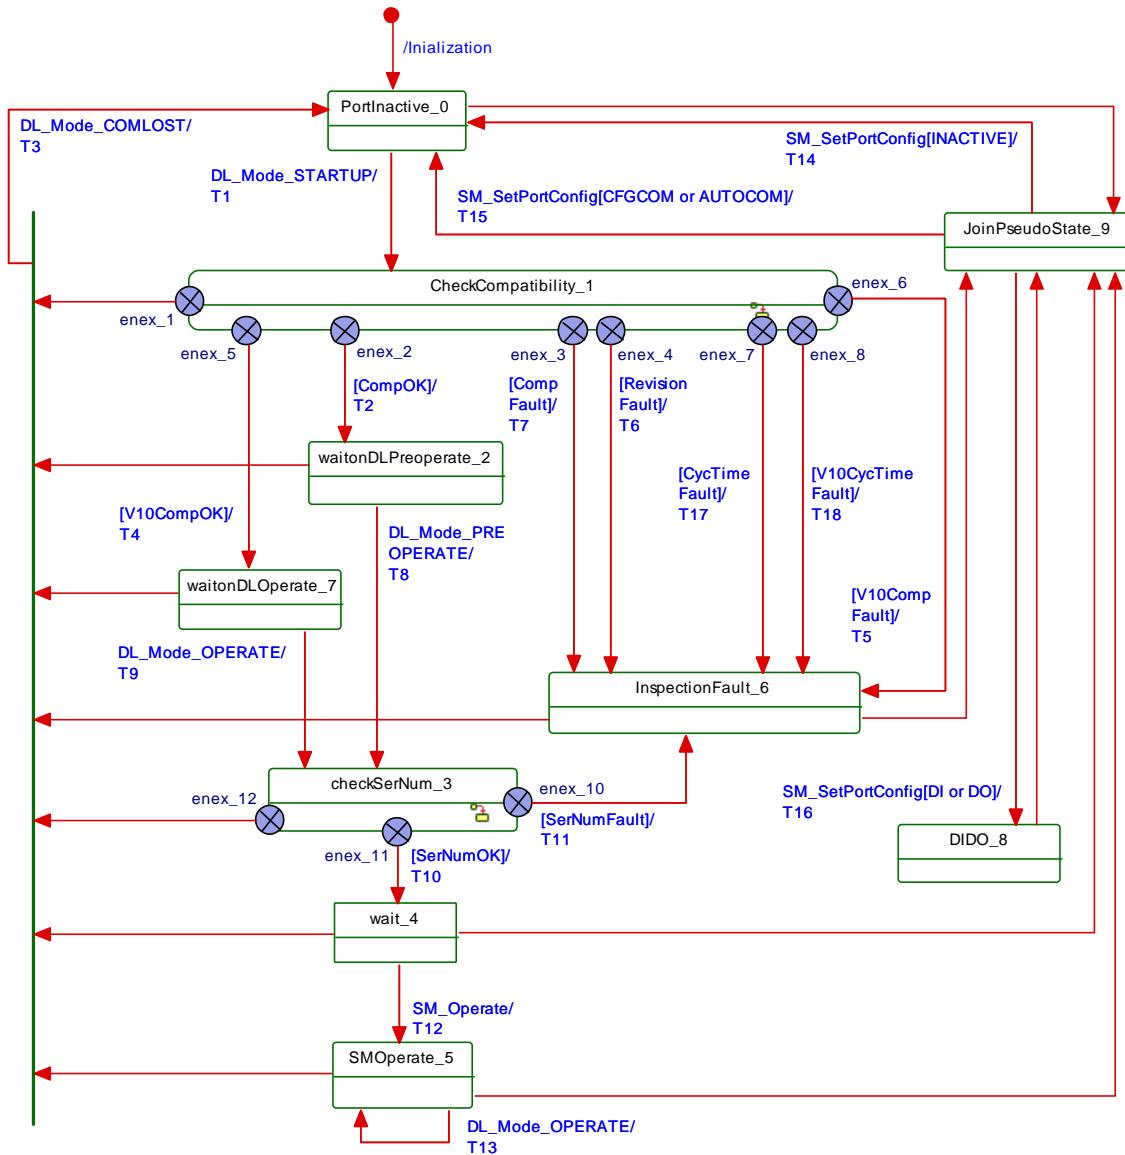


Figure 71 – Main state machine of the Master System Management

Table 85 shows the state transition tables of the Master System Management.

Table 85 – State transition tables of the Master System Management

STATE NAME	STATE DESCRIPTION
PortInactive_0	No communication
CheckCompatibility_1	Port is started and revision and Device compatibility is checked. See Figure 72.
waitonDLPreoperate_2	Wait until the PREOPERATE state is established and all the On-Request handlers are started. Port is ready to communicate.
checkSerNum_3	SerialNumber is checked depending on the InspectionLevel (IL). See Figure 77.
wait_4	Port is ready to communicate and waits on service SM_Operate from CM.
SM Operate_5	Port is in state OPERATE and performs cyclic Process Data exchange.
InspectionFault_6	Port is ready to communicate. However, cyclic Process Data exchange cannot be performed due to incompatibilities.
waitonDLOperate_7	Wait on the requested state OPERATE in case the Master is connected to a legacy Device. The SerialNumber can be read thereafter.
DIDO_8	Port will be switched into the DI or DO mode (SIO, no communication).

2454

STATE NAME		STATE DESCRIPTION	
JoinPseudoState_9		This pseudo state is used instead of a UML join bar. It allows execution of individual SM_SetPortConfig services depending on the system status (INACTIVE, CFGCOM, AUTOCOM, DI, or DO)	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	CompRetry = 0
T2	1	2	DL_SetMode.req (PREOPERATE, ValueList)
T3	1,2,3,4,5,6,7	0	DL_SetMode.req (INACTIVE) and SM_Mode.ind (COMLOST) due to communication fault
T4	1	7	DL_SetMode.req (OPERATE, ValueList)
T5	1	6	SM_PortMode.ind (COMP_FAULT) triggering SMI_PortEvent(0x1802) or SMI_PortEvent(0x1803) depending on mismatch reason, DL_SetMode.req (OPERATE, ValueList)
T6	1	6	SM_PortMode.ind (REVISION_FAULT)
T7	1	6	SM_PortMode.ind (COMP_FAULT) triggering SMI_PortEvent(0x1802) or SMI_PortEvent(0x1803) depending on mismatch reason, DL_SetMode.req (PREOPERATE, ValueList)
T8	2	3	-
T9	7	3	-
T10	3	4	SM_PortMode.ind (COMREADY)
T11	3	6	SM_PortMode.ind (SERNUM_FAULT)
T12	4	5	DL_SetMode.req (OPERATE, ValueList)
T13	5	5	-
T14	0,4,5,6,8	0	SM_PortMode.ind (INACTIVE), DL_SetMode.req (INACTIVE)
T15	0,4,5,6,8	0	DL_SetMode.req (STARTUP, ValueList), PL_SetMode.req (SDCI)
T16	0,4,5,6,8	8	PL_SetMode.req (SIO), SM_Mode.ind (DI or DO), DL_SetMode.req (INACTIVE)
T17	1	6	SM_PortMode.ind (CYCTIME_FAULT), DL_SetMode.req (PREOPERATE, ValueList)
T18	1	6	SM_PortMode.ind (CYCTIME_FAULT), DL_SetMode.req (OPERATE, ValueList), ValueList.M-sequenceTime = MinCycleTime of Device

2455

INTERNAL ITEMS	TYPE	DEFINITION
CompOK	Bool	See Figure 75
CompFault	Bool	See Figure 75; error variable COMP_FAULT
CycTimeFault	Bool	See Figure 75; error variable CYCTIME_FAULT
RevisionFault	Bool	See Figure 73; error variable REVISION_FAULT
SerNumFault	Bool	See Figure 78; error variable SERNUM_FAULT
SerNumOK	Bool	See Figure 78
V10CompFault	Bool	See Figure 74; error variable COMP_FAULT
V10CompOK	Bool	See Figure 74
V10CycTimeFault	Bool	See Figure 74; error variable CYCTIME_FAULT
INACTIVE	Variable	A target mode in service SM_SetPortConfig
CFGCOM, AUTOCOM	Variables	Target Modes in service SM_SetPortConfig


2456

9.2.3.3 SM Master submachine "Check Compatibility"

Figure 72 shows the SM Master submachine checkCompatibility_1.

2457

2458

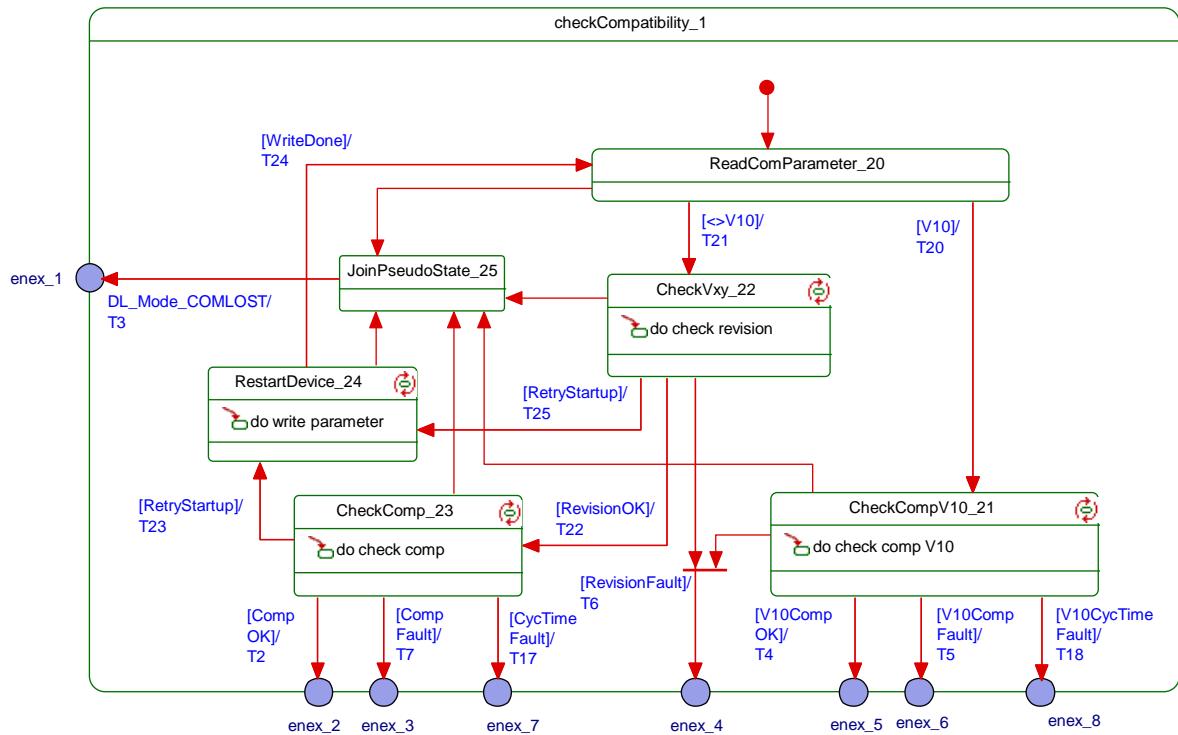**Figure 72 – SM Master submachine CheckCompatibility_1**

2459 Table 86 shows the state transition tables of the Master submachine checkCompatibility_1.

Table 86 – State transition tables of the Master submachine CheckCompatibility_1

STATE NAME	STATE DESCRIPTION	
ReadComParameter_20	Acquires communication parameters from Direct Parameter Page 1 (0x02 to 0x06) via service DL_Read (see Table B.1).	
CheckCompV10_21	Acquires identification parameters from Direct Parameter Page 1 (0x07 to 0x0D) via service DL_Read (see Table B.1). The configured InspectionLevel (IL) defines the decision logic of the subsequent compatibility check "CheckCompV10" with parameters RVID, RDID, and RFID according to Figure 74.	
CheckVxy_22	A check is performed whether the configured revision (CRID) matches the real (actual) revision (RRID) according to Figure 73.	
CheckComp_23	Acquires identification parameters from Direct Parameter Page 1 (0x07 to 0x0D) via service DL_Read (see Table B.1). The configured InspectionLevel (IL) defines the decision logic of the subsequent compatibility check "CheckComp" according to Figure 75.	
RestartDevice_24	Writes the configured protocol revision (CRID) and configured DeviceID (CDID) into the Device depending on the Target Mode of communication CFGCOM or AUTOCOM (see Table 81) according to Figure 76.	
JoinPseudoState_25	This pseudo state is used instead of a UML join bar. No guards involved.	

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T20	20	21	-
T21	20	22	DL_Write (0x00, MCmd_MASTERIDENT), see Table B.2
T22	22	23	-
T23	23	24	-
T24	24	20	-
T25	22	24	CompRetry = CompRetry +1

INTERNAL ITEMS	TYPE	DEFINITION
CompOK	Bool	See Figure 75


INTERNAL ITEMS	TYPE	DEFINITION
CompFault	Bool	See Figure 75; error variable COMP_FAULT
RevisionFault	Bool	See Figure 73; error variable REVISION_FAULT
RevisionOK	Bool	See Figure 73
SerNumFault	Bool	See Figure 78; error variable SERNUM_FAULT
SerNumOK	Bool	See Figure 78
V10	Bool	Real protocol revision of connected Device is a legacy version (V1.0, see B.1.5)
<>V10	Bool	Real protocol revision of connected Device is in accordance with this standard
V10CompFault	Bool	See Figure 74; error variable COMP_FAULT
V10CompOK	Bool	See Figure 74
RetryStartup	Bool	See Figure 73 and Figure 75
CompRetry	Variable	Internal counter
WriteDone	Bool	Finalization of the restart service sequence
MCmd_XXXXXX	Call	See Table 45

2465

2466 Some states contain complex logic to deal with the compatibility and validity checks. Figure
 2467 73 to Figure 76 are demonstrating the context.

2468 Figure 73 shows the decision logic for the protocol revision check in state "CheckVxy". In
 2469 case of configured Devices the following rule applies: if the configured revision (CRID) and
 2470 the real revision (RRID) do not match, the CRID will be transmitted to the Device. If the
 2471 Device does not accept, the Master returns an indication via the SM_Mode service with
 2472 REV_FAULT.

2473 In case of not configured Devices the operational mode AUTOCOM shall be used. See 9.2.2.2
 2474 and 9.2.2.3 for the parameter name abbreviations.

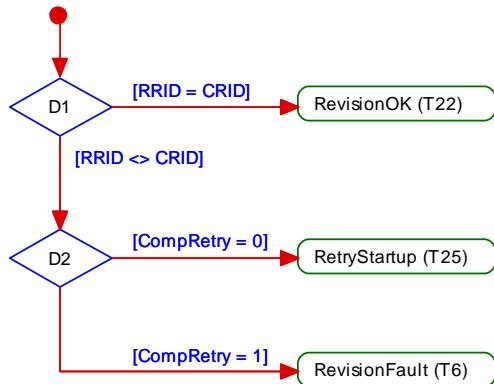


2475

2476 **Figure 73 – Activity for state "CheckVxy"**

2477

2478 Figure 74 shows the decision logic for the legacy compatibility check in state
 2479 "CheckCompV10".

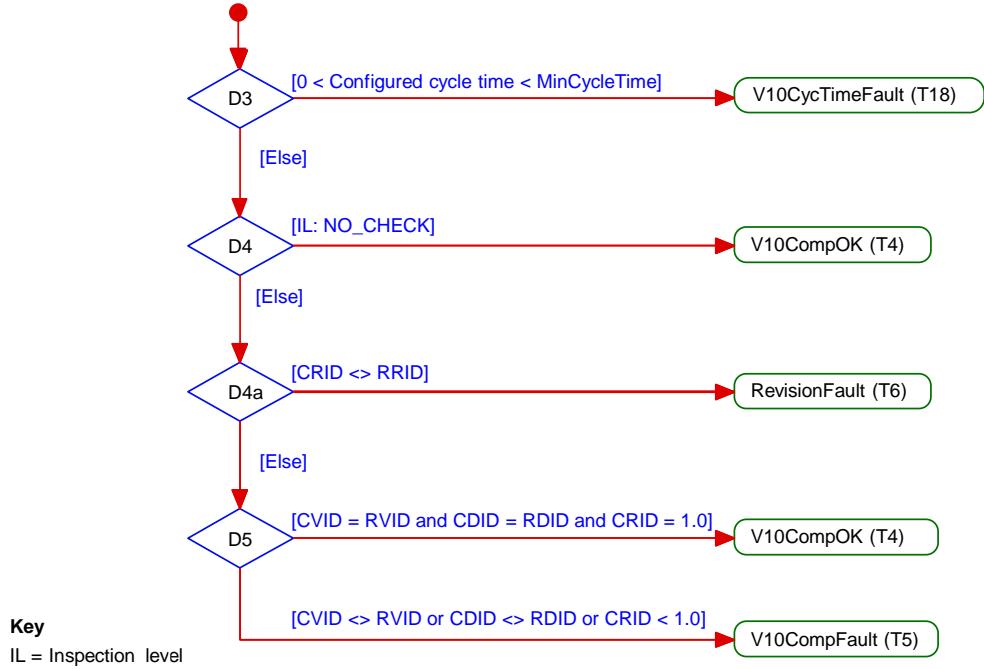


2480

2481

Figure 74 – Activity for state "CheckCompV10"

2482 Figure 75 shows the decision logic for the compatibility check in state "CheckComp".

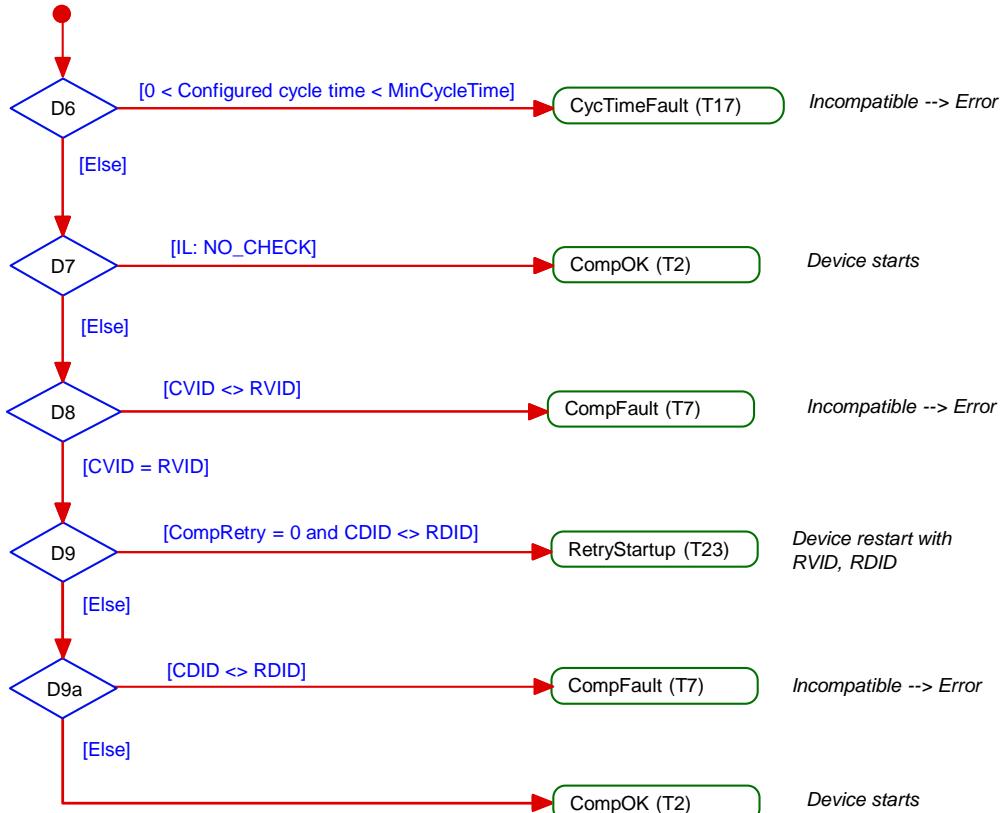


2483

2484

Figure 75 – Activity for state "CheckComp"

2485 Figure 76 shows the activity (write parameter) in state "RestartDevice".

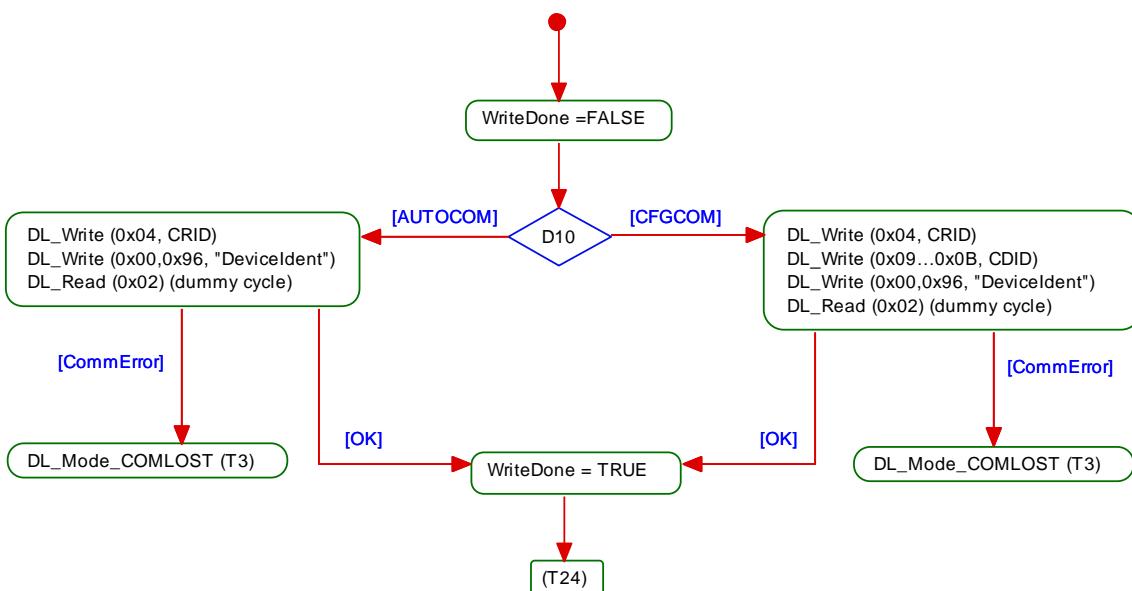


2486

Figure 76 – Activity (write parameter) in state "RestartDevice"

2488

9.2.3.4 SM Master submachine "Check serial number"

2489 Figure 77 shows the SM Master submachine "checkSerNum_3". State CheckSernum_31 can
 2491 be skipped (option).

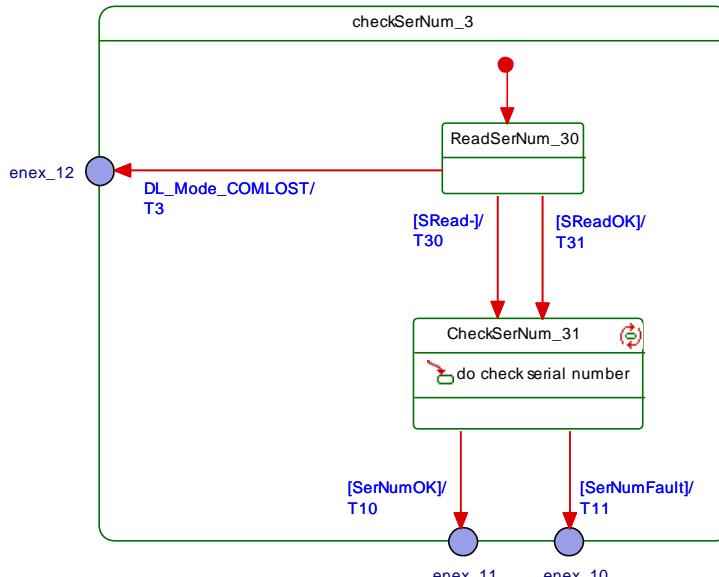

2492

Figure 77 – SM Master submachine checkSerNum_3

2494 Table 87 shows the state transition tables of the Master submachine checkSerNum_3

Table 87 – State transition tables of the Master submachine checkSerNum_3

STATE NAME	STATE DESCRIPTION
ReadSerNum_30	Acquires the SerialNumber from the Device via AL_Read.req (Index: 0x0015). A positive response (AL_Read(+)) leads to SReadOK = true. A negative response (AL_Read(-)) leads to SRead- = true.
CheckSerNum_31	Optional: SerialNumber checking skipped or checked correctly.


2496

2497

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T30	40	41	–
T31	40	41	–
INTERNAL ITEMS		TYPE	DEFINITION
SRead-	Bool	Negative response of service AL_Read (Index 0x0015)	
SReadOK	Bool	SerialNumber read correctly	
SerNumOK	Bool	See Figure 78	
SerNumFault	Bool	See Figure 78	


2498

2499 Figure 78 shows the decision logic (activity) for the state CheckSerNum_31.

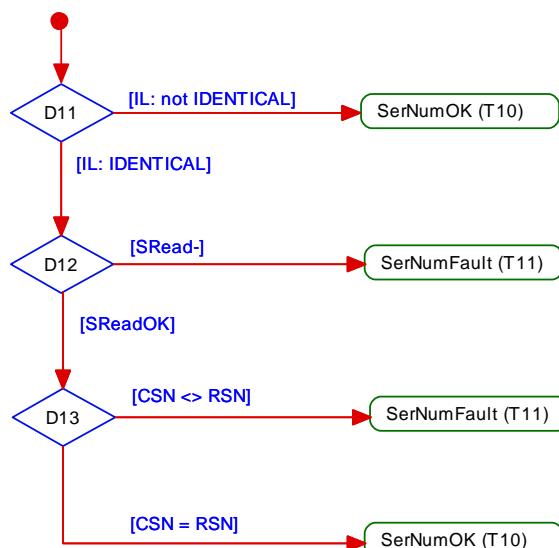

2500

2501 **Figure 78 – Activity (check SerialNumber) for state CheckSerNum_31**2502 **9.2.3.5 Rules for the usage of M-sequence types**2503 The System Management is responsible for setting up the correct M-sequence types. This
2504 occurs after the check compatibility actions (transition to PREOPERATE) and before the
2505 transition to OPERATE.2506 Different M-sequence types shall be used within the different operational states (see A.2.6).
2507 For example, when switching to the OPERATE state the M-sequence type relevant for cyclic
2508 operation shall be used. The M-sequence type to be used in operational state OPERATE is
2509 determined by the size of the input and output Process Data. The available M-sequence types
2510 in the three modes STARTUP, PREOPERATE, and OPERATE and the corresponding coding
2511 of the parameter M-sequenceCapability are specified in A.2.6. The input and output data
2512 formats shall be acquired from the connected Device in order to adjust the M-sequence type.
2513 It is mandatory for a Master to implement all the specified M-sequence types in A.2.6.2514 **9.3 System Management of the Device**2515 **9.3.1 Overview**2516 Figure 79 provides an overview of the structure and services of the Device System
2517 Management.

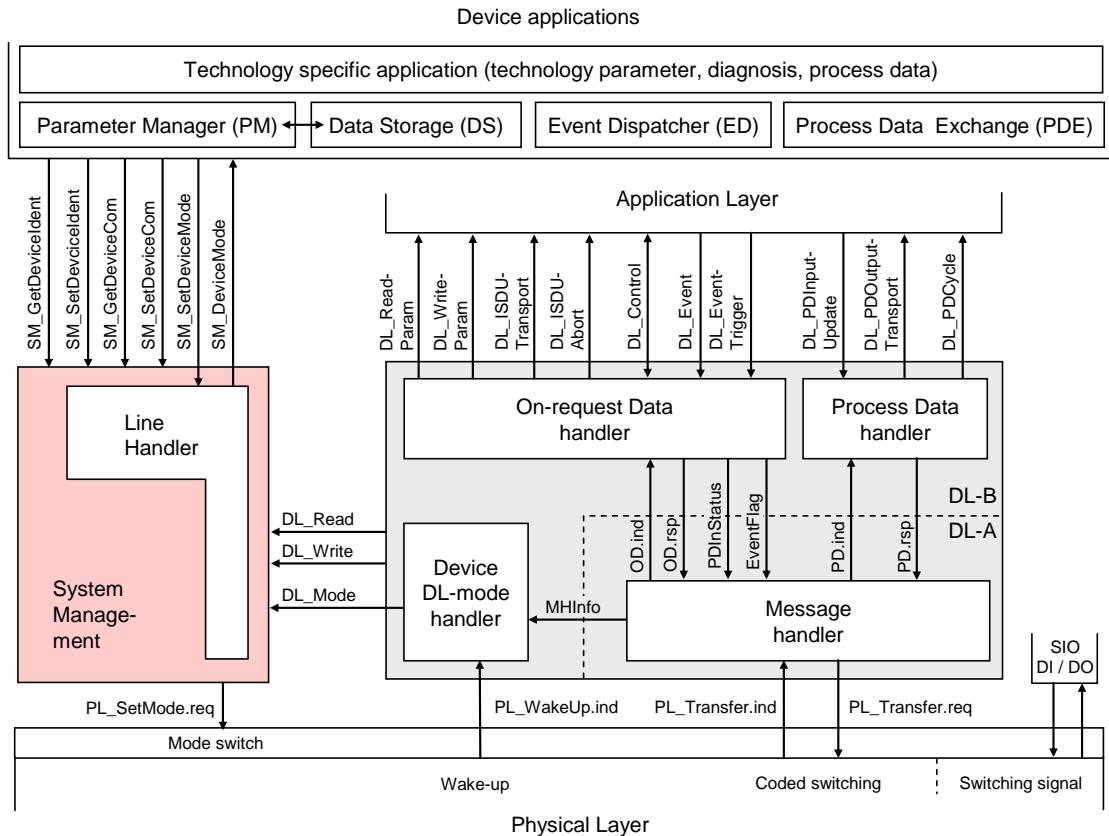

2518

Figure 79 – Structure and services of the System Management (Device)

2520 The System Management (SM) of the Device provides the central controlling instance via the
 2521 Line Handler through all the phases of initialization, default state (SIO), communication
 2522 startup, communication, and fallback to SIO mode.

2523 The Device SM interacts with the PL to establish the necessary line driver and receiver
 2524 adjustments (see Figure 16), with the DL to get the necessary information from the Master
 2525 (wake-up, transmission rates, a.o.) and with the Device applications to ensure the Device
 2526 identity and compatibility (communication and identification parameters).

2527 The transitions between the line handler states (see Figure 81) are initiated by the Master
 2528 port activities (wake-up and communication) and triggered through the Device Data Link Layer
 2529 via the DL_Mode indications and DL_Write requests (commands).

2530 The SM provides the Device communication and identification parameters through the Device
 2531 applications interface.

2532 The sequence chart in Figure 80 demonstrates a typical Device sequence from initialization to
 2533 default SIO mode and via wake-up request from the Master to final communication. The
 2534 sequence chart is complemented by the use case of a communication error such as T_{DSIO} ex-
 2535 pired, or communication fault, or a request from Master such as Fallback (caused by Event).

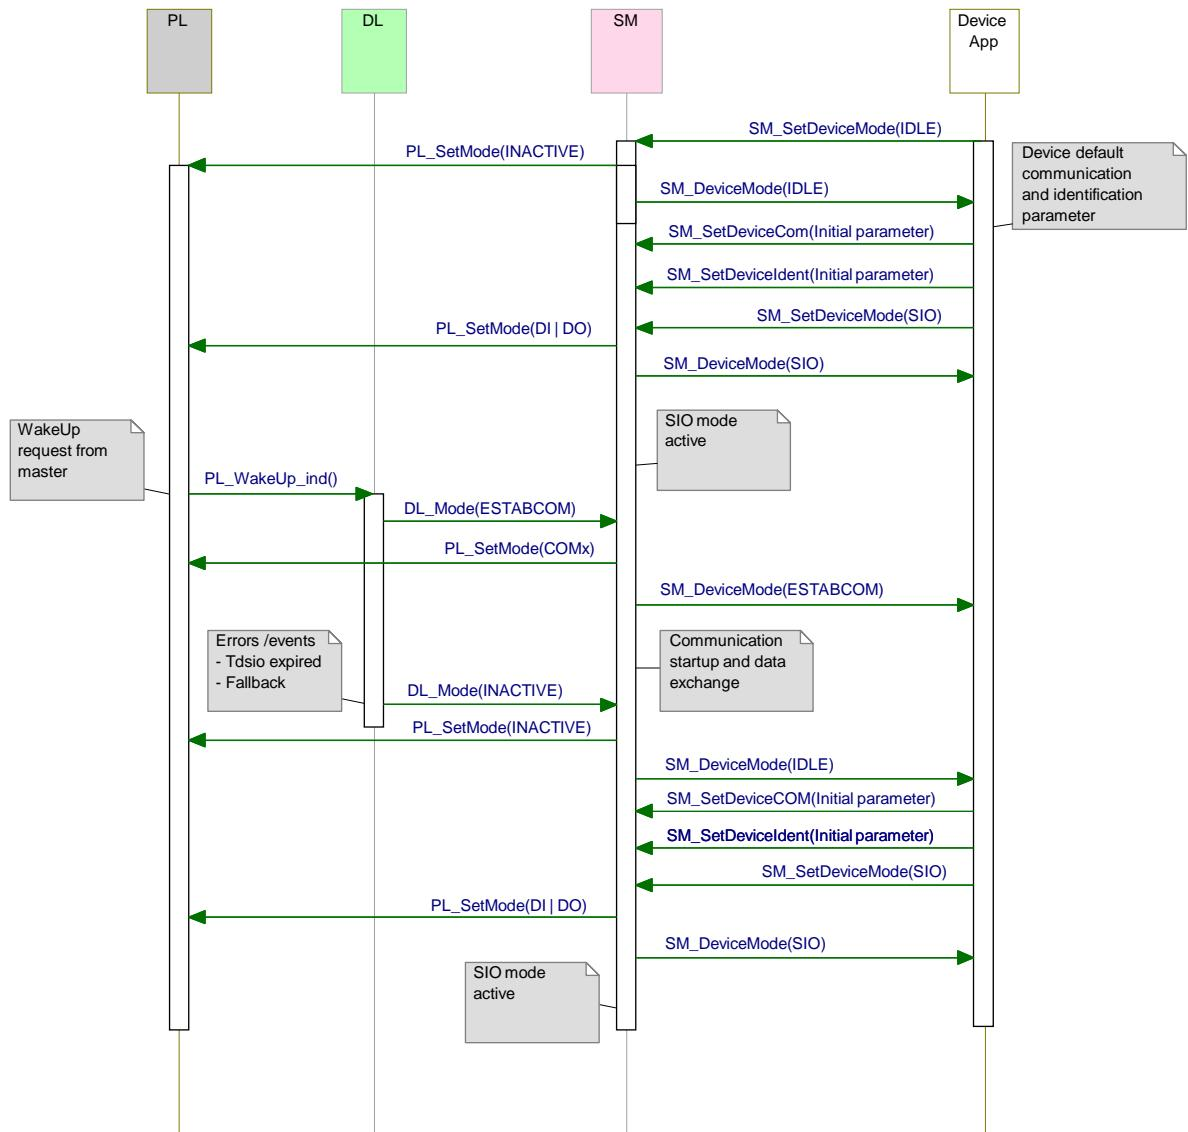


Figure 80 – Sequence chart of the use case "INACTIVE – SIO – SDCI – SIO"

2536
2537 The SM services shown in Figure 80 are specified in 9.3.2.

2538
2539 **9.3.2 SM Device services**

2540 **9.3.2.1 Overview**

2541 Subclause 9.3.2 describes the services the Device System Management provides to its
2542 applications as shown in Figure 79.

2543 Table 88 lists the assignment of the Device to its role as initiator or receiver for the individual
2544 System Management service.

2545 **Table 88 – SM services within the Device**

Service name	Device
SM_SetDeviceCom	R
SM_GetDeviceCom	R
SM_SetDeviceIdent	R
SM_GetDeviceIdent	R
SM_SetDeviceMode	R

Service name	Device
SM_DeviceMode	I
Key (see 3.3.4)	
I Initiator of service	
R Receiver (Responder) of service	

2546

2547 **9.3.2.2 SM_SetDeviceCom**

2548 The SM_SetDeviceCom service is used to configure the communication properties supported
 2549 by the Device in the System Management. The parameters of the service primitives are listed
 2550 in Table 89.

2551

Table 89 – SM_SetDeviceCom

Parameter name	.req	.cnf
Argument	M	
ParameterList	M	
Result (+)		S
Result (-)		S
ErrorInfo	M	

2552

Argument

2553 The service-specific parameters are transmitted in the argument.

2555 **ParameterList**

2556 This parameter contains the configured communication and identification parameters for a
 2557 Device.

2558 Parameter type: Record

2559 Record Elements:

SupportedSIOMode

2560 This parameter indicates the SIO mode supported by the Device.

2562 Permitted values:

2563 INACTIVE (C/Q line in high impedance)
 2564 DI (C/Q line in digital input mode)
 2565 DO (C/Q line in digital output mode)

SupportedTransmissionrate

2566 This parameter indicates the transmission rate supported by the Device.

2568 Permitted values:

2569 COM1 (transmission rate of COM1)
 2570 COM2 (transmission rate of COM2)
 2571 COM3 (transmission rate of COM3)

MinCycleTime

2573 This parameter contains the minimum cycle time supported by the Device (see
 2574 B.1.3).

M-sequence Capability

2575 This parameter indicates the capabilities supported by the Device (see B.1.4):

- ISDU support
- OPERATE M-sequence types
- PREOPERATE M-sequence types

RevisionID (RID)

2580 This parameter contains the protocol revision (see B.1.5) supported by the Device.

ProcessDataIn

2582 This parameter contains the length of PD to be sent to the Master (see B.1.6).

ProcessDataOut

2584

2585 This parameter contains the length of PD to be sent by the Master (see B.1.7).

2586 **Result (+):**

2587 This selection parameter indicates that the service has been executed successfully.

2588 **Result (-):**

2589 This selection parameter indicates that the service failed.

2590 **ErrorInfo**

2591 This parameter contains error information.

2592 Permitted values:

2593 PARAMETER_CONFLICT (consistency of parameter set violated)

2595 **9.3.2.3 SM_GetDeviceCom**

2596 The SM_GetDeviceCom service is used to read the current communication properties from
2597 the System Management. The parameters of the service primitives are listed in Table 90.

2598 **Table 90 – SM_GetDeviceCom**

Parameter name	.req	.cnf
Argument	M	
Result (+) ParameterList	S M	
Result (-) ErrorInfo	S M	

2599

2600 **Argument**

2601 The service-specific parameters are transmitted in the argument.

2602 **Result (+):**

2603 This selection parameter indicates that the service has been executed successfully.

2604 **ParameterList**

2605 This parameter contains the configured communication parameter for a Device.

2606 Parameter type: Record

2607 Record Elements:

2608 **CurrentMode**

2609 This parameter indicates the current SIO or Communication Mode by the Device.

2610 Permitted values:

2611 INACTIVE (C/Q line in high impedance)
2612 DI (C/Q line in digital input mode)
2613 DO (C/Q line in digital output mode)
2614 COM1 (transmission rate of COM1)
2615 COM2 (transmission rate of COM2)
2616 COM3 (transmission rate of COM3)

2617 **MasterCycleTime**

2618 This parameter contains the MasterCycleTime to be set by the Master System
2619 Management (see B.1.3). This parameter is only valid in the state SM_Operate.

2620 **M-sequence Capability**

2621 This parameter indicates the current M-sequence capabilities configured in the
2622 System Management of the Device (see B.1.4):

- ISDU support
- OPERATE M-sequence types
- PREOPERATE M-sequence types

2626 **RevisionID (RID)**

2627 This parameter contains the current protocol revision (see B.1.5) within the System
 2628 Management of the Device.

2629 **ProcessDataIn**

2630 This parameter contains the current length of PD to be sent to the Master (see
 2631 B.1.6).

2632 **ProcessDataOut**

2633 This parameter contains the current length of PD to be sent by the Master (see
 2634 B.1.7).

2635 **Result (-):**

2636 This selection parameter indicates that the service failed.

2637 **ErrorInfo**

2638 This parameter contains error information.

2639 Permitted values:

2640 STATE_CONFLICT (service unavailable within current state)

2641 **9.3.2.4 SM_SetDeviceIdent**

2642 The SM_SetDeviceIdent service is used to configure the Device identification data in the
 2643 System Management. The parameters of the service primitives are listed in Table 91.

2644 **Table 91 – SM_SetDeviceIdent**

Parameter name	.req	.cnf
Argument ParameterList	M M	
Result (+)		S
Result (-) ErrorInfo		S M

2645 **Argument**

2646 The service-specific parameters are transmitted in the argument.

2648 **ParameterList**

2649 This parameter contains the configured identification parameter for a Device.

2650 Parameter type: Record

2651 Record Elements:

2652 **VendorID (VID)**

2653 This parameter contains the VendorID assigned to a Device (see B.1.8)

2654 Data length: 2 octets

2655 **DeviceID (DID)**

2656 This parameter contains one of the assigned DeviceIDs (see B.1.9)

2657 Data length: 3 octets

2658 **FunctionID (FID)**

2659 This parameter contains one of the assigned FunctionIDs (see B.1.10).

2660 Data length: 2 octets

2661 **Result (+):**

2662 This selection parameter indicates that the service has been executed successfully.

2663 **Result (-):**

2664 This selection parameter indicates that the service failed.

2665 **ErrorInfo**

2666 This parameter contains error information.

2667 Permitted values:
 2668 STATE_CONFLICT (service unavailable within current state)
 2669 PARAMETER_CONFLICT (consistency of parameter set violated)

2670 9.3.2.5 SM_GetDeviceIdent

2671 The SM_GetDeviceIdent service is used to read the Device identification parameter from the
 2672 System Management. The parameters of the service primitives are listed in Table 92.

2673 **Table 92 – SM_GetDeviceIdent**

Parameter name	.req	.cnf
Argument	M	
Result (+) ParameterList		S M
Result (-) ErrorInfo		S M

2674
 2675 **Argument**
 2676 The service-specific parameters are transmitted in the argument.

2677
 2678 **Result (+):**
 This selection parameter indicates that the service has been executed successfully.

2679 **ParameterList**
 2680 This parameter contains the configured identification parameters of the Device.

2681 Parameter type: Record

2682 Record Elements:

2683 **VendorID (VID)**

2684 This parameter contains the actual VendorID of the Device (see B.1.8)

2685 Data length: 2 octets

2686 **DeviceID (DID)**

2687 This parameter contains the actual DeviceID of the Device (see B.1.9)

2688 Data length: 3 octets

2689 **FunctionID (FID)**

2690 This parameter contains the actual FunctionID of the Device (see B.1.10).

2691 Data length: 2 octets

2692 **Result (-):**
 2693 This selection parameter indicates that the service failed.

2694 **ErrorInfo**

2695 This parameter contains error information.

2696 Permitted values:

2697 STATE_CONFLICT (service unavailable within current state)

2698 9.3.2.6 SM_SetDeviceMode

2699 The SM_SetDeviceMode service is used to set the Device into a defined operational state
 2700 during initialization. The parameters of the service primitives are listed in Table 93.

2701

Table 93 – SM_SetDeviceMode

Parameter name	.req	.cnf
Argument Mode	M M	
Result (+)		S
Result (-) ErrorInfo		S M

2702

Argument

2703 The service-specific parameters are transmitted in the argument.

2704

Mode

2705

Permitted values:

2706

IDLE (Device changes to waiting for configuration)

2707

SIO (Device changes to the mode defined in service "SM_SetDeviceCom")

2708

Result (+):

2709 This selection parameter indicates that the service has been executed successfully.

2710

Result (-):

2711

This selection parameter indicates that the service failed.

2712

ErrorInfo

2713

This parameter contains error information.

2714

Permitted values:

2715

STATE_CONFLICT (service unavailable within current state)

2716

9.3.2.7 SM_DeviceMode

2717

The SM_DeviceMode service is used to indicate changes of communication states to the Device application. The parameters of the service primitives are listed in Table 94.

2718

Table 94 – SM_DeviceMode

Parameter name	.ind
Argument Mode	M M

2719

Argument

2720 The service-specific parameters are transmitted in the argument.

2721

Mode

2722

Permitted values:

2723

IDLE (Device changed to waiting for configuration)
SIO (Device changed to the mode defined in service "SM_SetDeviceCom")
ESTABCOM (Device changed to the SM mode "SM_ComEstablish")
COM1 (Device changed to the COM1 mode)
COM2 (Device changed to the COM2 mode)
COM3 (Device changed to the COM3 mode)
STARTUP (Device changed to the STARTUP mode)
IDENT_STARTUP (Device changed to the SM mode "SM_IdentStartup")
IDENT_CHANGE (Device changed to the SM mode "SM_IdentCheck")
PREOPERATE (Device changed to the PREOPERATE mode)
OPERATE (Device changed to the OPERATE mode)

2724

9.3.3 SM Device protocol

2725


9.3.3.1 Overview

2726

The behaviour of the Device is mainly driven by Master messages.

2740 **9.3.3.2 SM Device state machine**

2741 Figure 81 shows the SM line handler state machine of the Device. It is triggered by the
 2742 DL_Mode handler and the Device application. It evaluates the different communication phases
 2743 during startup and controls the line state of the Device.

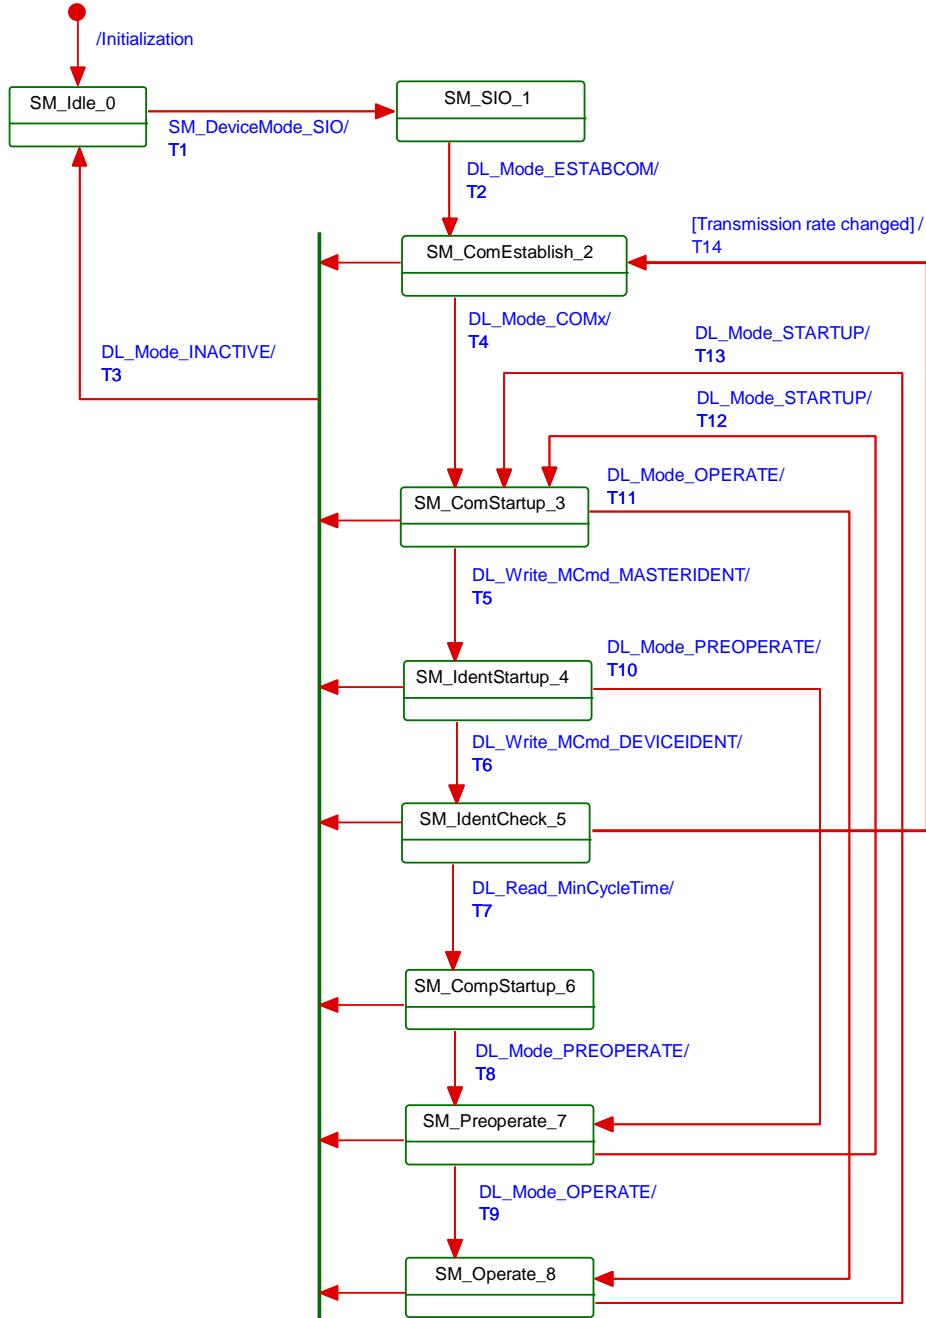

2744

2745

Figure 81 – State machine of the Device System Management

2746 Table 95 specifies the individual states and the actions within the transitions.

2747

Table 95 – State transition tables of the Device System Management

STATE NAME	STATE DESCRIPTION
SM_Idle_0	In SM_Idle the SM is waiting for configuration by the Device application and to be set to SIO mode. The state is left on receiving a SM_SetDeviceMode(SIO) request from the Device application The following sequence of services shall be executed between Device application and SM. Invoke SM_SetDeviceCom(initial parameter list) Invoke SM_SetDeviceIdent(VID, initial DID, FID)
SM_SIO_1	In SM_SIO the SM Line Handler is remaining in the default SIO mode. The Physical Layer is set to the SIO mode characteristics defined by the Device application via the SetDeviceMode service. The state is left on receiving a DL_Mode(ESTABCOM) indication.
SM_ComEstablish_2	In SM_ComEstablish the SM is waiting for the communication to be established in the Data Link Layer. The state is left on receiving a DL_Mode(INACTIVE) or a DL_Mode(COMx) indication, where COMx may be any of COM1, COM2 or COM3.
SM_ComStartup_3	In SM_ComStartup the communication parameter (Direct Parameter page 1, addresses 0x02 to 0x06) are read by the Master SM via DL_Read requests. The state is left upon reception of a DL_Mode(INACTIVE), a DL_Mode(OPERATE) indication (legacy Master only), or a DL_Write(MCmd_MASTERIDENT) request (Master in accordance with this standard).
SM_IdentStartup_4	In SM_IdentStartup the identification data (VID, DID, FID) are read and verified by the Master. In case of incompatibilities the Master SM writes the supported SDCI Revision (RID) and configured DeviceID (DID) to the Device. The state is left upon reception of a DL_Mode(INACTIVE), a DL_Mode(PREOPERATE) indication (compatibility check passed), or a DL_Write(MCmd_DEVICEIDENT) request (new compatibility requested).
SM_IdentCheck_5	In SM_IdentCheck the SM waits for new initialization of communication and identification parameters. The state is left on receiving a DL_Mode(INACTIVE) indication, a DL_Read(Direct Parameter page 1, addresses 0x02 = "MinCycleTime") request, or the SM requires a switch of the transmission rate. Within this state the Device application shall check the RID and DID parameters from the SM and set these data to the supported values. Therefore the following sequence of services shall be executed between Device application and SM. Invoke SM_GetDeviceCom(configured RID, parameter list) Invoke SM_GetDeviceIdent(configured DID, parameter list) Invoke Device application checks and provides compatibility function and parameters Invoke SM_SetDeviceCom(new supported RID, new parameter list) Invoke SM_SetDeviceIdent(new supported DID, parameter list)
SM_CompStartup_6	In SM_CompStartup the communication and identification data are reread and verified by the Master SM. The state is left on receiving a DL_Mode(INACTIVE) or a DL_Mode(PREOPERATE) indication.
SM_Preoperate_7	During SM_Preoperate the SerialNumber can be read and verified by the Master SM, as well as Data Storage and Device parameterization may be executed. The state is left on receiving a DL_Mode(INACTIVE), a DL_Mode(STARTUP) or a DL_Mode(OPERATE) indication.
SM_Operate_8	During SM_Operate the cyclic Process Data exchange and acyclic On-request Data transfer are active. The state is left on receiving a DL_Mode(INACTIVE) or a DL_Mode(STARTUP) indication.

2748


TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	The Device is switched to the configured SIO mode by receiving the trigger SM_SetDeviceMode.req(SIO). Invoke PL_SetMode(DI DO INACTIVE) Invoke SM_DeviceMode(SIO)
T2	1	2	The Device is switched to the communication mode by receiving the trigger DL_Mode.ind(ESTABCOM). Invoke PL_SetMode(COMx) Invoke SM_DeviceMode(ESTABCOM)
T3	2,3,4,5,6, 7,8	0	The Device is switched to SM_Idle mode by receiving the trigger DL_Mode.ind(INACTIVE) . Invoke PL_SetMode(INACTIVE) Invoke SM_DeviceMode(IDLE)

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T4	2	3	The Device application receives an indication on the baudrate with which the communication has been established in the DL triggered by DL_Mode.ind(COMx). Invoke SM_DeviceMode(COMx)
T5	3	4	The Device identification phase is entered by receiving the trigger DL_Write.ind(MCmd_MASTERIDENT). Invoke SM_DeviceMode(IDENTSTARTUP)
T6	4	5	The Device identity check phase is entered by receiving the trigger DL_Write.ind(MCmd_DEVICEIDENT). Invoke SM_DeviceMode(IDENTCHANGE)
T7	5	6	The Device compatibility startup phase is entered by receiving the trigger DL_Read.ind(Direct Parameter page 1, address 0x02 = "MinCycleTime").
T8	6	7	The Device's preoperate phase is entered by receiving the trigger DL_Mode.ind(PREOPERATE). Invoke SM_DeviceMode(PREOPERATE)
T9	7	8	The Device's operate phase is entered by receiving the trigger DL_Mode.ind(OPERADE). Invoke SM_DeviceMode(OPERADE)
T10	4	7	The Device's preoperate phase is entered by receiving the trigger DL_Mode.ind(PREOPERATE). Invoke SM_DeviceMode(PREOPERATE)
T11	3	8	The Device's operate phase is entered by receiving the trigger DL_Mode.ind(OPERADE). Invoke SM_DeviceMode(OPERADE)
T12	7	3	The Device's communication startup phase is entered by receiving the trigger DL_Mode.ind(STARTUP). Invoke SM_DeviceMode(STARTUP)
T13	8	3	The Device's communication startup phase is entered by receiving the trigger DL_Mode.ind(STARTUP). Invoke SM_DeviceMode(STARTUP)
T14	5	2	The requested Device identification requires a change of the transmission rate. Stop communication by changing the current transmission rate. Invoke PL_SetMode(COMx) Invoke SM_DeviceMode(ESTABCOM)
INTERNAL ITEMS	TYPE	DEFINITION	
COMx	Variable	Any of COM1, COM2, or COM3 transmission rates	
DL_Write_MCmd_xxx	Service	DL Service writes MasterCommands (xxx = values out of Table B.2)	

2749

2750

2751 Figure 82 shows a typical sequence chart for the SM communication startup of a Device
 2752 matching the Master port configuration settings (regular startup).

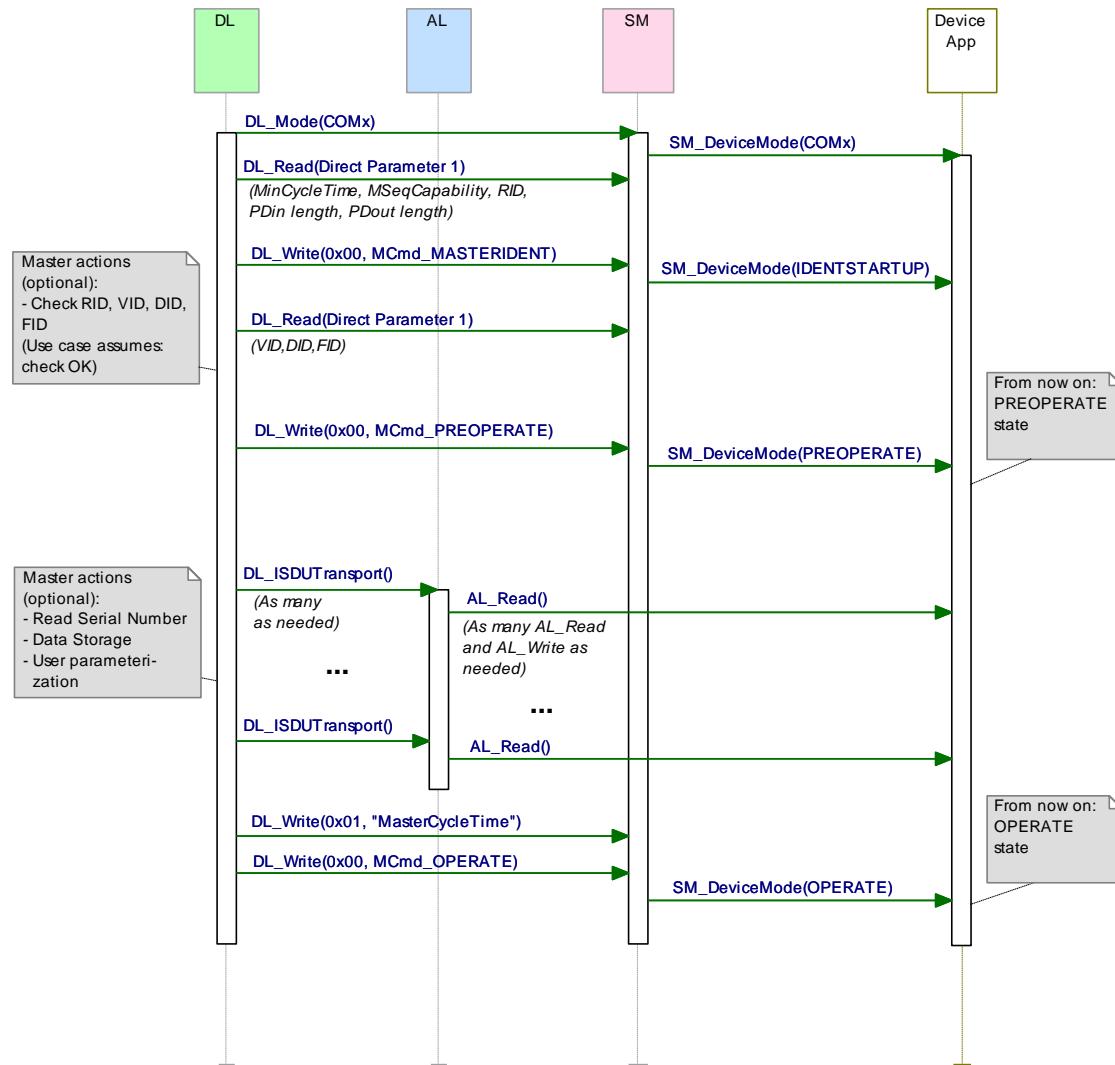


2753

2754

Figure 82 – Sequence chart of a regular Device startup

2755 Figure 83 shows a typical sequence chart for the SM communication startup of a Device not
 2756 matching the Master port configuration settings (compatibility mode). In this mode, the Master
 2757 tries to overwrite the Device's communication and identification parameters to achieve a
 2758 compatible and a workable mode.

2759 The sequence chart in Figure 83 shows only the actions until the PREOPERATE state. The
 2760 remaining actions until the OPERATE state can be taken from Figure 82.

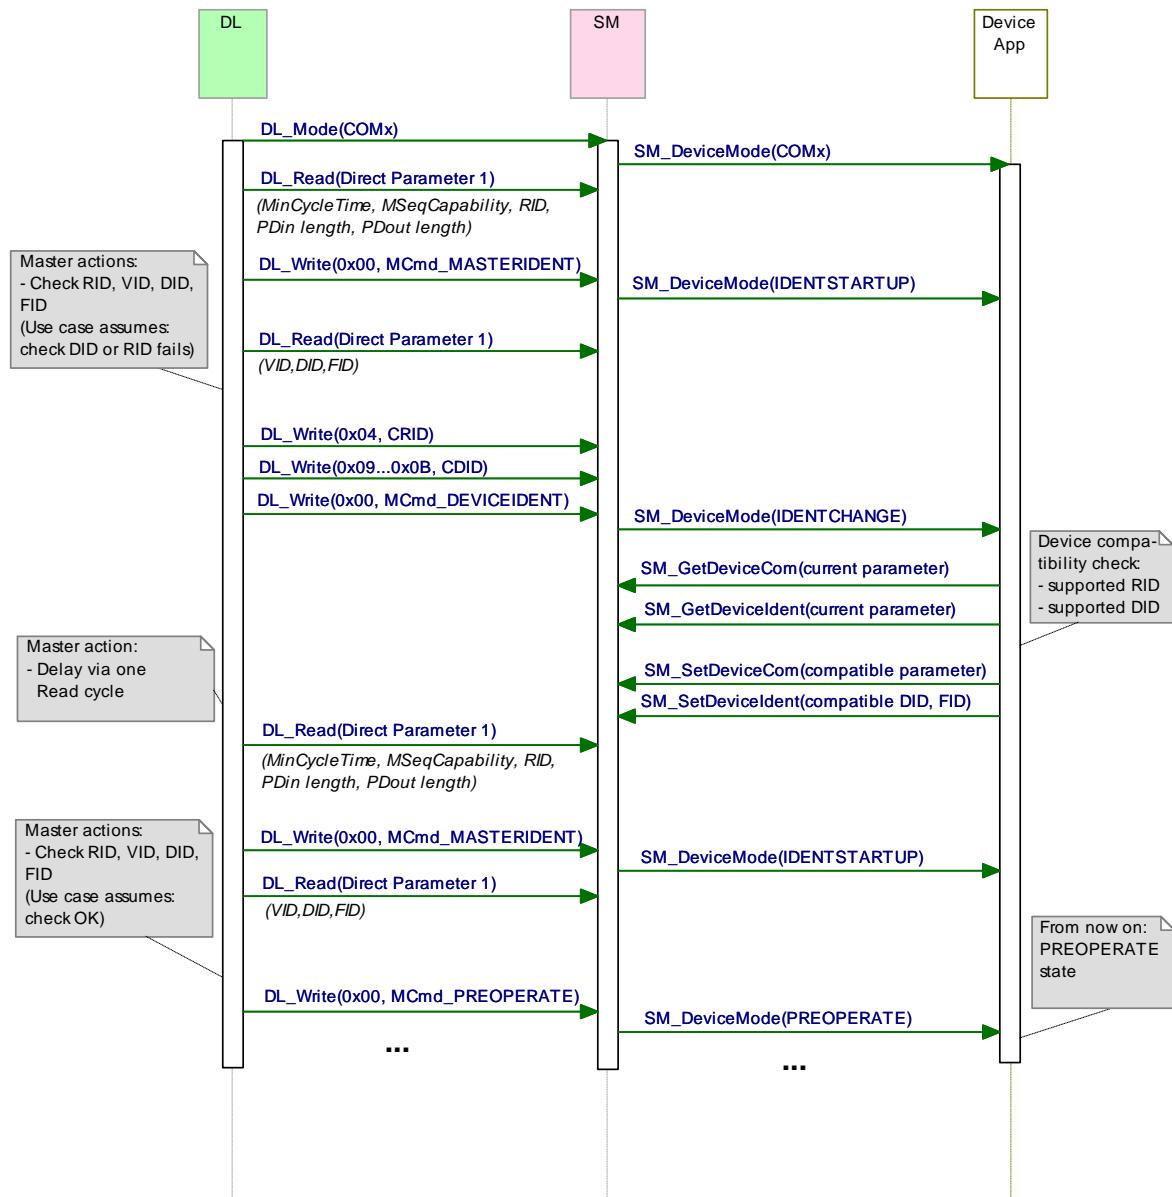


2761

2762

Figure 83 – Sequence chart of a Device startup in compatibility mode

2763 Figure 84 shows a typical sequence chart for the SM communication startup of a Device not
 2764 matching the Master port configuration settings. The System Management of the Master tries
 2765 to reconfigure the Device with alternative Device communication and identification parameters
 2766 (compatibility mode). In this use case, the alternative parameters are assumed to be
 2767 incompatible.

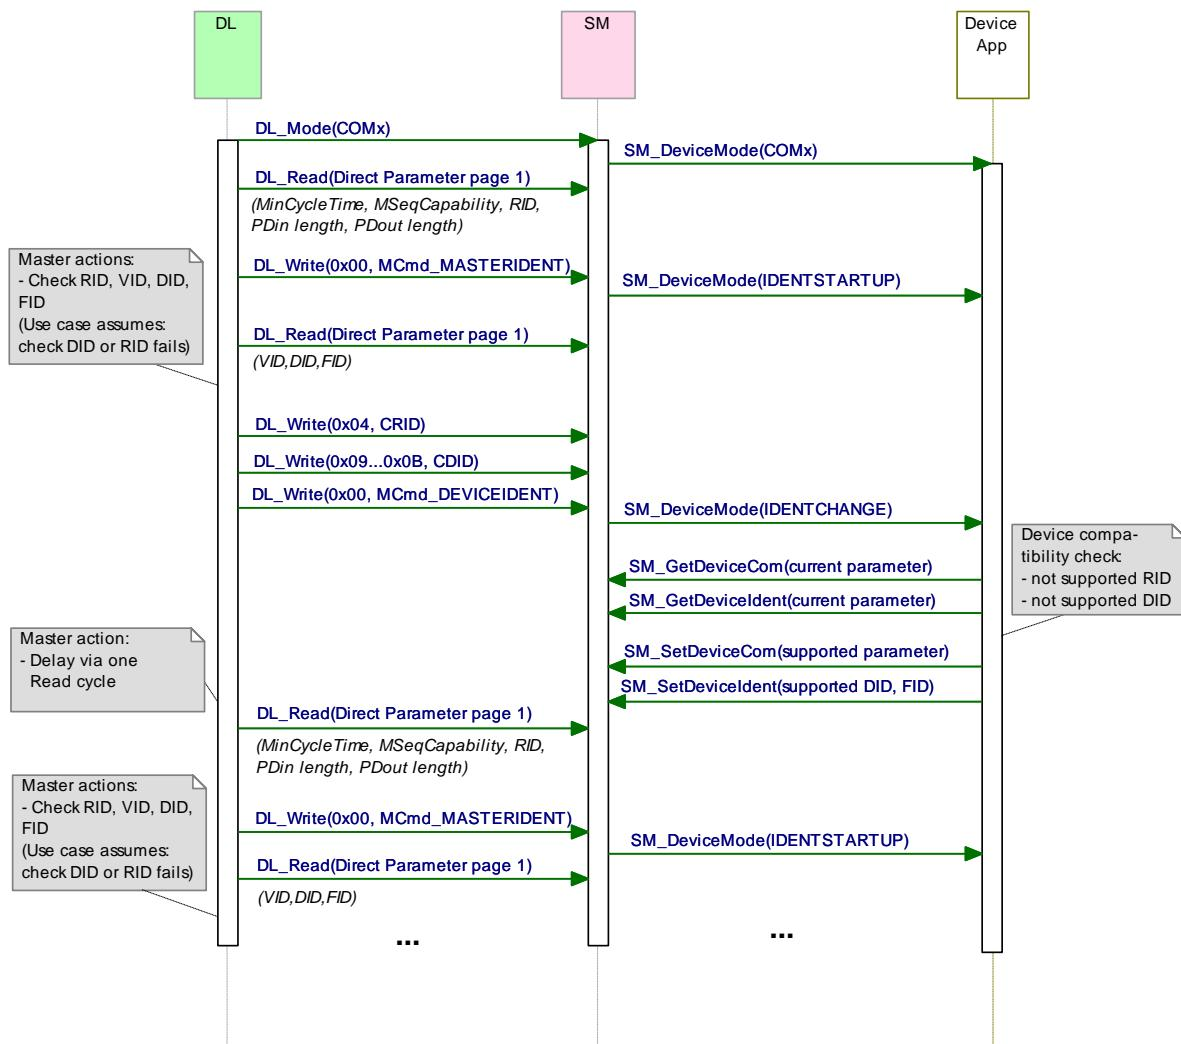

2768

2769

Figure 84 – Sequence chart of a Device startup when compatibility fails


2770

2771

2772 10 Device

2773 10.1 Overview

2774 Figure 85 provides an overview of the complete structure and services of a Device.

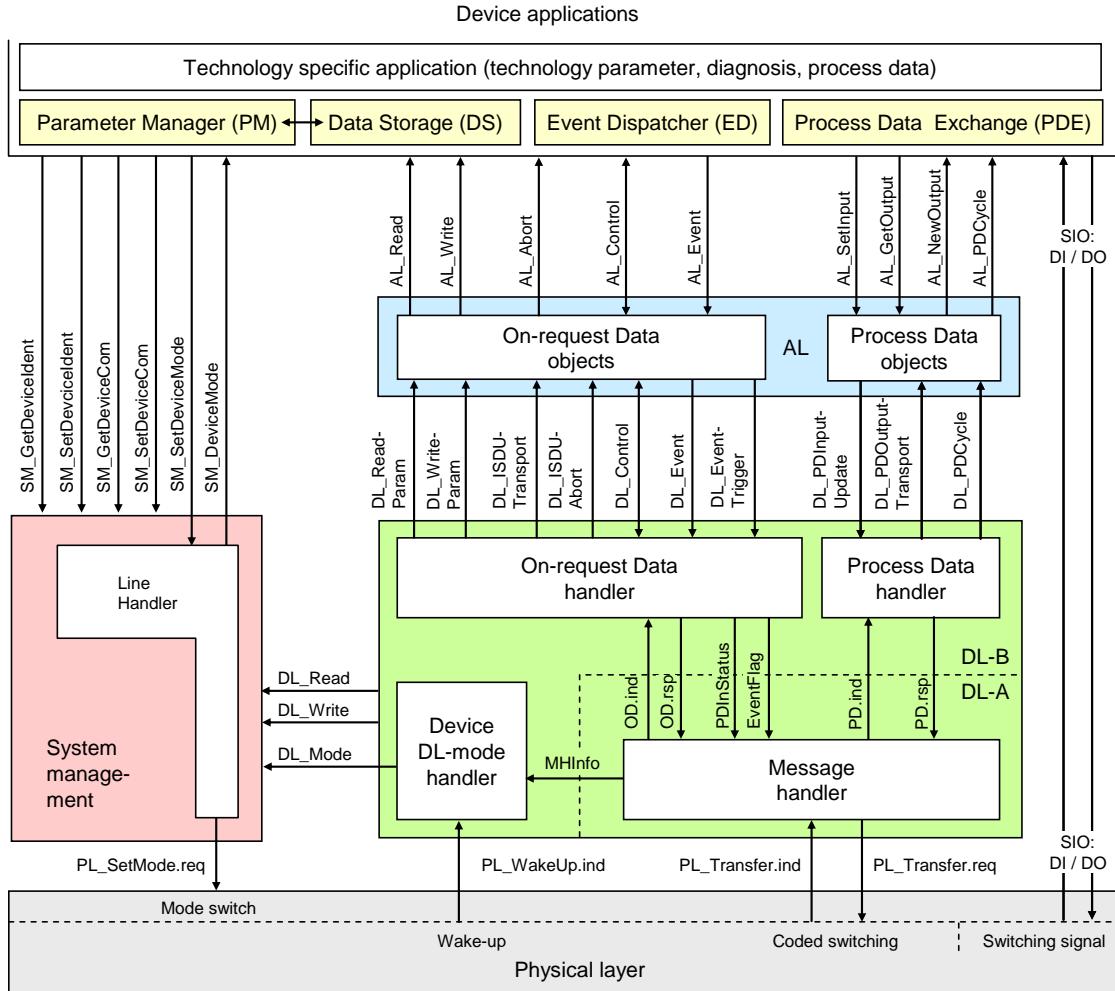

2775 **Figure 85 – Structure and services of a Device**

2777 The Device applications comprise first the technology specific application consisting of the
2778 transducer with its technology parameters, its diagnosis information, and its Process Data.
2779 The common Device applications comprise:

- 2780 • Parameter Manager (PM), dealing with compatibility and correctness checking of complete
2781 sets of technology (vendor) specific and common system parameters (see 10.3);
- 2782 • Data Storage (DS) mechanism, which optionally uploads or downloads parameters to the
2783 Master (see 10.4);
- 2784 • Event Dispatcher (ED), supervising states and conveying diagnosis information such as
2785 notifications, warnings, errors, and Device requests as peripheral initiatives (see 10.5);
- 2786 • Process Data Exchange (PDE) unit, conditioning the data structures for transmission in
2787 case of a sensor or preparing the received data structures for signal generation. It also
2788 controls the operational states to ensure the validity of Process Data (see 10.2).

2789 These Device applications provide standard methods/functions and parameters common to all
2790 Devices, and Device specific functions and parameters, all specified within Clause 10.

2791 10.2 Process Data Exchange (PDE)

2792 The Process Data Exchange unit cyclically transmits and receives Process Data without
2793 interference from the On-request Data (parameters, commands, and Events).

2794 An actuator (output Process Data) shall observe the cyclic transmission and enter a default
2795 appropriate state, for example keep last value, stop, or de-energize, whenever the data
2796 transmission is interrupted (see 7.3.3.5 and 10.8.3). The actuator shall wait on the
2797 MasterCommand "ProcessDataOutputOperate" (see Table B.2, output Process Data "valid")
2798 prior to regular operation after restart in case of an interruption.

2799 Within cyclic data exchange, an actuator (output Process Data) receives a Master-Command
2800 "DeviceOperate", whenever the output Process Data are invalid and a Master-Command
2801 "ProcessDataOutputOperate", whenever they become valid again (see Table B.2).

2802 There is no need for a sensor Device (input Process Data) to monitor the cyclic data
2803 exchange. However, if the Device is not able to guarantee valid Process Data, the PD status
2804 "Process Data invalid" (see A.1.5) shall be signaled to the Master application.

2805 10.3 Parameter Manager (PM)

2806 10.3.1 General

2807 A Device can be parameterized via two basic methods using the Direct Parameters or the
2808 Index memory space accessible with the help of ISDUs (see Figure 6).

2809 Mandatory for all Devices are the so-called Direct Parameters in page 1. This page 1 contains
2810 common communication and identification parameters (see B.1).

2811 Direct Parameter page 2 optionally offers space for a maximum of 16 octets of technology
2812 (vendor) specific parameters for Devices requiring not more than this limited number and with
2813 small system footprint (ISDU communication not implemented, easier fieldbus handling
2814 possible but with less comfort). Access to the Direct Parameter page 2 is performed via
2815 AL_Read and AL_Write (see 10.8.5).

2816 The transmission of parameters to and from the spacious Index memory can be performed in
2817 two ways: single parameter by single parameter or as a block of parameters. Single
2818 parameter transmission as specified in 10.3.4 is secured via several checks and confirmation
2819 of the transmitted parameter. A negative acknowledgment contains an appropriate error
2820 description and the parameter is not activated. Block Parameter transmission as specified in
2821 10.3.5 defers parameter consistency checking and activation until after the complete
2822 transmission. The Device performs the checks upon reception of a special command and
2823 returns a confirmation or a negative acknowledgment with an appropriate error description. In
2824 this case the transmitted parameters shall be rejected and a roll back to the previous
2825 parameter set shall be performed to ensure proper functionality of the Device.

2826 10.3.2 Parameter manager state machine

2827 The Device can be parameterized using ISDU mechanisms whenever the PM is active. The
2828 main functions of the PM are the transmission of parameters to the Master ("Upload"), to the
2829 Device ("Download"), and the consistency and validity checking within the Device
2830 ("ValidityCheck") as demonstrated in Figure 86.


2831 The PM is driven by command messages of the Master (see Table B.9). For example, the
2832 guard [UploadStart] corresponds to the reception of the SystemCommand
2833 "ParamUploadStart" and [UploadEnd] to the reception of the SystemCommand
2834 "ParamUploadEnd".

2835 NOTE 1 Following a communication interruption, the Master System Management uses the service
2836 SM_DeviceMode with the variable "INACTIVE" to stop the upload process and to return to the "IDLE" state.

2837 Any new "ParamUploadStart" or "ParamDownloadStart" while another sequence is pending,
2838 for example due to an unexpected shut-down of a vendor parameterization tool, will abort the
2839 pending sequence. The corresponding parameter changes will be discarded.

2840 NOTE 2 A PLC user program and a parameterization tool can conflict (multiple access), for example if during
 2841 commissioning, the user did not disable accesses from the PLC program while changing parameters via the tool.

2842 The parameter manager mechanism in a Device is always active and the DS_ParUpload.req
 2843 in transition T4 is used to trigger the Data Storage (DS) mechanism in 10.4.2.

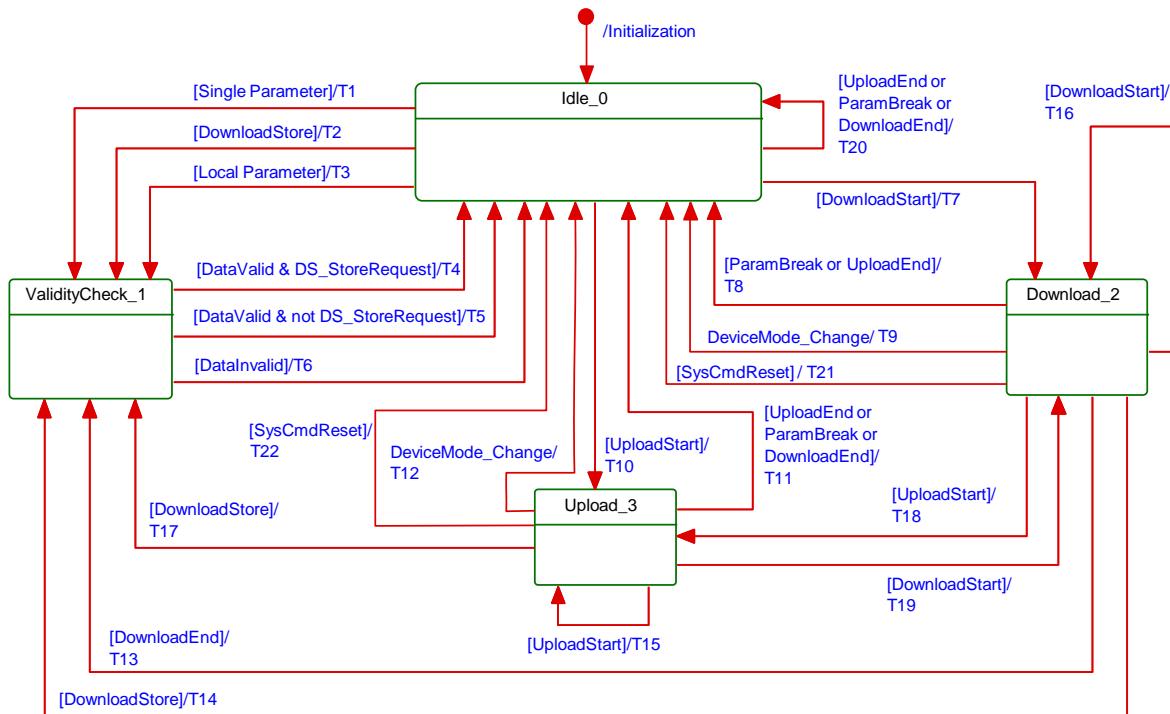

2844

2845 Figure 86 – The Parameter Manager (PM) state machine

2846 Table 96 shows the state transition tables of the Device Parameter Manager (PM) state
 2847 machine.

2848 **Table 96 – State transition tables of the PM state machine**

STATE NAME		STATE DESCRIPTION	
Idle_0		Waiting on parameter transmission	
ValidityCheck_1		Check of consistency and validity of current parameter set.	
Download_2		Parameter download active; local parameterization locked (e.g. teach-in). All Read services to Indices other than 3 (DataStorageIndex) shall be rejected (ISDU ErrorType 0x8022 – "Service temporarily not available – Device control") regardless of the result from specific parameter checks (see Table 97)	
Upload_3		Parameter upload active; parameterization globally locked. All write accesses for parameter changes not covered in the state machine shall be rejected (ISDU ErrorType 0x8022 – "Service temporarily not available – Device control") regardless of the result from specific parameter checks (see Table 97)	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	-
T2	0	1	Set "StoreRequest" (= TRUE)
T3	0	1	Set "StoreRequest" (= TRUE)
T4	1	0	Mark parameter set as valid; invoke DS_ParUpload.req to DS; enable positive acknowledge of transmission; reset "StoreRequest" (= FALSE)
T5	1	0	Mark parameter set as valid; enable positive acknowledge of transmission
T6	1	0	Mark parameter set as invalid; enable negative acknowledgment of transmission; reset "StoreRequest" (= FALSE); discard parameter buffer

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T7	0	2	Lock local parameter access
T8	2	0	Unlock local parameter access; discard parameter buffer
T9	2	0	Unlock local parameter access; discard parameter buffer
T10	0	3	Lock local parameter access
T11	3	0	Unlock local parameter access
T12	3	0	Unlock local parameter access
T13	2	1	Unlock local parameter access
T14	2	1	Unlock local parameter access; set "StoreRequest" (= TRUE)
T15	3	3	Lock local parameter access
T16	2	2	Discard parameter buffer, so that a possible second start will not be blocked.
T17	3	1	Unlock local parameter access; set "StoreRequest" (= TRUE)
T18	2	3	Discard parameter buffer, so that a possible second start will not be blocked.
T19	3	2	–
T20	0	0	Return ErrorType 0x8036 – <i>Function temporarily unavailable</i> if Block Parameterization supported or ErrorType 0x8035 – <i>Function not available</i> if Block Parameterization is not supported.
T21	2	0	Unlock local parameter access; discard parameter buffer
T22	3	0	Unlock local parameter access

INTERNAL ITEMS	TYPE	DEFINITION
DownloadStore	Bool	SystemCommand "ParamDownloadStore" received, see Table B.9
DataValid	Bool	Positive result of conformity and validity checking
DataInvalid	Bool	Negative result of conformity and validity checking
DownloadStart	Bool	SystemCommand "ParamDownloadStart" received, see Table B.9
DownloadBreak	Bool	SystemCommand "ParamBreak" or "ParamUploadStart" received
DownloadEnd	Bool	SystemCommand "ParamDownloadEnd" received, see Table B.9
DS_StoreRequest	Bool	Flag for a requested Data Storage sequence, i.e. SystemCommand "ParamDownloadStore" received (= TRUE)
ParamBreak	Bool	SystemCommand "ParamBreak" received, see Table B.9
SysCmdReset	Bool	One of the parameter reset SystemCommands received, see Table 101
DeviceMode_Change	Bool	Reception of SM_DeviceMode with IDLE or STARTUP
UploadStart	Bool	SystemCommand "ParamUploadStart" received, see Table B.9
UploadEnd	Bool	SystemCommand "ParamUploadEnd" received, see Table B.9
Single Parameter	Bool	In case of "single parameter" as specified in 10.3.4
Local Parameter	Bool	In case of "local parameter" as specified in 10.3.3
NOTE "Parameter access locking" shall not be confused with "Device access locking" in Table B.12		

2850

2851

2852 The Parameter Manager (PM) supports handling of "single parameter" (Index and Subindex) transfers as well as "Block Parameter" transmission (entire parameter set).

2854 10.3.3 Dynamic parameter

2855 Parameters accessible through SDI read or write services may also be changed via on-board control elements (for example teach-in button) or the human machine interface of a Device. These changes shall undergo the same validity checks as a single parameter access. Thus, in case of a positive result "DataValid" in Figure 86, the "StoreRequest" flag shall be

2856

2857


2858

2859 applied in order to achieve Data Storage consistency. In case of a negative result
 2860 "InvalidData", the previous values of the corresponding parameters shall be restored ("roll
 2861 back"). In addition, a Device specific indication on the human machine interface is re-
 2862 recommended as a positive or negative feedback to the user.

2863 It is recommended to avoid concurrent access to a parameter via local control elements and
 2864 SDCI write services at the same point in time.

2865 10.3.4 Single parameter

2866 Sample sequence charts for valid and invalid single parameter changes are specified in
 2867 Figure 87.

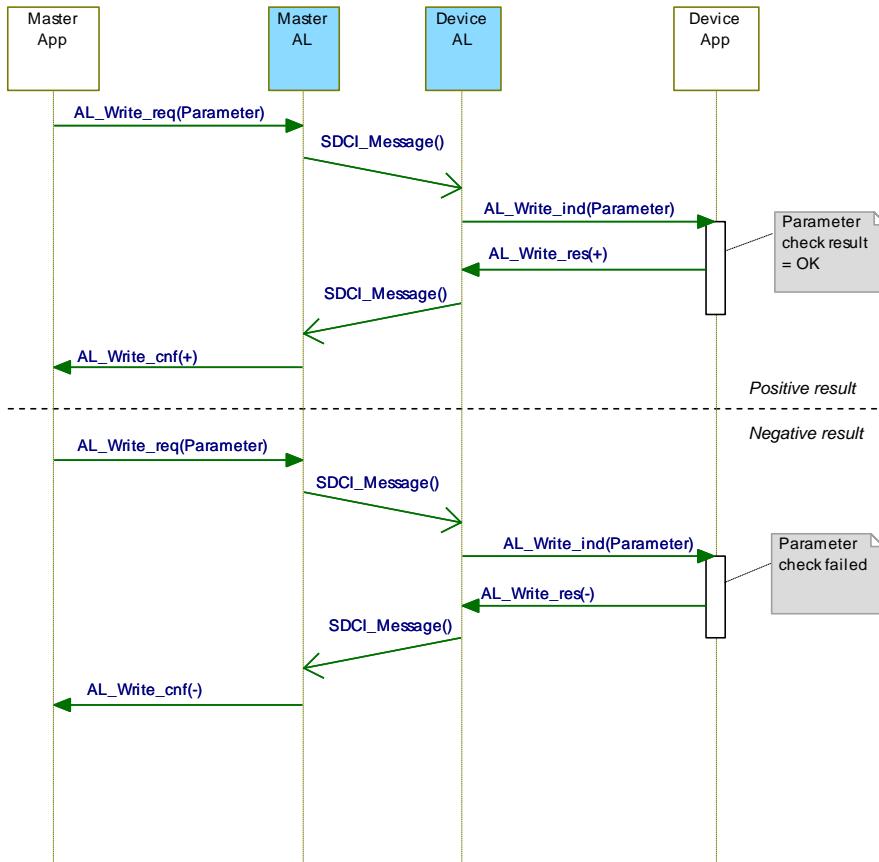

2868
 2869 **Figure 87 – Positive and negative parameter checking result**

2870 If single parameterization is performed via ISDU objects, the Device shall check the access,
 2871 structure, validity and consistency (see Table 97) of the transmitted data within the context of
 2872 the entire parameter set and return the result in the confirmation. Via positive conformation,
 2873 the Device indicates that parameter contents

- 2874 • passed all checks of Table 97 in the specified order 1 to 4,
 2875 • are stored in non-volatile memory in case of non-volatile parameters, and
 2876 • are activated in the Device specific technology if applicable.

2877 The negative confirmation carries one of the ErrorTypes of Table C.2 in Annex C.

2878

Table 97 – Sequence of parameter checks


Step	Parameter check	Definition	Error indication
1	Access	Check for valid access rights for this Index / Subindex, independent from data content (Index / Subindex permanent or temporarily unavailable; write/read access on read/write only Index)	See C.2.3 to C.2.8
2	Structure	Check for valid data structure like data size, only complete data structures can be written, for example 2 octets to an UInteger16 data type	See C.2.12 and C.2.13
3	Validity	Check for valid data content of single parameters, testing for data limits	See C.2.9 to C.2.11, C.2.14, C.2.15
4	Consistency	Check for valid data content of the entire parameter set, testing for interference or correlations between parameters	See C.2.16 and C.2.17
NOTE These checks are valid for single and Block Parameters (see 10.3.5)			

2879

2880 **10.3.5 Block Parameter**

2881 User applications such as function blocks within PLCs and parameterization tool software can
 2882 use start and end commands to indicate the begin and end of a Block Parameter
 2883 transmission. For the duration of the Block Parameter transmission the Device application
 2884 shall inhibit all the parameter changes originating from other sources, for example local
 2885 parameterization, teach-in, etc. In case parameter access is locked, any user application shall
 2886 unlock “Parameter (write) access” (see Table B.12) prior to downloading a parameter set.

2887 A sample sequence chart for valid Block Parameter changes with an optional Data Storage
 2888 request is demonstrated in Figure 88.

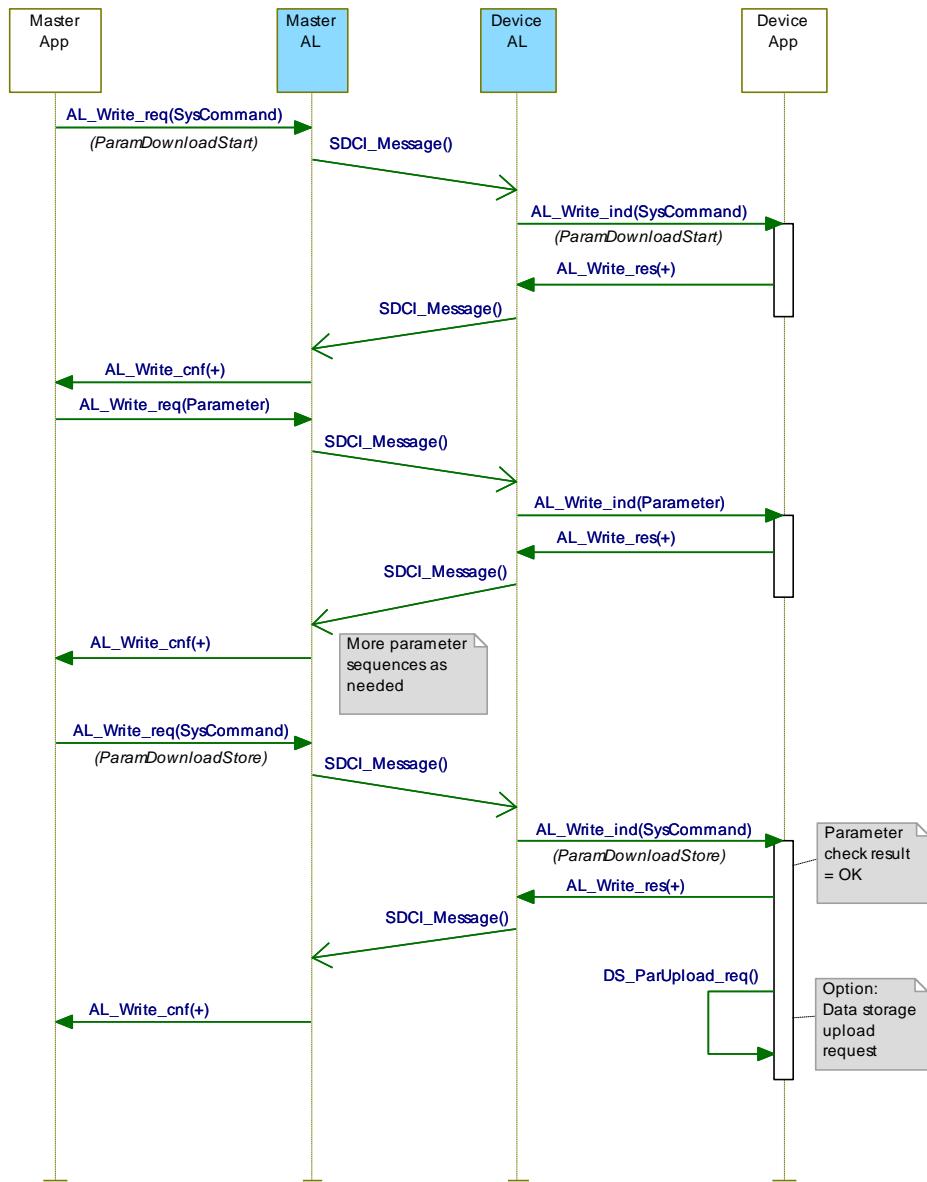


2889

Figure 88 – Positive Block Parameter download with Data Storage request

2890 A sample sequence chart for invalid Block Parameter changes is demonstrated in Figure 89.

2891 The "ParamDownloadStart" command (see Table B.9) indicates the beginning of the Block
 2892 Parameter transmission in download direction (from user application to the Device). The
 2893 SystemCommand "ParamDownloadEnd" or "ParamDownloadStore" terminates this sequence.
 2894 Both functions are similar. However, in addition the SystemCommand "ParamDownloadStore"
 2895 causes the Data Storage (DS) mechanism to upload the parameter set through the
 2896 DS_UPLOAD_REQ Event (see 10.4.2).
 2897

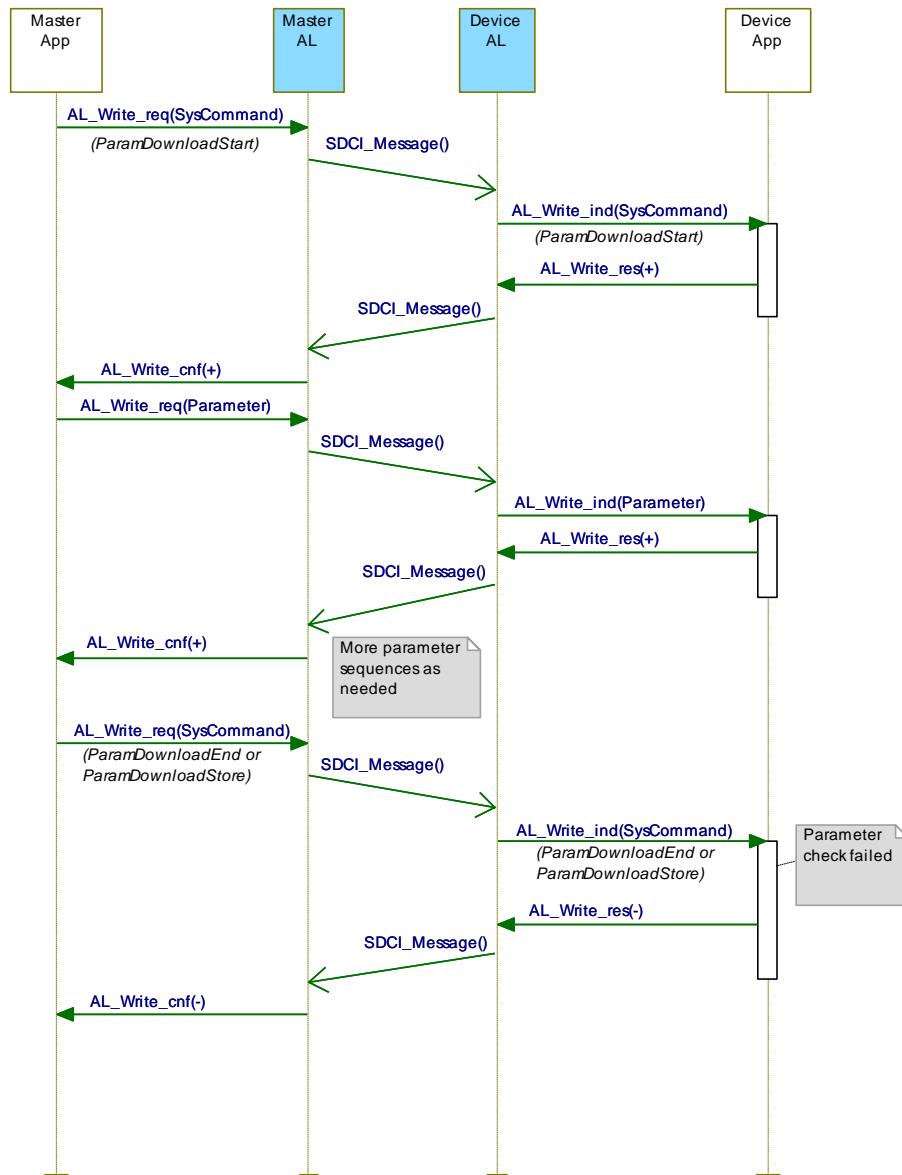

2898

2899

Figure 89 – Negative Block Parameter download

2900 The checking steps and rules in Table 98 apply.

2901

Table 98 – Steps and rules for Block Parameter checking

Rule	Action
1	At first, access and structure checks shall always be performed for each parameter (see Table 97).
2	Then, optionally, validity checks can be performed for each parameter.
3	At this time, consistency checking for transferred parameters shall be disabled and the single parameters shall not be activated.
4	Parameter manager shall not exit from block transfer mode in case of invalid write accesses, structure violations, or validity faults. In case of a ParamDownload the parameter set shall be treated as invalid if one of these checks failed.
5	With command "ParamDownloadEnd" or "ParamDownloadStore", the Device checks validity of each parameter if not already performed and consistency of the entire parameter set. The parameter set shall be treated as invalid if one of these checks failed. The result of the check is indicated to the originator of the Block Parameter transmission within the ISDU acknowledgment in return to the command.

Rule	Action
6	Via positive confirmation the Device indicates that parameters – passed all checks of Table 97, – are stored in non-volatile memory in case of non-volatile parameters, – are activated in the Device specific technology if applicable.
7	Via negative confirmation, the Device indicates that any of the checks of Table 97 failed and the parameter set is invalid. The previous parameter set shall remain active. A Data Storage upload request shall not be triggered. The corresponding negative confirmation shall contain the ErrorType 0x8041 – Inconsistent parameter set (see C.2.17).

2902

2903 The "ParamUploadStart" command (see Table B.9) indicates the beginning of the Block
 2904 Parameter transmission in upload direction (from the Device to the user application). The
 2905 SystemCommand "ParamUploadEnd" terminates this sequence, indicates the end of
 2906 transmission and shall never be rejected with an ErrorCode caused by failed accesses during
 2907 the block transmission.

2908 A Block Parameter transmission is aborted if the parameter manager receives a
 2909 SystemCommand "ParamBreak". In this case the block transmission quits without any
 2910 changes in parameter settings.

2911 In any case, the response to all "ParamXXX" commands (see Table B.9) shall be transmitted
 2912 after execution of the requested action.

2913 10.3.6 Concurrent parameterization access

2914 There is no mechanism to secure parameter consistency within the Device in case of
 2915 concurrent accesses from different user applications above Master level. This shall be
 2916 ensured or blocked on user level (see 13.2.2).

2917 10.3.7 Command handling

2918 Application commands are conveyed in form of parameters. As ISDU response the
 2919 appropriate priority level of the list in Table 99 shall be used.

2920 **Table 99 – Prioritized ISDU responses on command parameters**

Priority	ISDU response	Condition
1	"Index not available", see C.2.3	Command parameter is not supported by the Device
2	"Function not available", see C.2.14	Command is not supported by the Device regardless of the Device state
3	"Function temporarily not available", see C.2.15	Command is supported but the actual state of the Device does not permit the requested command.
4	Write response (+)	Command is supported and accepted in the current state of the Device and action is finished. However, within the context of certain commands, the action is just started. This exception is defined at the certain command.

2921

2922 In any case the ISDU timeout shall be observed (see Table 102).

2923 10.4 Data Storage (DS)

2924 10.4.1 General

2925 The Data Storage (DS) mechanism enables the consistent and up-to-date buffering of the
 2926 Device parameters on upper levels like PLC programs or fieldbus parameter server. Data
 2927 Storage between Masters and Devices is specified within this standard, whereas the adjacent
 2928 upper data storage mechanisms depend on the individual fieldbus or system. The Device
 2929 holds a standardized set of objects providing information about parameters for Data Storage
 2930 such as memory size requirements as well as control and state information of the Data

2931 Storage mechanism (see Table B.10). Revisions of Data Storage parameter sets are identified
 2932 via a Parameter Checksum.

2933 During Data Storage the Device shall apply the same checking rules as specified for the Block
 2934 Parameter transfer in 10.3.5.

2935 The implementation of the DS mechanism specified in this standard is highly recommended
 2936 for Devices. If this mechanism is not supported, it is the responsibility of the Device vendor to
 2937 describe how parameterization of a Device after replacement can be ensured in a system
 2938 conform manner without tools.


2939 **10.4.2 Data Storage state machine**

2940 Any changed set of valid parameters leads to a new Data Storage upload. The upload is
 2941 initiated by the Device by raising a "DS_UPLOAD_REQ" Event (see Table D.1). The Device
 2942 shall store the internal state "Data Storage Upload" in non-volatile memory (see Table B.10,
 2943 State Property), until it receives a Data Storage command "DS_UploadEnd" or
 2944 "DS_DownloadEnd".

2945 The Device shall generate an Event "DS_UPLOAD_REQ" (see Table D.1) only if the
 2946 parameter set is valid and

- 2947 • parameters assigned for Data Storage have been changed locally on the Device (for
 2948 example teach-in, human machine interface, etc.), or
- 2949 • the Device receives a SystemCommand "ParamDownloadStore"

2950 With this Event information the Data Storage mechanism of the Master is triggered and
 2951 initiates a Data Storage upload or download sequence depending on port configuration. The
 2952 state machine in Figure 90 specifies the Device Data Storage mechanism.

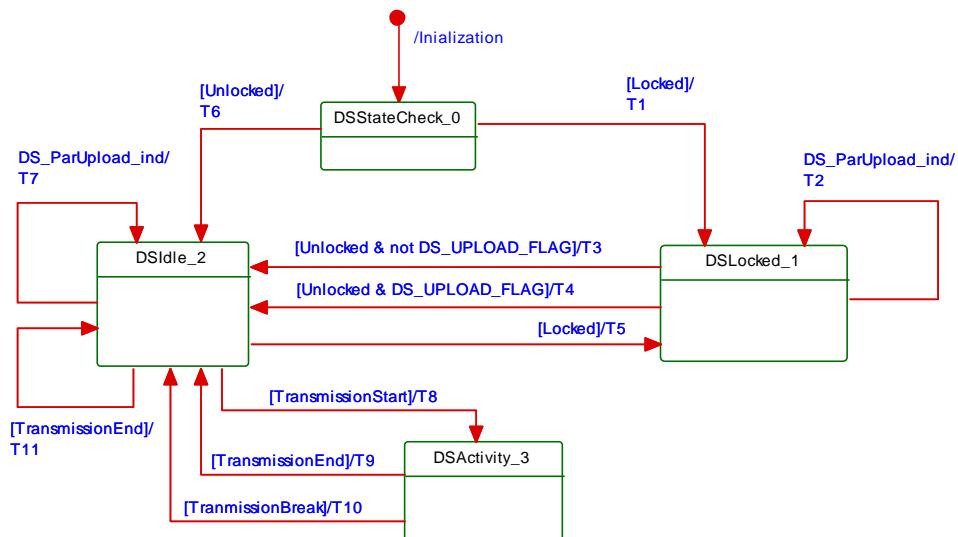

2953

2954 **Figure 90 – The Data Storage (DS) state machine**

2955 Table 100 shows the state transition tables of the Device Data Storage (DS) state machine.
 2956 See Table B.10 for details on DataStorageIndex assignments.

2957 **Table 100 – State transition table of the Data Storage state machine**

STATE NAME	STATE DESCRIPTION
DSStateCheck_0	Check activation state after initialization.
DSLocked_1	Waiting on Data Storage state machine to become unlocked. This state will become obsolete in future releases since Device access lock "Data Storage" shall not be used anymore (see Table B.12). Any DS_Command shall be rejected with the ErrorType "0x0203 Access denied"

2958

STATE NAME		STATE DESCRIPTION	
DSIdle_2		Waiting on Data Storage activities. Any unhandled DS-Command shall be rejected with the ErrorType "0x8036 Function temporarily not available"	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	Set State_Property = "Data Storage access locked"
T2	1	1	Set DS_UPLOAD_FLAG = TRUE
T3	1	2	Set State_Property = "Inactive"
T4	1	2	Invoke AL_EVENT.req (EventCode: DS_UPLOAD_REQ), Set State_Property = "Inactive"
T5	2	1	Set State_Property = "Data Storage access locked"
T6	0	2	Set State_Property = "Inactive"
T7	2	2	Set DS_UPLOAD_FLAG = TRUE, invoke AL_EVENT.req (EventCode: DS_UPLOAD_REQ)
T8	2	3	Lock local parameter access, set State_Property = "Upload" or "Download"
T9	3	2	Set DS_UPLOAD_FLAG = FALSE, unlock local parameter access, Set State_Property = "Inactive"
T10	3	2	Unlock local parameter access. Set State_Property = "Inactive"
T11	2	2	Set DS_UPLOAD_FLAG = FALSE

2959

INTERNAL ITEMS	TYPE	DEFINITION
Unlocked	Bool	Data Storage unlocked, see B.2.4
Locked	Bool	Data Storage locked, see B.2.4
DS_ParUpload.ind	Service	Device internal service between PM and DS (see Figure 86)
TransmissionStart	Bool	DS_Command "DS_UploadStart" or "DS_DownloadStart" has been invoked
TransmissionEnd	Bool	DS_Command "DS_UploadEnd" or "DS_DownloadEnd" has been invoked
TransmissionBreak	Bool	DL_Mode.ind(INACTIVE) or DS_Command "DS_Break" received

NOTE "Parameter access locking" shall not be confused with "Device access locking" in Table B.12

2960

2961 The truncated sequence chart in Figure 91 demonstrates the important communication
2962 sequences after the parameterization.

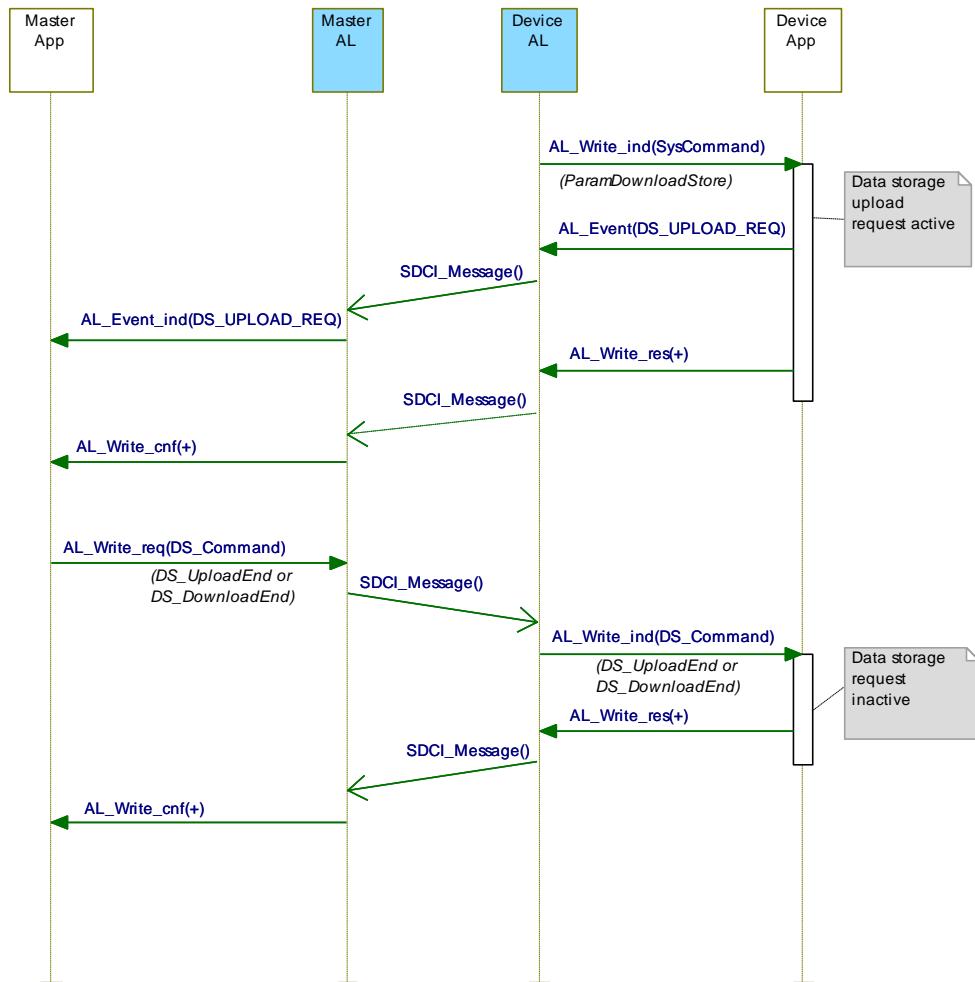


Figure 91 – Data Storage request message sequence

10.4.3 DS configuration

The Data Storage mechanism inside the Device may be disabled via the Master, for example by a tool or a PLC program. See B.2.4 for further details. This is recommended during commissioning or system tests to avoid intensive communication.

NOTE This functionality will be removed in future releases and the Data Storage mechanism will then only be controlled via port configuration in the master.

10.4.4 DS memory space

To handle the requested data amount for Data Storage under any circumstances, the requested amount of indices to be saved and the required total memory space are given in the Data Storage Size parameter, see Table B.10. The required total memory space (including the structural information shall not exceed 2 048 octets (see Annex G). The Data Storage mechanism of the Master shall be able to support this amount of memory per port.

10.4.5 DS Index_List

The Device is the "owner" of the DS Index_List (see Table B.10). Its purpose is to provide all the necessary information for a Device replacement. The DS Index_List shall be fixed for any specific DeviceID. Otherwise the data integrity between Master and Device cannot be guaranteed. The Index List shall contain the termination marker (see Table B.10), if the Device does not support Data Storage (see 10.4.1). The required storage size shall be 0 in this case.

2984 10.4.6 DS parameter availability

2985 All indices listed in the Index List shall be readable and writeable between the
2986 SystemCommands "DS_UploadStart" or "DS_DownloadStart" and "DS_UploadEnd" or
2987 "DS_DownloadEnd" (see Table B.10). If one of the Indices is rejected by the Device, the Data
2988 Storage Master will abort the up- or download with a SystemCommand "DS_Break". In this
2989 case no retries of the Data Storage sequence will be performed.

2990 10.4.7 DS without ISDU

2991 The support of ISDU transmission in a Device is a precondition for the Data Storage of
2992 parameters. Parameters in Direct Parameter page 2 cannot be saved and restored by the
2993 Data Storage mechanism.

2994 10.4.8 DS parameter change indication

2995 The Parameter_Checksum specified in Table B.10 is used as an indicator for changes in a
2996 parameter set. This standard does not require a specific mechanism for detecting parameter
2997 changes. A set of recommended methods is provided in the informative Annex K.

2998 10.5 Event Dispatcher (ED)

2999 Any of the Device applications can generate predefined system status information when SDCI
3000 operations fail or technology specific information (diagnosis) as a result from technology
3001 specific diagnostic methods occur. The Event Dispatcher turns this information into an Event
3002 according to the definitions in A.6. The Event consists of an EventQualifier indicating the
3003 properties of an incident and an EventCode ID representing a description of this incident
3004 together with possible remedial measures. Table D.1 comprises a list of predefined IDs and
3005 descriptions for application-oriented incidents. Ranges of IDs are reserved for profile specific
3006 and vendor specific incidents. Table D.2 comprises a list of predefined IDs for SDCI specific
3007 incidents.

3008 Events are classified in "Errors", "Warnings", and "Notifications". See 10.10.2 for these
3009 classifications and see 11.6 for how the Master is controlling and processing these Events.

3010 All Events provided at one point in time are acknowledged with one single command.
3011 Therefore, the Event acknowledgment may be delayed by the slowest acknowledgment from
3012 upper system levels.

3013 10.6 Device features**3014 10.6.1 General**

3015 The following Device features are defined to a certain degree in order to achieve a common
3016 behavior. They are accessible via standardized or Device specific methods or parameters.
3017 The availability of these features is defined in the IODD of a Device.

3018 10.6.2 Device backward compatibility

3019 This feature enables a Device to play the role of a previous Device revision. In the start-up
3020 phase the Master System Management overwrites the Device's inherent DeviceID (DID) with
3021 the requested former DeviceID. The Device's technology application shall switch to the former
3022 functional sets or subsets assigned to this DeviceID. Device backward compatibility support is
3023 optional for a Device.

3024 As a Device can provide backward compatibility to previous DeviceIDs (DID), these
3025 compatible Devices shall support all parameters and communication capabilities of the
3026 previous DeviceID. Thus, the Device is permitted to change any communication or
3027 identification parameter in this case.

3028 10.6.3 Protocol revision compatibility

3029 This feature enables a Device to adjust its protocol layers to a previous SDCI protocol version
3030 such as for example to the legacy protocol version of a legacy Master or in the future from
3031 version V(x) to version V(x-n). In the start-up phase the Master System Management can
3032 overwrite the Device's inherent protocol RevisionID (RID) in case of discrepancy with the
3033 RevisionID supported by the Master. A legacy Master does not write the MasterCommand

3034 "MasterIdent" (see Table B.2) and thus the Device can adjust to the legacy protocol (V1.0).
3035 Revision compatibility support is optional for a Device.

3036 Devices supporting both V1.0 and V1.1 mode are permitted

- 3037 • to use the same predefined parameters, Events, and ErrorTypes in both modes;
3038 • to support Block Parameterization with full functionality including the Event "DS_UP-
3039 LOAD_REQ". A legacy Master propagates such an Event without any further action.

3040

3041 **10.6.4 Visual SDCI indication**

3042 This feature indicates the operational state of the Device's SDCI interface. The indication of
3043 the SDCI mode is specified in 10.10.3. Indication of the SIO mode is vendor specific and not
3044 covered by this definition. The function is triggered by the indication of the System
3045 Management (within all states except SM_Idle and SM_SIO in Figure 81). SDCI indication is
3046 optional for a Device.

3047 **10.6.5 Parameter access locking**

3048 This feature enables a Device to globally lock or unlock write access to all writeable Device
3049 parameters accessible via the SDCI interface (see B.2.4). The locking is triggered by the
3050 reception of a system parameter "Device Access Locks" (see Table B.8). The support for
3051 these functions is optional for a Device.

3052 NOTE It is highly recommended not to implement this feature since it will be omitted in future releases.

3053 **10.6.6 Data Storage locking**

3054 Setting this lock will cause the "State_Property" in Table B.10 to switch to "Data Storage
3055 locked" and the Device not to send a DS_UPLOAD_REQ Event. Support of this function is
3056 optional for a Device if the Data Storage mechanism is implemented.

3057 NOTE It is highly recommended not to implement this feature since it will be omitted in future releases.

3058 **10.6.7 Locking of local parameter entries**

3059 Setting this lock shall have the effect of read only or write protection for local entries at the
3060 Device (Bit 2 in Table B.12). Support of this function is optional for a Device, see B.2.4.

3061 **10.6.8 Locking of local user interface**


3062 Setting this lock shall have the effect of complete disabling of controls and displays, for
3063 example shut-down of on-board human machine interface such as keypads on a Device (Bit 3
3064 in Table B.12). Support of this function is optional for a Device.

3065 **10.6.9 Offset time**

3066 The OffsetTime t_{offset} is a parameter to be configured by the user (see B.2.25). It determines
3067 the beginning of the Device's technology data processing in respect to the start of the M-
3068 sequence cycle, that means the beginning of the Master (port) message. The offset enables

- 3069 • Data processing of a Device to be synchronized with the Master (port) cycle within certain
3070 limits;
3071 • Data processing of multiple Devices on different Master ports to be synchronized with one
3072 another;
3073 • Data processing of multiple Devices on different Master ports to run with a defined offset.

3074 Figure 92 demonstrates the timing of messages in respect to the data processing in Devices.

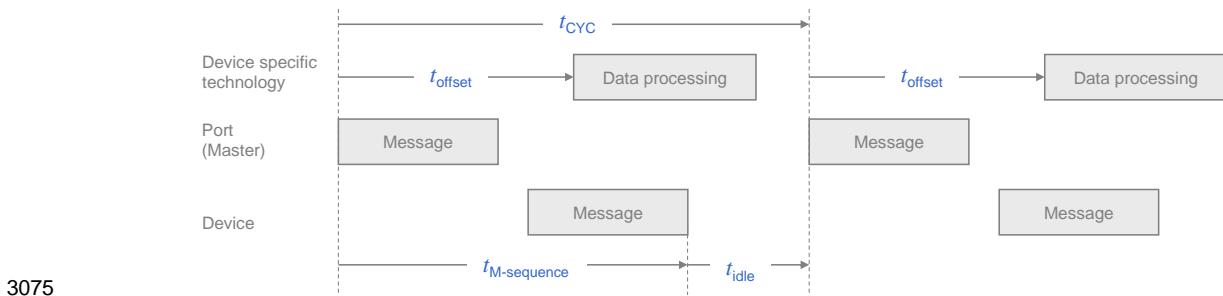**Figure 92 – Cycle timing**

3077 The OffsetTime defines a trigger relative to the start of an M-sequence cycle. The support for
3078 this function is optional for a Device.

3079 **10.6.10 Data Storage concept**

3080 The Data Storage mechanism in a Device allows to automatically save parameters in the Data
3081 Storage server of the Master and to restore them upon Event notification. Data consistency is
3082 checked in either direction within the Master and Device. Data Storage mainly focuses on
3083 configuration parameters of a Device set up during commissioning (see 10.4 and 11.4).

3084 **10.6.11 Block Parameter**

3085 The Block Parameter transmission feature in a Device allows transfer of parameter sets from
3086 a PLC program without checking the consistency single data object by single data object. The
3087 validity and consistency check are performed at the end of the Block Parameter transmission
3088 for the entire parameter set. This function mainly focuses on exchange of parameters of a
3089 Device to be set up at runtime (see 10.3). The support of this function is optional for a Device.

3090 **10.7 Device reset options**

3091 **10.7.1 Overview**

3092 There are five possibilities for the user to put a Device into a certain defined condition by
3093 using either

- 3094 • Power supply off/on (PowerCycle), or
- 3095 • SystemCommand "Device reset" (128), or
- 3096 • SystemCommand "Application reset" (129), or
- 3097 • SystemCommand "Restore factory settings" (130), or
- 3098 • SystemCommand "Back to box" (131).

3099

3100 Table B.9 defines which of these SystemCommands are mandatory, highly recommended or
3101 optional.

3102 Table 101 provides an overview on impacted items when performing one of these options.

3103

3104

Table 101 – Overview on reset options and their impact on Devices

Impacted item a)	Power-Cycle	Device reset	Application reset	Restore factory settings	Back-to-box
Diagnosis and status	"0"	"0"	No	Clear	"0"
History recorder	No	No	No	No	No
Technology specific parameters (adjustable, teachable)	No	No	Default	Default	Default
Identification/tags	No	No	No	Default	Default
Data Storage behavior	No	No	Upload required DS_UPLOAD_REQ =1, DS Event	Delete upload request DS_UPLOAD_REQ =0	Delete upload request DS_UPLOAD_REQ =0
RevisionID	Default	Default	No	Default	Default
DeviceID	No	No	No	Default	Default
COM behavior	Restart via Master	Restart triggered by Device	No	Restart triggered by Device if necessary, see 10.7.4	Device stops and disables communication until next PowerCycle
Access locks	No	No	Default	Default	Default
Block Parameter transfer	–	Discard	Discard	Discard	Discard
Keys					
a)	see 10.7.6 for explanation on impacted items				
"0"	The numerical parameter or list of parameters contain a zero				
PowerCycle	Device power on → off → on				
Initial	Set to initial values according to power up state				
COM	Communication				
No	Not affected				
Clear	Set to "0" in case of no COM restart. All active Events will be sent with "Disappear" to clear DeviceStatus. After a performed "Restore factory settings", pending Events can be resent.				
Default	DeviceStatus. After a performed "Restore factory settings", pending Events can be resent.				
Event	Reset to initial value of state of delivery to customer				
Discard	Trigger upload via DS_UPLOAD_REQ flag				
	Transferred parameters not activated				

3105

3106 10.7.2 Device reset

3107 This feature enables a Device to perform a "warm start". It is especially useful, whenever a
 3108 Device needs to be reset to an initial state such as power-on, which means communication
 3109 will be interrupted.

3110 This feature is triggered upon reception of SystemCommand "Device reset" (see Table B.9).
 3111 The ISDU response to this SystemCommand shall be transmitted to the Master after
 3112 successful execution of the requested action. The Device shall wait at least 3 MasterCycle
 3113 times after the last ISDU Response prior to the communication stop.

3114 The SystemCommand "Device reset" is optional for a Device.

3115 10.7.3 Application reset

3116 This feature enables a Device to reset the technology specific application. It is especially
 3117 useful, whenever a technology specific application needs to be set to a predefined operational
 3118 state without communication interruption and a shut-down cycle. Contrary to "Restore factory
 3119 settings" only the application specific parameters are reset to "Default". Each and every
 3120 communication and identification parameter remains unchanged.

3121 This feature is triggered upon reception of a SystemCommand "Application reset" (see Table
 3122 B.9). In any case, the ISDU response to this SystemCommand shall be transmitted to the
 3123 Master after successful execution of the requested action.

3124 The SystemCommand "Application reset" is highly recommended for a Device.

3125 **10.7.4 Restore factory settings**

3126 This feature enables a Device to restore parameters to the original delivery status. It is
3127 triggered upon reception of the SystemCommand "Restore factory settings" (see Table B.9).
3128 The DS_UPLOAD_FLAG (see Table B.10) and other dynamic parameters such as
3129 "ErrorCount" (see B.2.18), "DeviceStatus" (see B.2.21), and "DetailedDeviceStatus" (see
3130 B.2.22) shall be reset when this feature is applied. This does not include vendor specific
3131 parameters such as for example counters of operating hours.

3132 NOTE In this case an existing stored parameter set within the Master will be automatically downloaded into the
3133 Device after the next communication restart. This can be avoided by using the "Back to box" SystemCommand (see
3134 10.7.5).

3135 It is the Device vendor's responsibility to guarantee the correct function under any circum-
3136 stances. If any parameter of the Direct Parameter page 1 (see Direct Parameter page 1 in
3137 Table B.1) is changed during this restore, the communication shall be stopped by the Device
3138 to trigger a new communication start using the updated communication and identification
3139 parameters. The ISDU response to this SystemCommand shall be transmitted to the Master
3140 after successful execution of the requested action. The Device shall wait at least 3
3141 MasterCycle times after the last ISDU Response prior to the communication stop.

3142 The SystemCommand "Restore factory settings" is optional for a Device.

3143 **10.7.5 Back-to-box**

3144 This feature enables a Device to restore parameters to the original delivery values without
3145 any interaction with upper level mechanisms such as Data Storage or PLC based parame-
3146 terization. It is especially useful, whenever a Device is removed from an already parameterized
3147 installation and reactivated for example as a spare part. If the Device remains in an auto-
3148 mation application beyond the next PowerCycle, all parametrization will be overwritten just as
3149 if it were a replacement.

3150 It is triggered upon reception of the SystemCommand "Back-to-box" (see Table B.9), i.e. the
3151 Device shall stop and disable communication until next PowerCycle. The ISDU response to
3152 this SystemCommand shall be transmitted to the Master after successful execution of the
3153 requested action. The Device shall wait at least 3 MasterCycle times after the last ISDU
3154 Response prior to the communication stop. Optionally the Device can visually signal the
3155 completion of the action.

3156 The SystemCommand "Back-to-box" is conditional on the provision of minimum one user
3157 changeable non-volatile parameter.

3158 **10.7.6 Explanation on impacted items**

3159 The list of impacted items in Table 101 comprises several different parameter types. To
3160 explain different categories some standardized parameters are assigned.

- 3161 • Diagnosis and Status: Comprising the parameters containing the internal Device status
3162 like DeviceStatus and DetailedDeviceStatus
- 3163 • History recorder: Comprising the parameters containing the information regarding the life
3164 cycle of the Device like Operating hours counter or minimum or maximum ambient
3165 temperature
- 3166 • Technology specific parameter: Comprising the user settings regarding the Device
3167 functionality like AccessLocks or profiled functional parameters like setpoints
- 3168 • Identification/tags: Comprising the parameters which allow the customer to identify the
3169 specific Device by unique identifier like ApplicationSpecificTag, FunctionTag, and
3170 LocationTag

10.8 Device design rules and constraints**10.8.1 General**

In addition to the protocol definitions in form of state, sequence, activity, and timing diagrams some more rules and constraints are required to define the behavior of the Devices. An overview of the major protocol variables scattered all over the standard is concentrated in Table 102 with associated references.

10.8.2 Process Data

The process communication channel transmits the cyclic Process Data without any interference of the On-request Data communication channels. Process Data exchange starts automatically whenever the Device is switched into the OPERATE state via message from the Master.

The format of the transmitted data is Device specific and varies from no data octets up to 32 octets in each communication direction.

Recommendations:

- Data structures should be suitable for use by PLC applications.
- It is highly recommended to comply with the rules in F.3.3 and in [6].

See A.1.5 for details on the indication of valid or invalid Process Data via a PDValid flag within cyclic data exchange.

10.8.3 Communication loss

It is the responsibility of the Device designer to define the appropriate behaviour of the Device in case communication with the Master is lost (transition T10 in Figure 44 handles detection of the communication loss, while 10.2 defines resulting Device actions).

NOTE This is especially important for actuators such as valves or motor management.

10.8.4 Direct Parameter

The Direct Parameter page communication provides no handshake mechanism to ensure proper reception or validity of the transmitted parameters. The Direct Parameter page can only be accessed single octet by single octet (Subindex) or as a whole (16 octets). The consistency of parameters larger than 1 octet cannot be guaranteed.

The parameters from the Direct Parameter page cannot be saved and restored via the Data Storage mechanism.

10.8.5 ISDU communication channel

The ISDU communication channel provides a powerful means for the transmission of parameters and commands (see Clause B.2).

The following rules shall be considered when using this channel (see Figure 7).

- Index 0 is not accessible via the ISDU communication channel. The access is redirected by the Master to the Direct Parameter page 1 using the page communication channel.
- Index 1 is not accessible via the ISDU communication channel. The access is redirected by the Master to the Direct Parameter page 2 using the page communication channel.
- Index 3 cannot be accessed by a PLC application program. The access is limited to the Master application only (Data Storage).
- After reception of an ISDU request from the Master the Device shall respond within 5 000 ms (see Table 102). Any violation causes the Master to abandon the current task.
- Parameters with attribute write-only (W) shall be treated like a SystemCommand. Only basic data types are permitted.

3215 **10.8.6 DeviceID rules related to Device variants**

3216 Devices with a certain DeviceID and VendorID shall not deviate in communication and
 3217 functional behavior. This applies for sensors and actuators. Those Devices may vary for
 3218 example in

- 3219 • cable lengths,
- 3220 • housing materials,
- 3221 • mounting mechanisms,
- 3222 • other features, and environmental conditions.

3223 **10.8.7 Protocol constants**

3224 Table 102 gives an overview of the major protocol constants for Devices.

3225 **Table 102 – Overview of the protocol constants for Devices**

System variable	References	Values	Definition
ISDU acknowledgment time, for example after a SystemCommand	B.2.2	5 000 ms	Time from reception of an ISDU for example SystemCommand and the beginning of the response message of the Device (see Figure 63)
Maximum number of entries in Index List	B.2.3	70	Each entry comprises an Index and a Subindex. 70 entries results in a total of 210 octets.
Preset values for unused or reserved parameters, for example FunctionID	Annex B	0 (if numbers) 0x00 (if characters)	Engineering shall set all unused parameters to the preset values.
Wake-up procedure	7.3.2.2	See Table 42 and Table 43	Minimum and maximum timings and number of retries
MaxRetry	7.3.3.3	2, see Table 46	Maximum number of retries after communication errors
MinCycleTime	A.3.7 and B.1.3	See Table A.11 and Table B.3	Device defines its minimum cycle time to acquire input or process output data. For constraints of MasterCycleTime see 7.3.3.3
Usable Index range	B.2	See Table B.8	This version of the standard reserves some areas within the total range of 65535 Indices.
Errors and warnings	10.10.2	50 ms	An Event with MODE "Event appears" shall stay at least for the duration of this time.
EventCount	8.2.2.11	1	Constraint for AL_Event.req

3226 **10.9 IO Device description (IODE)**

3227 An IODE (I/O Device Description) is a file that provides all the necessary properties to
 3228 establish communication and the necessary parameters and their boundaries to establish the
 3229 desired function of a sensor or actuator.

3230 An IODE (I/O Device Description) is a file that formally describes a Device.

3231 An IODE file shall be provided for each Device and shall include all information necessary to
 3232 support this standard.

3233 The IODE can be used by engineering tools for PLCs and/or Masters for the purpose of
 3234 identification, configuration, definition of data structures for Process Data exchange,
 3235 parameterization, and diagnosis decoding of a particular Device.

3236 NOTE Details of the IODE language to describe a Device can be found in [6].

3238 **10.10 Device diagnosis**

3239 **10.10.1 Concepts**

3240 This standard provides only most common EventCodes in D.2. It is the purpose of these
 3241 common diagnosis informations to enable an operator or maintenance person to take fast
 3242 remedial measures without deep knowledge of the Device's technology. Thus, the text
 3243 associated with a particular EventCode shall always contain a corrective instruction together
 3244 with the diagnosis information.

3245 Fieldbus-Master-Gateways tend to only map few EventCodes to the upper system level.
 3246 Usually, vendor specific EventCodes defined via the IODD can only be decoded into readable
 3247 instructions via a Port and Device Configuration Tool (PDCT) or specific vendor tool using the
 3248 IODD.

3249 Condensed information of the Device's "state of health" can be retrieved from the parameter
 3250 "DeviceStatus" (see B.2.21). Whenever an Event appears, the DetailedDeviceStatus contains
 3251 this Event until it disappears, see B.2.22. Table 103 provides an overview of the various
 3252 possibilities for Devices and shows examples of consumers for this information.

3253 If implemented, it is also possible to read the number of faults since power-on or reset via the
 3254 parameter "ErrorCount" (see B.2.18) and more information in case of profile Devices via the
 3255 parameter "DetailedDeviceStatus" (see B.2.22).

3256 NOTE Profile specific values for the "DetailedDeviceStatus" are given in [7].

3257 A Device may provide additional "deep" technology specific diagnosis information in the form
 3258 of Device specific parameters (see Table B.8) that can be retrieved via port and Device
 3259 configuration tools for Masters or via vendor specific tools. Usually, only experts or service
 3260 personnel of the vendor are able to draw conclusions from this information.

3261 **Table 103 – Classification of Device diagnosis incidents**

Diagnosis incident	Appear/disappear	Single shot	Parameter	Destination	Consumer
Error (fast remedy; standard EventCodes)	yes	-	-	PLC or HMI (fieldbus mapping)	Maintenance and repair personnel
Error (IODD: vendor specific EventCodes; see Table D.1)	yes	-	-	PDCT or vendor tool	Vendor service personnel
Error (via Device specific parameters)	-	-	See Table B.8	PDCT or vendor tool	Vendor service personnel
Warning (fast remedy; standard EventCodes)	yes	-	-	PLC or HMI	Maintenance and repair personnel
Warning (IODD: vendor specific EventCodes; see Table D.1)	yes	-		PDCT or vendor tool	Vendor service personnel
Warning (via Device specific parameters)	-	-	See Table B.8		
Notification (Standard EventCodes)	-	yes		PDCT	Commissioning personnel
Detailed Device status	-	-		PDCT or vendor tool	Commissioning personnel and vendor service personnel
Number of faults via parameter "ErrorCount"	-	-	See B.2.20		
Device "health" via parameter "DeviceStatus"	-	-	See B.2.21, Table B.13	HMI, Tools such as "Asset Management"	Operator

3263 10.10.2 Events

3264 MODE values shall be assigned as follows (see A.6.4):

- 3265 • Events of TYPE "Error" shall use the MODEs "Event appears / disappears"
- 3266 • Events of TYPE "Warning" shall use the MODEs "Event appears / disappears"
- 3267 • Events of TYPE "Notification" shall use the MODE "Event single shot"


3268 The following requirements apply:

- 3269 • All Events already placed in the Event queue are discarded by the Event Dispatcher when
3270 communication is interrupted or cancelled. Once communication resumed, the technology
3271 specific application is responsible for proper reporting of the current Event causes.
- 3272 • It is the responsibility of the Event Dispatcher to control the "Event appears" and "Event
3273 disappears" flow. Once the Event Dispatcher has sent an Event with MODE "Event
3274 appears" for a given EventCode, it shall not send it again for the same EventCode before
3275 it has sent an Event with MODE "Event disappears" for this same EventCode.
- 3276 • Each Event shall use static mode, type, and instance attributes.
- 3277 • Each vendor specific EventCode shall be uniquely assigned to one of the TYPES (Error,
3278 Warning, or Notification).
- 3279 • Each appearing Event ("Warning" or "Error") shall change the DeviceStatus from
3280 "0: Device is operating properly" to any other valid value.

3281 In order to prevent the diagnosis communication channel (see Figure 7) from being flooded,
3282 the following requirements apply:

- 3283 • The same diagnosis information shall not be reported at less than 1 s intervals. This
3284 means that the Event Dispatcher shall not invoke the AL_Event service with the same
3285 EventCode and EventQualifier more often than once per second. This measure avoids
3286 frequent repetitions of Events.
- 3287 • The Event Dispatcher shall not issue an "Event disappears" less than 50 ms after the
3288 corresponding "Event appears".
- 3289 • Subsequent incidents of errors or warnings with the same root cause shall be disregarded,
3290 that means one root cause shall lead to a single error or warning.
- 3291 • The Event Dispatcher shall invoke the AL_Event service with an EventCount equal one.
- 3292 • Errors are prioritized over Warnings.


3293 Figure 93 shows how two successive errors are processed, and the corresponding flow of
3294 "Event appears" / "Event disappears" Events for each error.

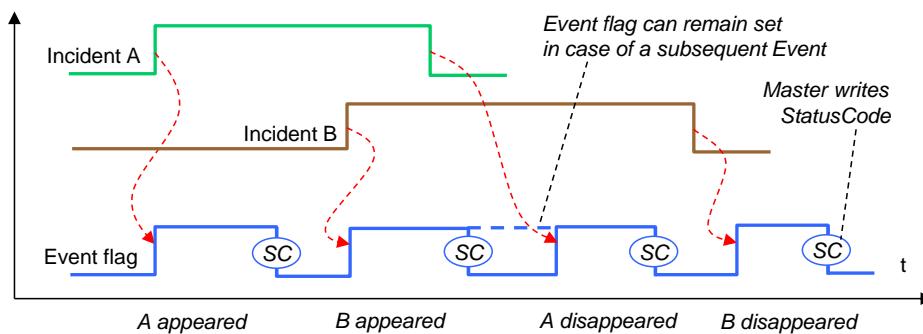

3295 3296 **Figure 93 – Event flow in case of successive errors**

3298 10.10.3 Visual indicators

3299 The indication of SDCI communication on the Device is optional. The SDCI indication shall
3300 use a green indicator. The indication follows the timing and specification shown in Figure 94.

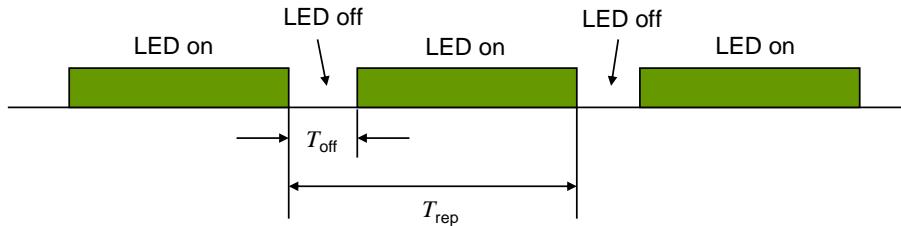

3302 **Figure 94 – Device LED indicator timing**

3303

3304 Table 104 defines the timing for the LED indicator of Devices.

3305 **Table 104 – Timing for LED indicators**

Timing	Minimum	Typical	Maximum	Unit
T_{rep}	750	1 000	1 250	ms
T_{off}	75	100	150	ms
$T_{\text{off}} / T_{\text{rep}}$	7,5	10	12,5	%

3306

3307 NOTE Timings above are defined such that the general perception would be "power is on".

3308 A short periodical interruption indicates that the Device is in COMx communication state. In
3309 order to avoid flickering, the indication cycle shall start with a "LED off" state and shall always
3310 be completed (see Table 104).

3311 **10.11 Device connectivity**

3312 See 5.5 for the different possibilities of connecting Devices to Master ports and the
3313 corresponding cable types as well as the color coding.

3314 NOTE For compatibility reasons, this standard does not prevent SDCI devices from providing additional wires for
3315 connection to functions outside the scope of this standard (for example to transfer analog output signals).

3316 **11 Master**

3317 **11.1 Overview**


3318 **11.1.1 Positioning of Master and Gateway Applications**

3319 In 0 the domain of the SDCI technology within the automation hierarchy is already illustrated.
3320 Figure 95 shows the recommended relationship between the SDCI technology and a fieldbus
3321 technology. Even though this may be the major use case in practice, this does not automatically
3322 imply that the SDCI technology depends on the integration into fieldbus systems. It can
3323 also be directly integrated into PLC systems, industrial PC, or other automation systems without
3324 fieldbus communication in between.

3325 For the sake of preferably uniform behavior of Masters, Figure 95 shows a Standardized
3326 Master Interface (SMI) as layer in between the Master and the Gateway Applications or
3327 embedded systems on top. This Standardized Master Interface is intended to serve also the
3328 safety system extensions as well as the wireless system extensions. In case of FS-Masters,
3329 attention shall be payed to the fact, that this SMI in some aspects requires implementation
3330 according to safety standards.

3331 The Standardized Master Interface is specified in this clause via services and data objects
3332 similar to the other layers (PL, DL, and AL) in this document. It is designed using few uniform
3333 base structures that both upper layer fieldbus and upper layer IT systems can use in an
3334 efficient manner: push ("write"), pull ("read"), push/pull ("write/read"), and indication ("Event").

3335 The specification of Gateway Applications is not subject of this document. Designers shall
3336 observe the realtime requirements of control functions and safety functions in case of
3337 concurrent Gateway Applications (see 13.2).

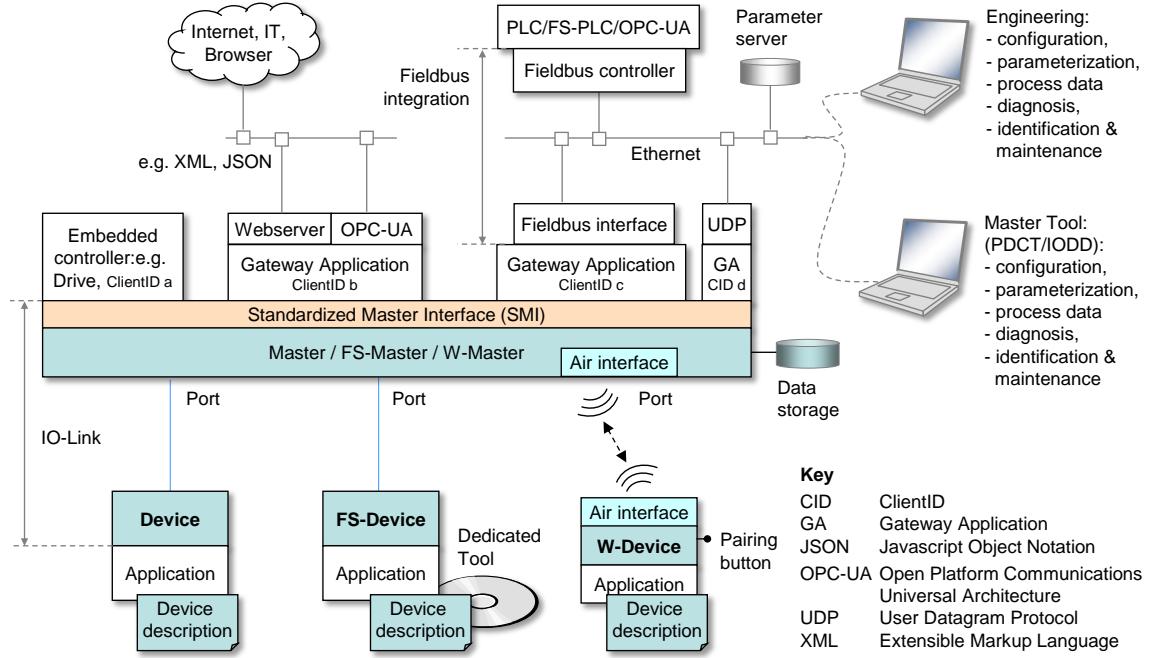


3339 NOTE Blue and orange shaded areas indicate features specified in this standard except those for functional
3340 safety (FS) and wireless (W)

Figure 95 – Generic relationship of SDCI and automation technology

11.1.2 Structure, applications, and services of a Master

3343 Figure 96 provides an overview of the complete structure and the services of a Master.

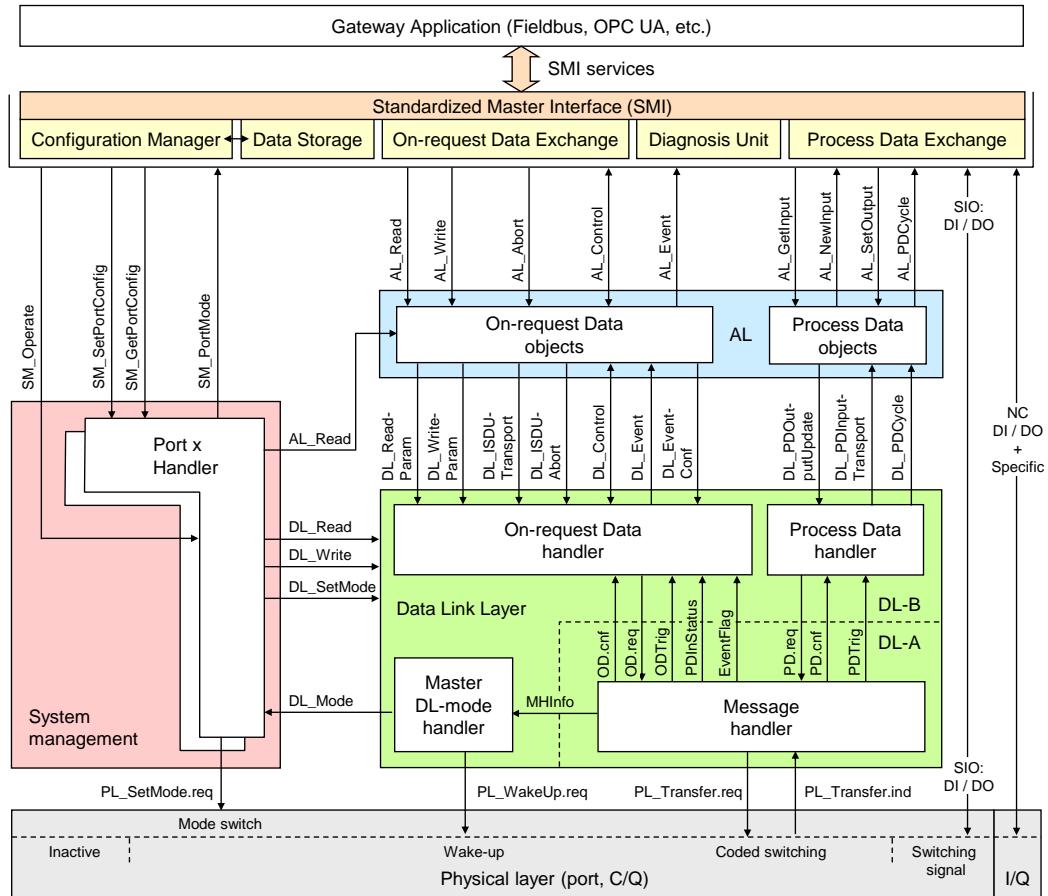

3345

Figure 96 – Structure, applications, and services of a Master

3346 The Master applications are located on top of the Master structure and consist of:

- 3347 • Configuration Manager (CM), which transforms the user configuration assignments into port set-ups;
- 3349 • On-request Data Exchange (ODE), which provides for example acyclic parameter access;
- 3350 • Data Storage (DS) mechanism, which can be used to save and restore the Device 3351 parameters;
- 3352 • Diagnosis Unit (DU), which routes Events from the AL to the Data Storage unit or the 3353 gateway application;
- 3354 • Process Data Exchange (PDE), building the bridge to upper level automation instruments.

3355


3356 They are accessible by the gateway applications (and others) via the Standardized Master 3357 Interface (SMI) and its services/methods.

3358 These services and corresponding functions are specified in an abstract manner within 3359 clauses 11.2.2 to 11.2.22 and Annex E.

3360 Master applications are described in detail in clauses 11.3 to 11.7. The Configuration Mana- 3361 ger (CM) and the Data Storage mechanism (DS) require special coordination with respect to 3362 On-request Data.

3363 **11.1.3 Object view of a Master and its ports**

3364 Figure 97 illustrates the data object model of Master and ports from an SMI point of view.

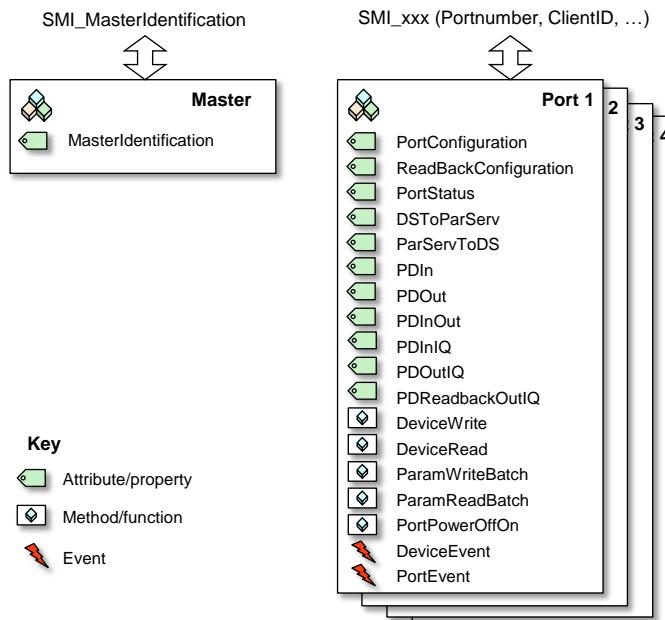

3365


3366 **Figure 97 – Object model of Master and Ports**

3367 Each object comes with attributes and methods that can be accessed by SMI services. Both, 3368 SMI services and attributes/methods/events are specified in the following clause 11.2.

3369 **11.2 Services of the Standardized Master Interface (SMI)**

3370 **11.2.1 Overview**

3371 Figure 98 illustrates the individual SMI services available for example to gateway applica- 3372 tions.

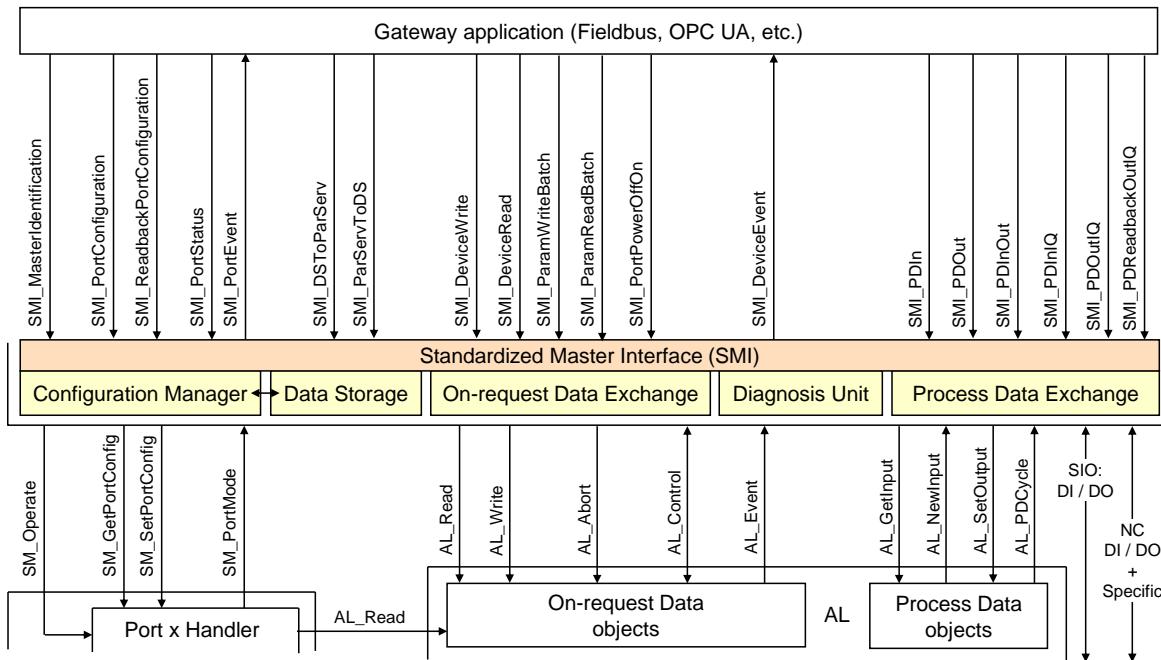**Figure 98 – SMI services**

Communication interfaces such as Fieldbus, OPC UA, JSON, UDP or alike are responsible to provide access to the SMI services. It is mandatory for upper level communication systems to refer to the SMI definitions in their adaptations. Functionality behind SMI is mandatory unless it is specifically declared as optional.

Table 105 lists the SMI services available to gateway applications or other clients.

Table 105 – SMI services

Service name	Master	M/O/C	Purpose
SMI_MasterIdentification	R	M	Universal service to identify any Master
SMI_PortConfiguration	R	M	Setting up port configuration
SMI_ReadbackPortConfiguration	R	M	Retrieve current port configuration
SMI_PortStatus	R	M	Retrieve port status
SMI_DSToParServ	R	M	Transfer Data Storage to parameter server
SMI_ParServToDS	R	M	Transfer Parameter server to Data Storage
SMI_DeviceWrite	R	M	ISDU transport to Device
SMI_DeviceRead	R	M	ISDU transport from Device
SMI_ParamWriteBatch	R	O	Batch ISDU transport of parameters (write)
SMI_ParamReadBatch	R	O	Batch ISDU transport of parameters (read)
SMI_PortPowerOffOn	R	O	PortPowerOffOn
SMI_DeviceEvent	I	M	Universal "Push" service for Device Events
SMI_PortEvent	I	M	Universal "Push" service for port Events
SMI_PDIn	R	M	Retrieve PD from InBuffer
SMI_PDOOut	R	M	Set PD in OutBuffer
SMI_PDIInQ	R	C	Process data in at I/Q (Pin 2 on M12)
SMI_PDOOutQ	R	C	Process data out at I/Q (Pin 2 on M12)
SMI_PDReadbackOutQ	R	C	Retrieve process data out at I/Q (Pin 2 on M12)

Service name	Master	M/O/C	Purpose
Key			
I Initiator of service	R	Receiver (Responder) of service	
M Mandatory	O Optional	C Conditional	

3381

11.2.2 Structure of SMI service arguments

3383 The SMI service arguments contain a fixed structure of standard elements, which are
3384 characterized in the following.

3385 **ClientID**

3386 Gateway Applications may use the SMI services concurrently as clients of the SMI (see
3387 11.2.3). Thus, SMI services will assign a unique ClientID to each individual client. It is the
3388 responsibility of the Gateway Application(s) to coordinate these SMI service activities and to
3389 route responses to the calling client. The maximum number of concurrent clients is Master
3390 specific.

3391 Data type: Unsigned8

3392 Permitted values: 1 to vendor specific maximum number of concurrent clients. "0" is
3393 solely used for broadcast purposes in case of indications, see 11.2.15 and 11.2.16.

3394 **PortNumber**

3395 Each SMI service contains the port number in case of an addressed port object (job) or in
3396 case of a triggered port object (event).

3397 Data type: Unsigned8

3398 Permitted values: 1 to MaxNumberOfPorts. "0" is solely used to address the entire Master
3399 (see 11.2.4).

3400 **ExpArgBlockID**

3401 This element specifies the expected ArgBlockID to carry the response data of a service
3402 request. The IDs are defined in Table E.1.

3403 Data type: Unsigned16

3404 Permitted values: 1 to to 65535

3405 **RefArgBlockID**

3406 Within results, this element specifies the ID of the Argblock sent by the service request. The
3407 IDs are defined in Table E.1.

3408 Data type: Unsigned16

3409 Permitted values: 1 to to 65535

3410 **ArgBlockLength**

3411 This element specifies the total length of the subsequent ArgBlock. Vendor specific exten-
3412 sions are not permitted.

3413 Data type: Unsigned16

3414 Permitted values: 2 to to 65535

3415 **ArgBlock**

3416 All SMI services contain an ArgBlock characterized by an ArgBlockID and its description.
3417 Service results provide the ArgBlock associated to the ExpArgBlockID, which is part of this
3418 ArgBlock. The possibly variable length of the ArgBlock is predefined through definition in this
3419 document.

3420 Pairs of ExpArgBlock/RefArgBlock and ArgBlockID within one SMI structure shall be unique.
3421 Detailed coding of the ArgBlocks is specified in Annex E. ArgBlock types and their
3422 ArgBlockIDs are defined in Table E.1. Service errors are listed at each individual service and
3423 in C.4.

3424 11.2.3 Concurrency and prioritization of SMI services

3425 The following rules apply for concurrency of SMI services when accessing attributes:

- 3426 • All SMI services with different PortNumber access different port objects (disjoint operations);
- 3427
- 3428 • Different SMI services using the same PortNumber access different attributes/methods of a port object (concurrent operations);
- 3429
- 3430 • Identical SMI services using the same PortNumber and different ClientIDs access identical attributes concurrently (consistency).
- 3431

3432 The following rules apply for SMI services when accessing methods:

- 3433 • SMI services for methods using different PortNumbers access different port objects (disjoint operations);
- 3434
- 3435 • SMI services for methods using the same PortNumber and different ClientIDs create job instances and will be processed in the order of their arrival (*n* Client concurrency);
- 3436
- 3437 • SMI_ParamWriteBatch (ArgBlock "DeviceBatch") shall be treated as a job instance that shall not be interrupted by any SMI_DeviceWrite or SMI_DeviceRead service.
- 3438

3439 Prioritization of SMI services within the Standardized Master Interface is not performed. All services accessing methods will be processed in the order of their arrival (first come, first serve).

3442 11.2.4 SMI_MasterIdentification

3443 So far, an explicit identification of a Master did not have priority in SDCL since gateway applications usually provided hard-coded identification and maintenance information as required by the fieldbus system. Due to the requirement "one Master Tool (PCDT) fits different Master brands", corresponding new Master Tools shall be able to connect to Masters providing an SMI. For that purpose, the SMI_MasterIdentification service has been created. It allows Master Tools to adjust to individual Master brands and types, if a particular fieldbus gateway provides the SMI services in a uniform accessible coding (see clause 13). A class of Masters with a certain MasterID and VendorID shall not deviate in communication and functional behavior (Master type identification). Table 106 shows the service SMI_MasterIdentification.

3452 **Table 106 – SMI_MasterIdentification**

Parameter name	.req	.cnf
Argument	M	
ClientID	M	
PortNumber (0x00)	M	
ExpArgBlockID (e.g. 0x0001)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)	S	
ClientID	M	
PortNumber (0x00)	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)	S	
ClientID	M	
PortNumber (0x00)	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

3453

3454 Argument

3455 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3456

ClientID

3457 **PortNumber**
 3458 This parameter contains a virtual Port addressing the entire Master unit (0x00)

3459 **ExpArgBlockID**
 3460 This parameter contains an ArgBlockID of the MasterIdent family, e.g. 0x0001 (see Table
 3461 E.1)

3462 **ArgBlockLength**
 3463 This parameter contains the length of the "VoidBlock" ArgBlock

3464 **ArgBlock**
 3465 This parameter contains the ArgBlock "VoidBlock" (0xFFFF0, see Annex E.17)

3466 **Result (+):**
 3467 This selection parameter indicates that the service request has been executed successfully.

3468 **ClientID**

3469 **PortNumber**

3470 **RefArgBlockID**
 3471 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

3472 **ArgBlockLength**
 3473 This parameter contains the length of the subsequent ArgBlock

3474 **ArgBlock**
 3475 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Table E.2)

3476 **Result (-):**
 3477 This selection parameter indicates that the service request failed

3478 **ClientID**

3479 **PortNumber**

3480 **RefArgBlockID**
 3481 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

3482 **ArgBlockLength**
 3483 This parameter contains the length of the "JobError" ArgBlock

3484 **ArgBlock**
 3485 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)
 3486 Permitted values in prioritized order (see Table C.3):
 3487 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)
 3488 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

3489 **11.2.5 SMI_PortConfiguration**

3490 With the help of this service, an SMI client such as a gateway application launches the indicated Master port and the connected Device using the elements in parameter PortConfigList.
 3491 The service shall be accepted immediately and performed without delay. Content of Data
 3492 Storage for that port will be deleted at each relevant change of port configuration via
 3493 "DS_Delete" (see Figure 99). Table 107 shows the structure of the service. The ArgBlock
 3494 usually is different in SDCI Extensions such as safety and wireless and specified there (see
 3495 [10] and [11]).

Table 107 – SMI_PortConfiguration

Parameter name	.req	.cnf
Argument	M	
ClientID	M	
PortNumber	M	
ExpArgBlockID (VoidBlock: 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (e.g. 0x8000)	M	
Result (+)		S
ClientID		M

Parameter name	.req	.cnf
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x8000)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x8000)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

3498

Argument

3499 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3500

ClientID

3502

PortNumber

3503

ExpArgBlockID

3504

This parameter contains the ArgBlockID "VoidBlock" (0xFFFF0, see Annex E.17)

3505

ArgBlockLength

3506

This parameter contains the length of the subsequent ArgBlock to be "pushed"

3507

ArgBlock

3508

This parameter contains an ArgBlock of the PortConfigList family, e.g. 0x8000 (see Table E.1)

3510

Result (+):

3511

This selection parameter indicates that the service request has been executed successfully.

3512

ClientID

3513

PortNumber

3514

RefArgBlockID

3515

This parameter contains as reference the ID of the ArgBlock sent by the request (0x8000)

3516

ArgBlockLength

3517

This parameter contains the length of the subsequent ArgBlock

3518

ArgBlock

3519

This parameter contains the ArgBlock associated to the ExpArgBlockID (0xFFFF0)

3520

Result (-):

3521

This selection parameter indicates that the service request failed

3522

ClientID

3523

PortNumber

3524

RefArgBlockID

3525

This parameter contains as reference the ID of the ArgBlock sent by the request (0x8000)

3526

ArgBlockLength

3527

This parameter contains the length of the "JobError" ArgBlock

3528

ArgBlock

3529

This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

3530

Permitted values in prioritized order:

3531

PORt_NUM_INVALID (incorrect Port number)

3532

ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

3533

ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

3534

ARGBLOCK_INCONSISTENT (incorrect ArgBlock content type)

3535

ARGBLOCK_VALOUTOFRANGE (incorrect ArgBlock content)

3536 **11.2.6 SMI_ReadbackPortConfiguration**

3537 This service allows for retrieval of the effective configuration of the indicated Master port.
 3538 Table 108 shows the structure of the service. This service usually is different in SDCI
 3539 Extensions such as safety and wireless (see [10] and [11]).

3540 **Table 108 – SMI_ReadbackPortConfiguration**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (e.g. 0x8000)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

3541

Argument

3542 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3544 **ClientID**3545 **PortNumber**3546 **ExpArgBlockID**

3547 This parameter contains an ArgBlockID of the PortConfigList family, e.g. 0x8000 (see
 3548 Table E.1)

3549 **ArgBlockLength**

3550 This parameter contains the length of the "VoidBlock" ArgBlock

3551 **ArgBlock**

3552 This parameter contains the ArgBlock "VoidBlock" (0xFFFF0, see Annex E.17)

3553 **Result (+):**

3554 This selection parameter indicates that the service request has been executed successfully.

3555 **ClientID**3556 **PortNumber**3557 **RefArgBlockID**

3558 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

3559 **ArgBlockLength**

3560 This parameter contains the length of the subsequent ArgBlock

3561 **ArgBlock**

3562 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Annex E.3)

3563 **Result (-):**

3564 This selection parameter indicates that the service request failed

3565 **ClientID**3566 **PortNumber**3567 **RefArgBlockID**

3568 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

ArgBlockLength

This parameter contains the length of the "JobError" ArgBlock

ArgBlock

This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

Permitted values in prioritized order:

PORT_NUM_INVALID (incorrect Port number)

ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

11.2.7 SMI_PortStatus

This service allows for retrieval of the effective status of the indicated Master port. Table 109 shows the structure of the service. This service usually is different in SDCI Extensions such as safety and wireless (see [10] and [11]).

Table 109 – SMI_PortStatus

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (e.g. 0x9000)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

Argument

The specific parameters of the service request are transmitted in the argument (see 11.2.2).

ClientID**PortNumber****ExpArgBlockID**

This parameter contains an ArgBlockID of the PortStatusList family, e.g. 0x9000 (see Table E.1)

ArgBlockLength

This parameter contains the length of the "VoidBlock" ArgBlock

ArgBlock

This parameter contains the ArgBlock "VoidBlock" (0xFFFF0, see Annex E.17)

Result (+):

This selection parameter indicates that the service request has been executed successfully.

ClientID**PortNumber****RefArgBlockID**

This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

ArgBlockLength

This parameter contains the length of the subsequent ArgBlock

ArgBlock

This parameter contains the ArgBlock associated to the ExpArgBlockID (see Annex E.4)

Result (-):

This selection parameter indicates that the service request failed

ClientID**PortNumber****RefArgBlockID**

This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

ArgBlockLength

This parameter contains the length of the "JobError" ArgBlock

ArgBlock

This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

Permitted values in prioritized order:

PORT_NUM_INVALID (incorrect Port number)

ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

11.2.8 SMI_DSToParServ

With the help of this service, an SMI client such as a gateway application is able to retrieve the technology parameter set of a Device from Data Storage and back it up within an upper level parameter server (see Figure 95, clauses 11.4, and 13.4.2). Table 110 shows the structure of the service.

In case of DI or DO on this Port, content of Data Storage is cleared. The same applies if Data Storage is not enabled for this Port.

Table 110 – SMI_DSToParServ

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (0x7000)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

3626

Argument

The specific parameters of the service request are transmitted in the argument (see 11.2.2).

ClientID**PortNumber****ExpArgBlockID**

This parameter contains the ArgBlockID 0x7000 (see Table E.1)

ArgBlockLength

This parameter contains the length of the "VoidBlock" ArgBlock

3635 ArgBlock

3636 This parameter contains the ArgBlock "VoidBlock" (0xFFFF0, see Annex E.17)

3637 Result (+):

3638 This selection parameter indicates that the service request has been executed successfully.

3639 ClientID**3640 PortNumber****3641 RefArgBlockID**

3642 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

3643 ArgBlockLength

3644 This parameter contains the length of the subsequent ArgBlock

3645 ArgBlock

3646 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Annex E.6)

3647 Result (-):

3648 This selection parameter indicates that the service request failed

3649 ClientID**3650 PortNumber****3651 RefArgBlockID**

3652 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

3653 ArgBlockLength

3654 This parameter contains the length of the "JobError" ArgBlock

3655 ArgBlock

3656 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

3657 Permitted values in prioritized order:

3658 PORT_NUM_INVALID (incorrect Port number)

3659 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

3660 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

3661 11.2.9 SMI_ParServToDS

3662 With the help of this service, an SMI client such as a gateway application is able to restore
3663 the technology parameter set of a Device within Data Storage from an upper level parameter
3664 server (see Figure 95, clauses 11.4, and 13.4.2).

3665 Table 111 shows the structure of the service.

3666 In case Data Storage is not supported or not activated on this Port, the service will be replied
3667 with Result(-) INCONSISTENT_DS_DATA. The same applies if Data Storage is not consistent
3668 with Port configuration, e.g. VendorID does not match.

3669 **Table 111 – SMI_ParServToDS**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (VoidBlock: 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (0x7000)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x7000)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)		S
ClientID	M	
PortNumber	M	

Parameter name	.req	.cnf
RefArgBlockID (ID of request ArgBlock 0x7000)		M
ArgBlockLength		M
ArgBlock (JobError: 0xFFFF)		M

3670

Argument

3672 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3673 **ClientID**3674 **PortNumber**3675 **ExpArgBlockID**

3676 This parameter contains the ArgBlockID "VoidBlock" (0xFFFF0, see Annex E.17)

3677 **ArgBlockLength**

3678 This parameter contains the length of the subsequent ArgBlock to be "pushed"

3679 **ArgBlock**

3680 This parameter contains the ArgBlock DS_Data (0x7000, see Table E.1)

3681 **Result (+):**

3682 This selection parameter indicates that the service request has been executed successfully.

3683 **ClientID**3684 **PortNumber**3685 **RefArgBlockID**

3686 This parameter contains as reference the ID of the ArgBlock sent by the request (0x7000)

3687 **ArgBlockLength**

3688 This parameter contains the length of the subsequent ArgBlock

3689 **ArgBlock**

3690 This parameter contains the ArgBlock associated to the ExpArgBlockID

3691 **Result (-):**

3692 This selection parameter indicates that the service request failed

3693 **ClientID**3694 **PortNumber**3695 **RefArgBlockID**

3696 This parameter contains as reference the ID of the ArgBlock sent by the request (0x7000)

3697 **ArgBlockLength**

3698 This parameter contains the length of the "JobError" ArgBlock

3699 **ArgBlock**

3700 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18

3701

3702 Permitted values in prioritized order:

3703 PORT_NUM_INVALID (incorrect Port number)

3704 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

3705 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

3706 ARGBLOCK_INCONSISTENT (incorrect ArgBlock content type),

3707 INCONSISTENT_DS_DATA (inconsistent Data Storage data).

3708 **11.2.10 SMI_DeviceWrite**3709 This service allows for writing On-request Data (OD) for propagation to the Device. Table 112
3710 shows the structure of the service.

3711

Table 112 – SMI_DeviceWrite

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (VoidBlock: 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (0x3000)	M	
Result (+)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x3000)	M	
ArgBlockLength	M	
ArgBlock (associated to the ExpArgBlockID)	M	
Result (-)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x3000)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

3712

Argument

3713 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3715

ClientID

3716

PortNumber

3717

ExpArgBlockID

3718

This parameter contains the ArgBlockID "VoidBlock" (0xFFFF0, see Annex E.17)

3719

ArgBlockLength

3720

This parameter contains the length of the subsequent ArgBlock to be "pushed"

3721

ArgBlock

3722

This parameter contains the ArgBlock "On-requestData" (0x3000, see Table E.1)

3723

Result (+):

3724

This selection parameter indicates that the service request has been executed successfully.

3725

ClientID

3726

PortNumber

3727

RefArgBlockID

3728

This parameter contains as reference the ID of the ArgBlock sent by the request (0x3000)

3729

ArgBlockLength

3730

This parameter contains the length of the subsequent ArgBlock

3731

ArgBlock

3732

This parameter contains the ArgBlock associated to the ExpArgBlockID

3733

Result (-):

3734

This selection parameter indicates that the service request failed

3735

ClientID

3736

PortNumber

3737

RefArgBlockID

3738

This parameter contains as reference the ID of the ArgBlock sent by the request (0x3000)

3739

ArgBlockLength

3740

This parameter contains the length of the "JobError" ArgBlock

3741

ArgBlock

3742

This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

3743 Permitted values in prioritized order:
 3744 PORT_NUM_INVALID (incorrect Port number)
 3745 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)
 3746 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)
 3747 ARGBLOCK_INCONSISTENT (incorrect ArgBlock content type)
 3748 SERVICE_TEMP_UNAVAILABLE (Master busy)
 3749 DEVICE_NOT_ACCESSIBLE (Device not communicating)
 3750 Device ErrorType (See Annex C.2 and 0)

3751 11.2.11 SMI_DeviceRead

3752 This service allows for reading On-request Data (OD) from the Device via the Master. Table
 3753 113 shows the structure of the service.

3754 **Table 113 – SMI_DeviceRead**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID	M	
ArgBlockLength	M	
ArgBlock	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID	M	
ArgBlockLength	M	
ArgBlock	M	
Result (-)		S
ClientID	M	
PortNumber	M	
RefArgBlockID	M	
ArgBlockLength	M	
ArgBlock	M	

3755

3756 Argument

3757 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3758 **ClientID**

3759 **PortNumber**

3760 **ExpArgBlockID**

3761 This parameter contains the ArgBlockID of "On-requestData" (0x3000, see Table E.1)

3762 **ArgBlockLength**

3763 This parameter contains the length of the subsequent ArgBlock

3764 **ArgBlock**

3765 This parameter contains the ArgBlock "On-requestData/Index" (0x3001, see Annex E.5)

3766 **Result (+):**

3767 This selection parameter indicates that the service request has been executed successfully.

3768 **ClientID**

3769 **PortNumber**

3770 **RefArgBlockID**

3771 This parameter contains as reference the ID of the ArgBlock sent by the request (0x3001)

3772 **ArgBlockLength**

3773 This parameter contains the length of the subsequent ArgBlock

3774 **ArgBlock**

3775 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Table E.5)

3776

3777 Result (-):

3778 This selection parameter indicates that the service request failed

3779 ClientID**3780 PortNumber****3781 RefArgBlockID**

3782 This parameter contains as reference the ID of the ArgBlock sent by the request (0x3001)

3783 ArgBlockLength

3784 This parameter contains the length of the "JobError" ArgBlock

3785 ArgBlock

3786 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

3787 Permitted values in prioritized order:

3788 PORT_NUM_INVALID	(incorrect Port number)
3789 ARGBLOCK_NOT_SUPPORTED	(ArgBlock unknown)
3790 ARGBLOCK_LENGTH_INVALID	(incorrect ArgBlock length)
3791 ARGBLOCK_INCONSISTENT	(incorrect ArgBlock content type)
3792 SERVICE_TEMP_UNAVAILABLE	(Master busy)
3793 DEVICE_NOT_ACCESSIBLE	(Device not communicating)
3794 Device ErrorType	(See Annex C.2 and 0)

3795 11.2.12 SMI_ParamWriteBatch

3796 This service allows for the "push" transfer of a large number of consistent Device objects via
3797 multiple ISDUs. Table 114 shows the structure of the service. The following rules apply:

- 3798 • The service transfers the ArgBlock "DeviceParBatch" to the Master that conveys the
3799 content object by object to the Device via AL_Write (ISDU).
- 3800 • The same ArgBlock structure is returned as Result (+). However, a value "0x0000"
3801 indicates success of a particular AL_Write or an ISDU ErrorType of a failed AL_Write
3802 instead of a parameter record.
- 3803 • Result (-) is only returned in case of a failing service via "JobError".

3804 NOTE1 This service supposes use of Block Parameterization and sufficient buffer resources

3805 NOTE2 This service may have unexpected duration

3806 This service is optional. Availability is indicated via Master identification (see Table E.2)

3807 **Table 114 – SMI_ParamWriteBatch**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID	M	
ArgBlockLength	M	
ArgBlock	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID	(ID of request ArgBlock 0x7001)	M
ArgBlockLength	M	
ArgBlock	M	
Result (-)		S
ClientID	M	
PortNumber	M	
RefArgBlockID	(ID of request ArgBlock 0x7001)	M
ArgBlockLength	M	
ArgBlock	M	

3808

3809 Argument

3810 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3811 **ClientID**
 3812 **PortNumber**
 3813 **ExpArgBlockID**
 3814 This parameter contains the ArgBlockID "DeviceParBatch" (0x7001, see Annex E.7)
 3815 **ArgBlockLength**
 3816 This parameter contains the length of the subsequent ArgBlock to be "pushed"
 3817 **ArgBlock**
 3818 This parameter contains the ArgBlock "DeviceParBatch" (0x7001, see Table E.1)

3819 **Result (+):**
 3820 This selection parameter indicates that the service request has been executed successfully.

3821 **ClientID**
 3822 **PortNumber**
 3823 **RefArgBlockID**
 3824 This parameter contains as reference the ID of the ArgBlock sent by the request (0x7001)
 3825 **ArgBlockLength**
 3826 This parameter contains the length of the subsequent ArgBlock
 3827 **ArgBlock**
 3828 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Table E.7)
 3829

3830 **Result (-):**
 3831 This selection parameter indicates that the service request failed

3832 **ClientID**
 3833 **PortNumber**
 3834 **RefArgBlockID**
 3835 This parameter contains as reference the ID of the ArgBlock sent by the request (0x7001)
 3836 **ArgBlockLength**
 3837 This parameter contains the length of the "JobError" ArgBlock
 3838 **ArgBlock**
 3839 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)
 3840 Permitted values in prioritized order:
 3841 SERVICE_NOT_SUPPORTED (Service unknown)
 3842 PORT_NUM_INVALID (incorrect Port number)
 3843 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)
 3844 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)
 3845 ARGBLOCK_INCONSISTENT (incorrect ArgBlock content type)
 3846 ARGBLOCK_VALOUTOFRANGE (incorrect ArgBlock content)
 3847 MEMORY_OVERRUN (insufficient memory)
 3848 SERVICE_TEMP_UNAVAILABLE (Master busy)
 3849 DEVICE_NOT_ACCESSIBLE (Device not communicating)

3850 **11.2.13 SMI_ParamReadBatch**
 3851 This service allows for the "pull" transfer of a large number of consistent Device parameters
 3852 via multiple ISDUs. Table 114 shows the structure of the service. The following rules apply:

- 3853 • The service transfers the ArgBlock "IndexList" to the Master that transforms the content
 3854 entry by entry into AL_Read (ISDU) to the Device.
- 3855 • The corresponding ArgBlock "DeviceParBatch" is returned as Result (+). In case of a
 3856 successful AL_Read of an object, the corresponding parameter record or an ISDU
 3857 ErrorType of a failed AL_Read instead of a parameter record is returned.
- 3858 • Result (-) is only returned in case of a failing service via "JobError".

3859 NOTE1 This service supposes use of Block Parameterization and sufficient buffer resources

3860 NOTE2 This service may have unexpected duration

3861 This service is optional. Availability is indicated via Master identification (see Table E.2)

3862

Table 115 – SMI_ParamReadBatch

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID ("DeviceParBatch": 0x7001)	M	
ArgBlockLength	M	
ArgBlock ("IndexList": 0x7002)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x7002)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x7002)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

3863

Argument

3864 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3865

ClientID

3866

PortNumber

3867

ExpArgBlockID

3868

This parameter contains the ArgBlockID of "DeviceParBatch" (0x7001, see Table E.1)

3869

ArgBlockLength

3870

This parameter contains the length of the ArgBlock "IndexList"

3871

ArgBlock

3872

This parameter contains the ArgBlock "IndexList" (0x7002, see Table E.1)

3873

Result (+):

3874

This selection parameter indicates that the service request has been executed successfully.

3875

ClientID

3876

PortNumber

3877

RefArgBlockID

3878

This parameter contains as reference the ID of the ArgBlock sent by the request (0x7002)

3879

ArgBlockLength

3880

This parameter contains the conditional length of the subsequent ArgBlock

3881

ArgBlock

3882

This parameter contains the ArgBlock associated to the ExpArgBlockID (see Table E.7)

3883

3884

Result (-):

3885

This selection parameter indicates that the service request failed

3886

ClientID

3887

PortNumber

3888

RefArgBlockID

3889

This parameter contains as reference the ID of the ArgBlock sent by the request (0x7002)

3890

ArgBlockLength

3891

3892 This parameter contains the length of the "JobError" ArgBlock

ArgBlock

3894 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

3895 Permitted values in prioritized order:

SERVICE_NOT_SUPPORTED	(Service unknown)
PORT_NUM_INVALID	(incorrect Port number)
ARGBLOCK_NOT_SUPPORTED	(ArgBlock unknown)
ARGBLOCK_LENGTH_INVALID	(incorrect ArgBlock length)
ARGBLOCK_INCONSISTENT	(incorrect ArgBlock content type)
ARGBLOCK_VALOUTOFRANGE	(incorrect ArgBlock content)
MEMORY_OVERRUN	(insufficient memory)
SERVICE_TEMP_UNAVAILABLE	(Master busy)
DEVICE_NOT_ACCESSIBLE	(Device not communicating)

11.2.14 SMI_PortPowerOffOn

This service allows for switching Power 1 of a particular port off and on (see 5.4.1). It returns upon elapsed time provided within the ArgBlock. Table 116 shows the structure of the service.

Table 116 – SMI_PortPowerOffOn

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (VoidBlock: 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock ("PortPowerOffOn": 0x7003)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x7003)	M	
ArgBlockLength	M	
ArgBlock (associated to the ExpArgBlockID)	M	
Result (-)		S
ClientID	M	
PortNumber	M	
ExpArgBlockID (ID of request ArgBlock 0x7003)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

3909

Argument

3911 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

3912

ClientID

3913

PortNumber

3914

ExpArgBlockID

3915 This parameter contains the ArgBlockID "VoidBlock" (0xFFFF0, see Annex E.17)

3916

ArgBlockLength

3917 This parameter contains the length of the subsequent ArgBlock to be "pushed"

3918

ArgBlock

3919 This parameter contains the ArgBlock "PortPowerOffOn" (0x7003, see Table E.1)

3920

Result (+):

3921 This selection parameter indicates that the service request has been executed successfully.

3922

ClientID

3923

PortNumber

3924

RefArgBlockID

3925 This parameter contains as reference the ID of the ArgBlock sent by the request (0x7003)

ArgBlockLength

This parameter contains the length of the subsequent ArgBlock

ArgBlock

This parameter contains the ArgBlock associated to the ExpArgBlockID (0xFFFF0)

Result (-):

This selection parameter indicates that the service request failed

ClientID**PortNumber****RefArgBlockID**

This parameter contains as reference the ID of the ArgBlock sent by the request (0x7003)

ArgBlockLength

This parameter contains the length of the "JobError" ArgBlock

ArgBlock

This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

Permitted values in prioritized order:

PORT_NUM_INVALID (incorrect Port number)

ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

ARGBLOCK_INCONSISTENT (incorrect ArgBlock content type)

ARGBLOCK_VALOUTOFRANGE (incorrect ArgBlock content)

SERVICE_TEMP_UNAVAILABLE (Master busy)

11.2.15 SMI_DeviceEvent

This service allows for signaling a Master Event created by the Device. Table 117 shows the structure of the service.

Table 117 – SMI_DeviceEvent

Parameter name	.ind	.rsp
Argument		
ClientID (= "0" → Broadcast)	M	
PortNumber	M	
ExpArgBlockID (VoidBlock: 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock ("DeviceEvent": 0xA000)	M	
Acknowledgment		S
ClientID (= "0")	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xA000)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	

3951

Argument

The specific parameters of this indication are transmitted in the argument (see 11.2.2).

ClientID

For this indication, the ClientID shall be "0" ("broadcast" to upper level system)

PortNumber**ExpArgBlockID**

This parameter contains the ArgBlockID "VoidBlock" (0xFFFF0, see Annex E.17)

ArgBlockLength

This parameter contains the length of the reported ArgBlock 0xA000

ArgBlock

This parameter contains the ArgBlock "DeviceEvent" (0xA000, see Table E.1)

Acknowledgment

This selection parameter indicates that the service request has been executed successfully.

ClientID

The ClientID shall be "0"

PortNumber**RefArgBlockID**

This parameter contains as reference the ID of the ArgBlock sent by the request (0xA000)

ArgBlockLength

This parameter contains the length of the subsequent ArgBlock

ArgBlock

This parameter contains the ArgBlock associated to the ExpArgBlockID (0xFFFF0)

11.2.16 SMI_PortEvent

This service allows for signaling a Master Event created by the Port. Table 118 shows the structure of the service.

Table 118 – SMI_PortEvent

Parameter name	.ind	.rsp
Argument		
ClientID (= "0" → Broadcast)	M	
PortNumber	M	
ExpArgBlockID (VoidBlock: 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (PortEvent: 0xA001)	M	
Acknowledgment	S	
ClientID (= "0")	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xA001)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	

Argument

The specific parameters of this indication are transmitted in the argument (see 11.2.2).

ClientID

For this indication, the ClientID shall be "0" ("broadcast" to upper level system)

PortNumber**ExpArgBlockID**

This parameter contains the ArgBlockID "VoidBlock" (0xFFFF0, see Annex E.17)

ArgBlockLength

This parameter contains the length of the reported ArgBlock 0xA001

ArgBlock

This parameter contains the ArgBlock "PortEvent" (0xA001, see Table E.1)

Acknowledgment

This selection parameter indicates that the service request has been executed successfully.

ClientID

The ClientID shall be "0"

PortNumber**RefArgBlockID**

This parameter contains as reference the ID of the ArgBlock sent by the request (0xA001)

ArgBlockLength

This parameter contains the length of the subsequent ArgBlock

ArgBlock

4000 This parameter contains the ArgBlock associated to the ExpArgBlockID (0xFFFF0)

4001 11.2.17 SMI_PDIn

4002 This service allows for cyclically reading input Process Data from an InBuffer (see 11.7.2.1).
 4003 Table 119 shows the structure of the service. This service usually has companion services in
 4004 SDCI Extensions such as safety and wireless (see [10] and [11]).

4005 **Table 119 – SMI_PDIn**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (e.g. 0x1001)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

4006 **Argument**
 4007 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

4009 **ClientID**

4010 **PortNumber**

4011 **ExpArgBlockID**

4012 This parameter contains an ArgBlockID of the Process Data family, e.g. 0x1001 (see Table
 4013 E.1)

4014 **ArgBlockLength**

4015 This parameter contains the length of the "VoidBlock" ArgBlock

4016 **ArgBlock**

4017 This parameter contains the ArgBlock "VoidBlock" (0xFFFF0, see Annex E.17)

4018 **Result (+):**

4019 This selection parameter indicates that the service request has been executed successfully.

4020 **ClientID**

4021 **PortNumber**

4022 **RefArgBlockID**

4023 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

4024 **ArgBlockLength**

4025 This parameter contains the length of the subsequent ArgBlock

4026 **ArgBlock: PDIn**

4027 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Annex E.10)

4028

4029 **Result (-):**

4030 This selection parameter indicates that the service request failed

4031 **ClientID**

4032 **PortNumber**
 4033 **RefArgBlockID**
 4034 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF)
 4035 **ArgBlockLength**
 4036 This parameter contains the length of the "JobError" ArgBlock
 4037 **ArgBlock**
 4038 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)
 4039 Permitted values in prioritized order:
 4040 PORT_NUM_INVALID (incorrect Port number)
 4041 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)
 4042 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)
 4043 DEVICE_NOT_IN_OPERATE (Process Data not accessible)

4044 11.2.18 SMI_PDOOut

4045 This service allows for cyclically writing output Process Data to an OutBuffer (see 11.7.3.1).
 4046 Table 120 shows the structure of the service. This service usually has companion services in
 4047 SDCI Extensions such as safety and wireless (see [10] and [11]).

4048 **Table 120 – SMI_PDOOut**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID	(VoidBlock: 0xFFFF)	M
ArgBlockLength	M	
ArgBlock	(e.g. 0x1002)	M
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID	(ID of request ArgBlock 0x1002)	M
ArgBlockLength	M	
ArgBlock	(VoidBlock: 0xFFFF)	M
Result (-)		S
ClientID	M	
PortNumber	M	
RefArgBlockID	(ID of request ArgBlock 0x1002)	M
ArgBlockLength	M	
ArgBlock	(JobError: 0xFFFF)	M

4049 **Argument**
 4050 The specific parameters of the service request are transmitted in the argument (see 11.2.2).
 4051

4052 **ClientID**
 4053 **PortNumber**
 4054 **ExpArgBlockID**
 4055 This parameter contains the ArgBlockID "VoidBlock" (0xFFFF, see Annex E.17)
 4056 **ArgBlockLength**
 4057 This parameter contains the length of the subsequent ArgBlock to be "pushed"
 4058 **ArgBlock**
 4059 This parameter contains ArgBlock of the Process Data family, e.g. 0x1002 (see Table E.1)
 4060 **Result (+):**
 4061 This selection parameter indicates that the service request has been executed successfully.

4062 **ClientID**
 4063 **PortNumber**
 4064 **RefArgBlockID**

4065 This parameter contains as reference the ID of the ArgBlock sent by the request (0x1002)

ArgBlockLength

4067 This parameter contains the length of the subsequent ArgBlock

ArgBlock

4069 This parameter contains the ArgBlock associated to the ExpArgBlockID (0xFFFF0)

Result (-):

4071 This selection parameter indicates that the service request failed

ClientID

PortNumber

RefArgBlockID

4075 This parameter contains as reference the ID of the ArgBlock sent by the request (0x1002)

ArgBlockLength

4077 This parameter contains the length of the "JobError" ArgBlock

ArgBlock

4079 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

4080 Permitted values in prioritized order:

4081 PORT_NUM_INVALID (incorrect Port number)

4082 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

4083 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

4084 ARGBLOCK_INCONSISTENT (incorrect ArgBlock content type)

4085 ARGBLOCK_VALOUTOFRANGE (incorrect ArgBlock content)

4086 DEVICE_NOT_IN_OPERATE (Process Data not accessible)

11.2.19 SMI_PDInOut

4088 This service allows for periodically reading input from an InBuffer (see 11.7.2.1) and periodically reading output Process Data from an OutBuffer (see 11.7.3.1). Table 121 shows the structure of the service. This service usually has companion services in SDCI Extensions such as safety and wireless (see [10] and [11]).

4092 **Table 121 – SMI_PDInOut**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (e.g. 0x1003)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

4093

Argument

4094 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

4096

ClientID

4097

PortNumber

4098

ExpArgBlockID

4099 This parameter contains an ArgBlockID of the "Process Data" family, e.g. 0x1003 (see
 4100 Table E.1)

ArgBlockLength

This parameter contains the length of the subsequent ArgBlock

ArgBlock

This parameter contains the ArgBlock "VoidBlock" (0xFFFF0, see Annex E.17)

Result (+):

This selection parameter indicates that the service request has been executed successfully.

ClientID

PortNumber

RefArgBlockID

This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

ArgBlockLength

This parameter contains the length of the subsequent ArgBlock

ArgBlock

This parameter contains the ArgBlock associated to the ExpArgBlockID (see Annex E.12)

Result (-):

This selection parameter indicates that the service request failed

ClientID

PortNumber

RefArgBlockID

This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

ArgBlockLength

This parameter contains the length of the "JobError" ArgBlock

ArgBlock

This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

Permitted values in prioritized order:

PORT_NUM_INVALID (incorrect Port number)

ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

DEVICE_NOT_IN_OPERATE (Process Data not accessible)

11.2.20 SMI_PDIInIQ

This service allows for cyclically reading input Process Data from an InBuffer (see 11.7.2.1) containing the value of the input "I" signal (Pin 2 at M12). Table 122 shows the structure of the service.

Table 122 – SMI_PDIInIQ

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (e.g. 0x1FFE)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)		S

Parameter name	.req	.cnf
ClientID		M
PortNumber		M
RefArgBlockID (ID of request ArgBlock 0xFFFF0)		M
ArgBlockLength		M
ArgBlock (JobError: 0xFFFF)		M

4136

Argument

4137 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

4138

ClientID

4139

PortNumber

4140

ExpArgBlockID4141 This parameter contains an ArgBlockID of the "Process Data" family, e.g. 0x1FFE (see
4142 Table E.1)

4143

ArgBlockLength

4144 This parameter contains the length of the subsequent ArgBlock

4145

ArgBlock

4146 This parameter contains the ArgBlock "VoidBlock" (0xFFFF0, see Annex E.17)

4147

Result (+):

4148 This selection parameter indicates that the service request has been executed successfully.

4149

ClientID

4150

PortNumber

4151

RefArgBlockID

4152 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

4153

ArgBlockLength

4154 This parameter contains the length of the subsequent ArgBlock

4155

ArgBlock

4156 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Annex E.13)

4157

4158

Result (-):

4159 This selection parameter indicates that the service request failed

4160

ClientID

4161

PortNumber

4162

RefArgBlockID

4163 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

4164

ArgBlockLength

4165 This parameter contains the length of the "JobError" ArgBlock

4166

ArgBlock

4167 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

4168

Permitted values in prioritized order:

4169 SERVICE_NOT_SUPPORTED (Service unknown)

4170 PORT_NUM_INVALID (incorrect Port number)

4171 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

4172 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

4173

11.2.21 SMI_PDOoutIQ4174 This service allows for cyclically writing output Process Data to an OutBuffer (see 11.7.3.1)
4175 containing the value of the output "Q" signal (Pin 2 at M12). Table 123 shows the structure of
4176 the service.
4177

4178

Table 123 – SMI_PDOoutIQ

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (VoidBlock: 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (e.g. 0x1FFF)	M	
Result (+)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x1FFF)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x1FFF)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

4179

Argument

4180 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

4182

ClientID

4183

PortNumber

4184

ExpArgBlockID

4185 This parameter contains the ArgBlockID "VoidBlock" (0xFFFF0, see Annex E.17)

4186

ArgBlockLength

4187

This parameter contains the length of the subsequent ArgBlock to be "pushed"

4188

ArgBlock

4189

4190 This parameter contains an ArgBlock of the "Process Data" family, e.g. 0x1FFF (see Table E.1)

4191

Result (+):

4192 This selection parameter indicates that the service request has been executed successfully.

4193

ClientID

4194

PortNumber

4195

RefArgBlockID

4196

This parameter contains as reference the ID of the ArgBlock sent by the request (0x1FFF)

4197

ArgBlockLength

4198

This parameter contains the length of the subsequent ArgBlock

4199

ArgBlock

4200

This parameter contains the ArgBlock associated to the ExpArgBlockID (0xFFFF0)

4201

Result (-):

4202 This selection parameter indicates that the service request failed

4203

ClientID

4204

PortNumber

4205

RefArgBlockID

4206

This parameter contains as reference the ID of the ArgBlock sent by the request (0x1FFF)

4207

ArgBlockLength

4208

This parameter contains the length of the "JobError" ArgBlock

4209

ArgBlock

4210

This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

4211	Permitted values in prioritized order:	
4212	SERVICE_NOT_SUPPORTED	(Service unknown)
4213	PORT_NUM_INVALID	(incorrect Port number)
4214	ARGBLOCK_NOT_SUPPORTED	(ArgBlock unknown)
4215	ARGBLOCK_LENGTH_INVALID	(incorrect ArgBlock length)
4216	ARGBLOCK_INCONSISTENT	(incorrect ArgBlock content type)
4217	ARGBLOCK_VALOUTOFRANGE	(incorrect ArgBlock content)

4218 11.2.22 SMI_PDRreadbackOutIQ

4219 This service allows for cyclically reading back input Process Data from an OutBuffer (see
 4220 11.7.3.1) containing the value of the output "Q" signal (Pin 2 at M12). Table 124 shows the
 4221 structure of the service.

4222 **Table 124 – SMI_PDRreadbackOutIQ**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (e.g. 0xFFFF)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)		S
ClientID	M	
PortNumber	M	
ExpArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

4223

4224 Argument

4225 The specific parameters of the service request are transmitted in the argument (see 11.2.2).

4226

ClientID

4227

PortNumber

4228

ExpArgBlockID

4229

This parameter contains an ArgBlockID of the "Process Data" family, e.g. 0xFFFF (see
 4230 Table E.1)

4231

ArgBlockLength

4232

This parameter contains the length of the subsequent ArgBlock

4233

ArgBlock

4234

This parameter contains the ArgBlock "VoidBlock" (0xFFFF0, see Annex E.17)

4235

Result (+):

4236

This selection parameter indicates that the service request has been executed successfully.

4237

ClientID

4238

PortNumber

4239

RefArgBlockID

4240

This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

4241

ArgBlockLength

4242

This parameter contains the length of the subsequent ArgBlock

4243

ArgBlock: PDOoutIQ

4244 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Annex E.14)
 4245

4246 **Result (-):**
 4247 This selection parameter indicates that the service request failed

4248 **ClientID**

4249 **PortNumber**

4250 **RefArgBlockID**

4251 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

4252 **ArgBlockLength**

4253 This parameter contains the length of the "JobError" ArgBlock

4254 **ArgBlock**

4255 This parameter contains the ArgBlock "JobError" (0xFFFF, see Annex E.18)

4256 Permitted values in prioritized order:

4257 SERVICE_NOT_SUPPORTED (Service unknown)

4258 PORT_NUM_INVALID (incorrect Port number)


4259 ARGBLOCK_NOT_SUPPORTED (ArgBlock unknown)

4260 ARGBLOCK_LENGTH_INVALID (incorrect ArgBlock length)

4261 11.3 Configuration Manager (CM)

4262 11.3.1 Coordination of Master applications

4263 Figure 99 illustrates the coordination between Master applications. Main responsibility is
 4264 assigned to the Configuration Manager (CM), who initializes port start-ups and who starts or
 4265 stops the other Master applications depending on a respective port state.

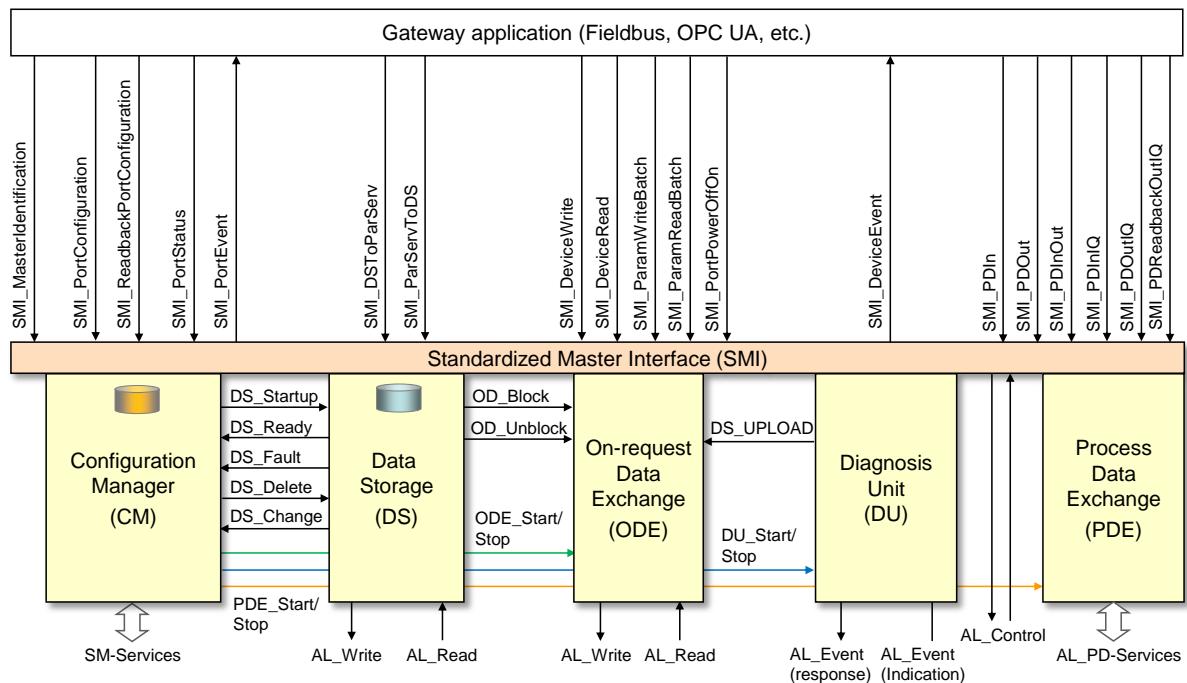

4266

4267 **Figure 99 – Coordination of Master applications**

4268 Internal variables and Events controlling Master applications are listed in Table 125.

4269 **Table 125 – Internal variables and Events controlling Master applications**

Internal Variable	Definition
DS_Startup	This variable triggers the Data Storage (DS) state machine causing an Upload or Download of Device parameters if required (see 11.4).

Internal Variable	Definition
DS_Ready	This variable indicates the Data Storage has been accomplished successfully; operating mode is CFGCOM or AUTOCOM (see 9.2.2.2)
DS_Fault	This variable indicates the Data Storage has been aborted due to a fault.
DS_Delete	Any relevant change of port configuration leads to a deletion of the stored data set in the Data Storage.
DS_Change	This variable indicates a content change of Data Storage triggered by service SMI_ParServToDS.
DS_Upload	This variable triggers the Data Storage state machine in the Master due to the special Event "DS_UPLOAD_REQ" from the Device.
OD_Start	This variable enables On-request Data access via AL_Read and AL_Write.
OD_Stop	This variable indicates that On-request Data access via AL_Read and AL_Write is acknowledged with a negative response to the gateway application.
OD_Block	Data Storage upload and download actions disable the On-request Data access through AL_Read or AL_Write. Access by the gateway application is denied.
OD_Unblock	This variable enables On-request Data access via AL_Read or AL_Write.
DU_Start	This variable enables the Diagnosis Unit to propagate remote (Device) Events to the gateway application.
DU_Stop	This variable indicates that the Device Events are not propagated to the gateway application and not acknowledged. Available Events are blocked until the DU is enabled again.
PD_Start	This variable enables the Process Data exchange with the gateway application.
PD_Stop	This variable disables the Process Data exchange with the gateway application.

4270

4271 Restart of a port is basically driven by two activities:

- 4272 • SMI_PortConfiguration service (Port parameter setting and start-up or changes and restart
4273 of a port)
- 4274 • SMI_ParServToDS service (Download of Data Storage data if Data Storage is activated)

4275

4276 The Configuration Manager (CM) is launched upon reception of a "SMI_PortConfiguration" service. The elements of parameter "PortConfigList" are stored in non-volatile memory within 4277 the Master. The service "SMI_ReadbackPortConfiguration" allows for checking correct 4278 storage.

4280 CM uses the values of ArgBlock "PortConfigList", initializes the port start-up in case of value 4281 changes and conditionally empties the Data Storage via "DS_Delete" or checks emptiness 4282 (see Figure 99).


4283 A gateway application can poll the actual port state via "SMI_PortStatus" to check whether the 4284 expected port state is reached. In case of fault this service provides corresponding 4285 information.

4286 After successfully setting up the port, CM starts the Data Storage mechanism and returns via 4287 parameter element "PortStatusInfo" either "OPERATE" or "PORT_FAULT" to the gateway 4288 application.

4289 In case of "OPERATE", CM activates the state machines of the associated Master applica- 4290 tions Diagnosis Unit (DU), On-request Data Exchange (ODE), and Process Data Exchange 4291 (PDE).

4292 In case of a fault in SM_PortMode such as COMP_FAULT, REVISION_FAULT, or
 4293 SERNUM_FAULT according to 9.2.3, CM activates the state machines of the associated
 4294 Master applications Diagnosis Unit (DU) and On-request Data Exchange (ODE).

4295 Figure 100 illustrates the start-up of a port via SMI_PortConfiguration service in a sequence
 4296 diagram.

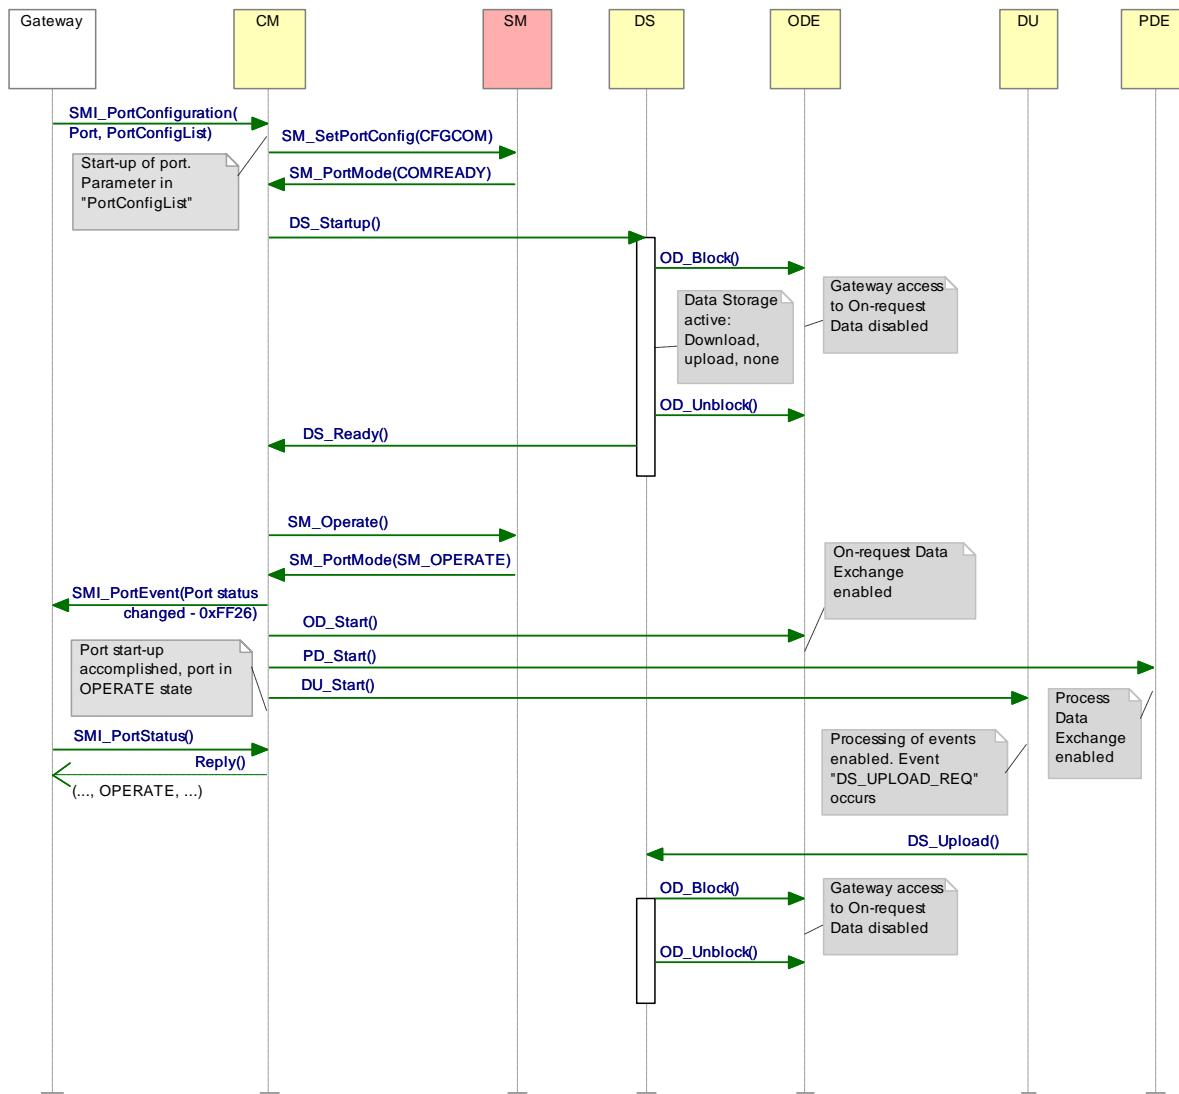

4297

4298 **Figure 100 – Sequence diagram of start-up via Configuration Manager**

4299

4300 11.3.2 State machine of the Configuration Manager


4301 Figure 101 shows the state machine of the Configuration Manager. In general, states and
 4302 transitions correspond to those of the message handler: STARTUP, PREOPERATE (fault or
 4303 Data Storage), and at the end OPERATE. Dedicated "SM_PortMode" services are driving the
 4304 transitions (see 9.2.2.4). A special state is related to SIO mode DI or DO.

4305 Configuration Manager can receive the information COMLOST from Port x Handler through
 4306 "SM_PortMode" at any time. It also can receive a service "SMI_PortConfiguration" from the
 4307 gateway application with changed values in "PortConfigList" also at any time (see 11.2.5).

4308 It can also receive a Data Storage object with a changed parameter set via service
 4309 "SMI_ParServToDS" from the gateway application triggering action in the Configuration
 4310 Manager if Data Storage is activated.

4311 Port x is started/restarted in all cases.

4312 Figure 101 together with Table 126 also shows transitions leading to corresponding changes
4313 in "PortStatusInfo" of ArgBlock "PortStatusList" (see Table E.4). Based on these transitions,
4314 Events are triggered via SMI_PortEvent. For details see Clause D.3.

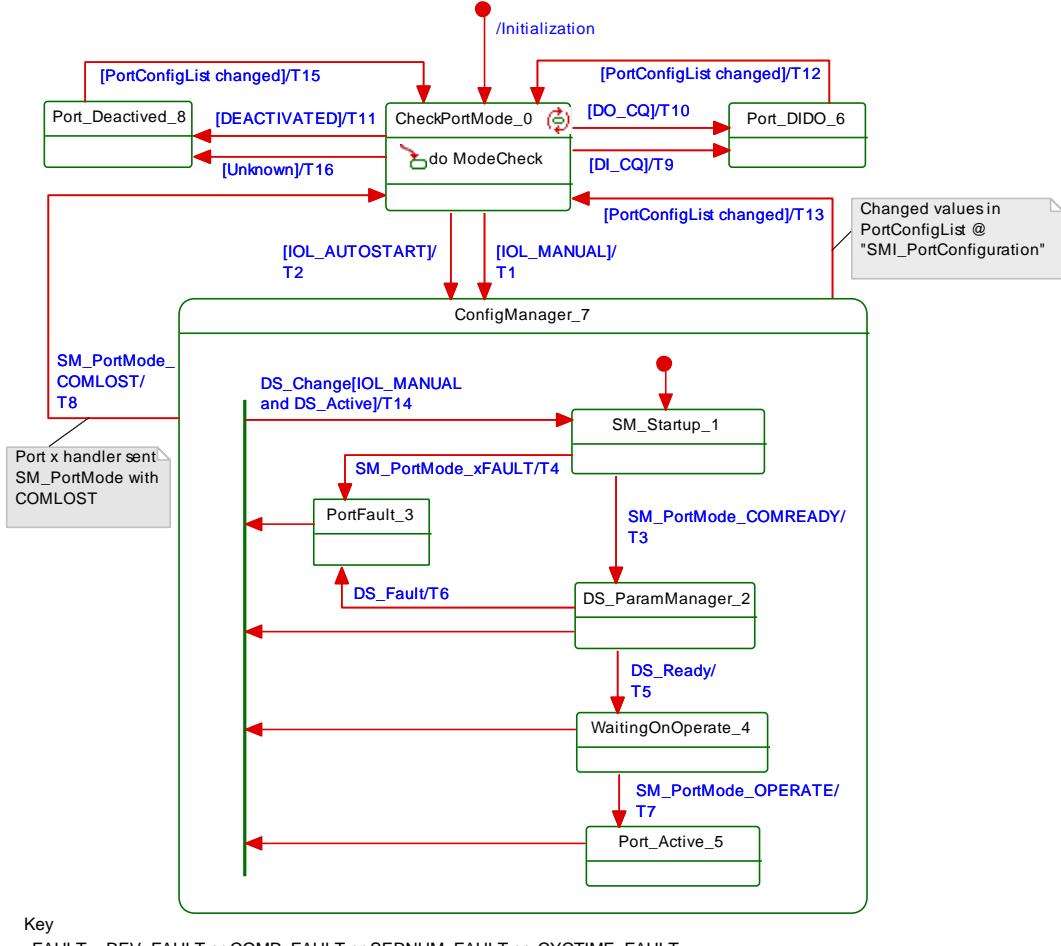

4315

xFAULT: REV_FAULT or COMP_FAULT or SERNUM_FAULT or CYCTIME_FAULT

4316

Figure 101 – State machine of the Configuration Manager

4317

Table 126 shows the state transition tables of the Configuration Manager.

4318

Table 126 – State transition tables of the Configuration Manager

STATE NAME	STATE DESCRIPTION
CheckPortMode_0	Check "Port Mode" element in parameter "PortConfigList" (see 11.2.5)
SM_Startup_1	Waiting on an established communication or loss of communication or any of the faults REVISION_FAULT, COMP_FAULT, or SERNUM_FAULT (see Table 85)
DS_ParamManager_2	Waiting on accomplished Data Storage startup. Parameter are downloaded into the Device or uploaded from the Device.
PortFault_3	Device in state PREOPERATE (communicating). However, one of the three faults REVISION_FAULT, COMP_FAULT, SERNUM_FAULT, or DS_Fault, or PORT_DIAG occurred.
WaitingOnOperate_4	Waiting on SM to switch to OPERATE.
Port_Active_5	Port is in OPERATE mode. The gateway application is exchanging Process Data and ready to send or receive On-request Data.
Port_DIDO_6	Port is in DI or DO mode. The gateway application is exchanging Process Data (DI or DO).

4319


STATE NAME		STATE DESCRIPTION	
ConfigManager_7		This superstate handles Port communication operations and allows all states inside to react on COMLOST via SM_PortMode service. A Port restart is managed inside the superstate triggered by the DS_Change signal (see Table 125).	
Port_Deactivated_8		Port is in DEACTIVATED mode.	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	7	Invoke DS-Delete if identification (VendorID, DeviceID) within DS is different to configured port identification. SM_SetPortConfig_CFGCOM
T2	0	7	Invoke DS-Delete. SM_SetPortConfig_AUTOCOM
T3	1	2	DS_Startup: The DS state machine is triggered. Update parameter elements of "PortStatusList": - PortStatusInfo = NOT_AVAILABLE - RevisionID = (real) RRID - Transmission rate = COMx - VendorID = (real) RVID - DeviceID = (real) RDID - MasterCycleTime = value - Port QualityInfo = invalid
T4	1	3	Update parameter elements of "PortStatusList": - PortStatusInfo = PORT_DIAG - RevisionID = (real) RRID - Transmission rate = COMx - VendorID = (real) RVID - DeviceID = (real) RDID - Port QualityInfo = invalid
T5	2	4	SM_Operate
T6	2	3	Data Storage failed. Rollback to previous parameter set. Update parameter elements of "PortStatusList": - PortStatusInfo = PORT_DIAG - RevisionID = (real) RRID - Transmission rate = COMx - VendorID = (real) RVID - DeviceID = (real) RDID - Port QualityInfo = invalid
T7	4	5	Update parameter elements of "PortStatusList": - PortStatusInfo = OPERATE - RevisionID = (real) RRID - Transmission rate = COMx - VendorID = (real) RVID - DeviceID = (real) RDID - Port QualityInfo = x
T8	1,2,3,4,5	0	Update parameter elements of "PortStatusList": - PortStatusInfo = NO_DEVICE - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = Invalid Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)
T9	0	6	Invoke DS-Delete. SM_SetPortConfig_DI. Update parameter elements of "PortStatusList": - PortStatusInfo = DI_C/Q - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = invalid Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T10	0	6	<p>Invoke DS-Delete. SM_SetPortConfig_DO.</p> <p>Update parameter elements of "PortStatusList":</p> <ul style="list-style-type: none"> - PortStatusInfo = DO_C/Q - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = invalid <p>Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)</p>
T11	0	8	<p>Invoke DS-Delete. SM_SetPortConfig_INACTIVE.</p> <p>Update parameter elements of "PortStatusList":</p> <ul style="list-style-type: none"> - PortStatusInfo = DEACTIVATED - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = invalid <p>Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)</p>
T12	6	0	<p>Update parameter elements of "PortStatusList":</p> <ul style="list-style-type: none"> - PortStatusInfo = NOT_AVAILABLE - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = Invalid <p>Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)</p>
T13	1,2,3,4,5	0	<p>Update parameter elements of "PortStatusList":</p> <ul style="list-style-type: none"> - PortStatusInfo = NOT_AVAILABLE - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = Invalid <p>Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)</p>
T14	1,2,3,4,5	1	<p>SM_SetPortConfig_CFGCOM</p> <p>Update parameter elements of "PortStatusList":</p> <ul style="list-style-type: none"> - PortStatusInfo = NOT_AVAILABLE - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = Invalid <p>Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)</p>
T15	8	0	<p>Update parameter elements of "PortStatusList":</p> <ul style="list-style-type: none"> - PortStatusInfo = NOT_AVAILABLE - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = Invalid <p>Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)</p>
T16	0	8	<p>Invoke DS-Delete. SM_SetPortConfig_INACTIVE.</p> <p>Update parameter elements of "PortStatusList":</p> <ul style="list-style-type: none"> - PortStatusInfo = DEACTIVATED - RevisionID = 0 - Transmission rate = 0 - VendorID = 0 - DeviceID = 0 - Port QualityInfo = invalid <p>Delete DiagEntries (SOURCE = DEVICE) in PortStatusList (see Table E.4)</p>
INTERNAL ITEMS		TYPE	DEFINITION
PortConfigList changed		Guard	Values of "PortConfigList" have changed

INTERNAL ITEMS	TYPE	DEFINITION
DS_Ready	Signal	Data Storage sequence (upload, download) accomplished; see Table 125.
DS_Fault	Signal	See Table 125
DEACTIVATED	Guard	See Table E.3
IOL_MANUAL	Guard	See Table E.3
IOL_AUTOSTART	Guard	See Table E.3
DI_C/Q	Guard	See Table E.3
DO_C/Q	Guard	See Table E.3
DS_Change	Signal	See Table 125
DS_Active	Guard	Port configured to "Backup + Restore" (3) or "Restore" (4); see Table E.3

4321

4322 State "CheckPortMode_0" contains an activity with complex logic for checking the Port mode
 4323 within a received Port configuration (see Table E.3). Figure 102 shows this activity within the
 4324 context of the state machine in Figure 101.

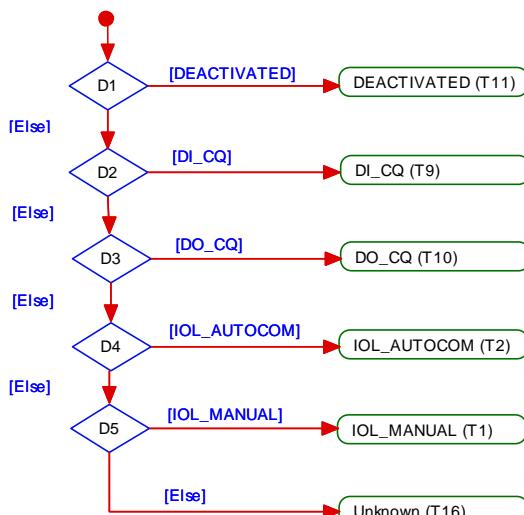

4325

Figure 102 – Activity for state "CheckPortMode_0"

11.4 Data Storage (DS)

11.4.1 Overview

4329 Data Storage between Master and Device is specified within this standard, whereas the
 4330 adjacent upper Data Storage mechanisms depend on the individual fieldbus or system. The
 4331 Device holds a standardized set of objects providing parameters for Data Storage, memory
 4332 size requirements, control and state information of the Data Storage mechanism. Changes of
 4333 Data Storage parameter sets are detectable via the "Parameter Checksum" (see 10.4.8).

11.4.2 DS data object

4335 The structure of a Data Storage data object is specified in Table G.1.

4336 The Master shall always hold the header information (Parameter Checksum, VendorID, and
 4337 DeviceID) for the purpose of checking and control. The object information (objects 1...n) will
 4338 be stored within the non-volatile memory part of the Master (see Annex G). Prior to a down-
 4339 load of the Data Storage data object (parameter block), the Master will check the consistency
 4340 of the header information with the particular Device.

4341 The maximum permitted size of the Data Storage data object is 2×2^{10} octets. It is mandatory
 4342 for Masters to provide at least this memory space per port if the Data Storage mechanism is
 4343 implemented.

4344 **11.4.3 Backup and Restore**


4345 Gateways are able to retrieve a port's current Data Storage object out of the Master using the
 4346 service "SMI_DSToParServ", see 11.2.8.

4347 In return, gateways are also able to write a port's current Data Storage object into the Master
 4348 using the service "SMI_ParServToDS" (see 11.2.9). This causes under certain conditions an
 4349 implicit restart of the Device and activation of the parameters within the Device (see 11.3.2).

4350 **11.4.4 DS state machine**

4351 The Data Storage mechanism is called right after establishing the COMx communication, be-
 4352 fore entering the OPERATE mode. During this time any other communication with the Device
 4353 shall be rejected by the gateway.

4354 Figure 103 shows the state machine of the Data Storage mechanism.

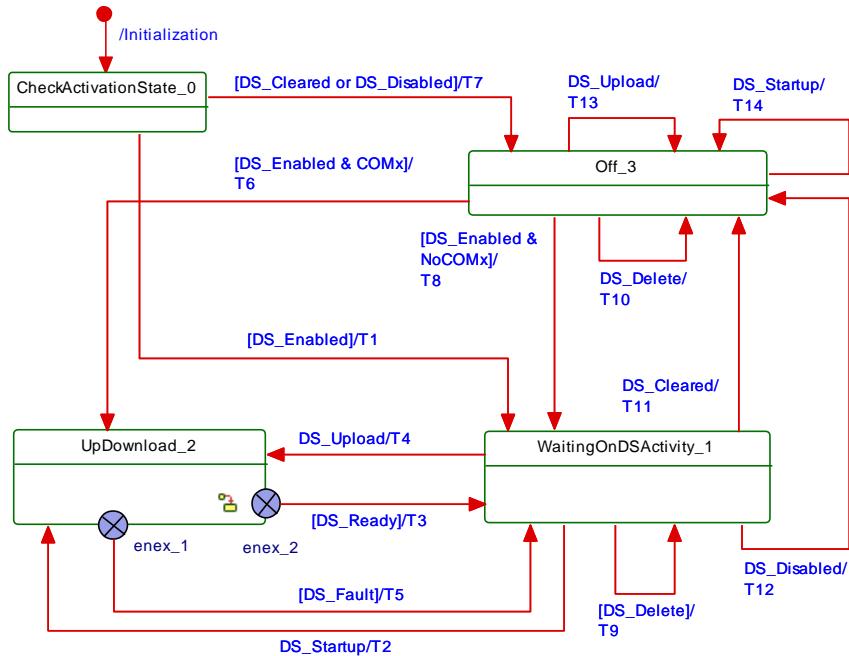


4355

4356 **Figure 103 – Main state machine of the Data Storage mechanism**

4357 Internal parameter "ActivationState" (DS_Enabled, DS_Disabled, and DS_Cleared) are
 4358 derived from parameter "Backup behavior" in "SMI_PortConfiguration" service (see 11.2.5 and
 4359 Table 127 / INTERNAL ITEMS).

4360 Figure 104 shows the submachine of the state "UpDownload_2".

4361 This submachine can be invoked by the Data Storage mechanism or during runtime triggered
 4362 by a "DS_UPLOAD_REQ" Event.

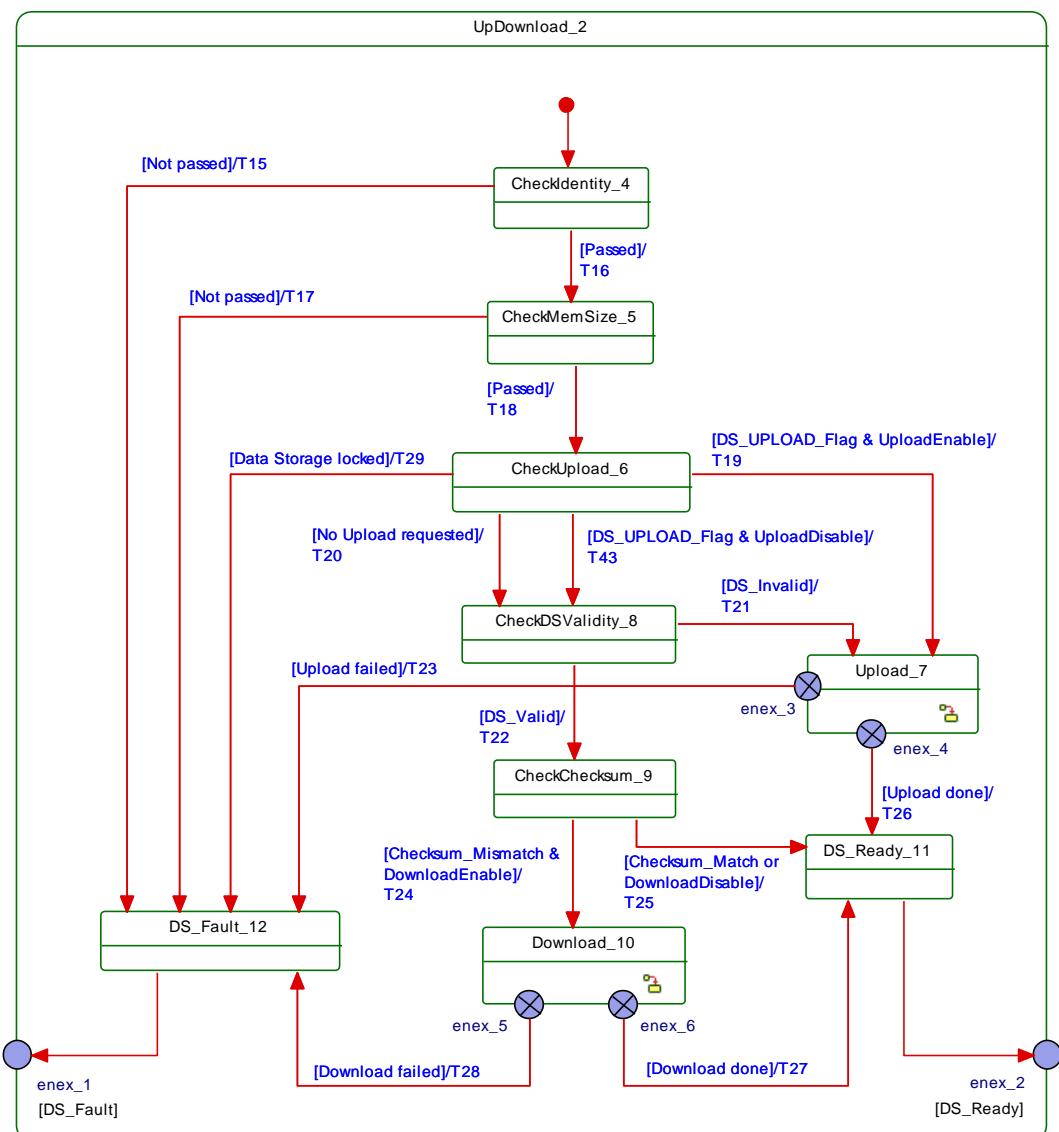


4363

4364

Figure 104 – Submachine "UpDownload_2" of the Data Storage mechanism

4365 Figure 105 shows the submachine of the state "Upload_7".

4366 This state machine can be invoked by the Data Storage mechanism or during runtime
4367 triggered by a DS_UPLOAD_REQ Event.

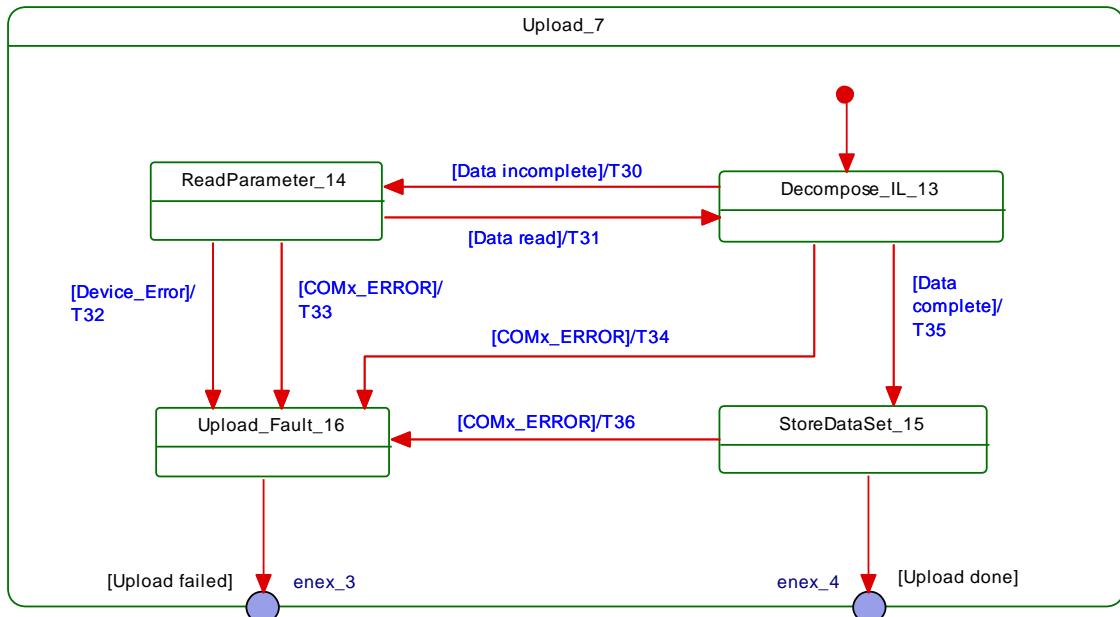


4368

4369

Figure 105 – Data Storage submachine "Upload_7"

4370 Figure 106 demonstrates the Data Storage upload sequence using the DataStorageIndex
 4371 (DSI) specified in B.2.3 and Table B.10. The structure of Index_List is specified in Table B.11.
 4372 The DS_UPLOAD_FLAG shall be reset at the end of each sequence (see Table B.10).

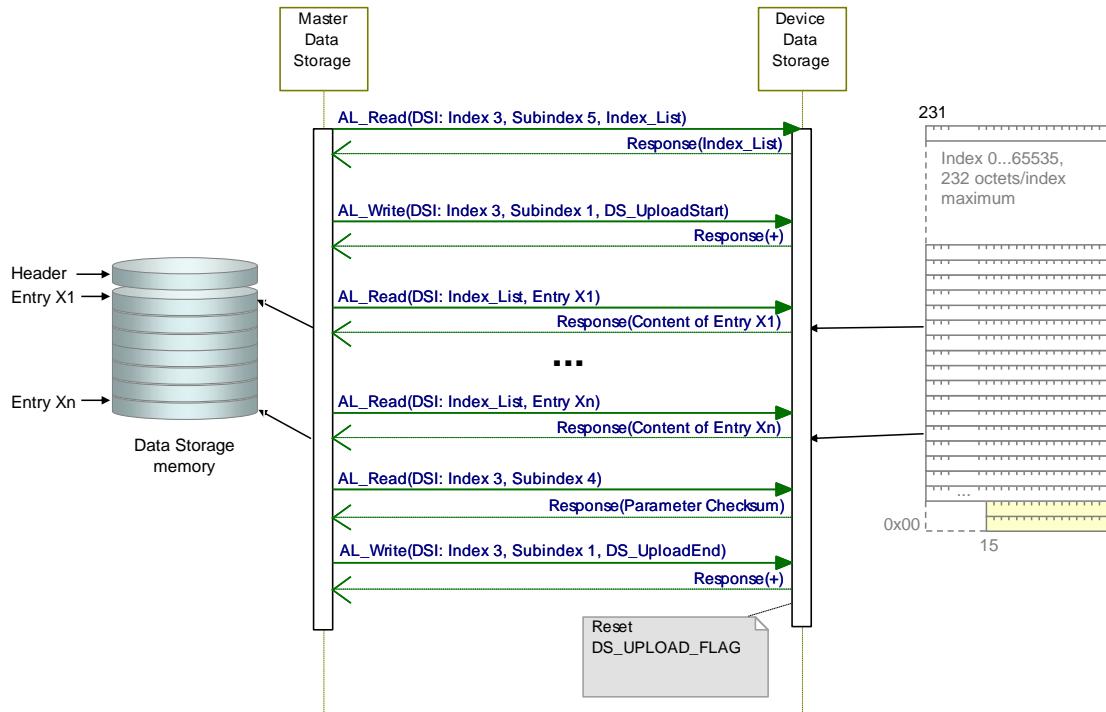


4373

4374

Figure 106 – Data Storage upload sequence diagram

4375 Figure 107 shows the submachine of the state "Download_10".

4376 This state machine can be invoked by the Data Storage mechanism.

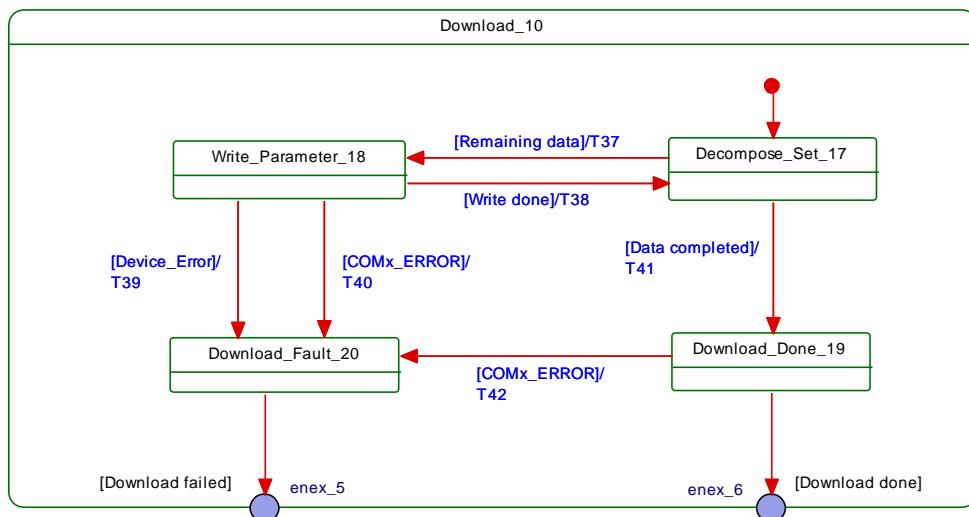


4377

Figure 107 – Data Storage submachine "Download_10"

4379

4380 Figure 108 demonstrates the Data Storage download sequence using the DataStorageIndex (DSI) specified in B.2.3 and Table B.10. The structure of Index_List is specified in Table B.11.
 4381 The DS_UPLOAD_FLAG shall be reset at the end of each sequence (see Table B.10).

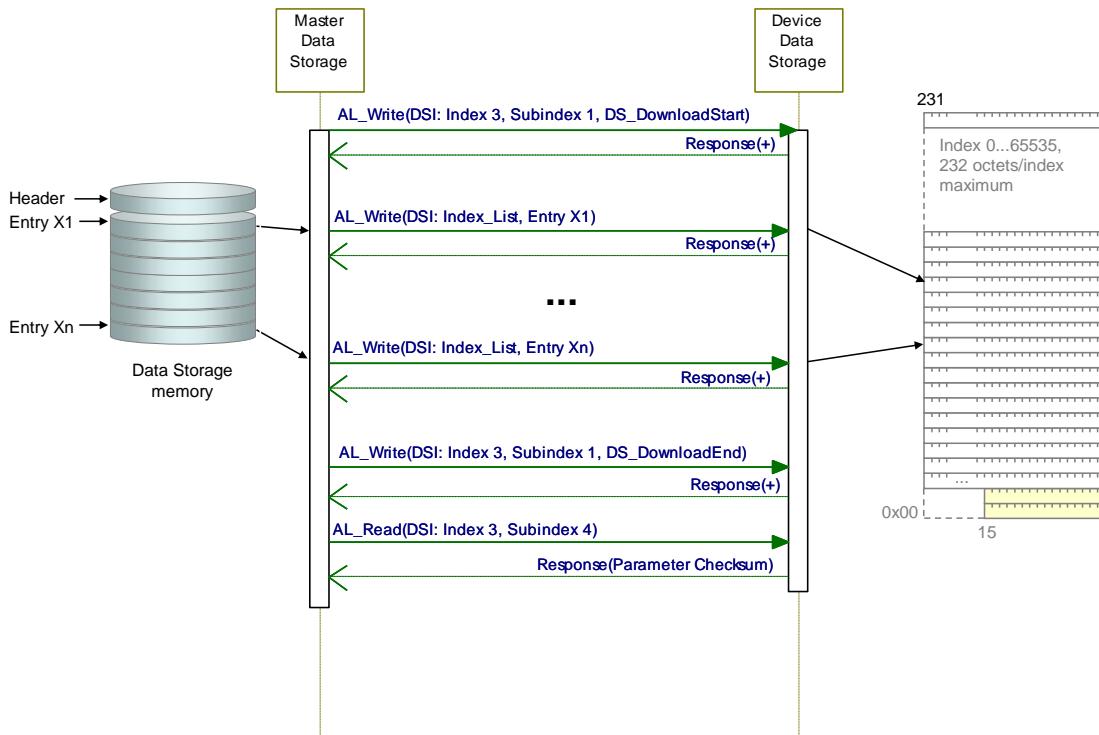

4383

Figure 108 – Data Storage download sequence diagram

4384 Table 127 shows the states and transitions of the Data Storage state machines.

4386

Table 127 – States and transitions of the Data Storage state machines

STATE NAME	STATE DESCRIPTION
CheckActivationState_0	Check current state of the DS configuration: Independently from communication status, DS_Startup from configuration management or an Event DS_UPLOAD_REQ is expected.
WaitingOnDSActivity_1	Waiting for upload request, Device startup, all changes of activation state independent of the Device communication state.
UpDownload_2	Submachine for up/download actions and checks
Off_3	Data Storage handling switched off or deactivated
SM: CheckIdentity_4	Check Device identification (DeviceID, VendorID) against parameter set within the Data Storage (see Table G.2). Empty content does not lead to a fault.
SM: CheckMemSize_5	Check data set size (Index 3, Subindex 3) against available Master storage size
SM: CheckUpload_6	Check for DS_UPLOAD_FLAG within the DataStorageIndex (see Table B.10)
SM: Upload_7	Submachine for the upload actions
SM: CheckDSValidity_8	Check whether stored data within the Master is valid or invalid. A Master could be replaced between upload and download activities. It is the responsibility of a Master designer to implement a validity mechanism according to the chosen use cases
SM: CheckChecksum_9	Check for differences between the data set content and the Device parameter via the "Parameter Checksum" within the DataStorageIndex (see Table B.10)
SM: Download_10	Submachine for the download actions
SM: DS_Ready_11	Prepare DS_Ready indication to the Configuration Management (CM)
SM: DS_Fault_12	Prepare DS_Fault indication from "Identification_Fault", "SizeCheck_Fault", "Upload_Fault", and "Download_Fault" to the Configuration Management (CM)
SM: Decompose_IL_13	Read Index List within the DataStorageIndex (see Table B.10). Read content entry by entry of the Index List from the Device (see Table B.11).
SM: ReadParameter_14	Wait until read content of one entry of the Index List from the Device is accomplished.
SM: StoreDataSet_15	Task of the gateway application: store entire data set according to Table G.1 and Table G.2
SM: Upload_Fault_16	Prepare Upload_Fault indication from "Device_Error" and "COM_ERROR" as input for the higher-level indication DS_Fault.
SM: Decompose_Set_17	Write parameter by parameter of the data set into the Device according to Table G.1.
SM: Write_Parameter_18	Wait until write of one parameter of the data set into the Device is accomplished.
SM: Download_Done_19	Download completed. Read back "Parameter Checksum" from the DataStorageIndex according to Table B.10. Save this value in the stored data set according to Table G.2.
SM: Download_Fault_20	Prepare Download_Fault indication from "Device_Error" and "COM_ERROR" as input for the higher-level indication DS_Fault.

4387

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	–
T2	1	2	–
T3	2	1	OD_Unblock; Indicate DS_Ready to CM
T4	1	2	Confirm Event "DS_Upload" (see INTERNAL ITEMS)
T5	2	1	DS_Break (AL_Write, Index 3, Subindex 1); clear intermediate data (garbage collection); rollback to previous parameter state; DS_Fault (see Figure 98); OD_Unblock.
T6	3	2	–
T7	0	3	–
T8	3	1	–
T9	1	1	Clear saved parameter set (see Table G.1 and Table G.2)
T10	3	3	Clear saved parameter set (see Table G.1 and Table G.2)

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T11	1	3	Clear saved parameter set (see Table G.1 and Table G.2)
T12	1	3	–
T13	3	3	Confirm Event "DS_Upload" (see INTERNAL ITEMS); no further action
T14	3	3	DS_Ready to CM
T15	4	12	Indicate DS_Fault(Identification_Fault) to the gateway application
T16	4	5	Read "Data Storage Size" according to Table B.10, OD_Block
T17	5	12	Indicate DS_Fault(SizeCheck_Fault) to the gateway application
T18	5	6	Read "DS_UPLOAD_FLAG" according to Table B.10
T19	6	7	DataStorageIndex 3, Subindex 1: "DS_UploadStart" (see Table B.10)
T20	6	8	–
T21	8	7	DataStorageIndex 3, Subindex 1: "DS_UploadStart" (see Table B.10)
T22	8	9	–
T23	7	12	DataStorageIndex 3, Subindex 1: "DS_Break" (see Table B.10). Indicate DS_Fault(Upload) to the gateway application
T24	9	10	DataStorageIndex 3, Subindex 1: "DS_DownloadStart" (see Table B.10)
T25	9	11	–
T26	7	11	DataStorageIndex 3, Subindex 1: "DS_UploadEnd"; read Parameter Checksum (see Table B.10)
T27	10	11	–
T28	10	12	DataStorageIndex 3, Subindex 1: "DS_Break" (see Table B.10). Indicate DS_Fault(Download) to the gateway application.
T29	6	12	Indicate DS_Fault(Data Storage locked) to the gateway application
T30	13	14	AL_Read (Index List)
T31	14	13	–
T32	14	16	–
T33	14	16	–
T34	13	16	–
T35	13	15	Read "Parameter Checksum" (see Table B.10).
T36	15	16	–
T37	17	18	Write parameter via AL_Write
T38	18	17	–
T39	18	20	–
T40	18	20	–
T41	17	19	DataStorageIndex 3, Subindex 1: "DS_DownloadEnd" (see Table B.10) Read "Parameter Checksum" (see Table B.10).
T42	19	20	–
T43	6	8	–
INTERNAL ITEMS	TYPE	DEFINITION	
DS_Cleared	Bool	Data Storage handling switched off	
DS_Disabled	Bool	Data Storage handling deactivated	
DS_Enabled	Bool	Data Storage handling activated	
COMx_ERROR	Bool	Error in COMx communication detected	
Device_Error	Bool	Access to Index denied, AL_Read or AL_Write.cnf(-) with ErrorCode 0x80	
DS_Startup	Variable	Trigger from CM state machine, see Figure 99	

INTERNAL ITEMS	TYPE	DEFINITION
NoCOMx	Bool	No COMx communication
COMx	Bool	COMx communication working properly
DS_Upload	Variable	Trigger upon DS_UPLOAD_REQ, see Table D.1 and Table B.10
DS_UPLOAD_FLAG	Bool	See Table B.10 ("State property")
UploadEnable	Bool	Data Storage handling configuration
DownloadEnable	Bool	Data Storage handling configuration
DS_Valid	Bool	Valid parameter set available within the Master. See state description "SM: CheckDSValidity_8"
DS_Invalid	Bool	No valid parameter set available within the Master. See state description "SM: CheckDSValidity_8"
Checksum_Mismatch	Bool	Acquired "Parameter Checksum" from Device does not match the checksum within Data Storage (binary comparison)
Checksum_Match	Bool	Acquired "Parameter Checksum" from Device matches the checksum within Data Storage (binary comparison)
Data Storage locked	Bool	See Table B.10 ("State property")

4389

4390 11.4.5 Parameter selection for Data Storage

4391 The Device designer defines the parameters that are part of the Data Storage mechanism.

4392 The IODD marks all parameters not included in Data Storage with the attribute "excludedFromDataStorage". However, the Data Storage mechanism shall not consider the information from the IODD but rather the Parameter List read out from the Device.


4395 11.5 On-request Data exchange (ODE)

4396 Figure 109 shows the state machine of the Master's On-request Data Exchange. This behaviour is mandatory for a Master.

4398 The gateway application is able to read On-request Data (OD) from the Device via the service "SMI_DeviceRead". This service is directly mapped to service AL_Read with Port, Index, and Subindex (see 8.2.2.1).

4401 The gateway application is able to write On-request Data (OD) to the Device via the service "SMI_DeviceWrite". This service is directly mapped to service AL_Write with Port, Index, and Subindex (see 8.2.2.2).

4404 During an active data transmission of the Data Storage mechanism, all On-request Data requests are blocked.

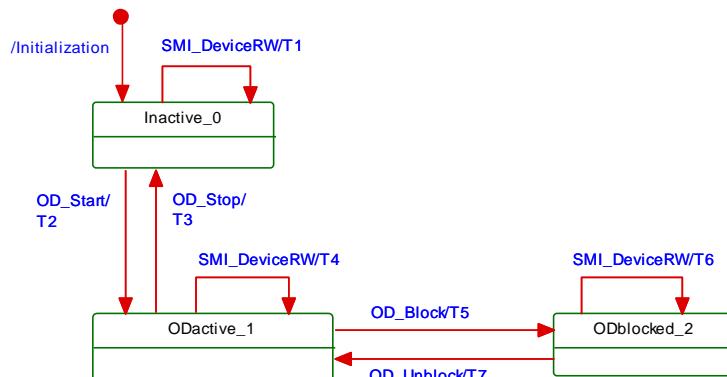

4406

4407 **Figure 109 – State machine of the On-request Data Exchange**

4408

4409 Table 128 shows the state transition table of the On-request Data Exchange state machine.

4410 **Table 128 – State transition table of the ODE state machine**

STATE NAME		STATE DESCRIPTION	
Inactive_0		Waiting for activation	
ODactive_1		On-request Data communication active using AL_Read or AL_Write	
ODblocked_2		On-request Data communication blocked	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	0	Access blocked (inactive): indicates "DEVICE_NOT_ACCESSIBLE" to the gateway application
T2	0	1	-
T3	1	0	-
T4	1	1	AL_Read or AL_Write
T5	1	2	-
T6	2	2	Access blocked temporarily: indicates "SERVICE_TEMP_UNAVAILABLE" to the gateway application
T7	2	1	-
INTERNAL ITEMS		TYPE	DEFINITION
SMI_DeviceRW		Variable	On-request Data read or write requested via SMI_DeviceRead, SMI_DeviceWrite, SMI_ParamWriteBatch, or SMI_ParamReadBatch

4413

4414 **11.6 Diagnosis Unit (DU)**

4415 **11.6.1 General**


4416 The Diagnosis Unit (DU) routes Device or Port specific Events via the SMI_DeviceEvent and
 4417 the SMI_PortEvent service to the gateway application (see Figure 99). These Events primarily
 4418 contain diagnosis information. The structure corresponds to the AL_Event in 8.2.2.11 with
 4419 Instance, Mode, Type, Origin, and EventCode.

4420 Additionally, the DU generates a Device or port specific diagnosis status that can be retrieved
 4421 by the SMI_PortStatus service in PortStatusList (see Table E.4 and 11.6.4).

4422 **11.6.2 Device specific Events**

4423 The SMI_DeviceEvent service provides Device specific Events directly to the gateway applica-
 4424 tion. The special DS_UPLOAD_REQ Event (see 10.4 and Table D.1) of a Device shall be
 4425 redirectted to the common Master application Data Storage. Those Events are acknowledged
 4426 by the DU itself and not propagated via SMI_DeviceEvent to the gateway.

4427 Device diagnosis information flooding is avoided by flow control as shown in Figure 110,
 4428 which allows for only one Event per Device to be propagated via SMI_DeviceEvent to the
 4429 gateway application at a time.

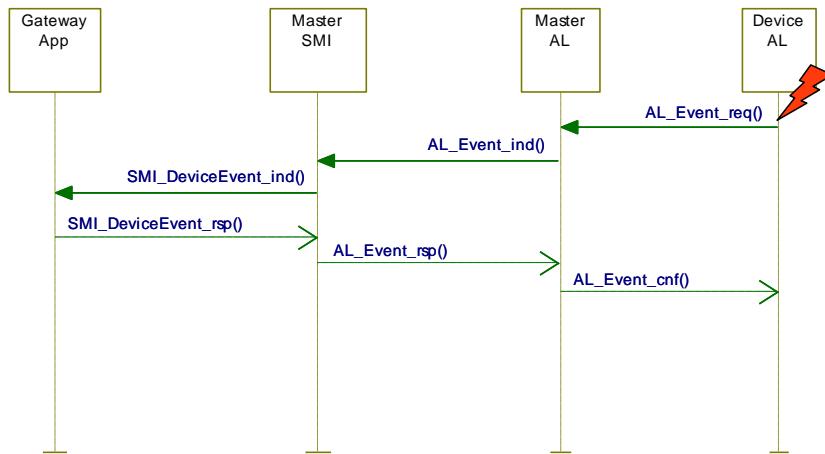


4430

4431

Figure 110 – DeviceEvent flow control**11.6.3 Port specific Events**

The SMI_PortEvent service provides also port specific Events directly to the gateway application. Those Events are similarly characterized by Instance = Application, Source = Master, Type = Error or Warning or Notification, and Mode Event appears or disappears or single shot (see A.6.4). Usually, only one port Event at a time is pending as shown in Figure 111.

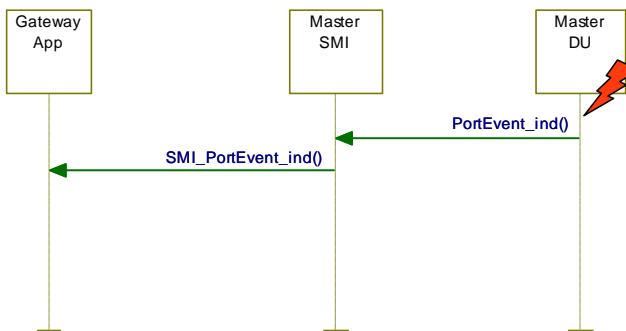

4437

4438

Figure 111 – Port Event flow control

The following rules apply:

- It is not required to send disappearing Port Events in case of Device communication interrupt (communication restart);
- Once communication resumed, the gateway client is responsible for proper reporting of the current Event causes.

Port specific Events are specified in Annex D.3.

11.6.4 Dynamic diagnosis status

DU generates the diagnosis status by collecting all appearing DeviceEvents and PortEvents continuously in a buffer. Any disappearing Event will cause the DU to remove the corresponding Event with the same EventCode from the buffer. Thus, the buffer represents an actual image of the consolidated diagnosis status, which can be taken over as diagnosis entries within the PortStatusList (see Table E.4).

After COMLOST and during Device startup the buffer will be deleted.

11.6.5 Best practice recommendations

Main goal for diagnosis information is to alert an operator in an efficient manner. That means:

- no diagnosis information flooding


- 4455 • report of the root cause of an incident within a Device or within the Master and no
 4456 subsequent correlated faults
 4457 • diagnosis information shall provide information on how to maintain or repair the affected
 4458 component for fast recovery of the automation system.

4459 Figure 112 shows an example of the diagnosis information flow through a complete
 4460 SDCI/fieldbus system.

4461 NOTE The flow can end at the Master/PDCT or be more integrated depending on the fieldbus capabilities.

4462 Within SDCI, diagnosis information on Devices is conveyed to the Master via Events consisting
 4463 of EventQualifiers and EventCodes (see A.6). The associated human readable text is
 4464 available for standardized EventCodes within this standard (see Annex D) and for vendor
 4465 specific EventCodes within the associated IODD file of a Device.

4466 NOTE The standardized EventCodes can be mapped to semantically identical or closest fieldbus channel
 4467 diagnosis definitions within the gateway application.

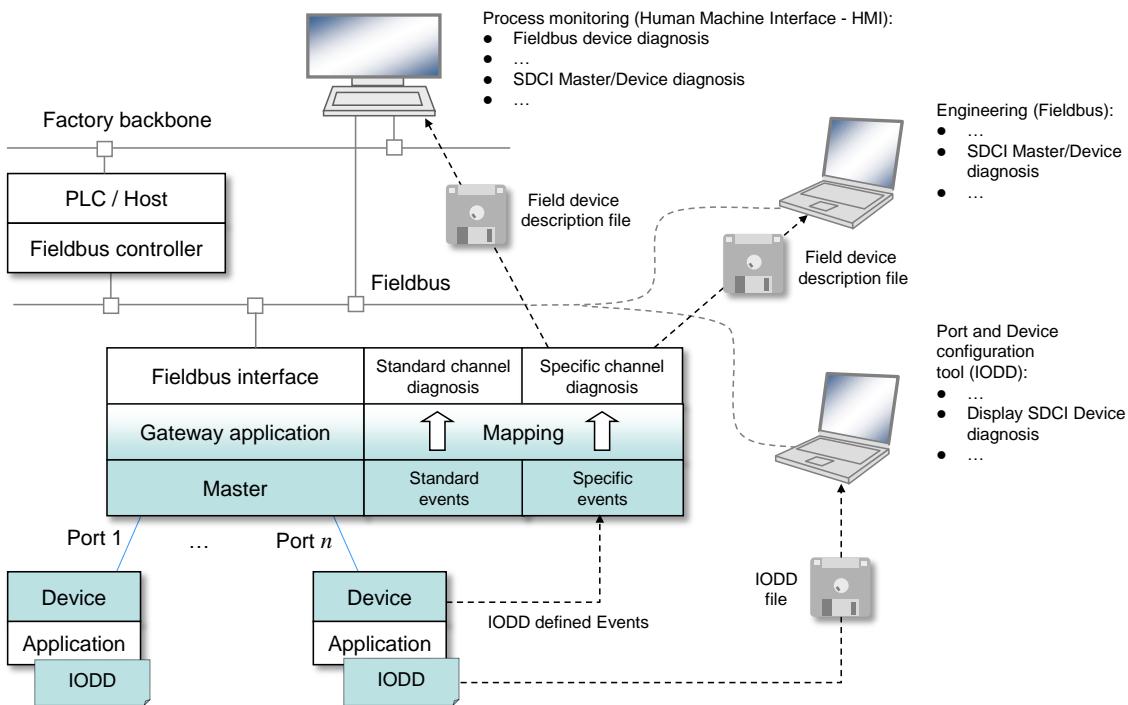

4468 NOTE Blue shaded areas indicate features specified in this standard

Figure 112 – SDCI diagnosis information propagation via Events

4471 **11.7 PD Exchange (PDE)**

4472 **11.7.1 General**

4473 The Process Data Exchange provides the transmission of Process Data between the gateway
 4474 application and the connected Device.

4475 The Standard Master Interface (SMI) comes with the following three services for the gateway
 4476 application:

- 4477 • SMI_PDIIn allows for reading input Process Data from the InBuffer together with Quality
 4478 Information (PQI), see 11.2.17
- 4479 • SMI_PDOOut allows for writing output Process Data to the OutBuffer, see 11.2.18
- 4480 • SMI_PDIInOut allows for reading output Process Data from the OutBuffer and reading input
 4481 Process Data from the InBuffer within one cycle, see 11.2.19


4482 After an established communication and Data Storage, the port is ready for any On-request
 4483 Data (ODE) transfers. Process Data exchange is enabled whenever the specific port or all
 4484 ports are switched to the OPERATE mode.

4485 **11.7.2 Process Data input mapping**

4486 **11.7.2.1 Port Modes "IOL_MANUAL" or "IOL_AUTOSTART"**

4487 Figure 99 shows how the Master application "Process Data Exchange" (PDE) is related to the
 4488 other Master applications. It is responsible for the cyclic acquisition of input data using the
 4489 service "AL_GetInput" (see 8.2.2.4) and of Port Qualifier (PQ) information using the service
 4490 "AL_Control" (see 8.2.2.12). Both shall be synchronized for consistency.


4491 A gateway application can get access to these data via the service "SMI_PDIIn" (see 11.2.17).
 4492 Figure 113 illustrates the principles of Process Data Input mapping and the content of the
 4493 ArgBlock of this service (see E.10) consisting of the ArgBlockID, the qualifier PQI, the
 4494 parameter InputDataLength, and the input Process Data.

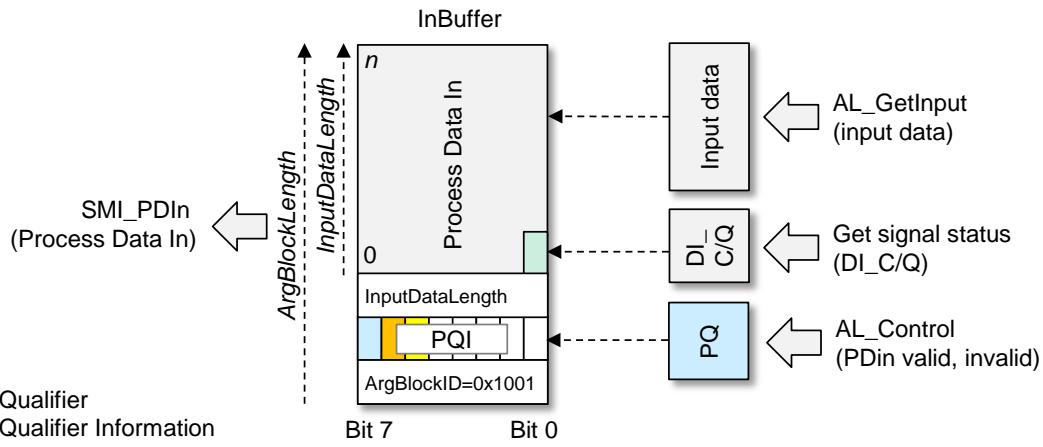

4496 **Figure 113 – Principles of Process Data Input mapping**

4497 At state OPERATE the input data are cyclicly copied into the InBuffer starting at offset "4".

4498 The InBuffer is expanded by an octet "PQI" at offset "2", whose content shall be updated
 4499 anytime the input data are read. Figure 114 illustrates the structure of this octet.

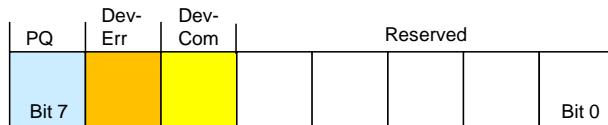

4501 **Figure 114 – Port Qualifier Information (PQI)**

4502 **Bit 0 to 4: Reserved**

4503 These bits are reserved for future use.

4504 **Bit 5: DevCom**

4505 Parameter "PortStatusInfo" of service "SMI_PortStatus" provides the necessary information
 4506 for this bit.

4507 It will be set if a Device is detected and in OPERATE state. It will be reset if there is no
 4508 Device available.

4509 **Bit 6: DevErr**

4510 Parameter "PortStatusInfo" and "DiagEntry x" of service "SMI_PortStatus" provide the neces-
 4511 sary information for this bit.

4512 It will be set if an Error or Warning occurred assigned to either Device or port. It will be reset
 4513 if there is no Error or Warning.

4514 **Bit 7: Port Qualifier (PQ)**

4515 A value VALID for Process Data in service "AL_CONTROL" will set this bit.

4516 A value INVALID or PortStatusInfo <> "4" (see E.4) will reset this bit.

4517 **11.7.2.2 Port Mode "DI_C/Q"**

4518 In this Port Mode the signal status of DI_C/Q will be mapped into octet 0, Bit 0 of the InBuffer
4519 (see Figure 113).

4520 **11.7.2.3 Port Mode "DEACTIVATED"**

4521 In this Port Mode the InBuffer will be filled with "0".


4522 **11.7.3 Process Data output mapping**

4523 **11.7.3.1 Port Modes "IOL_MANUAL" or "IOL_AUTOSTART"**

4524 Master application "Process Data Exchange" (PDE) is responsible for the cyclic transfer of
4525 output data using the services "AL_SetOutput" (see 8.2.2.10) and "AL_Control" (see
4526 8.2.2.12). Both shall be synchronized for consistency.

4527 A gateway application can write data via the service "SMI_PDOOut" into the OutBuffer (see
4528 11.2.18). Figure 115 illustrates the principles of Process Data Output mapping and the
4529 content of the ArgBlock of this service (see E.11) consisting of the ArgBlockID, the Output
4530 Enable bit, the parameter OutputDataLength, and the output Process Data.

4531 An ErrorType 0x4034 – *Incorrect ArgBlock length* will be returned if length does not add up to
4532 Process Data Out plus four octets (see C.4.9).

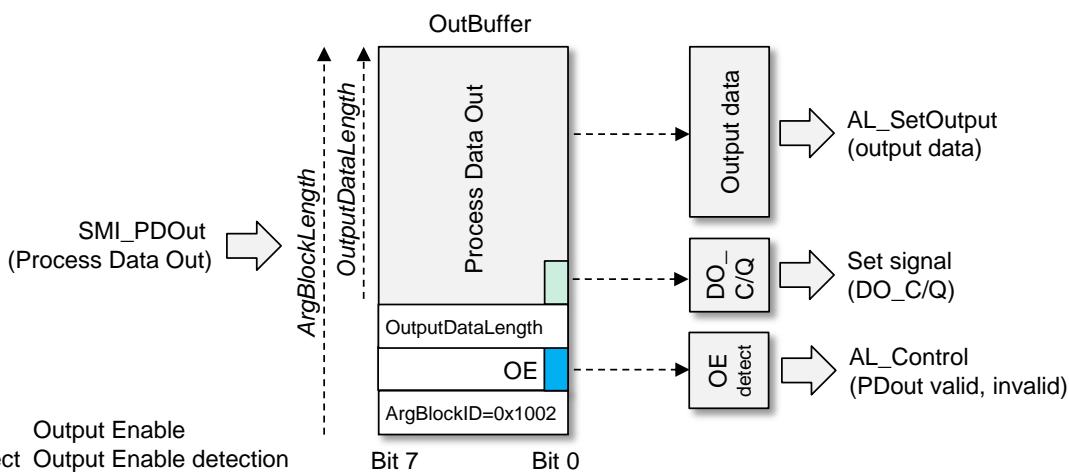

4533 **Figure 115 – Principles of Process Data Output mapping**

4534 At state OPERATE the Process Data Out are cyclicly copied to output data starting at offset "3".


4535 The OutBuffer is expanded by an octet "OE" (Output Enable) at offset "2". Bit 0 indicates the
4536 validity of the Process Data Out. "0" means invalid, "1" means valid data. A change of this Bit
4537 from "0" to "1" will launch an AL_Control with "PDout valid". A change of this Bit from "1" to
4538 "0" will launch an AL_Control with "PDout invalid". See "OE detect" in Figure 115.

4541 **11.7.3.2 Port Mode: "DO_C/Q"**

4542 In this Port Mode octet 0, Bit 0 of the Process Data Out in the OutBuffer will be mapped into
4543 the signal status of DO_C/Q (see Figure 115).

4544 **11.7.4 Process Data invalid/valid qualifier status**

4545 A sample transmission of an output PD qualifier status "invalid" from Master AL to Device AL
 4546 is shown in the upper section of Figure 116.

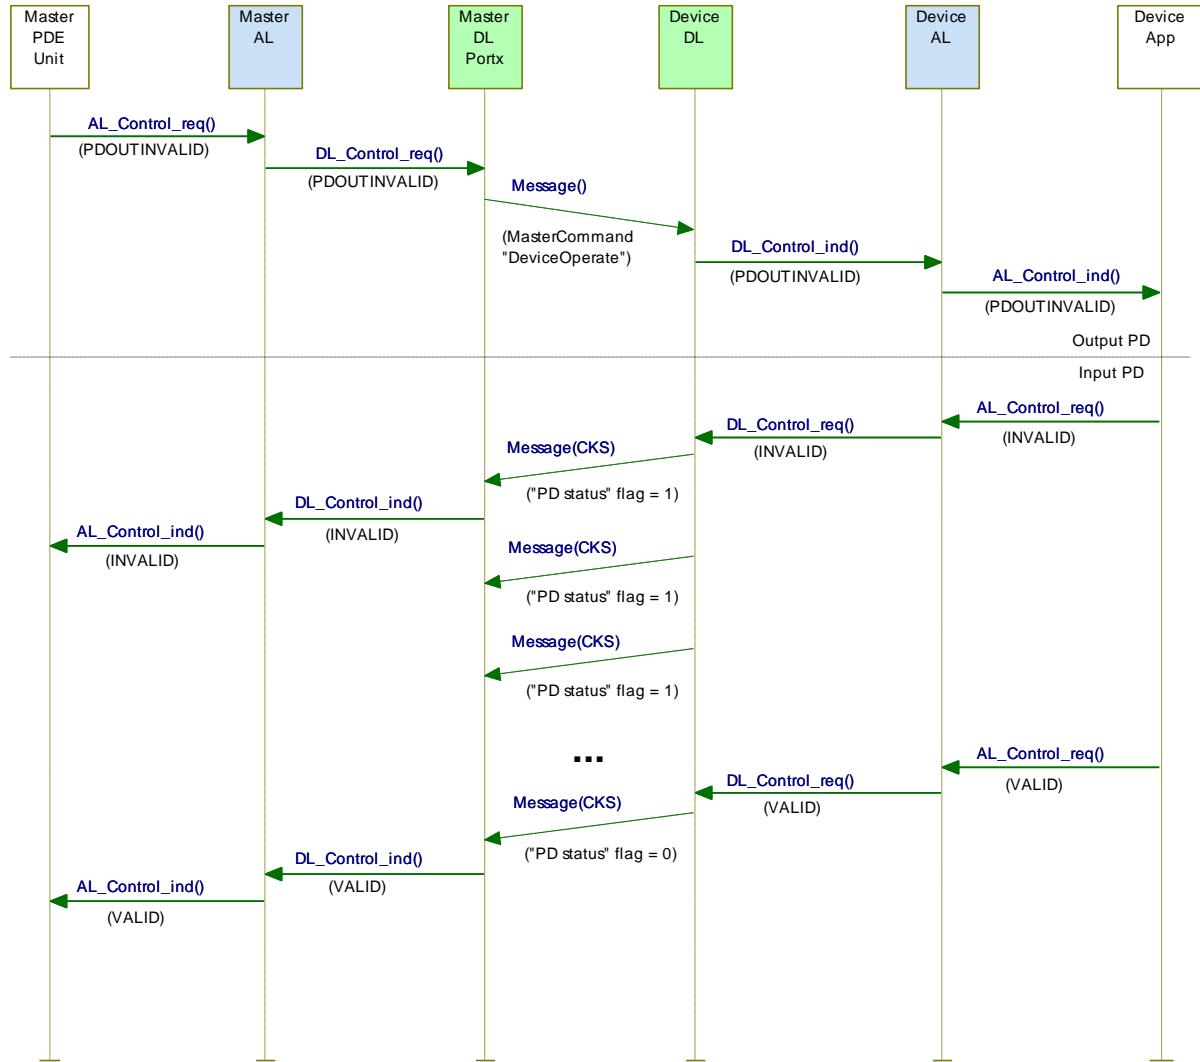

4547 **Figure 116 – Propagation of PD qualifier status between Master and Device**

4548 The Master informs the Device about the output Process Data qualifier status "valid/invalid"
 4549 by sending MasterCommands (see Table B.2) to the Direct Parameter page 1 (see 7.3.7.1).

4550 For input Process Data the Device sends the Process Data qualifier status in every single
 4551 message as "PD status" flag in the Checksum / Status (CKS) octet (see A.1.5) of the Device
 4552 message. A sample transmission of the input PD qualifier status "valid" from Device AL to
 4553 Master AL is shown in the lower section of Figure 116.


4554 Any perturbation while in interleave transmission mode leads to an input or output Process
 4555 Data qualifier status "invalid" indication respectively.

4556

4558 11.8 Port power switching

4559 The optional ability to switch the port power source allows to control the power consumption
4560 of the attached Device over time or may force a power down reset of the attached Device.

4561 The Standardized Master Interface (SMI) provides the service SMI_PortPowerOffOn. The
4562 associated ArgBlock is defined in E.9, the dynamic behavior is shown in Figure 117.

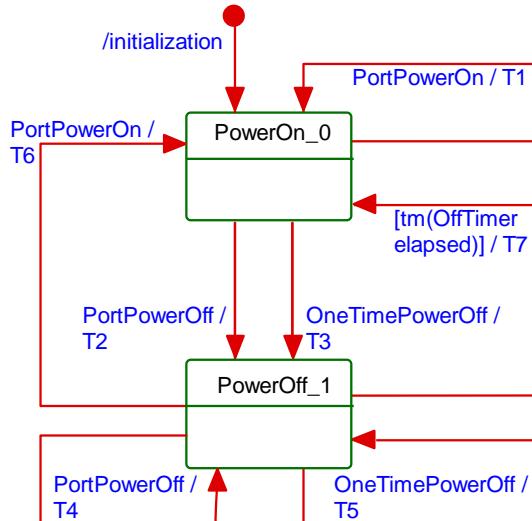

4563
4564 **Figure 117 – Port power state machine**

4565 Table 129 shows the states and transitions of the Port power state machine.

4566 **Table 129 – States and Transitions of the Port power state machine**

STATE NAME		STATE DESCRIPTION	
PowerOn_0			Port power is switched on
PowerOff_1			Port power is switched off
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	0	-
T2	0	1	Switch Port power off
T3	0	1	Switch Port power off, start OffTimer with PowerOffTime
T4	1	1	Stop Timer
T5	1	1	Restart OffTimer with PowerOffTime
T6	1	0	Switch Port Power on, stop OffTimer
T7	1	0	Switch Port power on
INTERNAL ITEMS		TYPE	DEFINITION
PortPowerOn		Call	Received SMI_PowerOnOff with PortPowerMode “SwitchPowerOn”
PortPowerOff		Call	Received SMI_PowerOnOff with PortPowerMode “SwitchPowerOff”
OneTimePowerOff		Call	Received SMI_PowerOnOff with PortPowerMode “OneTimeSwitchOff”
OffTimer		Variable	Timer to schedule the power reactivation

4569 12 Holistic view on Data Storage**4570 12.1 User point of view**

4571 In this clause the Data Storage mechanism is described from a holistic user's point of view as
4572 best practice pattern. This is in contrast to clause 10.4 and 11.4 where Device and Master are
4573 described separately and each with more features then used within the recommended concept
4574 herein after.

4575 12.2 Operations and preconditions**4576 12.2.1 Purpose and objectives**

4577 Main purpose of the IO-Link Data Storage mechanism is the replacement of obviously defect
4578 Devices or Masters by spare parts (new or used) without using configuration, parameteriza-
4579 tion, or other tools. The scenarios and associated preconditions are described in the following
4580 clauses.

4581 12.2.2 Preconditions for the activation of the Data Storage mechanism

4582 The following preconditions shall be observed prior to the usage of Data Storage:

- 4583 a) Data Storage is only available for Devices and Masters implemented according to this
4584 document ($\geq V1.1$).
- 4585 b) The Inspection Level of that Master port, the Device is connected to shall be adjusted to
4586 "type compatible" (corresponds to "TYPE_COMP" within Table 80)
- 4587 c) The Backup Level of that Master port, the Device is connected to shall be either
4588 "Backup/Restore" or "Restore", which corresponds to DS_Enabled in 11.4.4. See 12.4
4589 within this document for details on Backup Level.

4590 12.2.3 Preconditions for the types of Devices to be replaced

4591 After activation of a Backup Level (Data Storage mechanism) a "faulty" Device can be
4592 replaced by a type equivalent or compatible other Device. In some exceptional cases, for
4593 example non-calibrated Devices, a user manipulation can be required such as teach-in, to
4594 guarantee the same functionality and performance.

4595 Thus, two classes of Devices exist in respect to exchangeability, which shall be described in
4596 the user manual of the particular Device:

4597 Data Storage class 1: automatic DS

4598 The configured Device supports Data Storage in such a manner that the replacement Device
4599 plays the role of its predecessor fully automatically and with the same performance.


4600 Data Storage class 2: semi-automatic DS

4601 The configured Device supports Data Storage in such a manner that the replacement Device
4602 requires user manipulation such as teach-in prior to operation with the same performance.

4603 The Data Storage class shall be described in the user manual of the Device. Device designer
4604 is responsible in case of class 2 to prevent from dangerous system restart after Device
4605 replacement, at least via descriptions within the user manual.

4606 12.2.4 Preconditions for the parameter sets

4607 Each Device operates with the configured set of active parameters. The associated set of
4608 backup parameters stored within the system (Master and upper level system, for example
4609 PLC) can be different from the set of active parameters (see Figure 118).

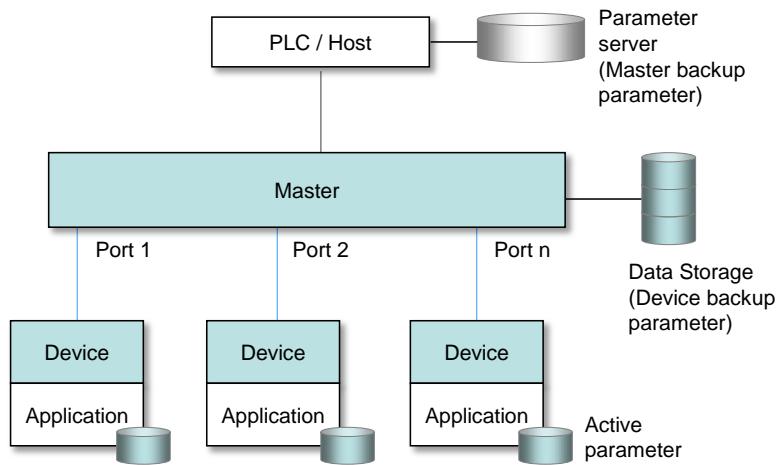

4610

4611

Figure 118 – Active and backup parameter

4612 A replacement of the Device in operation will result in overwriting the active parameter set
 4613 with the backup parameters in the newly connected Device.

4614 **12.3 Commissioning**


4615 **12.3.1 On-line commissioning**

4616 Usually, the Devices are configured and parameterized along with the configuration and
 4617 parameterization of the fieldbus and PLC system with the help of engineering tools. After the
 4618 user assigned values to the parameters, they are downloaded into the Device and become
 4619 active parameters. Upon the system command "ParamDownloadStore", these parameters are
 4620 uploaded (copied) into the Data Storage within the Master, which in turn will initiate a backup
 4621 of all its parameters depending on the features of the upper level system.

4622 **12.3.2 Off-site commissioning**

4623 Another possibility is the configuration and parameterization of Devices with the help of extra
 4624 tools such as "USB-Masters" and the IODD of the Device away (off-site) from the machine/
 4625 facility (see Figure 119).

4626 The USB-Master tool will mark the parameter set after configuration, parameterization, and
 4627 validation (to become "active") via DS_UPLOAD_FLAG (see Table 131 and Table B.10). After
 4628 installation into the machine/facility these parameters are uploaded (copied) automatically into
 4629 the Data Storage within the Master (backup).

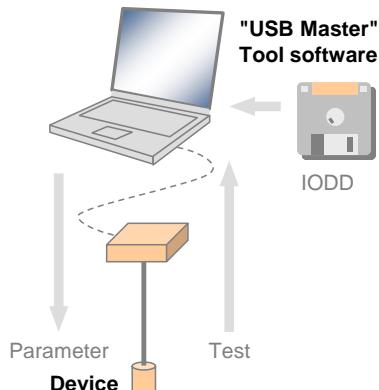

4630

4631

Figure 119 – Off-site commissioning

4632 **12.4 Backup Levels**

4633 **12.4.1 Purpose**

4634 Within automation projects including IO-Link usually three situations with different user
 4635 requirements for backup of parameters via Data Storage can be identified:

- 4636 • Commissioning ("Disable");
 4637 • Production ("Backup/Restore");
 4638 • Production ("Restore").

4639 Accordingly, three different "Backup Levels" are defined allowing the user to adjust the sys-
 4640 tem to the particular functionality such as for Device replacement, off-site commissioning, pa-
 4641 rameter changes at runtime, etc. (see Table 130).

4642 These adjustment possibilities lead for example to drop-down menu entries for "Backup Le-
 4643 vel".

4644 **12.4.2 Overview**

4645 Table 130 shows the recommended practice for Data Storage within an IO-Link system. It
 4646 simplifies the activities and their comprehension since activation of the Data Storage implies
 4647 transfer of the parameters.

4648 **Table 130 – Recommended Data Storage Backup Levels**

Backup Level	Data Storage adjustments	Behavior
Commissioning ("Disable")	Master port: Activation state: "DS_Cleared"	Any change of active parameters within the Device will not be copied/saved. Device replacement without automatic/semi-automatic Data Storage.
Production ("Backup/Restore")	Master port: Activation state: "DS_Enabled" Master port: UploadEnable Master port: DownloadEnable	Changes of active parameters within the Device will be copied/saved. Device replacement with automatic/semi-automatic Data Storage supported.
Production ("Restore")	Master port: Activation state: "DS_Enabled" Master port: UploadDisable Master port: DownloadEnable	Any change of active parameters within the Device will not be copied/saved. If the parameter set is marked to be saved, the "frozen" parameters will be restored by the Master. However, Device replacement with automatic/semi-automatic Data Storage of "frozen" parameters is supported.

4649 Legacy rules and presetting:

- For (legacy) Devices according to [8] or Devices according to this document where the Port is preset to Inspection Level "NO_CHECK", only the Backup Level "Commissioning" shall be supported. This should also be the default presetting in this case.
- For Devices according to this document where the Port is preset to Inspection Level "TYPE_COMP" all three Backup Levels shall be supported. Default presetting in this case should be "Backup/Restore".

4656 The following clauses describe the phases in detail.

4657 **12.4.3 Commissioning ("Disable")**

4658 Data Storage is disabled in Master port configuration, where configurations, parameteriza-
 4659 tions, and PLC programs are fine-tuned, tested, and verified. This includes the involved IO-
 4660 Link Masters and Devices. Usually, repeated saving (uploading) of the active Device para-
 4661 meters makes no sense in this phase. As a consequence, the replacement of Master and De-
 4662 vices with automatic/semi-automatic Data Storage is not supported.

4663 **12.4.4 Production ("Backup/Restore")**

4664 Data Storage in Master port configuration will be enabled. Current active parameters within
 4665 the Device will be copied/saved as backup parameters. Device replacement with auto-
 4666 matic/semi-automatic Data Storage is now supported via download/copy of the backup pa-
 4667 rameters to the Device and thus turning them into active parameters.

4668 Criteria for the particular copy activities are listed in Table 131. These criteria are the condi-
 4669 tions to trigger a copy process of the active parameters to the backup parameters, thus
 4670 ensuring the consistency of these two sets.

4671 **Table 131 – Criteria for backing up parameters ("Backup/Restore")**

User action	Operations	Data Storage
Commissioning session (see 12.3.1)	Parameterization of the Device via Master tool (on-line). Transfer of active parameter(s) to the Device will cause backup activity.	Master tool sends ParamDownloadStore; Device sets "DS_UPLOAD_FLAG" and then triggers upload via "DS_UPLOAD_REQ" Event. "DS_UPLOAD_FLAG" is reset as soon as the upload is completed.
Switching from commissioning to production	Restart of Port and Device because Port configuration has been changed	During system startup, the "DS_UPLOAD_FLAG" triggers upload (copy). "DS_UPLOAD_FLAG" is reset as soon as the upload is completed
Local modifications	Changes of the active parameters through teach-in or local parameterization at the Device (on-line)	Device technology application sets "DS_UPLOAD_FLAG" and then triggers upload via "DS_UPLOAD_REQ" Event. "DS_UPLOAD_FLAG" is reset as soon as the upload is completed.
Off-site commissioning (see 12.3.2)	Phase 1: Device is parameterized off-site via USB-Master tool (see Figure 119). Phase 2: Connection of that Device to a Master port.	Phase 1: USB-Master tool sends ParamDownloadStore; Device sets "DS_UPLOAD_FLAG" (in non-volatile memory) and then triggers upload via "DS_UPLOAD_REQ" Event, which is ignored by the USB-Master. Phase 2: During system startup, the "DS_UPLOAD_FLAG" triggers upload (copy). "DS_UPLOAD_FLAG" is reset as soon as the upload is completed.
Changed port configuration (in case of "Backup/Restore" or "Restore")	Whenever relevant port configuration has been changed via Master tool (on-line): see 11.4.4.	Change of relevant port configuration triggers "DS_Delete" followed by an upload (copy) to Data Storage (see 13.4.1, 11.3.1 and 11.4.4).
PLC program demand	Parameter change via user program followed by a SystemCommand	User program sends SystemCommand ParamDownloadStore; Device sets "DS_UPLOAD_FLAG" and then triggers upload via "DS_UPLOAD_REQ" Event. "DS_UPLOAD_FLAG" is reset as soon as the upload is completed.
Device reset (see 10.7)	Parameter change using one of the reset options in 10.7	See Table 101

NOTE For details on "DS_UPLOAD_FLAG" see 11.4.4

4672

4673 **12.4.5 Production ("Restore")**

4674 Data Storage in Master port configuration is enabled. However, only DS_Download operation
 4675 is available. This means, unintended overwriting of Data Storage within the Master is
 4676 prohibited.

4677 Any changes of the active parameters through teach-in, tool based parameterization, or local
 4678 parameterization will lead to a Data Storage Event, and State Property "DS_UPLOAD_FLAG"
 4679 will be set in the Device.

4680 In back-up level Production ("Restore") the Master shall ignore this flag and shall issue a
 4681 DS_Download to overwrite the changed parameters.

4682 Criteria for the particular copy activities are listed in Table 132. These criteria are the conditions to trigger a copy process of the active parameters to the backup parameters, thus
 4683 ensuring the consistency of these two sets.
 4684

4685 **Table 132 – Criteria for backing up parameters ("Restore")**

User action	Operations	Data Storage
Change port configuration	Change of relevant port configuration via Master tool (on-line): see 11.4.4	Change of relevant port configuration triggers "DS_Delete" followed by an upload (copy) to Data Storage (see 13.4.1, 11.3.1 and 11.4.4).

4686

4687 **12.5 Use cases**

4688 **12.5.1 Device replacement (@ "Backup/Restore")**

4689 The stored (saved) set of back-up parameters overwrites the active parameters (e.g. factory
 4690 settings) within the replaced compatible Device of same type. This one operates after a re-
 4691 start with the identical parameters as with its predecessor.

4692 The preconditions for this use case are

- 4693 a) Devices and Master port adjustments according to 12.2.2;
- 4694 b) *Backup Level*: "Backup/Restore"
- 4695 c) The replacement Device shall be re-initiated to "factory settings" in case it is not a new
 4696 Device out of the box (for "Back-to-box" see 10.7.5)

4697 **12.5.2 Device replacement (@ "Restore")**

4698 The stored (saved) set of back-up parameters overwrites the active parameters (e.g. factory
 4699 settings) within the replaced compatible Device of same type. This one operates after a
 4700 restart with the identical parameters as with its predecessor.

4701 The preconditions for this use case are

- 4702 a) Devices and Master port adjustments according to 12.2.2;
- 4703 b) *Backup Level*: "Restore"

4704 **12.5.3 Master replacement**

4705 **12.5.3.1 General**

4706 This feature depends heavily on the implementation and integration concept of the Master de-
 4707 signer and manufacturer as well as on the features of the upper level system (fieldbus).

4708 **12.5.3.2 Without fieldbus support (base level)**

4709 Principal approach for a replaced (new) Master using a Master tool:

- 4710 c) Set port configurations: amongst others the *Backup Level* to "Backup/Restore" or "Re-
 4711 store"
- 4712 d) Master "reset to factory settings": clear backup parameters of all ports within the Data
 4713 Storage in case it is not a new Master out of the box
- 4714 e) Active parameters of all Devices are automatically uploaded (copied) to Data Storage
 4715 (backup)

4716 **12.5.3.3 Fieldbus support (comfort level)**

4717 Any kind of fieldbus specific mechanism to back up the Master parameter set including the
 4718 Data Storage of all Devices is used. Even though these fieldbus mechanisms are similar to
 4719 the IO-Link approach, they are following their certain paradigm which may conflict with the
 4720 described paradigm of the IO-Link back up mechanism (see Figure 118).

4721 12.5.3.4 PLC system

4722 The Device and Master parameters are stored within the system specific database of the PLC
4723 and downloaded to the Master at system startup after replacement.

4724 This top down concept may conflict with the active parameter setting within the Devices.

4725 12.5.4 Project replication

4726 Following the concept of 12.5.3.3, the storage of complete Master parameter sets within the
4727 parameter server of an upper level system can automatically initiate the configuration of Mas-
4728 ters and Devices besides any other upper level components and thus support the automatic
4729 replication of machines.

4730 Following the concept of 12.5.3.4, after supply of the Master by the PLC, the Master can
4731 supply the Devices.


4732 13 Integration

4733 13.1 Generic Master model for system integration

4734 Figure 120 shows the integration relevant excerpt of Figure 95. Basis is the Standardized
4735 Master Interface (SMI), which is specified in an abstract manner in 11.2. It transforms SDCI
4736 objects into services and objects appropriate for the upper level systems such as embedded
4737 controllers, IT systems (JSON), fieldbuses and PLCs, engineering systems, as well as
4738 universal Master Tools (PDCT) for Masters of different brands.

4739 It is an objective of this SMI to achieve uniform behavior of Masters of different brands from a
4740 user's point of view. Another objective is to provide a stringent specification for organizations
4741 developing integration specifications into their systems without administrative overhead.

4742 In Figure 120, the green marked items are areas of responsibility of fieldbus organizations
4743 and their integration specifications. The blue marked items are areas of responsibility of IT
4744 organizations and their specifications. The red marked items are areas of responsibility of
4745 individual automation equipment manufacturers. The white marked item ("Gateway manage-
4746 ment") represents a coordination layer for the different gateway applications. A corresponding
4747 specification is elaborated by a joint working group [12].

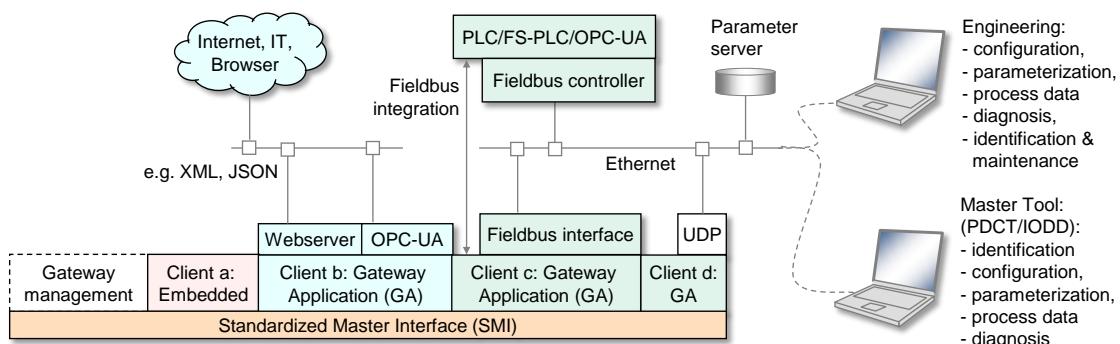

4748

4749 **Figure 120 – Generic Master Model for system integration**

4750 13.2 Role of gateway applications

4751 13.2.1 Clients

4752 It is the role of gateway applications to provide translations of SMI services into the target
4753 systems (clients). Table 105 provides an overview of specified mandatory and optional SMI
4754 services. The designer of a gateway application determines the SMI service call technology.

4755 Gateway applications such as shown in Figure 120 include but are not limited to:

- 4756 • Pure coding tasks of the abstract SMI services, for example for embedded controllers;

- 4757 • Comfortable webserver providing text and data for standard browsers using for example
4758 XML, JSON;
- 4759 • OPC-UA server used for parameterization and data exchange via IT applications; security
4760 solutions available;
- 4761 • Adapters with a fieldbus interface for programmable logic controllers (PLCs) and human
4762 machine interfaces based on OPC-UA;
- 4763 • Adapters for a User Datagram Protocol (UDP) to connect engineering tools.

4764 **13.2.2 Coordination**

4765 It is the responsibility of gateway applications to prevent from access conflicts such as

- 4766 • Different clients to one Device
- 4767 • Concurrent tasks for one Device, for example prevent from SystemCommand "Restore
4768 factory settings" while Block Parameterization is running.

4770 **13.3 Security**

4771 The aspect of security is important whenever access to Master and Device data is involved. In
4772 case of fieldbuses most of the fieldbus organizations provide dedicated guidelines on security.
4773 In general, the IEC 62443 series is an appropriate source of protection strategies for industrial
4774 automation applications.

4775 **13.4 Special gateway applications**

4776 **13.4.1 Changing Device configuration including Data Storage**

4777 After each relevant change of Device configuration/parameterization, the associated
4778 previously stored data set within the Master shall be cleared or marked invalid via the variable
4779 DS_Delete. Relevant changes via PortConfigList are:

- 4780 – Change of CVID,
- 4781 – Change of CDID,
- 4782 – Change of Validation&Backup except changes between "Backup + Restore" and
4783 "Restore",
- 4784 – Change of PortMode.

4786 **13.4.2 Parameter server and recipe control**

4787 The Master may combine the entire parameter sets of the connected Devices together with all
4788 other relevant data for its own operation and make this data available for upper level
4789 applications. For example, this data may be saved within a parameter server which may be
4790 accessed by a PLC program to change recipe parameters, thus supporting flexible
4791 manufacturing.

4792 NOTE The structure of the data exchanged between the Master and the parameter server is outside the scope of
4793 this document.


4794 **13.5 Port and Device Configuration Tool (PDCT)**

4795 **13.5.1 Strategy**

4796 Figure 120 demonstrates the necessity of a tool to configure ports, parameterize the Device,
4797 display diagnosis information, and provide identification and maintenance information.
4798 Depending on the degree of integration into a fieldbus system, the PDCT functions can be
4799 reduced, for example if the port configuration can be achieved via the field device description
4800 file of the particular fieldbus (engineering).

4801 **13.5.2 Accessing Masters via SMI**

4802 Figure 121 illustrates sample sequences of a standardized PDCT access to Masters (SMI).
4803 The Standardized Master Interface is specified in 11.2.

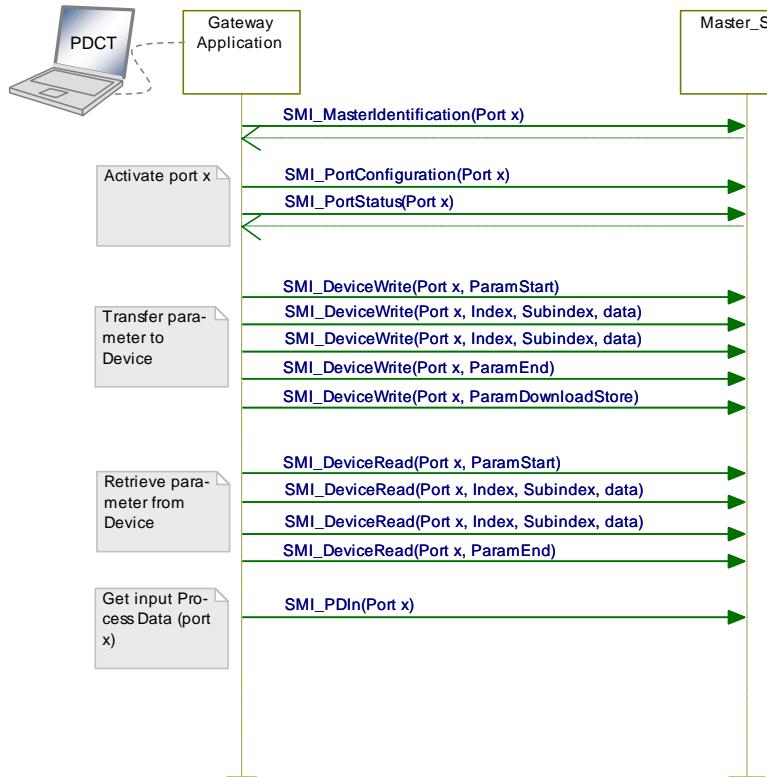


4804

4805

Figure 121 – PDCT via gateway application**13.5.3 Basic layout examples**

4807 Figure 122 shows one example of a PDCT display layout.

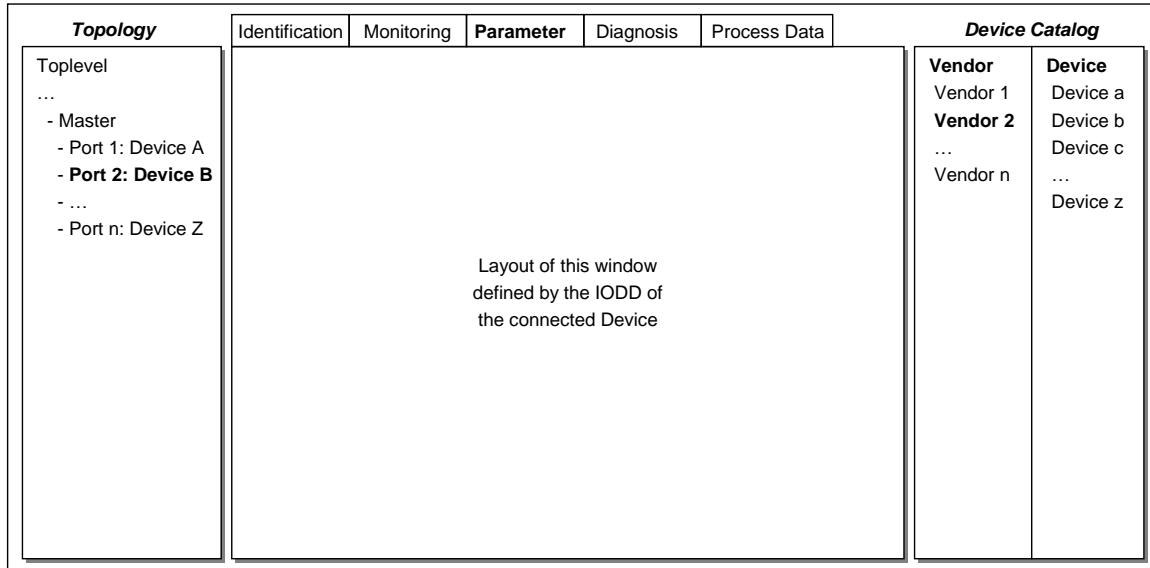


4808

4809

Figure 122 – Example 1 of a PDCT display layout4810 The PDCT display should always provide a navigation window for a project or a network topology, a window for the particular view on a chosen Device that is defined by its IODD, and 4811 a window for the available Devices based on the installed IODD files.
4812

4813

4814 Figure 123 shows another example of a PDCT display layout.

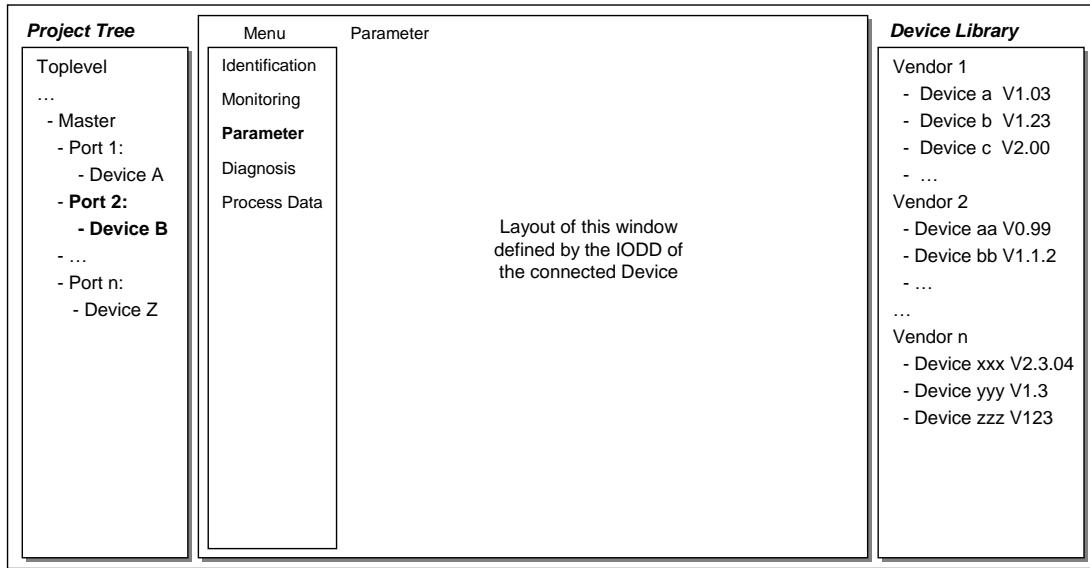

4815

4816

Figure 123 – Example 2 of a PDCT display layout

4817 NOTE Further information can be retrieved from IEC/TR 62453-61.

4818
4819
4820
4821

Annex A (normative)

Codings, timing constraints, and errors

A.1 General structure and encoding of M-sequences

A.1.1 Overview

The general concept of M-sequences is outlined in 7.3.3.2. Subclauses A.1.2 to A.1.6 provide a detailed description of the individual elements of M-sequences.

A.1.2 M-sequence control (MC)

The Master indicates the manner the user data (see A.1.4) shall be transmitted in an M-sequence control octet. This indication includes the transmission direction (read or write), the communication channel, and the address (offset) of the data on the communication channel. The structure of the M-sequence control octet is shown in Figure A.1.

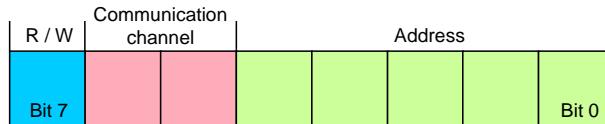


Figure A.1 – M-sequence control

Bit 0 to 4: Address

These bits indicate the address, i.e. the octet offset of the user data on the specified communication channel (see also Table A.1). In case of an ISDU channel, these bits are used for flow control of the ISDU data. The address, which means in this case the position of the user data within the ISDU, is only available indirectly (see 7.3.6.2).

Bit 5 to 6: Communication channel

These bits indicate the communication channel for the access to the user data. The defined values for the communication channel parameter are listed in Table A.1.

Table A.1 – Values of communication channel

Value	Definition
0	Process
1	Page
2	Diagnosis
3	ISDU

Bit 7: R/W

This bit indicates the transmission direction of the user data on the selected communication channel, i.e. read access (transmission of user data from Device to Master) or write access (transmission of user data from Master to Device). The defined values for the R/W parameter are listed in Table A.2.

Table A.2 – Values of R/W


Value	Definition
0	Write access
1	Read access

4848 A Device is not required to support each and every of the 256 values of the M-sequence
4849 control octet. For read access to not implemented addresses or communication channels the

4850 value "0" shall be returned. A write access to not implemented addresses or communication
 4851 channels shall be ignored.

4852 **A.1.3 Checksum / M-sequence type (CKT)**

4853 The M-sequence type is transmitted together with the checksum in the check/type octet. The
 4854 structure of this octet is demonstrated in Figure A.2.

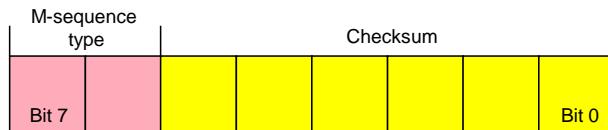

4855

4856 **Figure A.2 – Checksum/M-sequence type octet**

4857 **Bit 0 to 5: Checksum**

4858 These bits contain a 6 bit message checksum to ensure data integrity, see also A.1.6 and
 4859 Clause I.1.

4860 **Bit 6 to 7: M-sequence type**

4861 These bits indicate the M-sequence type. Herewith, the Master specifies how the messages
 4862 within the M-sequence are structured. Defined values for the M-sequence type parameter are
 4863 listed in Table A.3.

4864 **Table A.3 – Values of M-sequence types**

Value	Definition
0	Type 0
1	Type 1
2	Type 2 (see NOTE)
3	reserved

NOTE Subtypes depend on PD configuration and PD direction.

4865

4866 **A.1.4 User data (PD or OD)**

4867 User data is a general term for both Process Data and On-request Data. The length of user
 4868 data can vary from 0 to 64 octets depending on M-sequence type and transmission direction
 4869 (read/write). An overview of the available data types is shown in Table A.4. These data types
 4870 can be arranged as records (different types) or arrays (same types).

4871


Table A.4 – Data types for user data

Data type	Reference
BooleanT	See F.2
UIntegerT	See F.2.3
IntegerT	See F.2.4
StringT	See F.2.6
OctetStringT	See F.2.7
Float32T	See F.2.5
TimeT	See F.2.8
TimeSpanT	See F.2.9

4872 The detailed coding of the data types can be found in Annex F.

4873 **A.1.5 Checksum / status (CKS)**

4874 The checksum/status octet is part of the reply message from the Device to the Master. Its
 4875 structure is shown in Figure A.3. It comprises a 6-bit checksum, a flag to indicate valid or
 4876 invalid Process Data, and an Event flag.

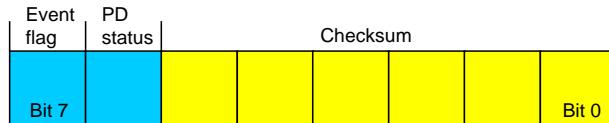

4877

Figure A.3 – Checksum/status octet

4879 **Bit 0 to 5: Checksum**

4880 These bits contain a 6-bit checksum to ensure data integrity of the reply message. See also
 4881 A.1.6 and Clause I.1.

4882 **Bit 6: PD status**

4883 This bit indicates whether the Device can provide valid Process Data or not. Defined values
 4884 for the parameter are listed in Table A.5.

4885 This PD status flag shall be used for Devices with input Process Data. Devices with only
 4886 output Process Data shall always indicate "Process Data valid".

4887 If the PD status flag is set to "Process Data invalid" within a message, all the input Process
 4888 Data of the complete Process Data cycle are invalid.

4889 **Table A.5 – Values of PD status**

Value	Definition
0	Process Data valid
1	Process Data invalid

4890

4891 **Bit 7: Event flag**

4892 This bit indicates a Device initiative for the data category "Event" to be retrieved by the
 4893 Master via the diagnosis communication channel (see Table A.1). The Device can report
 4894 diagnosis information such as errors, warnings or notifications via Event response messages.
 4895 Permissible values for the parameter are listed in Table A.6.

4896 **Table A.6 – Values of the Event flag**

Value	Definition
0	No Event
1	Event


4897

4898 **A.1.6 Calculation of the checksum**

4899 The message checksum provides data integrity protection for data transmission from Master
 4900 to Device and from Device to Master. Each UART data octet is protected by the UART parity
 4901 bit (see Figure 21). Besides this individual data octet protection, all of the UART data octets in
 4902 a message are XOR (exclusive or) processed octet by octet. The check/type octet is included
 4903 with checksum bits set to "0". The resulting checksum octet is compressed from 8 to 6 bit in
 4904 accordance with the conversion procedure in Figure A.4 and its associated formulas (see
 4905 equations in (A.1)). The 6 bit compressed "Checksum6" is entered into the checksum/
 4906 M-sequence type octet (see Figure A.2). The same procedure takes place to secure the
 4907 message from the Device to the Master. In this case the compressed checksum is entered
 4908 into the checksum/status octet (see Figure A.3).

4909 A seed value of 0x52 is used for the checksum calculation across the message. It is XORed
 4910 with the first octet of the message (MC).

4911

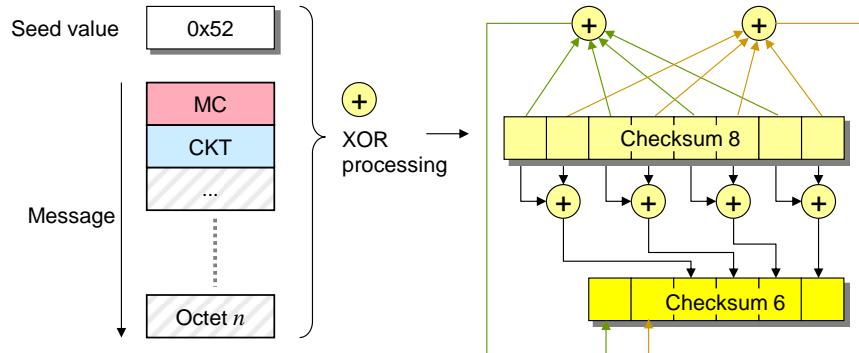

4912

Figure A.4 – Principle of the checksum calculation and compression

4913 The set of equations in (A.1) define the compression procedure from 8 to 6 bit in detail.

$$D5_6 = D7_8 \text{ xor } D5_8 \text{ xor } D3_8 \text{ xor } D1_8$$

$$D4_6 = D6_8 \text{ xor } D4_8 \text{ xor } D2_8 \text{ xor } D0_8$$

$$D3_6 = D7_8 \text{ xor } D6_8$$

(A.1)

$$D2_6 = D5_8 \text{ xor } D4_8$$

$$D1_6 = D3_8 \text{ xor } D2_8$$

$$D0_6 = D1_8 \text{ xor } D0_8$$

4914 A.2 M-sequence types


4915 A.2.1 Overview

4916 Process Data and On-request Data use separate cyclic and acyclic communication channels
 4917 (see Figure 8) to ensure scheduled and deterministic delivery of Process Data while delivery
 4918 of On-request Data does not have consequences on the Process Data transmission
 4919 performance.

4920 Within SDCI, M-sequences provide the access to the communication channels via the M-
 4921 sequence Control octet. The number of different M-sequence types meets the various
 4922 requirements of sensors and actuators regarding their Process Data width. See Figure 39 for
 4923 an overview of the available M-sequence types that are specified in A.2.2 to A.2.5. See A.2.6
 4924 for rules on how to use the M-sequence types.

4925 A.2.2 M-sequence TYPE_0

4926 M-sequence TYPE_0 is mandatory for all Devices. It only transmits On-request Data. One
 4927 octet of user data is read or written per cycle. This M-sequence is shown in Figure A.5.

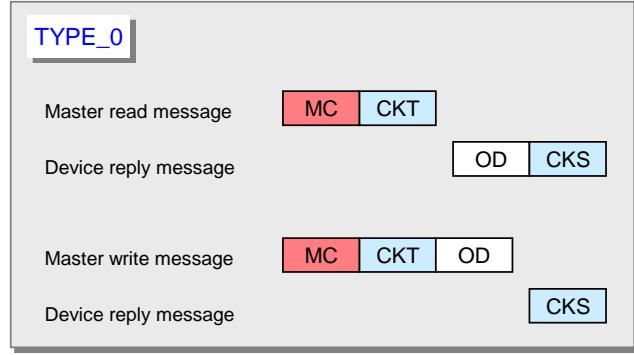


4928

Figure A.5 – M-sequence TYPE_0**A.2.3 M-sequence TYPE_1_x**

4931 M-sequence TYPE_1_x is optional for all Devices.

4932 M-sequence TYPE_1_1 is shown in Figure A.6.

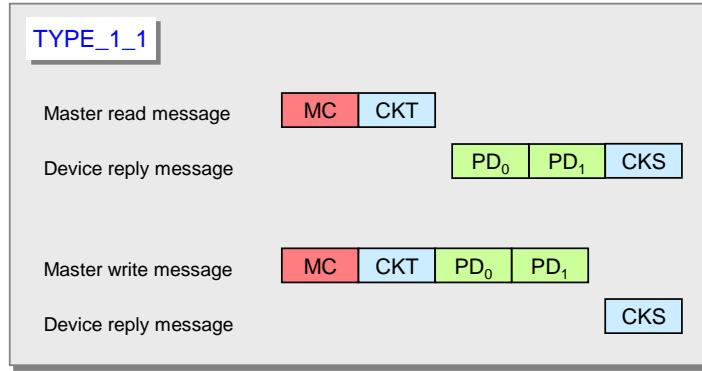


4933

Figure A.6 – M-sequence TYPE_1_1

4935 Two octets of Process Data are read or written per cycle. Address (bit offset) belongs to the
4936 process communication channel (see A.2.1).

4937 In case of interleave mode (see 7.3.4.2) and odd-numbered PD length the remaining octets
4938 within the messages are padded with 0x00.

4939 M-sequence TYPE_1_2 is shown in Figure A.7. Two octets of On-request Data are read or
4940 written per cycle.

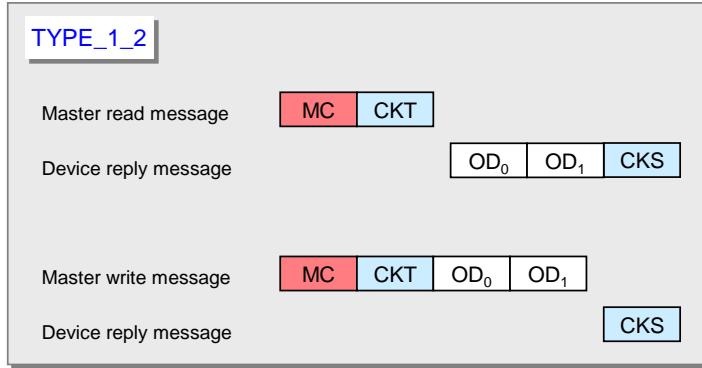

4941


Figure A.7 – M-sequence TYPE_1_2

4943 M-sequence TYPE_1_V providing variable (extendable) message length is shown in Figure
4944 A.8. A number of m octets of On-request Data are read or written per cycle.

4945 When accessing octets via page and diagnosis communication channels using an M-
 4946 sequence TYPE with multi-octet ODs, the following rules apply:

- 4947 • At write access, only the first octet (OD_0) of On-request Data is relevant. The Master shall
 4948 send all subsequent ODs filled with "0x00". Any Device shall evaluate only the first octet
 4949 of ODs and ignore the remaining octets.
- 4950 • At read access, the Device shall return the first relevant data octet as OD_0 and all
 4951 subsequent ODs filled with either "0x00" or with subsequent data octets if appropriate.
 4952 Master shall evaluate only the octet in OD_0 .

4953

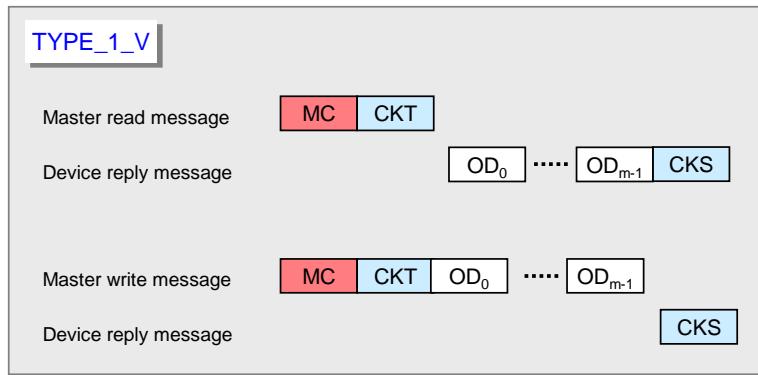


4954

4955 **Figure A.8 – M-sequence TYPE_1_V**

4956 **A.2.4 M-sequence TYPE_2_x**

4957 M-sequence TYPE_2_x is optional for all Devices. M-sequences TYPE_2_1 through
 4958 TYPE_2_5 are defined. M-sequence TYPE_2_V provides variable (extendable) message
 4959 length. M-sequence TYPE_2_x transmits Process Data and On-request Data in one message.
 4960 The number of process and On-request Data read or written in each cycle depends on the
 4961 type. The Address parameter (see Figure A.1) belongs in this case to the on-request
 4962 communication channel. The Process Data address is specified implicitly starting at "0". The
 4963 format of Process Data is characterizing the M-sequence TYPE_2_x.


4964 M-sequence TYPE_2_1 transmits one octet of read Process Data and one octet of read or
 4965 write On-request Data per cycle. This M-sequence type is shown in Figure A.9.

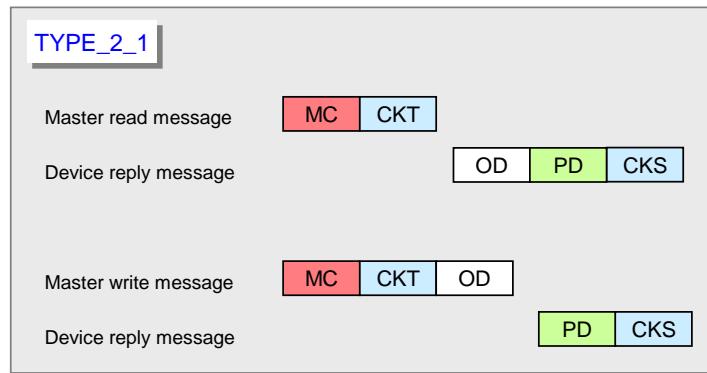

4966

4967 **Figure A.9 – M-sequence TYPE_2_1**

4968 M-sequence TYPE_2_2 transmits 2 octets of read Process Data and one octet of On-request
 4969 Data per cycle. This M-sequence type is shown in Figure A.10.

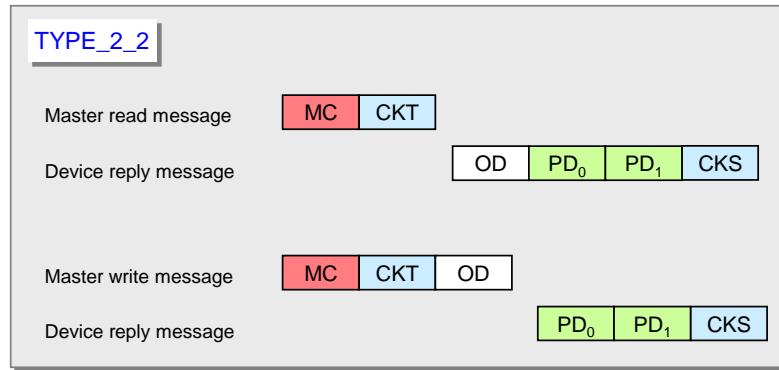


4970

4971

Figure A.10 – M-sequence TYPE_2_2

4972 M-sequence TYPE_2_3 transmits one octet of write Process Data and one octet of read or
4973 write On-request Data per cycle. This M-sequence type is shown in Figure A.11.

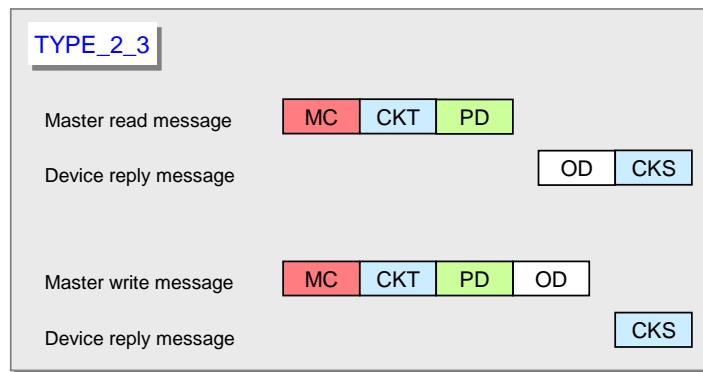


4974

4975

Figure A.11 – M-sequence TYPE_2_3

4976 M-sequence TYPE_2_4 transmits 2 octets of write Process Data and one octet of read or
4977 write On-request Data per cycle. This M-sequence type is shown in Figure A.12

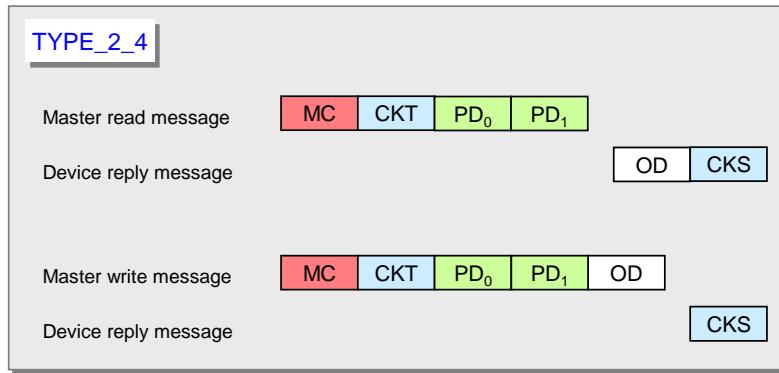


4978

4979

Figure A.12 – M-sequence TYPE_2_4

4980 M-sequence TYPE_2_5 transmits one octet of write and read Process Data and one octet of
4981 read or write On-request Data per cycle. This M-sequence type is shown in Figure A.13.

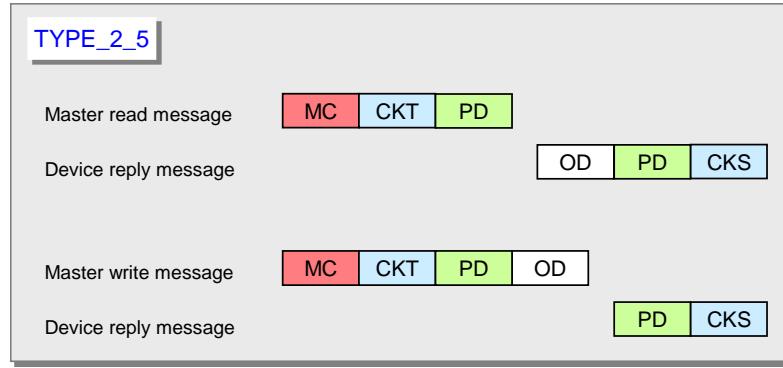


4982

4983

Figure A.13 – M-sequence TYPE_2_5

4984 M-sequence TYPE_2_V transmits the entire write (read) ProcessDataIn n (k) octets per cycle.
 4985 The range of n (k) is 0 to 32. Either PDin or PDout are not existing when n = 0 or k = 0.
 4986 TYPE_2_V also transmits m octets of (segmented) read or write On-request Data per cycle
 4987 using the address in Figure A.1. Permitted values for m are 1, 2, 8, and 32. This variable M-
 4988 sequence type is shown in Figure A.14.

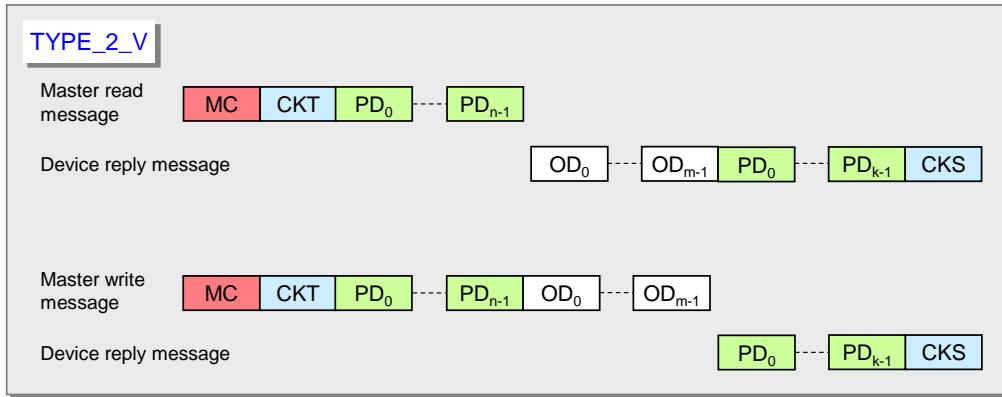

4989

4990

Figure A.14 – M-sequence TYPE_2_V

4991 When using M-sequence TYPE with multi-octet ODs, the rules of M-sequence TYPE_1_V
 4992 apply (see Figure A.8).

4993 **A.2.5 M-sequence type 3**

4994 M-sequence type 3 is reserved and shall not be used.

4995 **A.2.6 M-sequence type usage for STARTUP, PREOPERATE and OPERATE modes**

4996 Table A.7 lists the M-sequence types for the STARTUP mode together with the minimum
 4997 recovery time ($T_{initcyc}$) that shall be observed for Master implementations (see A.3.9). The M-
 4998 sequence code refers to the coding in B.1.4.

4999 **Table A.7 – M-sequence types for the STARTUP mode**

STARTUP M-sequence code	On-request Data Octets	M-sequence type	Minimum recovery time
			T_{BIT}
n/a	1	TYPE_0	100

5000

5001 Table A.8 lists the M-sequence types for the PREOPERATE mode together with the minimum
 5002 recovery time ($T_{initcyc}$) that shall be observed for Master implementations.

5003

Table A.8 – M-sequence types for the PREOPERATE mode

PREOPERATE M-sequence code	On-request Data	M-sequence type	Minimum recovery time ^a
	Octets		T_{BIT}
0 ^b	1	TYPE_0	100
1	2	TYPE_1_2	100
2	8	TYPE_1_V	210
3	32	TYPE_1_V	550
NOTE a The minimum recovery time in PREOPERATE mode is a requirement for the Master			
NOTE b It is highly recommended for Devices not to use TYPE_0 thus improving error discovery when Master restarts communication			

5004

5005 Table A.9 lists the M-sequence types for the OPERATE mode for legacy Devices. The
 5006 minimum cycle time for Master in OPERATE mode is specified by the parameter
 5007 "MinCycleTime" of the Device (see B.1.3).

5008

Table A.9 – M-sequence types for the OPERATE mode (legacy protocol)

OPERATE M-sequence code	On-request Data	Process Data (PD)		M-sequence type
	Octets	PDin	PDout	Legacy protocol (see [8])
0	1	0	0	TYPE_0 NOTE
1	2	0	0	TYPE_1_2
don't care	2	PDin + PDout > 2 octets		TYPE_1_1/1_2 (interleaved)
don't care	1	1...8 bit	0	TYPE_2_1
don't care	1	9...16 bit	0	TYPE_2_2
don't care	1	0	1...8 bit	TYPE_2_3
don't care	1	0	9...16 bit	TYPE_2_4
don't care	1	1...8 bit	1...8 bit	TYPE_2_5
NOTE It is highly recommended for Devices not to use TYPE_0 thus improving error discovery when Master restarts communication				

5009

5010 Table A.10 lists the M-sequence types for the OPERATE mode for Devices according to this
 5011 specification. The minimum cycle time for Master in OPERATE mode is specified by the
 5012 parameter MinCycleTime of the Device (see B.1.3).

5013

Table A.10 – M-sequence types for the OPERATE mode

OPERATE M-sequence code	On-request Data	Process Data (PD)		M-sequence type
	Octets	PDin	PDout	
0	1	0	0	TYPE_0 NOTE 1
1	2	0	0	TYPE_1_2
6	8	0	0	TYPE_1_V
7	32	0	0	TYPE_1_V
0	2	3..32 octets	0...32 octets	TYPE 1_1 / 1_2 interleaved NOTE 3
0	2	0...32 octets	3...32 octets	TYPE 1_1 / 1_2 interleaved NOTE 3
0	1	1...8 bit	0	TYPE_2_1
0	1	9...16 bit	0	TYPE_2_2
0	1	0	1...8 bit	TYPE_2_3
0	1	0	9...16 bit	TYPE_2_4
0	1	1...8 bit	1...8 bit	TYPE_2_5
0	1	9...16 bit	1...16 bit	TYPE_2_V NOTE 2
0	1	1...16 bit	9...16 bit	TYPE_2_V NOTE 2
4	1	0...32 octets	3...32 octets	TYPE_2_V
4	1	3...32 octets	0...32 octets	TYPE_2_V
5	2	>0 bit, octets	≥0 bit, octets	TYPE_2_V
5	2	≥0 bit, octets	>0 bit, octets	TYPE_2_V
6	8	>0 bit, octets	≥0 bit, octets	TYPE_2_V
6	8	≥0 bit, octets	>0 bit, octets	TYPE_2_V
7	32	>0 bit, octets	≥0 bit, octets	TYPE_2_V
7	32	≥0 bit, octets	>0 bit, octets	TYPE_2_V

NOTE1 It is highly recommended for Devices not to use TYPE_0 thus improving error discovery when Master restarts communication
 NOTE2 Former TYPE_2_6 has been replaced in support of TYPE_2_V due to inefficiency.
 NOTE3 Interleaved mode shall not be implemented in Devices, but shall be supported by Masters

- 5014 **A.3 Timing constraints**
- 5015 **A.3.1 General**
- 5016 The interactions of a Master and its Device are characterized by several time constraints that
 5017 apply to the UART frame, Master and Device message transmission times, supplemented by
 5018 response, cycle, delay, and recovery times.
- 5019 **A.3.2 Bit time**
- 5020 The bit time T_{BIT} is the time it takes to transmit a single bit. It is the inverse value of the
 5021 transmission rate (see equation (A.2)).

$$T_{BIT} = 1/(\text{transmission rate}) \quad (\text{A.2})$$

- 5022 Values for T_{BIT} are specified in Table 9.

5023 **A.3.3 UART frame transmission delay of Master (ports)**

5024 The UART frame transmission delay t_1 of a port is the duration between the end of the stop bit
 5025 of a UART frame and the beginning of the start bit of the next UART frame. The port shall
 5026 transmit the UART frames within a maximum delay of one bit time (see equation (A.3)).

$$0 \leq t_1 \leq 1 T_{\text{BIT}} \quad (\text{A.3})$$

5027 **A.3.4 UART frame transmission delay of Devices**

5028 The Device's UART frame transmission delay t_2 is the duration between the end of the stop bit
 5029 of a UART frame and the beginning of the start bit of the next UART frame. The Device
 5030 shall transmit the UART frames within a maximum delay of 3 bit times (see equation (A.4)).

$$0 \leq t_2 \leq 3 T_{\text{BIT}} \quad (\text{A.4})$$

5031 **A.3.5 Response time of Devices**

5032 The Device's response time t_A is the duration between the end of the stop bit of a port's last
 5033 UART frame being received and the beginning of the start bit of the first UART frame being
 5034 sent. The Device shall observe a delay of at least one bit time but no more than 10 bit times
 5035 (see equation (A.5)).

$$1 T_{\text{BIT}} \leq t_A \leq 10 T_{\text{BIT}} \quad (\text{A.5})$$


5036 **A.3.6 M-sequence time**

5037 Communication between a port and its associated Device takes place in a fixed schedule,
 5038 called the M-sequence time (see equation (A.6)).

$$t_{\text{M-sequence}} = (m+n) * 11 * T_{\text{BIT}} + t_A + (m-1) * t_1 + (n-1) * t_2 \quad (\text{A.6})$$

5039 In this formula, m is the number of UART frames sent by the port to the Device and n is the
 5040 number of UART frames sent by the Device to the port. The formula can only be used for
 5041 estimates as the times t_1 and t_2 may not be constant.

5042 Figure A.15 demonstrates the timings of an M-sequence consisting of a Master (port)
 5043 message and a Device message.

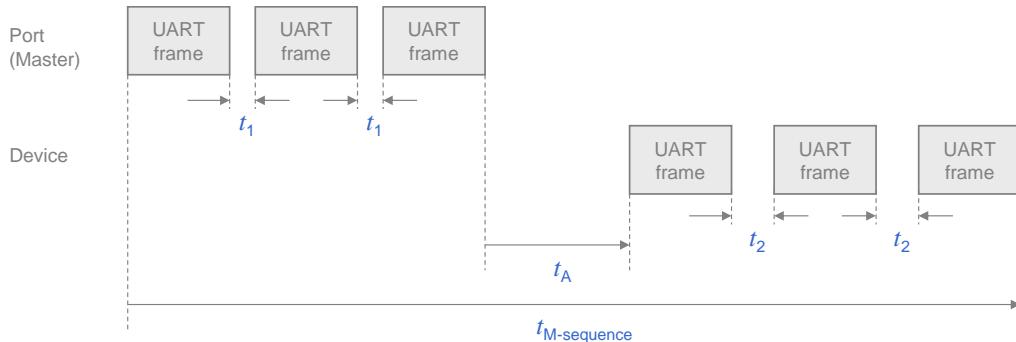

5044

5045 **Figure A.15 – M-sequence timing**

5046 **A.3.7 Cycle time**

5047 The cycle time t_{CYC} (see equation (A.7)) depends on the Device's parameter "MinCycleTime"
 5048 and the design and implementation of a Master and the number of ports.

$$t_{\text{CYC}} = t_{\text{M-sequence}} + t_{\text{idle}} \quad (\text{A.7})$$

5049 The adjustable Device parameter “MasterCycleTime” can be used for the design of a Device
 5050 specific technology such as an actuator to derive the timing conditions for a default
 5051 appropriate action such as de-activate or de-energize the actuator (see 7.3.3.5
 5052 “MaxCycleTime”, 10.2, and 10.8.3).

5053 Table A.11 lists recommended minimum cycle time values for the specified transmission mode
 5054 of a port. The values are calculated based on M-sequence Type_2_1.

5055 **Table A.11 – Recommended MinCycleTimes**

Transmission mode	t_{CYC}
COM1	18,0 ms
COM2	2,3 ms
COM3	0,4 ms

5056 **A.3.8 Idle time**

5057 The idle time t_{idle} results from the configured cycle time t_{CYC} and the M-sequence time
 5058 $t_{M\text{-sequence}}$. With reference to a port, it comprises the time between the end of the message of
 5059 a Device and the beginning of the next message from the Master (port).

5060 The idle time shall be long enough for the Device to become ready to receive the next
 5061 message.

5062 **A.3.9 Recovery time**

5063 The Master shall wait for a recovery time $t_{initcyc}$ between any two subsequent acyclic Device
 5064 accesses while in the STARTUP or PREOPERATE phase (see A.2.6). Recovery time is
 5065 defined between the beginnings of two subsequent Master requests. Calculations shall refer
 5066 to equation (A.7).

5067 **A.4 Errors and remedies**

5068 **A.4.1 UART errors**

5069 **A.4.1.1 Parity errors**

5070 The UART parity bit (see Figure 21) and the checksum (see A.1.6) are two independent
 5071 mechanisms to secure the data transfer. This means that for example two bit errors in
 5072 different octets of a message, which are resulting in the correct checksum, can also be
 5073 detected. Both mechanisms lead to the same error processing.

5074 Remedy: The Master shall repeat the Master message 2 times (see 7.2.2.1). Devices shall
 5075 reject all data with detected errors and create no reaction.

5076 **A.4.1.2 UART framing errors**

5077 The conditions for the correct detection of a UART frame are specified in 5.3.3.2. Error
 5078 processing shall take place whenever perturbed signal shapes or incorrect timings lead to an
 5079 invalid UART stop bit.

5080 Remedy: See A.4.1.1.

5081 **A.4.2 Wake-up errors**

5082 The wake-up current pulse is specified in 5.3.3.3 and the wake-up procedures in 7.3.2.1.
 5083 Several faults may occur during the attempts to establish communication.

5084 Remedy: Retries are possible. See 7.3.2.1 for details.

5085 **A.4.3 Transmission errors**

5086 **A.4.3.1 Checksum errors**

5087 The checksum mechanism is specified in A.1.6. Any checksum error leads to an error
5088 processing.

5089 Remedy: See A.4.1.1.

5090 **A.4.3.2 Timeout errors**

5091 The diverse timing constraints with M-sequences are specified in A.3. Master (ports) and
5092 Devices are checking several critical timings such as lack of synchronism within messages.

5093 Remedy: See A.4.1.1.

5094 **A.4.3.3 Collisions**

5095 A collision occurs whenever the Master and Device are sending simultaneously due to an
5096 error. This error is interpreted as a faulty M-sequence.

5097 Remedy: See A.4.1.1.

5098 **A.4.4 Protocol errors**

5099 A protocol error occurs for example whenever the sequence of the segmented transmission of
5100 an ISDU is wrong (see flow control case in A.1.2).

5101 Remedy: Abort of service with ErrorType information (see Annex C).

 
5102 **A.5 General structure and encoding of ISDUs**

5103 **A.5.1 Overview**

5104 The purpose and general structure of an ISDU is specified in 7.3.6.1. Subclauses A.5.2 to
5105 A.5.7 provide a detailed description of the individual elements of an ISDU and some
5106 examples.

5107 **A.5.2 I-Service**

5108 Figure A.16 shows the structure of the I-Service octet.



5110 **Figure A.16 – I-Service octet**

5111 **Bits 0 to 3: Length**

5112 The encoding of the nibble Length of the ISDU is specified in Table A.14 .

5113 **Bits 4 to 7: I-Service**

5114 The encoding of the nibble I-Service of the ISDU is specified in Table A.12.

5115 All other elements of the structure specified in 7.3.6.1 are transmitted as independent octets.

5116 **Table A.12 – Definition of the nibble "I-Service"**

I-Service (binary)	Definition		Index format
	Master	Device	
0000	No Service	No Service	n/a
0001	Write Request	Reserved	8-bit Index
0010	Write Request	Reserved	8-bit Index and Subindex
0011	Write Request	Reserved	16-bit Index and Subindex

I-Service (binary)	Definition		Index format
	Master	Device	
0100	Reserved	Write Response (-)	none
0101	Reserved	Write Response (+)	none
0110	Reserved	Reserved	
0111	Reserved	Reserved	
1000	Reserved	Reserved	
1001	Read Request	Reserved	8-bit Index
1010	Read Request	Reserved	8-bit Index and Subindex
1011	Read Request	Reserved	16-bit Index and Subindex
1100	Reserved	Read Response (-)	none
1101	Reserved	Read Response (+)	none
1110	Reserved	Reserved	
1111	Reserved	Reserved	

5117

5118 Table A.13 specifies the syntax of the ISDUs. ErrorType can be found in Annex C.

5119

Table A.13 – ISDU syntax

ISDU name	ISDU structure
Write Request	{I-Service(0x1), LEN, Index, [Data*], CHKPDU} ^ {I-Service(0x2), LEN, Index, Subindex, [Data*], CHKPDU} ^ {I-Service(0x3), LEN, Index, Index, Subindex, [Data*], CHKPDU}
Write Response (+)	I-Service(0x5), Length(0x2), CHKPDU
Write Response (-)	I-Service(0x4), Length(0x4), ErrorType, CHKPDU
Read Request	{I-Service(0x9), Length(0x3), Index, CHKPDU} ^ {I-Service(0xA), Length(0x4), Index, Subindex, CHKPDU} ^ {I-Service(0xB), Length(0x5), Index, Index, Subindex, CHKPDU}
Read Response (+)	I-Service(0xD), LEN, [Data*], CHKPDU
Read Response (-)	I-Service(0xC), Length(0x4), ErrorType, CHKPDU
Key	
LEN = {Length(0x1), ExtLength} ^ {Length}	

5120

A.5.3 Extended length (ExtLength)5121 The number of octets transmitted in this I-Service, including all protocol information (6 octets),
5122 is specified in the "Length" element of an ISDU. If the total length is more than 15 octets, the
5123 length is specified using extended length information ("ExtLength"). Permissible values for
5124 "Length" and "ExtLength" are listed in Table A.14.
5125

5126

Table A.14 – Definition of nibble Length and octet ExtLength

I-Service	Length	ExtLength	Definition
0	0	n/a	No service, ISDU length is 1. Protocol use.
0	1	n/a	Device busy, ISDU length is 1. Protocol use.
0	2 to 15	n/a	Reserved and shall not be used
1 to 15	0	n/a	Reserved and shall not be used
1 to 15	1	0 to 16	Reserved and shall not be used
1 to 15	1	17 to 238	Length of ISDU in "ExtLength"

1 to 15	1	239 to 255	Reserved and shall not be used
1 to 15	2 to 15	n/a	Length of ISDU

5127

5128 A.5.4 Index and Subindex

5129 The parameter address of the data object to be transmitted using the ISDU is specified in the
 5130 “Index” element. “Index” has a range of values from 0 to 65535 (see B.2.1 for constraints).
 5131 Index values 0 and 1 shall be rejected by the Device.

5132 There is no requirement for the Device to support all Index and Subindex values. The Device
 5133 shall send a negative response to Index or Subindex values not supported.

5134 The data element address of a structured parameter of the data object to be transmitted using
 5135 the ISDU is specified in the “Subindex” element. “Subindex” has a range of values from
 5136 0 to 255, whereby a value of “0” is used to reference the entire data object (see Figure 6).

5137 Table A.15 lists the Index formats used in the ISDU depending on the parameters transmitted.

5138 **Table A.15 – Use of Index formats**

Index	Subindex	Index format of ISDU
0 to 255	0	8 bit Index
0 to 255	1 to 255	8 bit Index and 8 bit Subindex
256 to 65535	0 to 255	16 bit Index and 8 bit Subindex (see NOTE)
NOTE See B.2.1 for constraints on the Index range		


5139

5140 A.5.5 Data

5141 The “Data” element can contain the data objects specified in Annex B or Device specific data
 5142 objects respectively. The data length corresponds to the entries in the “Length” element minus
 5143 the ISDU protocol elements.

5144 A.5.6 Check ISDU (CHKPDU)

5145 The “CHKPDU” element provides data integrity protection. The sender calculates the value of
 5146 “CHKPDU” by XOR processing all of the octets of an ISDU, including “CHKPDU” with a
 5147 preliminary value “0”, which is then replaced by the result of the calculation (see Figure A.17).

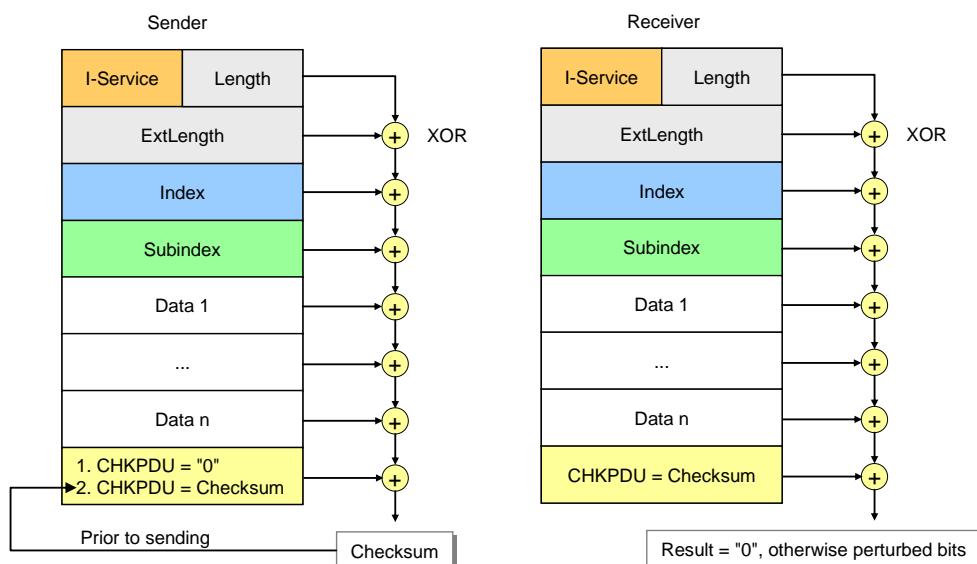

5148


5149

Figure A.17 – Check of ISDU integrity via CHKPDU

5150 The receiver checks whether XOR processing of all of the octets of the ISDU will lead to the
 5151 result "0" (see Figure A.17). If the result is different from "0", error processing shall take
 5152 place. See also A.1.6.

5153 A.5.7 ISDU examples

5154 Figure A.18 demonstrates typical examples of request formats for ISDUs, which are explained
 5155 in the following paragraphs.

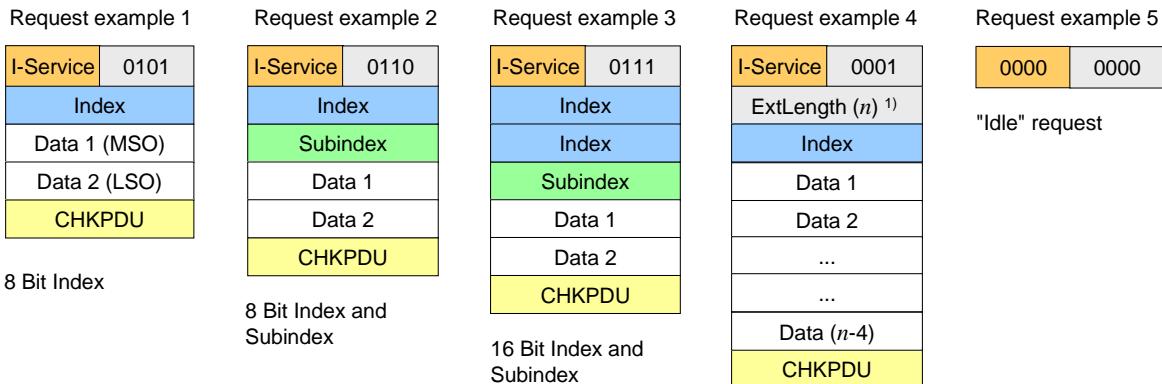

5156 1) Overall ISDU ExtLength = n (17 to 238); Length = 1 ("0001")

5157 **Figure A.18 – Examples of request formats for ISDUs**

5159 The ISDU request in example 1 comprises one Index element allowing addressing from
 5160 0 to 255 (see Table A.15 and Table B.8 for restrictions). In this example the Subindex is "0"
 5161 and the whole content of Index is Data 1 with the most significant octet (MSO) and Data 2
 5162 with the least significant octet (LSO). The total length is 5 ("0101").


5163 The ISDU request in example 2 comprises one Index element allowing addressing from 0 to
 5164 255 and the Subindex element allowing addressing an element of a data structure. The total
 5165 length is 6 ("0110").

5166 The ISDU request in example 3 comprises two Index elements allowing to address from 256
 5167 to 65535 (see Table A.15) and the Subindex element allowing to address an element of a data
 5168 structure. The total length is 7 ("0111").

5169 The ISDU request in example 4 comprises one Index element and the ExtLength element
 5170 indicating the number of ISDU elements (n), permitting numbers from 17 to 238. In this case
 5171 the Length element has the value "1".

5172 The ISDU request "Idle" in example 5 is used to indicate that no service is pending.

5173 Figure A.19 demonstrates typical examples of response ISDUs, which are explained in the
 5174 following paragraphs.

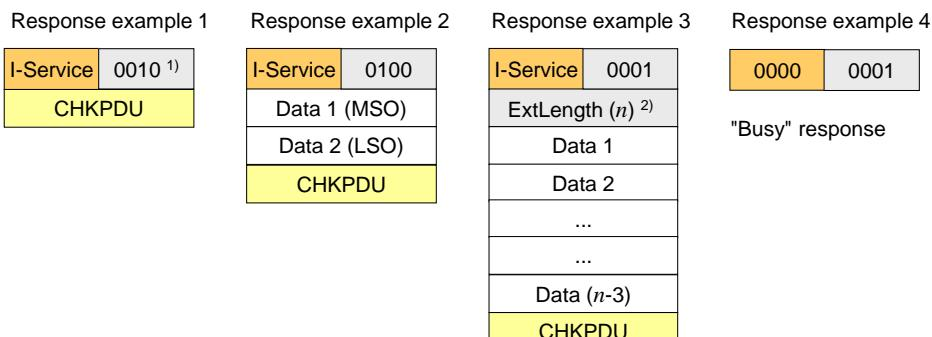


5175 1) Minimum length = 2 ("0010")

5176 2) Overall ISDU ExtLength = n (17 to 238);
 5177 Length = 1 ("0001")

5178

5179 **Figure A.19 – Examples of response ISDUs**

- 5180 The ISDU response in example 1 shows the minimum value 2 for the Length element ("0010").
- 5181 The ISDU response in example 2 shows two Data elements and a total number of 4 elements
5182 in the Length element ("0100"). Data 1 carries the most significant octet (MSO) and Data 2
5183 the least significant octet (LSO).
- 5184 The ISDU response in example 3 shows the ExtLength element indicating the number of ISDU
5185 elements (n), permitting numbers from 17 to 238. In this case the Length element has the
5186 value "1".
- 5187 The ISDU response "Busy" in example 4 is used when a Device is currently not able to
5188 respond to the read request of the Master due to the necessary preparation time for the
5189 response.
- 5190 Figure A.20 shows a typical example of both a read and a write request ISDU, which are
5191 explained in the following paragraphs.

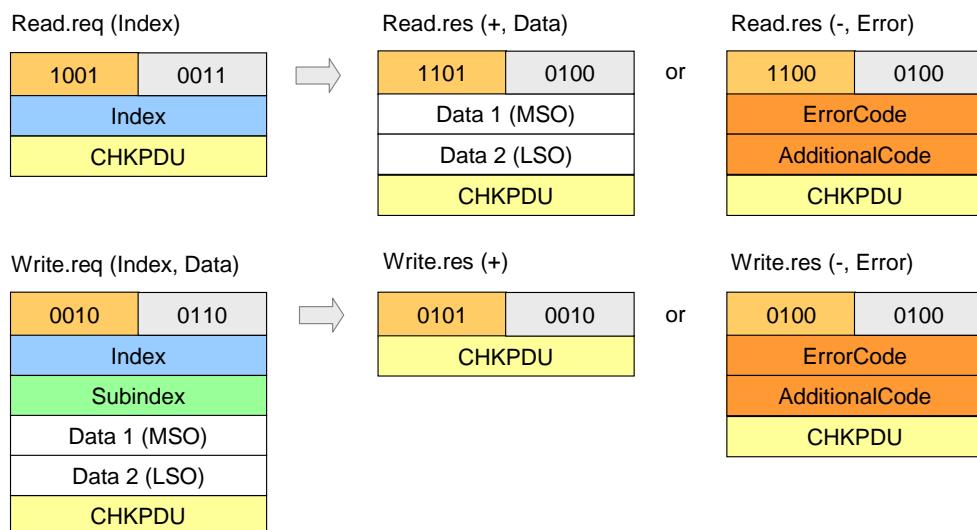

5193 **Figure A.20 – Examples of read and write request ISDUs**

- 5194 The code of the read request I-Service is "1001". According to Table A.13 this comprises an
5195 Index element. A successful read response (+) of the Device with code "1101" is shown next
5196 to the request with two Data elements. Total length is 4 ("0100"). An unsuccessful read
5197 response (-) of the Device with code "1100" is shown next in line. It carries the ErrorType with
5198 the two Data elements ErrorCode and AdditionalCode (see Annex C).
- 5199 The code of the write request I-Service is "0010". According to Table A.13 this comprises an
5200 Index and a Subindex element. A successful write response (+) of the Device with code
5201 "0101" is shown next to the request with no Data elements. Total length is 2 ("0010"). An
5202 unsuccessful read response (-) of the Device with code "0100" is shown next in line. It carries the ErrorType with
5203 the two Data elements ErrorCode and AdditionalCode (see Annex C).

5204 **A.6 General structure and encoding of Events**

5205 **A.6.1 General**

- 5206 In 7.3.8.1 and Table 58 the purpose and general structure of the Event memory is specified.
5207 This memory accommodates a StatusCode, several EventQualifiers and their associated
5208 EventCodes. The coding of these memory elements is specified in the subsequent sections.

5209 **A.6.2 StatusCode type 1 (no details)**

- 5210 Figure A.21 shows the structure of this StatusCode.

5211 NOTE 1 StatusCode type 1 is only used in Events generated by legacy devices (see 7.3.8.1).

5212

5213

5214 Bits 0 to 4: EventCode (type 1)
 5215 The coding of this data structure is listed in Table A.16. The EventCodes are mapped into
 5216 EventCodes (type 2) as listed in Annex D. See 7.3.8.2 for additional information.

5217

Table A.16 – Mapping of EventCodes (type 1)

EventCode (type 1)	EventCode (type2)	Instance	Type	Mode
****1	0xFF80	Application	Notification	Event single shot
***1*	0xFF80	Application	Notification	Event single shot
1	0x6320	Application	Notification	Event single shot
*1***	0xFF80	Application	Notification	Event single shot
1****	0xFF10	Application	Notification	Event single shot
Key				
*	Don't care			

5218

5219 Bit 5: Reserved

5220 This bit is reserved and shall be set to zero in StatusCode type 1.

5221 Bit 6: PD Invalid


5222 NOTE 2 This bit is used in legacy protocol (see [8]) for PDinvalid indication.

5223 Bit 7: Event Details5224 This bit indicates that no detailed Event information is available. It shall always be set to zero
 5225 in StatusCode type 1.**5226 A.6.3 StatusCode type 2 (with details)**

5227 Figure A.22 shows the structure of the StatusCode type 2.


5228

5229

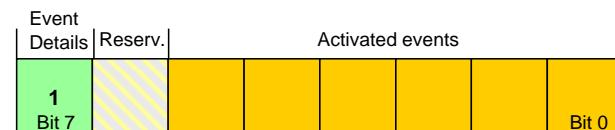**Figure A.22 – Structure of StatusCode type 2**

5230

5231 Bits 0 to 5: Activated Events
 5232 Each bit is linked to an Event in the memory (see 7.3.8.1) as demonstrated in Figure A.23.
 5233 Bit 0 is linked to Event 1, bit 1 to Event 2, etc. A bit with value "1" indicates that the
 5234 corresponding EventQualifier and the EventCode have been entered in valid formats in the
 memory. A bit with value "0" indicates an invalid entry.

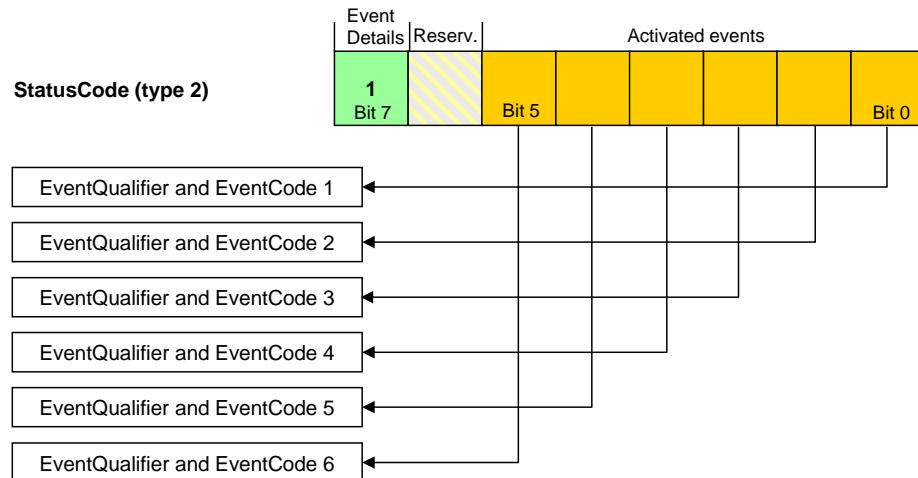

5235

5236

Figure A.23 – Indication of activated Events**5237 Bit 6: Reserved**

5238 This bit is reserved and shall be set to zero.

5239 NOTE This bit is used in the legacy protocol version according to [8] for PDinvalid indication

 
5240 Bit 7: Event Details

5241 This bit indicates that detailed Event information is available. It shall always be set in
5242 StatusCode type 2.

5243 A.6.4 EventQualifier

5244 The structure of the EventQualifier is shown in Figure A.24.

5245



5246

Figure A.24 – Structure of the EventQualifier**5247 Bits 0 to 2: INSTANCE**

5248 These bits indicate the particular source (instance) of an Event thus refining its evaluation on
5249 the receiver side. Permissible values for INSTANCE are listed in Table A.17.

5250

Table A.17 – Values of INSTANCE

Value	Definition
0	Unknown
1 to 3	Reserved
4	Application
5	System
6 to 7	Reserved

5251

5252

5253 Bit 3: SOURCE

5254 This bit indicates the source of the Event. Permissible values for SOURCE are listed in Table
5255 A.18.

5256

Table A.18 – Values of SOURCE

Value	Definition
0	Device (remote)
1	Master/Port

5257

5258 Bits 4 to 5: TYPE

5259 These bits indicate the Event category. Permissible values for TYPE are listed in Table A.19.

5260

Table A.19 – Values of TYPE

Value	Definition
0	Reserved
1	Notification
2	Warning
3	Error

5261

5262 Bits 6 to 7: MODE

5263 These bits indicate the Event mode. Permissible values for MODE are listed in Table A.20.

5264

Table A.20 – Values of MODE

Value	Definition
0	reserved
1	Event single shot
2	Event disappears
3	Event appears

5265

5266 A.6.5 EventCode

5267 The EventCode entry contains the identifier of an actual Event. Permissible values for
5268 EventCode are listed in Annex D.

5269
5270
5271
5272

Annex B (normative)

Parameter and commands

5273


B.1 Direct Parameter page 1 and 2

5274

B.1.1 Overview

5275 In principle, the designer of a Device has a large amount of space for parameters and
5276 commands as shown in Figure 6. SDCI offers the so-called Direct Parameter pages 1 and 2
5277 with a simplified access method (page communication channel according to Table A.1).

5278 The range of Direct Parameters is structured as shown in Figure B.1. It is split into page 1
5279 and page 2.

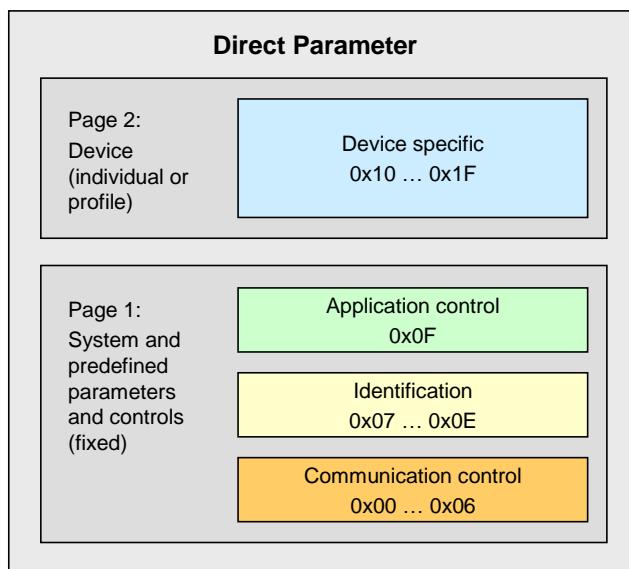

5280

Figure B.1 – Classification and mapping of Direct Parameters

5281 Page 1 ranges from 0x00 to 0x0F. It comprises the following categories of parameters:

- 5282
- Communication parameter
 - Identification parameter
 - Application parameter

5283 The Master application layer (AL) provides read only access to Direct Parameter page 1 as
5284 data objects (see 8.2.1) via Index 0. Single octets can be read via Index 0 and the
5285 corresponding Subindex. Subindex 1 indicates address 0x00 and Subindex 16 address 0x0F.

5286 Page 2 ranges from 0x10 to 0x1F. This page comprises parameters optionally used by the
5287 individual Device technology. The Master application layer (AL) provides read/write access to
5288 Direct Parameter page 2 in form of data objects (see 8.2.1) via Index 1. Single octets can be
5289 written or read via Index 1 and the corresponding Subindex. Subindex 1 indicates address
5290 0x10 and Subindex 16 address 0x1F.

5291 A Device shall always return the value "0" upon a read access to Direct Parameter addresses,
5292 which are not implemented (for example in case of reserved parameter addresses or not
5293 supported optional parameters). The Device shall ignore a write access to not implemented
5294 parameters.

5295 The structure of the Direct Parameter pages 1 and 2 is specified in Table B.1.

5299

Table B.1 – Direct Parameter page 1 and 2

Address	Parameter name	Access	Implementation /reference	Description
Direct Parameter page 1				
0x00	Master-Command	W	Mandatory/ see B.1.2	Master command to switch to operating states (see NOTE 1)
0x01	MasterCycle-Time	R/W	Mandatory/ see B.1.3	Actual cycle duration used by the Master to address the Device. Can be used as a parameter to monitor Process Data transfer.
0x02	MinCycleTime	R	Mandatory/ see B.1.3	Minimum cycle duration supported by a Device. This is a performance feature of the Device and depends on its technology and implementation.
0x03	M-sequence Capability	R	Mandatory/ see B.1.4	Information about implemented options related to M-sequences and physical configuration
0x04	RevisionID	R/W	Mandatory/ see B.1.5	ID of the used protocol version for implementation (shall be set to 0x11)
0x05	ProcessDataIn	R	Mandatory/ see B.1.6	Type and length of input data (Process Data from Device to Master)
0x06	ProcessData-Out	R	Mandatory/ see B.1.7	Type and length of output data (Process Data from Master to Device)
0x07	VendorID 1 (MSB)	R	Mandatory/ see B.1.8	Unique vendor identification (see NOTE 2)
0x08	VendorID 2 (LSB)			
0x09	DeviceID 1 (Octet 2, MSB)	R/W	Mandatory/ see B.1.9	Unique Device identification allocated by a vendor
0x0A	DeviceID 2 (Octet 1)			
0x0B	DeviceID 3 (Octet 0, LSB)			
0x0C	FunctionID 1 (MSB)	R	see B.1.10	Reserved (see Table 102)
0x0D	FunctionID 2 (LSB)			
0x0E		R	reserved	
0x0F	System-Command	W	Optional/ see B.1.11	Command interface for end user applications only and Devices without ISDU support (see NOTE 1)
Direct Parameter page 2				
0x10... 0x1F	Vendor specific	Optional	Optional/ see B.1.12	Device specific parameters
NOTE 1 A read operation returns unspecified values				
NOTE 2 VendorIDs are assigned by the IO-Link community				

5300

B.1.2 MasterCommand

5302 The Master application is able to check the status of a Device or to control its behaviour with
 5303 the help of MasterCommands (see 7.3.7).

5304 Permissible values for these parameters are specified in Table B.2.

 
5305

Table B.2 – Types of MasterCommands

Value	MasterCommand	Description
0x00 to 0x59	Reserved	

Value	MasterCommand	Description
0x5A	Fallback	Transition from communication to SIO mode. The Device shall execute this transition after 3 Master-CycleTimes and before 500 ms elapsed after the MasterCommand.
0x5B to 0x94	Reserved	
0x95	MasterIdent	Indicates a Master revision higher than 1.0
0x96	DeviceIdent	Start check of Direct Parameter page for changed entries
0x97	DeviceStartup	Switches the Device from OPERATE or PREOPERATE to STARTUP
0x98	ProcessDataOutputOperate	Process output data valid
0x99	DeviceOperate	Process output data invalid or not available. Switches the Device from STARTUP or PREOPERATE to OPERATE
0x9A	DevicePreoperate	Switches the Device from STARTUP to state PREOPERATE
0x9B to 0xFF	Reserved	

5306

5307 **B.1.3 MasterCycleTime and MinCycleTime**5308 The MasterCycleTime is a Master parameter and sets up the actual cycle time of a particular
5309 port.5310 The MinCycleTime is a Device parameter to inform the Master about the shortest cycle time
5311 supported by this Device.5312 See A.3.7 for the application of the MasterCycleTime and the MinCycleTime. The structure of
5313 these two parameters is shown in Figure B.2.

5314

Figure B.2 – MinCycleTime**5316 Bits 0 to 5: Multiplier**5317 These bits contain a 6-bit multiplier for the calculation of MasterCycleTime and MinCycleTime.
5318 Permissible values for the multiplier are 0 to 63, further restrictions see Table B.3.**5319 Bits 6 to 7: Time Base**

5320 These bits specify the time base for the calculation of MasterCycleTime and MinCycleTime.

5321 In the following cases, when

- the Device provides no MinCycleTime, which is indicated by a MinCycleTime equal zero (binary code 0x00),
- or the MinCycleTime is shorter than the calculated M-sequence time with the M-sequence type used by the Device, with (t_1, t_2, t_{idle}) equal zero and t_A equal one bit time (see A.3.4 to A.3.6)

5327 the Master shall use the calculated worst case M-sequence timing, with the M-sequence type
5328 used by the Device, and the maximum times for t_A and t_2 (see A.3.4 to A.3.6):5329 The permissible combinations for time base and multiplier are listed in Table B.3 along with
5330 the resulting values for MasterCycleTime or MinCycleTime.

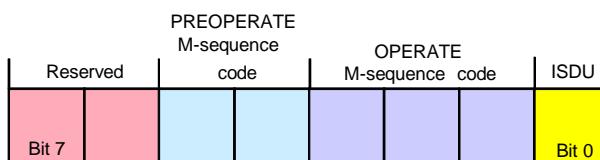
5331

Table B.3 – Possible values of MasterCycleTime and MinCycleTime

Time base encoding	Time Base value	Calculation	Cycle Time
00	0,1 ms	Multiplier × Time Base	0,4 ms to 6,3 ms
01	0,4 ms	6,4 ms + Multiplier × Time Base	6,4 ms to 31,6 ms
10	1,6 ms	32,0 ms + Multiplier × Time Base	32,0 ms to 132,8 ms
11	Reserved	Reserved	Reserved

B.1.4 M-sequenceCapability

5333 The structure of the M-sequenceCapability parameter is shown in Figure B.3.

**Figure B.3 – M-sequenceCapability****5336 Bit 0: ISDU**

5337 This bit indicates whether or not the ISDU communication channel is supported. Permissible
5338 values for ISDU are listed in Table B.4.

5339 Table B.4 – Values of ISDU

Value	Definition
0	ISDU not supported
1	ISDU supported

5340

5341 Bits 1 to 3: Coding of the OPERATE M-sequence type

5342 This parameter indicates the available M-sequence type during the OPERATE state.
5343 Permissible codes for the OPERATE M-sequence type are listed in Table A.9 for legacy
5344 Devices and in Table A.10 for Devices according to this standard.

5345 Bits 4 to 5: Coding of the PREOPERATE M-sequence type

5346 This parameter indicates the available M-sequence type during the PREOPERATE state.
5347 Permissible codes for the PREOPERATE M-sequence type are listed in Table A.8.

5348 Bits 6 to 7: Reserved

5349 These bits are reserved and shall be set to zero in this version of the specification.

 
5350 B.1.5 RevisionID (RID)

5351 The RevisionID parameter is the two-digit version number of the SDCI protocol currently used
5352 within the Device. Its structure is shown in Figure B.4. The initial value of RevisionID at
5353 powerup is the inherent value for protocol RevisionID. It can be overwritten (see 10.6.3 and
5354 Table 101) until the next powerup.

5355 This revision of the standard specifies protocol version 1.1.

5356 NOTE The legacy protocol version 1.0 is specified in [8].

5357



5358

Figure B.4 – RevisionID**5359 Bits 0 to 3: MinorRev**

5360 These bits contain the minor digit of the version number, for example 0 for the protocol
 5361 version 1.0. Permissible values for MinorRev are 0x0 to 0xF.

 
5362 Bits 4 to 7: MajorRev

5363 These bits contain the major digit of the version number, for example 1 for the protocol
 5364 version 1.0. Permissible values for MajorRev are 0x0 to 0xF.

5365 B.1.6 ProcessDataIn

5366 The structure of the ProcessDataIn parameter is shown in Figure B.5.

5367



5368

Figure B.5 – ProcessDataIn**5369 Bits 0 to 4: Length**

5370 These bits contain the length of the input data (Process Data from Device to Master) in the
 5371 length unit designated in the BYTE parameter bit. Permissible codes for Length are specified
 5372 in Table B.6.

5373 Bit 5: Reserve

5374 This bit is reserved and shall be set to zero in this version of the specification.

5375 Bit 6: SIO

5376 This bit indicates whether the Device provides a switching signal in SIO mode. Permissible
 5377 values for SIO are listed in Table B.5.

5378

Table B.5 – Values of SIO

Value	Definition
0	SIO mode not supported
1	SIO mode supported

5379

5380 Bit 7: BYTE

5381 This bit indicates the length unit for Length. Permissible values for BYTE and the resulting
 5382 definition of the Process Data length in conjunction with Length are listed in Table B.6.

5383

Table B.6 – Permitted combinations of BYTE and Length

BYTE	Length	Definition
0	0	no Process Data
0	1	1 bit Process Data, structured in bits
0	n (2-15)	n bit Process Data, structured in bits
0	16	16 bit Process Data, structured in bits
0	17 to 31	Reserved
1	0, 1	Reserved

BYTE	Length	Definition
1	2	3 octets Process Data, structured in octets
1	n (3-30)	$n+1$ octets Process Data, structured in octets
1	31	32 octets Process Data, structured in octets

5384

B.1.7 ProcessDataOut

5386 The structure of the ProcessDataOut parameter is the same as with ProcessDataIn, except
 5387 with bit 6 ("SIO") reserved.

B.1.8 VendorID (VID)

5389 These octets contain a worldwide unique value per vendor.

5390 NOTE VendorIDs are assigned by the IO-Link community.

B.1.9 DeviceID (DID)

5392 These octets contain the currently used DeviceID. A value of "0" is not permitted. It is highly
 5393 recommended to store the value of DeviceID in non-volatile memory after a compatibility
 5394 switch until a reset to the initial value through SystemCommands "Restore factory settings" or
 5395 "Back-to-box". The value can be overwritten during StartUp (see 10.6.2).

5396 NOTE The communication parameters MinCycleTime, M-sequence Capability, Process Data In and Process Data
 5397 Out can be changed to achieve compatibility to the requested DeviceID.

B.1.10 FunctionID (FID)

5399 This parameter will be defined in a later version.

B.1.11 SystemCommand

5401 Only Devices without ISDU support shall use the parameter SystemCommand in the Direct
 5402 Parameter page 1. The implementation of SystemCommand is optional. See Table B.9 for a
 5403 detailed description of the SystemCommand functions.

5404 NOTE The SystemCommand on the Direct Parameter page 1 does not provide a positive or negative response
 5405 upon execution of a selected function

B.1.12 Device specific Direct Parameter page 2


5407 The Device specific Direct Parameters are a set of parameters available to the Device specific
 5408 technology. The implementation of Device specific Direct Parameters is optional. It is highly
 5409 recommended for Devices (with ISDU) not to use parameters on Direct Parameter page 2.

5410 NOTE The complete parameter list of the Direct Parameter page 2 is read or write accessible via index 1 (see
 5411 B.1.1).

B.2 Predefined Device parameters**B.2.1 Overview**

5414 The many different technologies and designs of sensors and actuators require individual and
 5415 easy access to complex parameters and commands beyond the capabilities of the Direct
 5416 Parameter page 2. From a Master's point of view, these complex parameters and commands
 5417 are called application data objects.

5418 Figure B.6 shows the general mapping of data objects for the ISDU transmission.

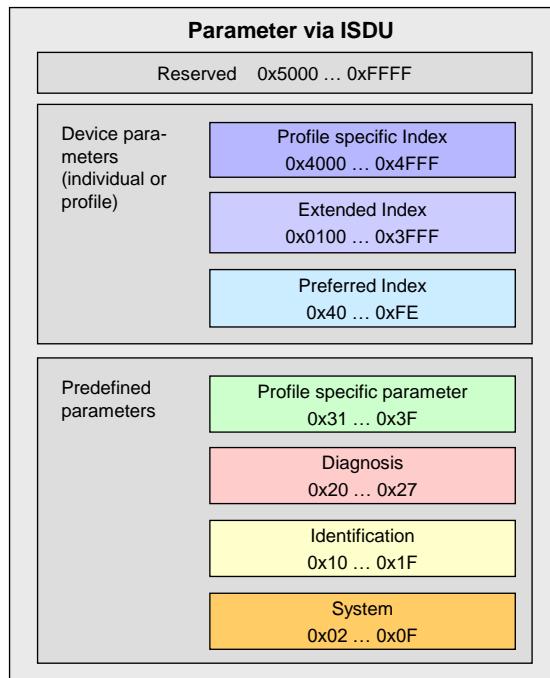

5419

5420

Figure B.6 – Index space for ISDU data objects

5421 So-called ISDU "containers" are the transfer means to exchange application data objects or
 5422 short data objects. The index of the ISDU is used to address the data objects.

5423 Subclause B.2 contains definitions and requirements for the implementation of technology
 5424 specific Device applications. Implementation rules for parameters and commands are
 5425 specified in Table B.7.

5426

Table B.7 – Implementation rules for parameters and commands

Rule number	Rule specification
1	All parameters of an Index shall be readable and/or writeable as an entire data object via Subindex 0
2	The technology specific Device application shall resolve inconsistencies of dependent parameter sets during parameterization
3	The duration of an ISDU service request is limited (see Table 102). A master application can abort ISDU services after this timeout
4	Application commands (for example teach-in, reset to factory settings, etc.) are treated like parameters.

5427

5428 Table B.8 specifies the assignment of data objects (parameters and commands) to the Index
 5429 range of ISDUs. All indices above 2 are ISDU related.

5430

Table B.8 – Index assignment of data objects (Device parameter)

Index (dec)	Object name	Access	Length	Data type	M/O/C	Remark
0x0000 (0)	Direct Parameter Page 1	R		RecordT	M	Redirected to the page communication channel, see 10.8.5
0x0001 (1)	Direct Parameter Page 2	R/W		RecordT	M	Redirected to the page communication channel, see 10.8.5
0x0002 (2)	System-Command	W	1 octet	UIntegerT	C	Command Code Definition (See B.2.2)

Index (dec)	Object name	Access	Length	Data type	M/O/ C	Remark
0x0003 (3)	Data- Storage- Index	R/W	variable	RecordT	M	Set of data objects for storage (See B.2.3)
0x0004- 0x000B (4-11)	Reserved					Reserved for exceptional operations
0x000C (12)	Device- Access- Locks-	R/W	2 octets	RecordT	O	Standardized Device locking functions (See B.2.4)
0x000D (13)	Profile- Charac- teristic	R	variable	ArrayT of UIntegerT16	C	Reserved for Common Profile [7] (see B.2.5)
0x000E (14)	PDIinput- Descriptor	R	variable	ArrayT of OctetStringT3	C	Reserved for Common Profile [7] (see B.2.6)
0x000F (15)	PDOoutput- Descriptor	R	variable	ArrayT of OctetStringT3	C	Reserved for Common Profile [7] (see B.2.7)
0x0010 (16)	Vendor- Name	R	max. 64 octets	StringT NOTE	M	Vendor information (See B.2.8)
0x0011 (17)	Vendor- Text	R	max. 64 octets	StringT NOTE	O	Additional vendor information (See B.2.9)
0x0012 (18)	Product- Name	R	max. 64 octets	StringT NOTE	M	Detailed product or type name (See B.2.10)
0x0013 (19)	ProductID	R	max. 64 octets	StringT NOTE	O	Product or type identification (See B.2.11)
0x0014 (20)	Product- Text	R	max. 64 octets	StringT NOTE	O	Description of Device function or characteristic (See B.2.12)
0x0015 (21)	Serial- Number	R	max. 16 octets	StringT NOTE	O	Vendor specific serial number (See B.2.13)
0x0016 (22)	Hardware- Revision	R	max. 64 octets	StringT NOTE	O	Vendor specific format (See B.2.14)
0x0017 (23)	Firmware- Revision	R	max. 64 octets	StringT NOTE	O	Vendor specific format (See B.2.15)
0x0018 (24)	Application- Specific- Tag	R/W	min. 16, max. 32 octets	StringT NOTE	O	Tag defined by user (See B.2.16)
0x0019 (25)	Function- Tag	R/W	max. 32 octets	StringT NOTE	C	Reserved for Common Profile [7] (See B.2.17)
0x001A (26)	Location- Tag	R/W	max. 32 octets	StringT NOTE	C	Reserved for Common Profile [7] (See B.2.18)
0x001B (27)	Product-URI	R	max. 100 octets	StringT NOTE	C	Reserved for Common Profile [7] (See B.2.19)
0x001C- 0x001F (28-31)	Reserved					
0x0020 (32)	ErrorCount	R	2 octets	UIntegerT	O	Errors since power-on or reset (See B.2.20)
0x0021- 0x0023 (33-35)	Reserved					
0x0024 (36)	Device- Status	R	1 octet	UIntegerT	O	Contains current status of the Device (See B.2.21)
0x0025 (37)	Detailed- Device- Status	R	variable	ArrayT of OctetStringT3	O	See B.2.22

Index (dec)	Object name	Access	Length	Data type	M/O/ C	Remark
0x0026- 0x0027 (38-39)	Reserved					
0x0028 (40)	Process- DataInput	R	PD length	Device specific	O	Read last valid Process Data from PDin channel (See B.2.23)
0x0029 (41)	Process- DataOutput	R	PD length	Device specific	O	Read last valid Process Data from PDout channel (See B.2.24)
0x002- 0x002F (42-47)	Reserved					
0x0030 (48)	Offset- Time	R/W	1 octet	RecordT	O	Synchronization of Device application timing to M-sequence timing (See B.2.25)
0x0031- 0x003F (49-63)	Reserved for profiles					
0x0040- 0x00FE (64-254)	Preferred Index					Device specific (8 bit)
0x00FF (255)	Reserved					
0x0100- 0x3FFF (256- 16383)	Extended Index					Device specific (16 bit)
0x4000- 0x41FF (16384- 16895)	Profile specific Index					Reserved for Device profile
0x4200- 0x42FF (16896- 17151)	Safety specific Index					Reserved for Safety system extensions [10]
0x4300- 0x4FFF (17152- 20479)	Profile specific Index					Reserved for Device profile
0x5000- 0x50FF (20480- 20735)	Wireless specific Index					Reserved for Wireless system extensions [11]
0x5100- 0xFFFF (20736- 65535)	Reserved					
Key M = mandatory; O = optional; C = conditional, see full description of parameter for condition NOTE UTF8 coding required for StringT						

5431

5432 **B.2.2 SystemCommand**

5433 Devices with ISDU support shall use the ISDU Index 0x0002 to receive the SystemCommand.
 5434 The commands shall be acknowledged. The possible responses are defined in 10.3.7. The
 5435 timing of the appropriate response is defined together with the SystemCommand functionality.

5436 The coding of SystemCommands is specified in Table B.9.

5437

Table B.9 – Coding of SystemCommand

Command (hex)	Command (dec)	Command name	H/O/C	Definition
0x00	0	Reserved		
0x01	1	ParamUploadStart	C	Start parameter upload
0x02	2	ParamUploadEnd	C	Stop parameter upload
0x03	3	ParamDownloadStart	C	Start parameter download
0x04	4	ParamDownloadEnd	C	Stop parameter download
0x05	5	ParamDownloadStore	C	Finalize parameterization and start Data Storage
0x06	6	ParamBreak	C	Cancel all Param commands
0x07 to 0x3F	7 to 63	Reserved		
0x40 to 0x7F	64 to 127	Reserved for profiles		
0x80	128	Device reset	O	See 10.7.2
0x81	129	Application reset	H	See 10.7.3
0x82	130	Restore factory settings	O	See 10.7.4
0x83	131	Back-to-box	C	See 10.7.5
0x84 to 0x9F	132 to 159	Reserved		
0xA0 to 0xFF	160 to 255	Vendor specific		

NOTE See 10.3

Key H = highly recommended; O = optional; C = conditional, see full description of command for condition

5438 The SystemCommand 0x05 (ParamDownloadStore) shall be implemented according to 10.4.2,
 5439 whenever the Device provides parameters to be stored via the Data Storage mechanism, i.e.
 5440 parameter "Index_List" in Index 0x0003 is not empty (see Table B.10).

5441 The implementation of the SystemCommands 0x01 to 0x06 required for Block Parameteriza-
 5442 tion according to 10.3.5 is optional. However, all of these commands or none of them shall
 5443 be implemented (for SystemCommand 0x05 the rule for Data Storage dominates).

5444 See B.1.11 for SystemCommand options on the Direct Parameter page 1.

5445 Implementation of the SystemCommand feature is conditional for Devices and depends on the
 5446 availability of any conveyed functionality like Block Parametrization, profiled or manufacturer
 5447 specific functionalities."

5448 **B.2.3 DataStorageIndex**

5449 Table B.10 specifies the DataStorageIndex assignments. Record items shall not be separated
 5450 by offset gaps. Offsets shall be built according Table F.19.

5451 **Table B.10 – DataStorageIndex assignments**

Index	Sub- index	Offset	Access	Parameter Name	Coding		Data type
0x0003	01	N+72	R/W	DS_Command	0x00: 0x01: 0x02: 0x03: 0x04: 0x05: 0x06 to 0xFF:	Reserved DS_UploadStart DS_UploadEnd DS_DownloadStart DS_DownloadEnd DS_Break Reserved	UIntegerT8 (8 bit)

Index	Sub-index	Offset	Access	Parameter Name	Coding	Data type
	02	N+64	R	State_Property	Bit 0: Reserved Bit 1 and 2: State of Data Storage 0b00: Inactive 0b01: Upload 0b10: Download 0b11: Data Storage locked Bit 3 to 6: Reserved Bit 7: DS_UPLOAD_FLAG "1": DS_UPLOAD_REQ pending "0": no DS_UPLOAD_REQ	UIntegerT8 (8 bit)
	03	N+32	R	Data_Storage_Size	Number of octets for storing all the necessary information for the Device replacement (see 10.4.5). Maximum size is 2 048 octets.	UIntegerT32 (32 bit)
	04	N	R	Parameter_Checksum	Parameter set revision indication: CRC signature or Revision Counter (see 10.4.8)	UIntegerT32 (32 bit)
	05	0	R	Index_List	List of parameter indices to be saved (see Table B.11)	OctetStringT (variable)

NOTE N = (n × 3 + 2) × 8; for n see Table B.11

5452

5453 The parameter DataStorageIndex 0x0003 contains all the information to be used for the Data
5454 Storage handling. This parameter is reserved for private exchanges between the Master and
5455 the Device; the Master shall block any write access request from a gateway application to this
5456 Index (see Figure 5). The parameters within this Index 0x0003 are specified as follows.

5457 **DS_Command**

5458 This octet carries the Data Storage commands for the Device.

5459 A read operation returns unspecified values.

5460 Note: The reaction of the DS_Command is similar to the SystemCommand, but it is assumed, that the Master
5461 implementation will not cause any erroneous access.

5462 **State_Property**

5463 This octet indicates the current status of the Data Storage mechanism. Bit 7 shall be stored in
5464 non-volatile memory. The Master checks this bit at start-up and performs a parameter upload
5465 if requested.

5466 **Data_Storage_Size**

5467 These four octets provide the requested memory size as number of octets for storing all the
5468 information required for the replacement of a Device including the structural information
5469 (Index, Subindex). Data type is UIntegerT32 (32 bit). The maximum size is 2 048 octets. See
5470 Table G.1 for the elements to be taken into account in the size calculation.

5471 **Parameter_Checksum**

5472 This checksum is used to detect changes in the parameter set without reading all parameters.
5473 The value of the checksum is calculated according to the procedure in 10.4.8. The Device
5474 shall change the checksum whenever a parameter out of the parameter set has been altered.
5475 Different parameter sets shall hold different checksums. It is recommended that the Device
5476 stores this parameter locally in non-volatile memory.

5477 **Index_List**

5478 Table B.11 specifies the structure of the Index_List. Each Index_List can carry up to 70
5479 entries (see Table 102).

5480

Table B.11 – Structure of Index_List

Entry	Address	Definition	Data type
X1	Index	Index of first parameter to be saved	Unsigned16
	Subindex	Subindex of first parameter to be saved	Unsigned8
X2	Index	Index of next parameter to be saved	Unsigned16
	Subindex	Subindex of next parameter to be saved	Unsigned8
.....
Xn	Index	Index of last parameter to be saved	Unsigned16
	Subindex	Subindex of last parameter to be saved	Unsigned8
Xn+1	Index	Termination_Marker 0x0000: End of Index_List >0x0000: Next Index containing an Index_List	Unsigned16

5481

5482 Large sets of parameters can be handled via concatenated Index_Lists. The last two octets of
 5483 the Index_List shall carry the Termination Marker. A value "0" indicates the end of the Index
 5484 List. In case of concatenation the Termination Marker is set to the next Index containing an
 5485 Index List. The structure of the following Index List is the same as specified in Table B.11.
 5486 Thus, the concatenation of lists ends if a Termination Marker with the value "0" is found.

5487 **B.2.4 DeviceAccessLocks**

5488 The parameter DeviceAccessLocks allows control of the Device behaviour. Standardized
 5489 Device functions can independently be configured via defined flags in this parameter. The
 5490 DeviceAccessLocks configuration can be changed by overwriting the parameter. The actual
 5491 configuration setting is available per read access to this parameter. The data type is RecordT
 5492 of BooleanT. Access is only permitted via Subindex 0.

5493 This parameter is optional. If implemented it shall be non-volatile.

5494 The following Device access lock categories are specified.

- 5495 • Parameter write access (obsolete)
- 5496 • Data Storage (obsolete)
- 5497 • Local parameterization (optional)
- 5498 • Local user interface operation (optional)

5499

5500 Table B.12 lists the Device locking possibilities.

5501

Table B.12 – Device locking possibilities

Bit	Category	Definition
0	Parameter (write) access	0: unlocked (default) 1: locked (highly recommended not to implement/use)
1	Data Storage	0: unlocked (default) NOTE 1: locked (highly recommended not to implement/use)
2	Local parameterization (optional)	0: unlocked (default) 1: locked
3	Local user interface (optional)	0: unlocked (default) 1: locked
4 – 15	Reserved	

NOTE For compatibility reasons, the Master still reads the parameter State_Property /State of Data Storage (see Table B.10).

5502

Parameter (write) access:

5504 If this bit is set, write access to all Device parameters over the SDCI communication interface
5505 is inhibited for all read/write parameters of the Device except the parameter Device Access
5506 Locks. Read access is not affected. The Device shall respond with the negative service
5507 response – access denied – to a write access, if the parameter access is locked.

5508 The parameter (write) access lock mechanism shall not block downloads of the Data Storage
5509 mechanism (between DS_DownloadStart and DS_DownloadEnd or DS_Break).

Data Storage:

5511 If this bit is set in the Device, the Data Storage mechanism is disabled (see 10.4.2 and
5512 11.4.4). In this case, the Device shall respond to a write access (within its Data Storage
5513 Index) with a negative service response – access denied – (see B.2.3). Read access to its
5514 DataStorageIndex is not affected.

5515 This setting is also indicated in the State Property within Data Storage Index.

Local parameterization:

5517 If this bit is set, the parameterization via local control elements on the Device is inhibited
5518 (write protection). Read only is possible (see 10.6.7).

Local user interface:

5520 If this bit is set, operation of the human machine interface on the Device is disabled (see
5521 10.6.8).

B.2.5 ProfileCharacteristic

5523 This parameter contains the list of ProfileIdentifiers (PID's) corresponding to the Device
5524 Profile implemented in the Device. This parameter is conditional on the associated Profile.

5525 NOTE Details are provided in [7].

B.2.6 PDInputDescriptor

5527 This parameter contains the description of the data structure of the process input data for a
5528 profile Device. This parameter is conditional on the associated Profile.

5529 NOTE Details are provided in [7].

B.2.7 PDOOutputDescriptor

5531 This parameter contains the description of the data structure of the process output data for a
5532 profile Device. This parameter is conditional on the associated Profile.

5533 NOTE Details are provided in [7].

B.2.8 VendorName

5535 The parameter VendorName contains only one of the vendor names listed for the assigned
5536 VendorID. The parameter is a read-only data object. The data type is StringT with a maximum
5537 fixedLength of 64. This parameter is mandatory.

5538 NOTE The list of vendor names associated with a given VendorID is maintained by the IO-Link community.

B.2.9 VendorText

5540 The parameter VendorText contains additional information about the vendor. The parameter is
5541 a read-only data object. The data type is StringT with a maximum fixedLength of 64. This
5542 parameter is optional.

B.2.10 ProductName

5544 The parameter ProductName contains the complete product name. The parameter is a read-
5545 only data object. The data type is StringT with a maximum fixedLength of 64. This parameter
5546 is mandatory.

5547 NOTE The corresponding entry in the IODD Device variant list is expected to match this parameter.

B.2.11 ProductID

5549 The parameter ProductID shall contain the vendor specific product or type identification of the
5550 Device. The parameter is a read-only data object. The data type is StringT with a maximum
5551 fixedLength of 64. This parameter is optional.

B.2.12 ProductText

5553 The parameter ProductText shall contain additional product information for the Device, such
5554 as product category (for example Photoelectric Background Suppression, Ultrasonic Distance
5555 Sensor, Pressure Sensor, etc.). The parameter is a read-only data object. The data type is
5556 StringT with a maximum fixedLength of 64. This parameter is optional.

B.2.13 SerialNumber

5558 The parameter SerialNumber shall contain a unique vendor specific notation for each
5559 individual Device. The parameter is a read-only data object. The data type is StringT with a
5560 maximum fixedLength of 16. This parameter is optional.

B.2.14 HardwareRevision

5562 The parameter HardwareRevision shall contain a vendor specific notation for the hardware
5563 revision of the Device. The parameter is a read-only data object. The data type is StringT with
5564 a maximum fixedLength of 64. This parameter is optional.

B.2.15 FirmwareRevision

5566 The parameter FirmwareRevision shall contain a vendor specific notation for the firmware
5567 revision of the Device. The parameter is a read-only data object. The data type is StringT with
5568 a maximum fixedLength of 64. This parameter is optional.

B.2.16 ApplicationSpecificTag

5570 The parameter ApplicationSpecificTag shall be provided as read/write data object for the user
5571 application. It can serve as a free user specific tag. The data type is StringT with a minimum
5572 fixedLength of 16, and a preferred fixedLength of 32 octets (see [7]). As default it is
5573 recommended to fill this parameter with "****". This parameter is optional.

B.2.17 FunctionTag

5575 The parameter FunctionTag contains the description of the specific function of a profile
5576 Device within an application. As default it is recommended to fill this parameter with "****".
5577 This parameter is conditional on the associated Profile.

5578 NOTE Details are provided in [7]

B.2.18 LocationTag

5580 The parameter LocationTag contains the description of the location of a profile Device within
5581 an application. As default it is recommended to fill this parameter with "****". This parameter is
5582 conditional on the associated Profile.

5583 NOTE Details are provided in [7]

B.2.19 ProductURI

5585 The parameter ProductURI contains the globally biunique identification of a profile Device.
5586 This parameter is conditional on the associated Profile.

5587 NOTE Details are provided in [7]

5588 **B.2.20 ErrorCount**

5589 The parameter ErrorCount provides information on errors occurred in the Device application
 5590 since power-on or reset. Usage of this parameter is vendor or Device specific. The data type
 5591 is UIntegerT with a bitLength of 16. The parameter is a read-only data object. This parameter
 5592 is optional.

5593 **B.2.21 DeviceStatus**

5594 **B.2.21.1 Overview**

5595 The parameter DeviceStatus shall provide information about the Device condition (diagnosis)
 5596 by the Device's technology. The data type is UIntegerT with a bitLength of 8. The parameter
 5597 is a read-only data object. This parameter is optional.

5598 The following Device conditions in Table B.13 are specified. They shall be generated by the
 5599 Device applications, the relation to the DetailedDeviceStatus is defined in 10.10.1. The
 5600 parameter DeviceStatus can be read by any PLC program or tools such as Asset
 5601 Management (see Clause 11).

5602 Table B.13 lists the different DeviceStatus information. The criteria for these indications are
 5603 specified in subclauses B.2.21.3 through B.2.21.6. The priority column defines which status
 5604 value is signalled in case of multiple active events, the lowest priority value dominates higher
 5605 priority values.

5606 **Table B.13 – DeviceStatus parameter**

Value	Priority	Definition
0	5	Device is operating properly (see B.2.21.2)
1	3	Maintenance-Required (see B.2.21.3)
2	4	Out-of-Specification (see B.2.21.4)
3	2	Functional-Check (see B.2.21.5)
4	1	Failure (see B.2.21.6)
5 – 255	-	Reserved

5607

5608 **B.2.21.2 Device is operating properly**

5609 The Device is working without any impairment and no Event is pending, see B.2.22.

5610 **B.2.21.3 Maintenance-required**

5611 Although the Process Data are valid, internal diagnostics indicate that the Device is close to
 5612 lose its ability of correct functioning.

5613 EXAMPLES Optical lenses getting dusty, build-up of deposits, lubricant level low.

5614 **B.2.21.4 Out-of-Specification**

5615 Although the Process Data are valid, internal diagnostics indicate that the Device is operating
 5616 outside its specified measuring range or environmental conditions.

5617 EXAMPLES Power supply, auxiliary energy, temperature, pneumatic pressure, magnetic interference, vibrations,
 5618 acceleration, interfering light, bubble formation in liquids.

5619 **B.2.21.5 Functional-Check**

5620 User intended manipulations on the Device are ongoing and the Device may not be able to
 5621 provide valid Process Data.

5622 EXAMPLES Calibrations, position adjustments, and simulation.

5623 **B.2.21.6 Failure**

5624 The Device is unable to perform its intended function. The Process Data shall be marked as
 5625 invalid if no part of the process data content can be provided. In the case of partially invalid
 5626 process data, the process data may be marked as invalid at the discretion of the device

5627 manufacturer. The method of indicating partially invalid process data content is profile or
 5628 vendor specific.

5629 **B.2.22 DetailedDeviceStatus**

5630 The parameter DetailedDeviceStatus shall provide information about currently pending Events
 5631 in the Device. Events of TYPE "Error" or "Warning" and MODE "Event appears" (see A.6.4)
 5632 shall be entered into the list of DetailedDeviceStatus with EventQualifier and EventCode.
 5633 Upon occurrence of an Event with MODE "Event disappears", the corresponding entry in
 5634 DetailedDeviceStatus shall be set to EventQualifier "0x00" and EventCode "0x0000". This way
 5635 this parameter always provides the current diagnosis status of the Device. The parameter is a
 5636 read-only data object. The data type is ArrayT with a maximum number of 64 array elements
 5637 (Event entries). The number of array elements of this parameter is Device specific. Upon
 5638 power-off or reset of the Device the contents of all array elements are set to initial settings –
 5639 EventQualifier "0x00", EventCode "0x0000". This parameter is optional.

5640 Table B.14 specifies the structure of the parameter DetailedDeviceStatus.

5641 **Table B.14 – DetailedDeviceStatus (Index 0x0025)**

Sub-index	Object name	Data Type	Comment
1	Error_Warning_1	3 octets	All octets 0x00: no Error/ Warning Octet 1: EventQualifier Octet 2,3: EventCode
2	Error_Warning_2	3 octets	
3	Error_Warning_3	3 octets	
4	Error_Warning_4	3 octets	
...			
<i>n</i>	Error_Warning_n	3 octets	

5642
 5643 The designer may choose the implementation of a static list, i.e. one fix array position for
 5644 each Event with a specific EventCode, or a dynamic list, i.e. each Event entry is stored into
 5645 the next free array position. Subindex access is not supported.

5646 **B.2.23 ProcessDataInput**

5647 The parameter ProcessDataInput shall provide the last valid process input data from the
 5648 Device application. The data type and structure are identical to the Process Data In trans-
 5649 ferred in the process communication channel. The parameter is a read-only data object. This
 5650 parameter is optional.

5651 **B.2.24 ProcessDataOutput**

5652 The parameter ProcessDataOutput shall provide the last valid process output data written to
 5653 the Device application. The data type and structure are identical to the Process Data Out
 5654 transferred in the process communication channel. The parameter is a read-only data object.
 5655 This parameter is optional.

5656 **B.2.25 OffsetTime**

5657 The parameter OffsetTime (t_{offset}) allows a Device application to synchronize on M-sequence
 5658 cycles of the data link layer via adjustable offset times. The data type is RecordT. Access is
 5659 only possible via Subindex "0". The parameter is a read/write data object. This parameter is
 5660 optional.

5661 The structure of the parameter OffsetTime is shown in Figure B.7:

5662



5663

Figure B.7 – Structure of the OffsetTime**5664 Bits 0 to 5: Multiplier**

5665 These bits contain a 6-bit factor for the calculation of the OffsetTime. Permissible values for
5666 the multiplier are 0 to 63.

5667 Bits 6 to 7: Time Base

5668 These bits contain the time base for the calculation of the OffsetTime.

5669 The permissible combinations for Time Base and Multiplier are listed in Table B.15 along with
5670 the resulting values for OffsetTime. Setting both Multiplier and Time Base to zero deactivates
5671 synchronization with the help of an OffsetTime. The value of OffsetTime shall not exceed the
5672 MasterCycleTime (see B.1.3)

5673 Table B.15 – Time base coding and values of OffsetTime

Time base encoding	Time Base value	Calculation	OffsetTime
00	0,01 ms	Multiplier × Time Base	0,01 ms to 0,63 ms
01	0,04 ms	0,64 ms + Multiplier × Time Base	0,64 ms to 3,16 ms
10	0,64 ms	3,20 ms + Multiplier × Time Base	3,20 ms to 43,52 ms
11	2,56 ms	44,16 ms + Multiplier × Time Base	44,16 ms to 126,08 ms

5674

5675 B.2.26 Profile parameter (reserved)

5676 Indices 0x0031 to 0x003F are reserved for Device profiles.

5677 NOTE Details are provided in [7].

5678 B.2.27 Preferred Index

5679 Preferred Indices (0x0040 to 0x00FE) can be used for vendor specific Device functions. This
5680 range of indices is considered preferred due to lower protocol overhead within the ISDU and
5681 thus higher data throughput for small data objects as compared to the Extended Index (see
5682 B.2.28).

5683 B.2.28 Extended Index

5684 Extended Indices (0x0100 to 0x3FFF) can be used for vendor specific Device functions.

5685 B.2.29 Profile specific Index (reserved)

5686 Indices 0x4000 to 0x4FFF are reserved for Device profiles.

5687 NOTE Details are provided in [7].

5688
5689
5690
5691

Annex C (normative)

ErrorTypes (ISDU errors)

5692

C.1 General

5693 An ErrorType is used within negative service confirmations of ISDUs (see A.5.2 and Table
5694 A.13) or negative acknowledgements of SMI services (see E.18). It indicates the cause of a
5695 negative confirmation of a Read or Write service. The origin of the error may be located in the
5696 Master (local) or in the Device (remote).

5697 The ErrorType consists of two octets, the main error cause and more specific information:

- 5698 • ErrorCode (high order octet)
- 5699 • AdditionalCode (low order octet)

5700 The ErrorType represents information about the incident, the origin and the instance. The
5701 permissible ErrorTypes and the criteria for their deployment are listed in C.2, C.3, and C.4. All
5702 other ErrorType values are reserved and shall not be used.

5703

C.2 Application related ErrorTypes

5704

C.2.1 Overview

5705 The permissible ErrorTypes resulting from the Device application are listed in Table C.1.

5706

Table C.1 – ErrorTypes

Incident	Error Code	Additional Code	Name	Definition
Device application error – no details	0x80	0x00	APP_DEV	See C.2.2
Index not available	0x80	0x11	IDX_NOTAVAIL	See C.2.3
Subindex not available	0x80	0x12	SUBIDX_NOTAVAIL	See C.2.4
Service temporarily not available	0x80	0x20	SERV_NOTAVAIL	See C.2.5
Service temporarily not available – local control	0x80	0x21	SERV_NOTAVAIL_LOCCTRL	See C.2.6
Service temporarily not available – Device control	0x80	0x22	SERV_NOTAVAIL_DEVCTRL	See C.2.7
Access denied	0x80	0x23	IDX_NOT_ACCESSIBLE	See C.2.8
Parameter value out of range	0x80	0x30	PAR_VALOUTOFRNG	See C.2.9
Parameter value above limit	0x80	0x31	PAR_VALGTLIM	See C.2.10
Parameter value below limit	0x80	0x32	PAR_VALLTLIM	See C.2.11
Parameter length overrun	0x80	0x33	VAL_LENOVRRUN	See C.2.12
Parameter length underrun	0x80	0x34	VAL_LENUNDRUN	See C.2.13

Incident	Error Code	Additional Code	Name	Definition
Function not available	0x80	0x35	FUNC_NOTAVAIL	See C.2.14
Function temporarily unavailable	0x80	0x36	FUNC_UNAVAILTEMP	See C.2.15
Invalid parameter set	0x80	0x40	PAR_SETINVALID	See C.2.16
Inconsistent parameter set	0x80	0x41	PAR_SETINCONSIST	See C.2.17
Application not ready	0x80	0x82	APP_DEVNOTRDY	See C.2.18
Vendor specific	0x81	0x00	UNSPECIFIC	See C.2.19
Vendor specific	0x81	0x01 to 0xFF	VENDOR_SPECIFIC	See C.2.19

5707

C.2.2 Device application error – no details

5709 This ErrorType shall be used if the requested service has been refused by the Device
 5710 application and no detailed information of the incident is available.

C.2.3 Index not available

5712 This ErrorType shall be used whenever a read or write access occurs to a non-existing Index
 5713 with or without Subindex access.

C.2.4 Subindex not available

5715 This ErrorType shall be used whenever a read or write access occurs to a non-existing
 5716 Subindex of an existing Index.

C.2.5 Service temporarily not available

5718 This ErrorType shall be used if a parameter is not accessible for a read or write service due to
 5719 the current state of the Device application.

C.2.6 Service temporarily not available – local control

5721 This ErrorType shall be used if a parameter is not accessible for a read or write service due to
 5722 an ongoing local operation at the Device (for example operation or parameterization via an
 5723 on-board Device control panel).

C.2.7 Service temporarily not available – device control

5725 This ErrorType shall be used if a read or write service is not accessible due to a remote
 5726 triggered state of the device application (for example parameterization during a remote
 5727 triggered teach-in operation or calibration).

C.2.8 Access denied

5729 This ErrorType shall be used if a Write service tries to access a read-only parameter or if a
 5730 Read service tries to access a write-only parameter.

C.2.9 Parameter value out of range

5732 This ErrorType shall be used for a write service to a parameter outside its permitted range of
 5733 values. Example: enumerations (list of single values), combination of value ranges and
 5734 enumeration.

C.2.10 Parameter value above limit

5736 This ErrorType shall be used for a write service to a parameter above its specified value
 5737 range.

5738 C.2.11 Parameter value below limit

5739 This ErrorType shall be used for a write service to a parameter below its specified value
5740 range.

5741 C.2.12 Parameter length overrun

5742 This ErrorType shall be used when the content of a write service to a parameter is greater
5743 than the parameter specified length. This ErrorType shall also be used, if a data object is too
5744 large to be processed by the Device application (for example ISDU buffer restriction).

5745 C.2.13 Parameter length underrun

5746 This ErrorType shall be used when the content of a write service to a parameter is less than
5747 the parameter specified length (for example write access of an Unsigned16 value to an
5748 Unsigned32 parameter).

5749 C.2.14 Function not available

5750 This ErrorType shall be used for a write service with a command value not supported by the
5751 Device application (for example a SystemCommand with a value not implemented).

5752 C.2.15 Function temporarily unavailable

5753 This ErrorType shall be used for a write service with a command value calling a Device
5754 function not available due to the current state of the Device application (for example a
5755 SystemCommand).

5756 C.2.16 Invalid parameter set

5757 This ErrorType shall be used if values sent via single parameter transfer are not consistent
5758 with other actual parameter settings (for example overlapping set points for a binary data
5759 setting; see 10.3.4).

5760 C.2.17 Inconsistent parameter set

5761 This ErrorType shall be used at the termination of a Block Parameter transfer with
5762 ParamDownloadEnd or ParamDownloadStore if the plausibility check shows inconsistencies
5763 (see 10.3.5 and B.2.2).

5764 C.2.18 Application not ready

5765 This ErrorType shall be used if a read or write service is refused due to a temporarily
5766 unavailable application (for example peripheral controllers during startup).

5767 C.2.19 Vendor specific

5768 This ErrorType will be propagated directly to upper level processing elements as an error (no
5769 warning) by the Master.

5770

5771 **C.3 Derived ErrorTypes**

5772 **C.3.1 Overview**

5773 Derived ErrorTypes are generated in the Master AL and are caused by internal incidents or
 5774 those received from the Device. Table C.2 lists the specified Derived ErrorTypes.

5775 **Table C.2 – Derived ErrorTypes**

Incident	Error Code	Additional Code	Name	Definition
Master – Communication error	0x10	0x00	COM_ERR	See C.3.2
Master – ISDU timeout	0x11	0x00	I-SERVICE_TIMEOUT	See C.3.3
Device Event – ISDU error a) (DL, Error, single shot b), 0x5600)	0x11	0x00	I-SERVICE_TIMEOUT	See C.3.4
Device Event – ISDU illegal a) service primitive (AL, Error, single shot c), 0x5800)	0x11	0x00	I-SERVICE_TIMEOUT	See C.3.5
Master – ISDU checksum error	0x56	0x00	M_ISDU_CHECKSUM	See C.3.6
Master – ISDU illegal service primitive	0x57	0x00	M_ISDU_ILLEGAL	See C.3.7
Device Event – ISDU buffer overflow a) (DL, Error, single shot b), 0x5200)	0x80	0x33	VAL_LENOVRRUN	See C.3.8 and C.2.12
Key: a) Events from legacy Devices shall be redirected in compatibility mode to the derived ErrorType b) according [8]: Event qualifier code for DL, Error, single shot result is 0x72 c) according [8]: Event qualifier code for AL, Error, single shot result is 0x73				

5776

5777 **C.3.2 Master – Communication error**

5778 The Master generates a negative service response with this ErrorType if a communication
 5779 error occurred during a read or write service, for example the SDCI connection is interrupted.

5780 **C.3.3 Master – ISDU timeout**

5781 The Master generates a negative service response with this ErrorType, if a Read or Write
 5782 service is pending longer than the specified I-Service timeout (see Table 102) in the Master.

5783 **C.3.4 Device Event – ISDU error**

5784 If the Master received an Event with the EventQualifier (see A.6.4: DL, Error, Event single
 5785 shot) and the EventCode 0x5600, a negative service response indicating a service timeout is
 5786 generated and returned to the requester (see C.3.3).

5787 **C.3.5 Device Event – ISDU illegal service primitive**

5788 If the Master received an Event with the EventQualifier (see A.6.4: AL, Error, Event single
 5789 shot) and the EventCode 0x5800, a negative service response indicating a service timeout is
 5790 generated and returned to the requester (see C.3.3).

5791 **C.3.6 Master – ISDU checksum error**

5792 The Master generates a negative service response with this ErrorType, if its data link layer
 5793 detects an ISDU checksum error.

5794 **C.3.7 Master – ISDU illegal service primitive**

5795 The Master generates a negative service response with this ErrorType, if its data link layer
 5796 detects an ISDU illegal service primitive.

5797 **C.3.8 Device Event – ISDU buffer overflow**

5798 If the Master received an Event with the EventQualifier (see A.6.4: DL, Error, Event single
 5799 shot) and the EventCode 0x5200, a negative service response indicating a parameter length
 5800 overrun is generated and returned to the requester (see C.2.12).

5801 **C.4 SMI related ErrorTypes**5802 **C.4.1 Overview**

5803 The Master returns SMI related ErrorTypes within a negative response (Result (-) while
 5804 performing an SMI service (see 11.2). Table C.3 lists the SMI related ErrorTypes.

5805 **Table C.3 – SMI related ErrorTypes**

Incident	Error Code	Additional Code	Name
ArgBlock unknown	0x40	0x01	ARGBLOCK_NOT_SUPPORTED
Incorrect ArgBlock content type	0x40	0x02	ARGBLOCK_INCONSISTENT
Device not communicating	0x40	0x03	DEVICE_NOT_ACCESSIBLE
Service unknown	0x40	0x04	SERVICE_NOT_SUPPORTED
Process Data not accessible	0x40	0x05	DEVICE_NOT_IN_OPERATE
Insufficient memory	0x40	0x06	MEMORY_OVERRUN
Incorrect Port number	0x40	0x11	PORT_NUM_INVALID
Incorrect ArgBlock content	0x40	0x30	ARGBLOCK_VALOUTOFRANGE
Incorrect ArgBlock length	0x40	0x34	ARGBLOCK_LENGTH_INVALID
Master busy	0x40	0x36	SERVICE_TEMP_UNAVAILABLE
Inconsistent DS data	0x40	0x39	INCONSISTENT_DS_DATA
Device / Master error	ee	aa	Propagated error, for "ee" and "aa" see Annex C.2 and C.3
Reserved	0x40	0x80 to 0xFF	Vendor specific

5806

5807 **C.4.2 ArgBlock unknown**

5808 This ErrorType shall be used if the requested ArgBlockID is unknown to the SMI.

5809 **C.4.3 Incorrect ArgBlock content type**

5810 This ErrorType shall be used if the SMI service detects errors in the structure of the provided
 5811 ArgBlock.

5812 **C.4.4 Device not communicating**

5813 This ErrorType shall be used if the Port is not communicating with the Device.

5814 **C.4.5 Service unknown**

5815 This ErrorType shall be used if a requested SMI service is not supported by the Master.

5816 **C.4.6 Process Data not accessible**

5817 This ErrorType shall be used if the requested Process Data cannot be accessed in current
 5818 state of communication.

5819 **C.4.7 Insufficient memory**

5820 This ErrorType shall be used if the requested SMI service requires more memory space.

5821 **C.4.8 Incorrect Port number**

5822 This ErrorType shall be used if the requested Port number is invalid.

C.4.9 Incorrect ArgBlock content

5823 This ErrorType shall be used if the actual ArgBlock content is not consistent or contains
5824 invalid data.

C.4.10 Incorrect ArgBlock length

5825 This ErrorType shall be used if the actual ArgBlock length does not correspond to the
5826 ArgBlockID.

C.4.11 Master busy

5827 This ErrorType shall be used if the SMI service is blocked due to other running processes.

C.4.12 Inconsistent DS data

5828 This ErrorType shall be used if Data Storage is not supported or Data Storage is not activated
5829 on this Port or Data Storage content is not consistent with Port configuration, for example
5830 VendorID does not match.

C.4.13 Device/Master error

5831 These ErrorTypes from Device or Master Port are propagated if the requested SMI service
5832 has been denied by the Device.

5838
 5839
 5840
 5841

Annex D (normative)

EventCodes (diagnosis information)

5842

D.1 General

5843 The concept of Events is described in 7.3.8.1 and the general structure and encoding of
 5844 Events is specified in Clause A.6. Whenever the StatusCode indicates an Event in case of a
 5845 Device or a Master incident, the associated EventCode shall be provided as diagnosis
 5846 information. As specified in A.6, the Event entry contains an EventCode in addition to the
 5847 EventQualifier. The EventCode identifies an actual incident. Permissible values for
 5848 EventCode are listed in Table D.1; all other EventCode values are reserved and shall not be
 5849 used.

5850

D.2 EventCodes for Devices

5851 Table D.1 lists the specified EventCode identifiers and their definitions for Devices (Source =
 5852 "REMOTE"). The EventCodes are created by the technology specific Device application
 5853 (instance = APP).

5854

Table D.1 – EventCodes for Devices

EventCode ID	Definition and recommended maintenance action	Preferred DeviceStatus Value (NOTE 1)	Type (NOTE 2)
0x0000	No malfunction	0	Notification
0x0001 to 0xFFFF	Reserved		
0x1000	General malfunction – unknown error	4	Error
0x1001 to 0x17FF	Reserved		
0x1800 to 0x18FF	Vendor specific		
0x1900 to 0x3FFF	Reserved		
0x4000	Temperature fault – Overload	4	Error
0x4001 to 0x420F	Reserved		
0x4210	Device temperature overrun – Clear source of heat	2	Warning
0x4211 to 0x421F	Reserved		
0x4220	Device temperature underrun – Insulate Device	2	Warning
0x4221 to 0x4FFF	Reserved		
0x5000	Device hardware fault – Device exchange	4	Error
0x5001 to 0x500F	Reserved		
0x5010	Component malfunction – Repair or exchange	4	Error
0x5011	Non volatile memory loss – Check batteries	4	Error
0x5012	Batteries low – Exchange batteries	2	Warning
0x5013 to 0x50FF	Reserved		
0x5100	General power supply fault – Check availability	4	Error

EventCode ID	Definition and recommended maintenance action	Preferred DeviceStatus Value (NOTE 1)	Type (NOTE 2)
0x5101	Fuse blown/open – Exchange fuse	4	Error
0x5102 to 0x510F	Reserved		
0x5110	Primary supply voltage overrun – Check tolerance	2	Warning
0x5111	Primary supply voltage underrun – Check tolerance	2	Warning
0x5112	Secondary supply voltage fault (Port Class B) – Check tolerance	2	Warning
0x5113 to 0x5FFF	Reserved		
0x6000	Device software fault – Check firmware revision	4	Error
0x6001 to 0x631F	Reserved		
0x6320	Parameter error – Check data sheet and values	4	Error
0x6321	Parameter missing – Check data sheet	4	Error
0x6322 to 0x634F	Reserved		
0x6350	Reserved		
0x6351 to 0x76FF	Reserved		
0x7700	Wire break of a subordinate device – Check installation	4	Error
0x7701 to 0x770F	Wire break of subordinate device 1 ...device 15 – Check installation	4	Error
0x7710	Short circuit – Check installation	4	Error
0x7711	Ground fault – Check installation	4	Error
0x7712 to 0x8BFF	Reserved		
0x8C00	Technology specific application fault – Reset Device	4	Error
0x8C01	Simulation active – Check operational mode	3	Warning
0x8C02 to 0x8C0F	Reserved		
0x8C10	Process variable range overrun – Process Data uncertain	2	Warning
0x8C11 to 0x8C1F	Reserved		
0x8C20	Measurement range exceeded – Check application	4	Error
0x8C21 to 0x8C2F	Reserved		
0x8C30	Process variable range underrun – Process Data uncertain	2	Warning
0x8C31 to 0x8C3F	Reserved		
0x8C40	Maintenance required – Cleaning	1	Warning
0x8C41	Maintenance required – Refill	1	Warning
0x8C42	Maintenance required – Exchange wear and tear parts	1	Warning
0x8C43 to 0x8C9F	Reserved		
0x8CA0 to 0x8DFF	Vendor specific		

EventCode ID	Definition and recommended maintenance action	Preferred DeviceStatus Value (NOTE 1)	Type (NOTE 2)
0x8E00 to 0xAFFF	Reserved		
0xB000 to 0xB0FF	Reserved for Safety extensions	See [10]	See [10]
0xB100 to 0xBFFF	Reserved for profiles		
0xC000 to 0xFF90	Reserved		
0xFF91	Data Storage upload request ("DS_UPLOAD_REQ") – internal, not visible to user	0	Notification (single shot)
0xFF92 to 0xFFAF	Reserved		
0xFFB0 to 0xFFB7	Reserved for Wireless extensions	See [11]	See [11]
0xFFB8 to 0xFFFF	Reserved		
NOTE 1 See B.2.21 for a description of this parameter NOTE 2 See Table A.19 for a description of Event types			

5855

5856 D.3 EventCodes for Ports

5857 Table D.2 lists the specified EventCode identifiers and their definitions for Ports. The
 5858 EventCodes are created by the Master (Source = "Master/Port", see Table A.18, and
 5859 "application" (APP) or "communication system" (SYS) as INSTANCE, see Table Table A.17).
 5860 EventCode identifiers 0xFF21 to 0xFFFF are internal system information and shall not be
 5861 visible to users.

5862 The following rules apply:

- 5863 – Port Events referring to SDCI communication are mandatory (exceptions 0xFF26/0xFF27)
 5864 and are specified in detail (Event INSTANCE = SYS). The other Port Events (Event
 5865 INSTANCE = APP) are optional.
- 5866 – Each appearing Port Event of Type "Error" requires a disappearing Port Event whenever
 5867 the cause of the Error has been fixed.
- 5868 – Occurring PortStatusInfo "PORT_DIAG" leads to an appearing EventCode 0x180x or
 5869 0x600x depending on "SYS" Error (see Table 126).
- 5870 – Leaving PortStatusInfo "PORT_DIAG" to others leads to disappearing EventCodes for
 5871 each pending Error (0x180x).
- 5872 – Every appearing/disappearing Event leads to an update of the DiagEntry section in the
 5873 PortStatusList (see Table E.4).

5874

5875 **Table D.2 – EventCodes for Ports**

EventCode ID	Definition and recommended maintenance action	Event INSTANCE	Type
0x0000 to 0x17FF	Reserved		

EventCode ID	Definition and recommended maintenance action	Event INSTANCE	Type
0x1800	No Device (communication) <ul style="list-style-type: none"> - Occurring PortStatusInfo "NO_Device" leads to an appearing EventCode 0x1800 - Appearing EventCode 0x1800 causes disappearing of all pending EventCodes of INSTANCE "SYS". - Leaving PortStatusInfo "NO_DEVICE" to others leads to a disappearing EventCode 0x1800 	SYS	Error
0x1801	Startup parametrization error – check parameter	APP	Error
0x1802	Incorrect VendorID – Inspection Level mismatch Trigger: SMI_PortEvent(0x1802) by SM_PortMode (COMPFAULT)	SYS	Error
0x1803	Incorrect DeviceID – Inspection Level mismatch Trigger: SMI_PortEvent(0x1803) by SM_PortMode (COMPFAULT)	SYS	Error
0x1804	Short circuit at C/Q – check wire connection	APP	Error
0x1805	Overtemperature – check Master temperature and load	APP	Error
0x1806	Short circuit at L+ – check wire connection	APP	Error
0x1807	Overcurrent at L+ – check power supply (e.g. L1+)	APP	Error
0x1808	Reserved		
0x1809	Backup inconsistency – memory out of range (2048 octets) Trigger: SMI_PortEvent (0x1809) by DS_Fault (SizeCheck_Fault)	SYS	Error
0x180A	Backup inconsistency – identity fault Trigger: SMI_PortEvent (0x180A) by DS_Fault (Identification_Fault)	SYS	Error
0x180B	Backup inconsistency – Data Storage unspecific error Trigger: SMI_PortEvent (0x180B) by DS_Fault (All other incidents)	SYS	Error
0x180C	Backup inconsistency – upload fault Trigger: SMI_PortEvent (0x180C) by DS_Fault (Upload)	SYS	Error
0x180D	Parameter inconsistency – download fault Trigger: SMI_PortEvent (0x180D) by DS_Fault (Download)	SYS	Error
0x180E	P24 (Class B) missing or undervoltage	APP	Error
0x180F	Short circuit at P24 (Class B) – check wire connection (e.g. L2+)	APP	Error
0x1810	Short circuit at I/Q – check wiring	APP	Error
0x1811	Short circuit at C/Q (if digital output) – check wiring	APP	Error
0x1812	Overcurrent at I/Q – check load	APP	Error
0x1813	Overcurrent at C/Q (if digital output) – check load	APP	Error
0x1814 to 0x1EFF	Reserved		
0x1F00 to 0x1FFF	Vendor specific		
0x2000 to 0x2FFF	Safety extensions		See [10]
0x3000 to 0x3FFF	Wireless extensions		See [11]
0x4000 to 0x5FFF	Reserved		
0x6000	Invalid cycle time Trigger: SM_PortMode (CYCTIME_FAULT)	SYS	Error
0x6001	Revision fault – incompatible protocol version Trigger: SM_PortMode (REVISION_FAULT)	SYS	Error
0x6002	ISDU batch failed – parameter inconsistency?	SYS	Error
0x6003 to 0xFF20	Reserved		

EventCode ID	Definition and recommended maintenance action	Event INSTANCE	Type
0xFF21 a)	DL: Device plugged in ("NEW_SLAVE") – PD stop Trigger: SM_PortMode (COMREADY); see Figure 71 (T10)		Notification
0xFF22 a)	Device communication lost ("DEV_COM_LOST")		Notification
0xFF23 a)	Data Storage identification mismatch ("DS_IDENT_MISMATCH")		Notification
0xFF24 a)	Data Storage buffer overflow ("DS_BUFFER_OVERFLOW")		Notification
0xFF25 a)	Data Storage parameter access denied ("DS_ACCESS_DENIED")		Notification
0xFF26 b)	Port status changed – Use "SMI_PortStatus" service for Port status in detail. Each change of "PortStatusInfo" causes this Event via SMI_PortEvent	SYS	Notification
0xFF27 b)	Data Storage upload completed and new data object available. Each completion of a Data Storage upload causes this Event via SMI_PortEvent	SYS	Notification
0xFF28 to 0xFF30	Reserved		
0xFF31 a)	DL: Incorrect Event signalling ("EVENT") Trigger: none		Notification
0xFF32 to 0xFFFF	Reserved		
	a) No more required due to SMI Event concept. Not recommended for implementations. b) These Events are optional.		

5876

5877

5878

5879
 5880
 5881
**Annex E
 (normative)**

5882
Coding of ArgBlocks


5883 **E.1 General**

5884 The purpose of ArgBlocks is explained in 11.2.2. Each ArgBlock is uniquely defined by its
 5885 ArgBlock identifier (ArgBlockID) and its ArgBlock length (ArgBlockLength). Extension of
 5886 ArgBlocks by just using a larger ArgBlock length is not permitted. Manufacturer specific
 5887 ArgBlocks are possible by using the service groups B to E (see Figure E.1).

5888 Transmission of ArgBlocks is following the convention in Figure E.1 as octet stream beginning
 5889 with octet offset 0.

5890 The four-nibble structure of the ArgBlockID is shown in Figure E.1

5891 The ArgBlockID "0x0000" is reserved. The fourth nibble (N4) is assigned to SMI service
 5892 groups. The third nibble (N3) is assigned to domains and to SMI management. Nibble 1 (N1)
 5893 and nibble 2 (N2) define ArgBlocks within the particular domain.

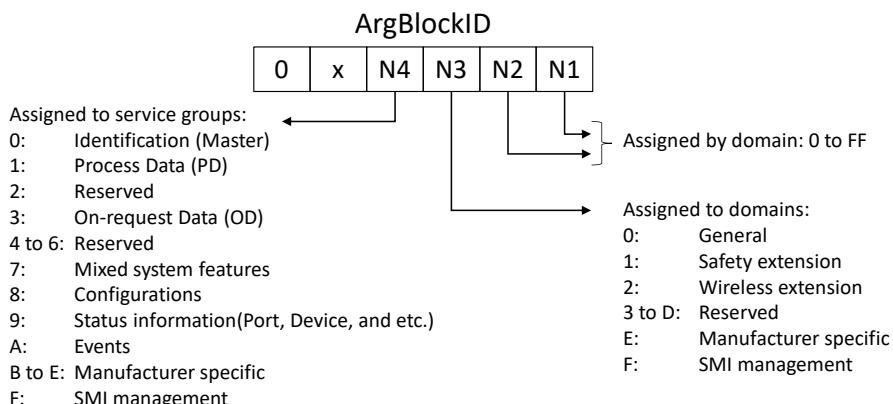

5894

5895 **Figure E.1 – Assignment of ArgBlock identifiers**

5896 Table E.1 shows all defined ArgBlock types and their IDs including those for system
 5897 extensions in order to avoid ambiguities. ArgBlockIDs are assigned by the IO-Link
 5898 Community.

5899 **Table E.1 – ArgBlock types and their ArgBlockIDs**

ArgBlock type	ArgBlockID	Definition	Used by SMI_xxx services
MasterIdent	0x0001	Annex E.2	SMI_MasterIdentification (see 11.2.4)
FSMasterAccess	0x0100	[10]	–
WMasterConfig	0x0200	[11]	–
PDIIn	0x1001	Annex E.10	SMI_PDIIn (see 11.2.17)
PDOOut	0x1002	Annex E.11	SMI_PDOOut (see 11.2.18)
PDIInOut	0x1003	Annex E.12	SMI_PDIInOut (see 11.2.19)
SPDUIIn	0x1101	[10]	–
SPDUOut	0x1102	[10]	–
PDIInIQ	0x1FFE	Annex E.13	SMI_PDIInIQ (see 11.2.20)
PDOOutIQ	0x1FFF	Annex E.14	SMI_PDOOutIQ (see 11.2.21) SMI_PDReadbackOutIQ (see 11.2.22)
On-requestData	0x3000	Annex E.5	SMI_DeviceWrite (see 11.2.10)

ArgBlock type	ArgBlockID	Definition	Used by SMI_xxx services
	0x3001		SMI_DeviceRead (see 11.2.11)
DS_Data	0x7000	Annex E.6	SMI_DSToParServ (see 11.2.8) SMI_ParServToDS (see 11.2.9)
DeviceParBatch	0x7001	Annex E.7	SMI_ParamWriteBatch (see 11.2.12) SMI_ParamReadBatch (see 11.2.13)
IndexList	0x7002	Annex E.8	SMI_ParamReadBatch (see 11.2.13)
PortPowerOffOn	0x7003	Annex E.9	SMI_PortPowerOffOn (see 11.2.14)
PortConfigList	0x8000	Annex E.3	SMI_PortConfiguration (see 11.2.5) SMI_ReadBackPortConfiguration (see 11.2.6)
FSPortConfigList	0x8100	[10]	–
WTrackConfigList	0x8200	[11]	–
PortStatusList	0x9000	Annex E.4	SMI_PortStatus (see 11.2.7)
FSPortStatusList	0x9100	[10]	–
WTrackStatusList	0x9200	[11]	–
WTrackScanResult	0x9201	[11]	–
DeviceEvent	0xA000	Annex E.15	SMI_DeviceEvent (see 11.2.15)
PortEvent	0xA001	Annex E.16	SMI_PortEvent (11.2.16)
VoidBlock	0xFFFF	Annex E.17	SMI service management
JobError	0xFFFF	Annex E.18	SMI service management

5900

5901 E.2 MasterIdent

5902 This ArgBlock is used by the service SMI_MasterIdentification (see 11.2.4). Table E.2 shows
 5903 coding of the MasterIdent ArgBlock.

5904

Table E.2 – MasterIdent

Octet Offset	Element name	Definition	Data type	Values								
0	ArgBlockID	Unique ID	Unsigned16	0x0001								
2	VendorID	Unique VendorID of the Master (see B.1.8)	Unsigned16	1 to 0xFFFF								
4	MasterID	4 octets long vendor specific unique identification of the Master	Unsigned32	1 to 0xFFFFFFFF								
8	MasterType	0: Unspecific (manufacturer specific) 1: Reserved 2: Master acc. to this specification or later 3: FS_Master; see [10] 4: W_Master; see [11] 5 to 255: Reserved	Unsigned8	0 to 0xFF								
9	Features_1	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> </table> Bit 0: DeviceParBatch (SMI_ParamWriteBatch) 0 = not supported 1 = supported Bit 1: DeviceParBatch (SMI_ParamReadBatch) 0 = not supported 1 = supported Bit 2: PortPowerOffOn (SMI_PortPowerOffOn) 0 = not supported 1 = supported Bit 3 to 7: Reserved (= 0)	7	6	5	4	3	2	1	0	Unsigned8	0 to 0xFF
7	6	5	4	3	2	1	0					

Octet Offset	Element name	Definition	Data type	Values
10	Features_2	 Reserved for future use (= 0)	Unsigned8	0 to 0xFF
11	MaxNumberOfPorts	Maximum number (n) of ports of this Master	Unsigned8	1 to 0xFF
12	PortTypes	Array indicating for all n ports the type of port 0: Class A 1: Class A with PortPowerOffOn 2: Class B; see 5.4.2 3: FS_Port_A without OSSDe; see [10] 4: FS_Port_A with OSSDe; see [10] 5: FS_Port_B; see [10] 6: W_Port; see [11] 7 to 127: Reserved 128 to 255: Manufacturer specific	Array [1 to n] of Unsigned8	1 to 6

5905

5906 E.3 PortConfigList

5907 This ArgBlock is used by the services SMI_PortConfiguration (see 11.2.5) and SMI_Read-
 5908 backPortConfiguration (see 11.2.6). Table E.3 shows the coding of the PortConfigList
 5909 ArgBlock.

5910

Table E.3 – PortConfigList

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x8000
2	PortMode ^c	This element contains the port mode expected by the SMI client, e.g. gateway application. All modes are mandatory. They shall be mapped to the Target Modes of "SM_SetPortConfig" (see 9.2.2.2). 0: DEACTIVATED (SM: INACTIVE → Port is deactivated; input and output Process Data are "0"; Master shall not perform activities at this port) 1: IOL_MANUAL (SM: CFGCOM → Target Mode based on user defined configuration including validation of RID, VID, DID) 2: IOL_AUTOSTART ^a (SM: AUTOCOM → Target Mode w/o configuration and w/o validation of VID/DID; RID gets highest revision the Master is supporting; Validation: NO_CHECK) 3: DI_C/Q (Pin 4 at M12) ^b (SM: DI → Port in input mode SIO) 4: DO_C/Q (Pin 4 at M12) ^b (SM: DO → Port in output mode SIO) 5 to 48: Reserved for future versions 49 to 96: Reserved for extensions (see [10], [11]) 97 to 255: Manufacturer specific	Unsigned8	0 to 0xFF

Octet Offset	Element name	Definition	Data type	Values
3	Validation&Backup	This element contains the InspectionLevel to be performed by the Device and the Backup/Restore behavior. 0: No Device check 1: Type compatible Device V1.0 2: Type compatible Device V1.1 3: Type compatible Device V1.1, Backup + Restore 4: Type compatible Device V1.1, Restore 5 to 255: Reserved	Unsigned8	0 to 0xFF
4	I/Q behavior (manufacturer or profile specific, see [10], [11])	This element defines the behavior of the I/Q signal (Pin 2 at M12 connector) 0: Not supported 1: Digital Input 2: Digital Output 3: Reserved 4: Reserved 5: Power 2 (Port class B) 6 to 255: Reserved	Unsigned8	0 to 0xFF
5	PortCycleTime	This element contains the port cycle time expected by the SMI client. AFAP is default. They shall be mapped to the ConfiguredCycleTime of "SM_SetPortConfig" (see 9.2.2.2) 0: AFAP (As fast as possible – SM: FreeRunning → Port cycle timing is not restricted. Default value in port mode IOL_MANUAL) 1 to 255: TIME (SM: For coding see Table B.3. Device shall achieve the indicated port cycle time. An error shall be created if this value is below MinCycleTime of the Device or in case of other misfits)	Unsigned8	0 to 0xFF
6	VendorID	This element contains the 2 octets long VendorID expected by the SMI client (see B.1.8)	Unsigned16	1 to 0xFFFF
8	DeviceID	This element contains the 3 octets long Device-ID expected by the SMI client (see B.1.9)	Unsigned32	1 to 0xFFFFFFFF
a In PortMode "IOL_Autostart" parameters VendorID, DeviceID, and Validation&Backup are treated don't care. b In PortModes "DI_C/Q" and "DO_C/Q" parameters Validation&Backup, VendorID, DeviceID, and PortCycleTime are treated don't care. c It is recommended to state the default setting of the PortMode in the Master manual or integration specification				

5911

5912 E.4 PortStatusList

5913 This ArgBlock is used by the service SMI_PortStatus (see 11.2.7). Table E.4 shows the
 5914 coding of the ArgBlock "PortStatusList". It refers to the state machine of the Configuration
 5915 Manager in Figure 101 and shows its current states.

5916 Content of "PortStatusInfo" is derived from "PortMode" in 9.2.2.4. Values not available shall
 5917 be set to "0".

5918

Table E.4 – PortStatusList

Octet	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x9000

Octet	Element name	Definition	Data type	Values
2	PortStatusInfo	<p>This element contains status information of the Port.</p> <p>0: NO_DEVICE No communication (COMLOST). However, Port configuration IOL_MANUAL or IOL_AUTOSTART was set (see Table E.3).</p> <p>1: DEACTIVATED Port configuration DEACTIVATED was set (see Table E.3).</p> <p>2: PORT_DIAG This value to be set if the Port encounters a failure during startup, validation, or Data Storage (group error). Device is in PREOPERATE and DiagEntry contains the diagnosis cause.</p> <p>3: Reserved</p> <p>4: OPERATE This value to be set if the Device is in OPERATE, even in case of Device error.</p> <p>5: DI_C/Q Port configuration "DI" was set (see Table E.3).</p> <p>6: DO_C/Q Port configuration "DO" was set (see Table E.3).</p> <p>7 to</p> <p>8: Reserved for IO-Link Safety [10]</p> <p>9 to</p> <p>199: Reserved</p> <p>200 to</p> <p>249: Manufacturer specific</p> <p>250 to</p> <p>253: Reserved</p> <p>254: PORT_POWER_OFF Shutdown of Port is active caused by SMI_PortPowerOffOn</p> <p>255: NOT_AVAILABLE PortStatusInfo currently not available</p>	Unsigned8 (enum)	0 to 0xFF
3	PortQualityInfo a)	<p>This element contains status information on Process Data (see 8.2.2.12).</p> <p>Bit0: 0 = VALID 1 = INVALID</p> <p>Bit1: 0 = PDOOUTVALID 1 = PDOOUTINVALID</p> <p>Bit2 to</p> <p>Bit7: Reserved</p>	Unsigned8	–
4	RevisionID	<p>This element contains information of the SDCI protocol revision of the Device (see B.1.5)</p> <p>0: NOT_DETECTED (No communication at that port)</p> <p><>0: Copied from Direct parameter page, address 4</p>	Unsigned8	0 to 0xFF

Octet	Element name	Definition	Data type	Values
5	TransmissionRate	This element contains information on the effective port transmission rate. 0: NOT_DETECTED (No communication at that port) 1: COM1 (transmission rate 4,8 kbit/s) 2: COM2 (transmission rate 38,4 kbit/s) 3: COM3 (transmission rate 230,4 kbit/s) 4 to 255: Reserved for future use	Unsigned8	0 to 0xFF
6	MasterCycleTime	This element contains information on the Master cycle time. For coding see B.1.3.	Unsigned8	–
7	InputDataLength	This element contains the input data length as number of octets of the Device provided by the PDIIn service (see Annex E.10)	Unsigned8	0 to 0x20
8	OutputDataLength	This element contains the output data length as number of octets for the Device accepted by the PDOOut service (see Annex E.11)	Unsigned8	0 to 0x20
9	VendorID	This element contains the 2 octets long VendorID connected to the SMI client	Unsigned16	0 to 0xFFFF
11	DeviceID	This element contains the 3 octets long DeviceID connected to the SMI client	Unsigned32	0 to 0xFFFFFFFF
15	NumberOfDiags	This element contains the provided number x of pending Events via DiagEntries	Unsigned8	0 to 0xFF
16 + 3*($n-1$)	DiagEntry0	These elements contain the "EventQualifier" and "EventCode" of pending Events. See B.2.22 for coding and how to deal with "Event appears / disappears".	Struct Unsigned8/16	–
	...			
	DiagEntry($x-1$)			
Key	n: 1 .. x	a) the PortQualityInfo shall be ignored in case of DI, DO, or not OPERATE		

5919

5920 E.5 On-request_Data

5921 This ArgBlock with ArgBlockID 0x3000 is used by the service SMI_DeviceWrite (see 11.2.10)
 5922 and with ArgBlockID 0x3001 (Index only) by the service SMI_DeviceRead (see 11.2.11).
 5923 Table E.5 shows the coding of the ArgBlockType "On-request_Data".

5924

Table E.5 – On-request_Data

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x3000 (Write) 0x3001 (Read)
2	Index	This element contains the Index to be used for the AL_Write or AL_Read service	Unsigned16	0 to 0xFFFF
4	Subindex	This element contains the Subindex to be used for the AL_Write or AL_Read service	Unsigned8	0 to 0xFF
5 to n	On-request Data	This element contains the On-request Data for ArgBlock 0x3000 if available.	Octet string	–

5925

5926 E.6 DS_Data

5927 This ArgBlock is used by the services SMI_DSToParServ (see 11.2.8) and SMI_ParServToDS
 5928 (see 11.2.9). Table E.6 shows the coding of the ArgBlockType "DS_Data".

5929

Table E.6 – DS_Data

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x7000
2 to n	DataStorageObject	This element contains the Device parameter set coded according to 11.4.2 (Table G.2 followed by Table G.1)	Record (octet string)	0 to $2 \times 2^{10} + 12$

5930

5931 **E.7 DeviceParBatch**

5932 This ArgBlock provides means to transfer a large number of Device parameters via a number
 5933 of ISDU write or read requests to the Device. It is used by the services SMI_ParamWriteBatch
 5934 (see 11.2.12) or SMI_ParamReadBatch (see 11.2.13). Table E.7 shows the coding of the
 5935 ArgBlockType "DeviceParBatch".

5936

Table E.7 – DeviceParBatch

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x7001
2	Object1_Index	Index of 1 st parameter	Unsigned16	0 to 0xFFFF
4	Object1_Subindex	Subindex of 1 st parameter	Unsigned8	0 to 0xFF
5	Object1_Length	Length of parameter record or ISDU error (implicitly 2 octets)	Unsigned8	0 to 0xE8 0xFF (error)
6	Object1_Data	Parameter record or ISDU ErrorType (return value)	Record	0 to r
6+r	Object2_Index	Index of 2 nd parameter	Unsigned16	0 to 0xFFFF
6+r+2	Object2_Subindex	Subindex of 2 nd parameter	Unsigned8	0 to 0xFF
6+r+3	Object2_Length	Length of parameter record or ISDU error (implicitly 2 octets)	Unsigned8	0 to 0xE8 0xFF (error)
6+r+4	Object2_Data	Parameter record or ISDU ErrorType (return value)	Record	0 to s
...				
...	Object x _Index	Index of x th parameter	Unsigned16	0 to 0xFFFF
...	Object x _Subindex	Subindex of x th parameter	Unsigned8	0 to 0xFF
...	Object x _Length	Length of parameter record or ISDU error (implicitly 2 octets)	Unsigned8	0 to 0xE8 0xFF (error)
...	Object x _Data	Parameter record or ISDU ErrorType (return value)	Record	0 to t
In case of SMI_ParamWriteBatch, this ArgBlock will return ErrorType "0x0000" for each successfully written object				

5937

5938 **E.8 IndexList**

5939 This ArgBlock provides a list of the Indices of several requested Device parameters to be
 5940 retrieved from a Device via the service SMI_ParamReadBatch (see 11.2.13). Table E.8 shows
 5941 the coding of the ArgBlockType "IndexList".

5942

Table E.8 – IndexList

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x7002
2	Object1_Index	Index of 1 st object	Unsigned16	0 to 0xFFFF
4	Object1_Subindex	Subindex of 1 st object	Unsigned8	0 to 0xFF
5	Object2_Index	Index of 2 nd object	Unsigned16	0 to 0xFFFF
7	Object2_Subindex	Subindex of 2 nd object	Unsigned8	0 to 0xFF
8	Object3_Index	Index of 3 rd object	Unsigned16	0 to 0xFFFF
10	Object3_Subindex	Subindex of 3 rd object	Unsigned8	0 to 0xFF
...				

5943

5944 **E.9 PortPowerOffOn**

5945 Table E.9 shows the ArgBlockType "PortPowerOffOn". The service "SMI_PortPowerOffOn"
 5946 (see 11.2.14) together with this ArgBlock can be used for energy saving purposes during
 5947 production stops or alike, the dynamic behaviour is defined in 11.8. Minimum PowerOffTime
 5948 shall be 500 ms.

5949

Table E.9 – PortPowerOffOn

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x7003
2	PortPowerMode	0: One time switch off (PowerOffTime) 1: Switch PortPowerOff (permanent) 2: Switch PortPowerOn (permanent)	Unsigned8	–
3	PowerOffTime	Duration of Master port power off (ms). See also [10].	Unsigned16	0x01F4 to 0xFFFF

5950 **E.10 PDIn**

5951 This ArgBlock provides means to retrieve input Process Data from the InBuffer within the
 5952 Master. It is used by the service SMI_PDIn (see 11.2.17). Table E.10 shows the coding of the
 5953 "PDIn" ArgBlockType.

5954 Mapping principles of input Process Data (PD) are specified in 11.7.2. The following rules
 5955 apply for the ArgBlock PDIn:

- 5956 • The first 2 octets are occupied by the ArgBlockID (0x1001);
- 5957 • The third octet (offset = 2) carries the Port Qualifier Information (PQI);
- 5958 • The fourth octet specifies the length of input Process Data (cyclic values or the DI bit on
 5959 the C/Q line);
- 5960 • Subsequent octets are occupied by the input Process Data of the Device.

5961

Table E.10 – PDIn

Octet offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x1001
2	PQI	Port Qualifier Information a)	Unsigned8	–
3	InputDataLength	This element contains the length of the Device's input Process Data contained in the following elements.	Unsigned8	0 to 0x20

Octet offset	Element name	Definition	Data type	Values
4	PDI0	Input Process Data (octet 0)	Unsigned8	0 to 0xFF
5	PDI1	Input Process Data (octet 1)	Unsigned8	0 to 0xFF
		...		
InputDataLength + 4	PDIn _n	Input Process Data (octet <i>n</i>)	Unsigned8	0 to 0xFF

Key: a) the PQI shall be ignored in case of DI, DO, or not OPERATE, see 11.7.2 Bit 7

5962

5963 E.11 PDOOut

5964 This ArgBlock provides means to transfer output Process Data to the OutBuffer within the
 5965 Master. It is used by the service SMI_PDOOut (see 11.2.18). Table E.11 shows coding of the
 5966 "PDOOut" ArgBlockType.

5967 Mapping principles of output Process Data (PD) are specified in 11.7.3. The following rules
 5968 apply for the ArgBlock PDOOut:

- 5969 • The first 2 octets are occupied by the ArgBlockID (0x1002);
- 5970 • The third octet (offset = 2) carries the port qualifier (OE);
- 5971 • The fourth octet specifies the length of output Process Data (cyclic values or the DO bit on
 5972 the C/Q line);
- 5973 • Subsequent octets are occupied by the output Process Data, which are propagated to the
 5974 Device.

5975 **Table E.11 – PDOOut**

Octet offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x1002
2	OE	Output Enable	Unsigned8	0x00 to 0x01
3	OutputDataLength	This element contains the length of the output Process Data for the Device contained in the following elements.	Unsigned8	0 to 0x20
4	PDO0	Output Process Data (octet 0)	Unsigned8	0 to 0xFF
5	PDO1	Output Process Data (octet 1)	Unsigned8	0 to 0xFF
		...		
OutputDataLength + 4	PDO _m	Output Process Data (octet <i>m</i>)	Unsigned8	0 to 0xFF

5976

5977 E.12 PDInOut

5978 This ArgBlock provides means to retrieve input Process Data from the InBuffer and output
 5979 Process Data from the OutBuffer within the Master. It is used by the service SMI_PDInOut
 5980 (see 11.2.19). Table E.12 shows the coding of the "PDInOut" ArgBlockType using mapping
 5981 principles of Annex E.10 and Annex E.11.

5982

Table E.12 – PDInOut

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x1003
2	PQI	Port Qualifier Information a)	Unsigned8	–
3	OE	Output Enable b)	Unsigned8	–

Octet Offset	Element name	Definition	Data type	Values
4	InputDataLength	This element contains the length of the Device's input Process Data contained in the following elements.	Unsigned8	0 to 0x20
5	PDI0 *	Input Process Data (octet 0)	Unsigned8	0 to 0xFF
6	PDI1 *	Input Process Data (octet 1)	Unsigned8	0 to 0xFF
		...		
InputDataLength +4	PDI _n *	Input Process Data (octet <i>n</i>)	Unsigned8	0 to 0xFF
InputDataLength +5	OutputDataLength	This element contains the length of the output Process Data for the Device contained in the following elements.	Unsigned8	0 to 0x20
InputDataLength + 6	PDO0 **	Output Process Data (octet 0)	Unsigned8	0 to 0xFF
InputDataLength + 7	PDO1 **	Output Process Data (octet 1)	Unsigned8	0 to 0xFF
		...		
InputDataLength + OutputDataLength +5	PDO _m **	Output Process Data (octet <i>m</i>)	Unsigned8	0 to 0xFF
Key: a) the PQI shall be ignored in case of DI, DO, or not OPERATE, see 11.7.2 Bit 7 b) The OutputEnable shall mirror the OutputEnable set by the PDOOut ArgBlock				

5983

5984 **E.13 PDInIQ**

5985 This ArgBlock provides means to retrieve input Process Data (I/Q signal) from the InBuffer
 5986 within the Master. It is used by the service SMI_PDInIQ (see 11.2.20). Table E.13 shows the
 5987 coding of the "PDInIQ" ArgBlockType.

5988 Mapping principles of input Process Data (PD) are specified in 11.7.2. The following rules
 5989 apply for the ArgBlock PDInIQ:

- 5990 • The first 2 octets are occupied by the ArgBlockID (0x1FFE);
- 5991 • Subsequent octet is occupied by the input Process Data of the signal line;
- 5992 • Padding (unused) bits shall be filled with "0".

5993 **Table E.13 – PDInIQ**

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x1FFE
2	PDI0	Input Process Data I/Q signal (octet 0)	Unsigned8	0 to 0x01

5994

5995 **E.14 PDOOutIQ**

5996 This ArgBlock provides means to transfer output Process Data (I/Q signal) to the OutBuffer
 5997 within the Master. It is used by the services SMI_PDOOutIQ (see 11.2.21) and
 5998 SMI_PDRreadbackOutIQ (see 11.2.22). Table E.14 shows the coding of the "PDOOutIQ"
 5999 ArgBlockType.

6000 Mapping principles of output Process Data (PD) are specified in 11.7.3. The following rules
 6001 apply for the ArgBlock PDOOutIQ:

- 6002 • The first 2 octets are occupied by the ArgBlockID (0x1FFF)
- 6003 • Subsequent octet is occupied by the output Process Data that is propagated to the signal
 6004 line.

- 6005 • Padding (unused) bits shall be filled with "0"
- 6006

Table E.14 – PDOoutIQ

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x1FFF
2	PDO0	Output Process Data I/Q signal (octet 0)	Unsigned8	0 to 0x01

6008

E.15 DeviceEvent

6010 This ArgBlock is used by the services SMI_DeviceEvent (see 11.2.15). Table E.15 shows the
6011 coding of the ArgBlockType "DeviceEvent".

Table E.15 – DeviceEvent

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0xA000
2	EventQualifier	EventQualifier according Annex A.6.4.	Unsigned8	0 to 0xFF
3,4	EventCode	EventCode according to Table D.1	Unsigned16	0 to 0xFFFF

6013

E.16 PortEvent

6015 This ArgBlock is used by the services SMI_PortEvent (see 11.2.16). Table E.16 shows the
6016 coding of the ArgBlockType "PortEvent".

Table E.16 – PortEvent

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0xA001
2	EventQualifier	EventQualifier according Annex A.6.4.	Unsigned8	0 to 0xFF
3,4	EventCode	EventCode according to Table D.2	Unsigned16	0 to 0xFFFF

6018

E.17 VoidBlock

6020 This ArgBlock is used in SMI services to indicate read requests within the argument. Table
6021 shows the coding of the ArgBlockType "VoidBlock".

Table E.17 – VoidBlock

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0xFFFF0

6023

E.18 JobError

6025 This ArgBlock is used in SMI services to indicate negative acknowledgments "Result (-)"
6026 together with an ErrorType according to Table C.3. Table E.18 shows the coding of the
6027 ArgBlockType "JobError".

6028

Table E.18 – JobError

Octet Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0xFFFF
2	ExpArgBlockID	Expected ArgBlockID of the service result	Unsigned16	0x0001 to 0xFFFF
4	ErrorCode	SMI service related ErrorType or propagated Device/Master error (upper value)	Unsigned8	Table C.3
5	AdditionalCode	SMI service related ErrorType or propagated Device/Master error (lower value)	Unsigned8	

6029

Annex F (normative)

Data types

F.1 General

This annex specifies basic and composite data types. Examples demonstrate the structures and the transmission aspects of data types for singular use or in a packed manner.

NOTE More examples are available in [6].

F.2 Basic data types

F.2.1 General

The coding of basic data types is shown only for singular use, which is characterized by

- Process Data consisting of one basic data type
- Parameter consisting of one basic data type
- Subindex (>0) access on individual data items of parameters of composite data types (arrays, records)

F.2.2 BooleanT

A BooleanT is representing a data type that can have only two different values i.e. TRUE and FALSE. The data type is specified in Table F.1. For singular use the coding is shown in Table F.2. A sender shall always use 0xFF for 'TRUE' or 0x00 for 'FALSE'. Since some upperlevel software tools are not used to this restricted use of Booleans, a receiver can interpret the range from 0x01 through 0xFE for 'TRUE' or reject with an error message. The packed form is demonstrated in Table F.22 and Figure F.9.

Table F.1 – BooleanT

Data type name	Value range	Resolution	Length
BooleanT	TRUE / FALSE	-	1 bit or 1 octet

Table F.2 – BooleanT coding

Bit	7	6	5	4	3	2	1	0	Values
TRUE	1	1	1	1	1	1	1	1	0xFF
FALSE	0	0	0	0	0	0	0	0	0x00

F.2.3 UIntegerT

A UIntegerT is representing an unsigned number depicted by 2 up to 64 bits ("enumerated"). The number is accommodated and right-aligned within the following permitted octet containers: 1, 2, 4, or 8. High order padding bits are filled with "0". Coding examples are shown in Figure F.1 and Figure F.2.


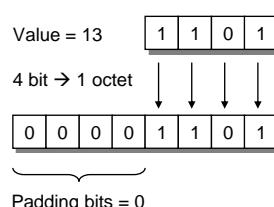


Figure F.1 – Coding example of small UIntegerT

6063

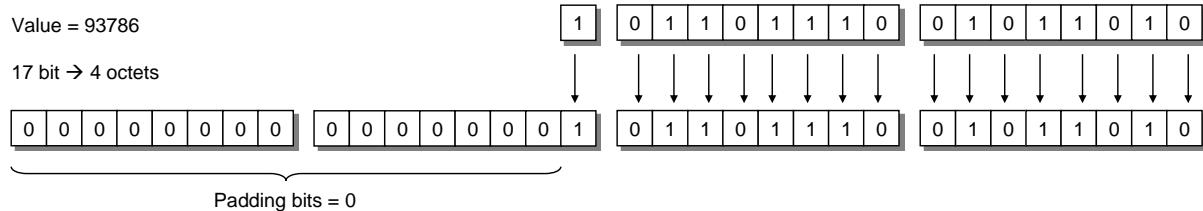

6064

Figure F.2 – Coding example of large UIntegerT

6065 The data type UIntegerT is specified in Table F.3 for singular use.

6066

Table F.3 – UIntegerT

Data type name	Value range	Resolution	Length
UIntegerT	0 ... $2^{\text{bitlength}} - 1$	1	1 octet, or 2 octets, or 4 octets, or 8 octets

NOTE 1 High order padding bits are filled with "0".
NOTE 2 Most significant octet (MSO) sent first.

6067

F.2.4 IntegerT

6068

An IntegerT is representing a signed number depicted by 2 up to 64 bits. The number is accommodated within the following permitted octet containers: 1, 2, 4, or 8 and right-aligned and extended correctly signed to the chosen number of bits. The data type is specified in Table F.4 for singular use. SN represents the sign with "0" for all positive numbers and zero, and "1" for all negative numbers. Padding bits are filled with the content of the sign bit (SN).

6069

Table F.4 – IntegerT

Data type name	Value range	Resolution	Length
IntegerT	$-2^{\text{bitlength}-1} \dots 2^{\text{bitlength}-1} - 1$	1	1 octet, or 2 octets, or 4 octets, or 8 octets

NOTE 1 High order padding bits are filled with the value of the sign bit (SN).
NOTE 2 Most significant octet (MSO) sent first (lowest respective octet number in Table F.5).

6070

6071

The 4 coding possibilities in containers are listed in Table F.5 through Table F.8.

6072

Table F.5 – IntegerT coding (8 octets)

Bit	7	6	5	4	3	2	1	0	Container
Octet 1	SN	2^{62}	2^{61}	2^{60}	2^{59}	2^{58}	2^{57}	2^{56}	8 octets
Octet 2	2^{55}	2^{54}	2^{53}	2^{52}	2^{51}	2^{50}	2^{49}	2^{48}	
Octet 3	2^{47}	2^{46}	2^{45}	2^{44}	2^{43}	2^{42}	2^{41}	2^{40}	
Octet 4	2^{39}	2^{38}	2^{37}	2^{36}	2^{35}	2^{34}	2^{33}	2^{32}	
Octet 5	2^{31}	2^{30}	2^{29}	2^{28}	2^{27}	2^{26}	2^{25}	2^{24}	
Octet 6	2^{23}	2^{22}	2^{21}	2^{20}	2^{19}	2^{18}	2^{17}	2^{16}	
Octet 7	2^{15}	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^9	2^8	

Bit	7	6	5	4	3	2	1	0	Container
Octet 8	2^7	2^6	2^5	2^4	2^3	2^2	2^1	2^0	

6079

6080

Table F.6 – IntegerT coding (4 octets)

Bit	7	6	5	4	3	2	1	0	Container
Octet 1	SN	2^{30}	2^{29}	2^{28}	2^{27}	2^{26}	2^{25}	2^{24}	4 octets
Octet 2	2^{23}	2^{22}	2^{21}	2^{20}	2^{19}	2^{18}	2^{17}	2^{16}	
Octet 3	2^{15}	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^9	2^8	
Octet 4	2^7	2^6	2^5	2^4	2^3	2^2	2^1	2^0	

6081

6082

Table F.7 – IntegerT coding (2 octets)

Bit	7	6	5	4	3	2	1	0	Container
Octet 1	SN	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^9	2^8	2 octets
Octet 2	2^7	2^6	2^5	2^4	2^3	2^2	2^1	2^0	

6083


6084

Table F.8 – IntegerT coding (1 octet)

Bit	7	6	5	4	3	2	1	0	Container
Octet 1	SN	2^6	2^5	2^4	2^3	2^2	2^1	2^0	1 octet

6085

6086 Coding examples within containers are shown in Figure F.3

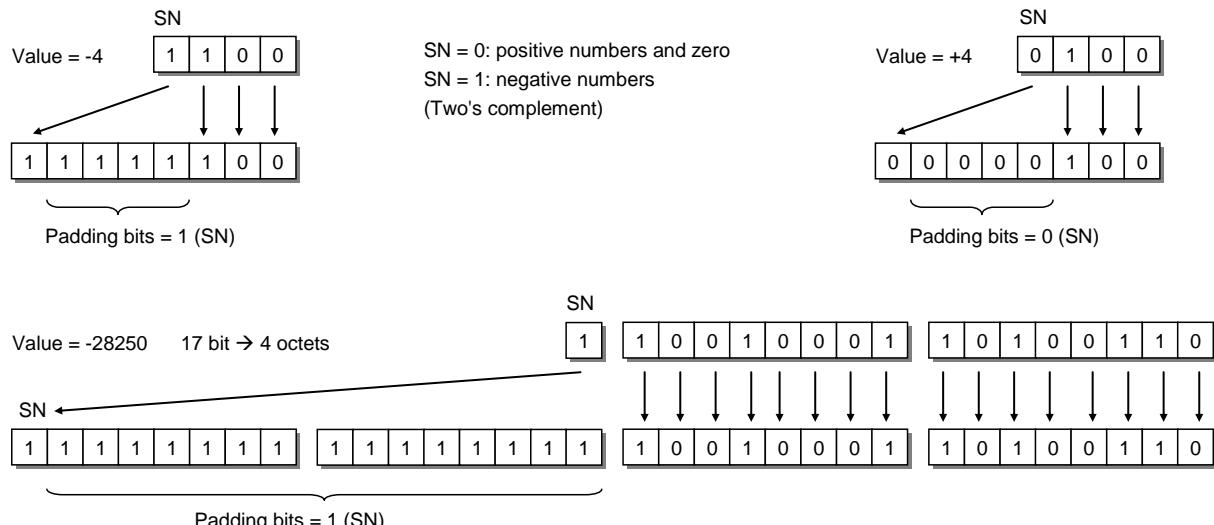

6087

Figure F.3 – Coding examples of IntegerT**F.2.5 Float32T**

A Float32T is representing a number specified by IEEE Std 754-1985 as single precision (32 bit). Table F.9 gives the definition and Table F.10 the coding. SN represents the sign with "0" for all positive numbers and zero, and "1" for all negative numbers.

6093

Table F.9 – Float32T

Data type name	Value range	Resolution	Length
Float32T	See IEEE Std 754-1985	See IEEE Std 754-1985	4 octets

6094

6095

Table F.10 – Coding of Float32T

Bits	7	6	5	4	3	2	1	0
Octet 1	SN	Exponent (E)						
	2^0	2^{-1}	2^{-2}	2^{-3}	2^{-4}	2^{-5}	2^{-6}	2^{-7}
Octet 2	(E)	Fraction (F)						
	2^0	2^{-1}	2^{-2}	2^{-3}	2^{-4}	2^{-5}	2^{-6}	2^{-7}
Octet 3	Fraction (F)							
	2^{-8}	2^{-9}	2^{-10}	2^{-11}	2^{-12}	2^{-13}	2^{-14}	2^{-15}
Octet 4	Fraction (F)							
	2^{-16}	2^{-17}	2^{-18}	2^{-19}	2^{-20}	2^{-21}	2^{-22}	2^{-23}

6096

6097 In order to realize negative exponent values a special exponent encoding mechanism is set in
 6098 place as follows:

6099 The Float32T exponent (E) is encoded using an offset binary representation, with the zero
 6100 offset being 127; also known as exponent bias in IEEE Std 754-1985.

6101 $E_{\min} = 0x01 - 0x7F = -126$

6102 $E_{\max} = 0xFE - 0x7F = 127$

6103 Exponent bias = $0x7F = 127$

6104 Thus, as defined by the offset binary representation, in order to get the true exponent the
 6105 offset of 127 shall be subtracted from the stored exponent.

6106 **F.2.6 StringT**

6107 A StringT is representing an ordered sequence of symbols (characters) with a variable or
 6108 fixed length of octets (maximum of 232 octets) coded in US-ASCII (7 bit) or UTF-8. UTF-8
 6109 uses one octet for all ASCII characters and up to 4 octets for other characters. 0x00 is not
 6110 permitted as a character. Table F.11 gives the definition.

6111

Table F.11 – StringT

Data type name	Encoding	Standards	Length a
StringT	US-ASCII	see ISO/IEC 646	Any length of character string with a maximum of 232 octets
	UTF-8 b	see ISO/IEC 10646	

NOTE a Length can be obtained from a Device's IODD via the attribute 'fixedLength'.
 NOTE b In order to ensure proper handling of client applications it is recommended not to use US-ASCII or UTF-8 codes from 0x00 to 0x1F and 0xFF.

6112

6113 An instance of StringT can be shorter than defined by the IODD attribute 'fixedLength'. 0x00
 6114 shall be used for the padding of unused octets.

6115 A condensed form can be used for optimization, where the character string is transmitted in
 6116 its actual length and the padding octets are omitted. The receiver can deduce the original

length from the length of the ISDU or by searching the first NULL (0x00) character (see A.5.2 and A.5.3). This condensed form can be used in case of singular access (see Figure F.4).

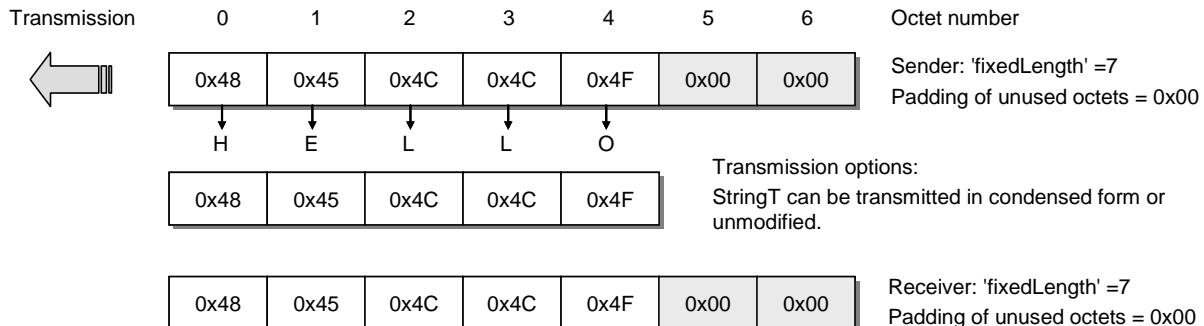


Figure F.4 – Singular access of StringT

F.2.7 OctetStringT

An OctetStringT is representing an ordered sequence of octets with a fixed length (maximum of 232 octets). Table F.12 gives the definition and Figure F.5 a coding example for a fixed length of 7.

Table F.12 – OctetStringT

Data type name	Value range	Standards	Length
OctetStringT	0x00 ... 0xFF per octet	-	Fixed length with a maximum of 232 octets

NOTE The length may be obtained from a Device's IODD via the attribute 'fixedLength'.

 
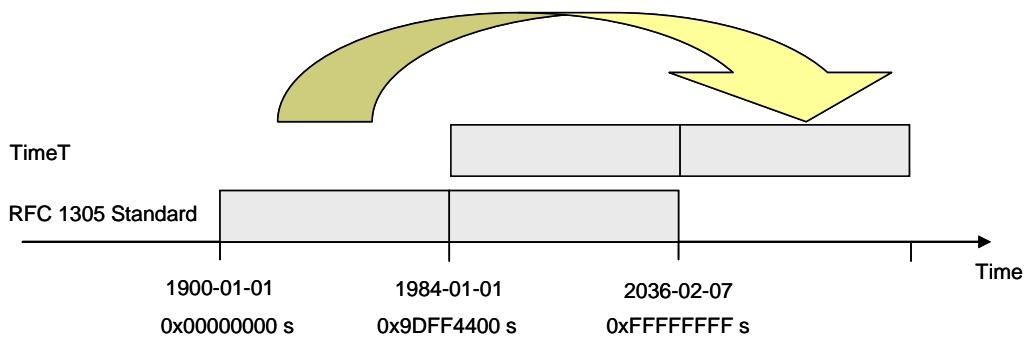


Figure F.5 – Coding example of OctetStringT

F.2.8 TimeT

A TimeT is based on the RFC 1305 standard and composed of two unsigned values that express the network time related to a particular date. Its semantic has changed from RFC 1305 according to Figure F.6. Table F.13 gives the definition and Table F.14 the coding of TimeT.

The first element is a 32-bit unsigned integer data type that provides the network time in seconds since 1900-01-01 0.00,00(UTC) or since 2036-02-07 6.28,16(UTC) for time values less than 0x9DFF4400, which represents the 1984-01-01 0:00,00(UTC). The second element is a 32-bit unsigned integer data type that provides the fractional portion of seconds in 1/2³² s. Rollovers after 136 years are not automatically detectable and shall be maintained by the application.

**Figure F.6 – Definition of TimeT****Table F.13 – TimeT**

Data type name	Value range	Resolution	Length
TimeT	Octet 1 to 4 (see Table F.14): $0 \leq i \leq (2^{32}-1)$	s (Seconds)	8 Octets (32-bit unsigned integer + 32 bit unsigned integer)
	Octet 5 to 8 (see Table F.14): $0 \leq i \leq (2^{32}-1)$	$(1/2^{32})$ s	
NOTE 32-bit unsigned integer are normal computer science data types			

Table F.14 – Coding of TimeT

Bit	7	6	5	4	3	2	1	0	Definitions
Octet 1	2^{31}	2^{30}	2^{29}	2^{28}	2^{27}	2^{26}	2^{25}	2^{24}	Seconds since 1900-01-01 0.00,00 or since 2036-02-07 6.28,16 when time value less than 0x9DFF4400.00000000
Octet 2	2^{23}	2^{22}	2^{21}	2^{20}	2^{19}	2^{18}	2^{17}	2^{16}	
Octet 3	2^{15}	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^9	2^8	
Octet 4	2^7	2^6	2^5	2^4	2^3	2^2	2^1	2^0	
Octet 5	2^{31}	2^{30}	2^{29}	2^{28}	2^{27}	2^{26}	2^{25}	2^{24}	
Octet 6	2^{23}	2^{22}	2^{21}	2^{20}	2^{19}	2^{18}	2^{17}	2^{16}	
Octet 7	2^{15}	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^9	2^8	
Octet 8	2^7	2^6	2^5	2^4	2^3	2^2	2^1	2^0	
	MSB							LSB	MSB = Most significant bit LSB = Least significant bit

F.2.9 TimeSpanT

A TimeSpanT is a 64-bit integer value i.e. a two's complement binary number with a length of eight octets, providing the network time difference in fractional portion of seconds in $1/2^{32}$ seconds. Table F.15 gives the definition and Table F.16 the coding of TimeSpanT.

Table F.15 – TimeSpanT

Data type name	Value range	Resolution	Length
TimeSpanT	Octet 1 to 8 (see Table F.16): $-2^{63} \leq i \leq (2^{63}-1)$	$(1/2^{32})$ s	8 octets (64-bit integer)
NOTE 64-bit integer is a normal computer science data type			

6151

6152

Table F.16 – Coding of TimeSpanT

Bit	7	6	5	4	3	2	1	0	Definitions
Octet 1	2^{63}	2^{62}	2^{61}	2^{60}	2^{59}	2^{58}	2^{57}	2^{56}	Fractional part of seconds as 64-bit integer. One unit is $1/(2^{32})$ s.
Octet 2	2^{55}	2^{54}	2^{53}	2^{52}	2^{51}	2^{50}	2^{49}	2^{48}	
Octet 3	2^{47}	2^{46}	2^{45}	2^{44}	2^{43}	2^{42}	2^{41}	2^{40}	
Octet 4	2^{39}	2^{38}	2^{37}	2^{36}	2^{35}	2^{34}	2^{33}	2^{32}	
Octet 5	2^{31}	2^{30}	2^{29}	2^{28}	2^{27}	2^{26}	2^{25}	2^{24}	
Octet 6	2^{23}	2^{22}	2^{21}	2^{20}	2^{19}	2^{18}	2^{17}	2^{16}	
Octet 7	2^{15}	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^9	2^8	
Octet 8	2^7	2^6	2^5	2^4	2^3	2^2	2^1	2^0	
	MSB								MSB = Most significant bit LSB = Least significant bit

6153

F.3 Composite data types

F.3.1 General

Composite data types are combinations of basic data types only. A composite data type consists of several basic data types packed within a sequence of octets. Unused bit space shall be padded with "0".

F.3.2 ArrayT

An ArrayT addressed by an Index is a data structure with data items of the same data type. The individual data items are addressable by the Subindex. Subindex 0 addresses the whole array within the Index space. The structuring rules for arrays are given in Table F.17.

Table F.17 – Structuring rules for ArrayT

Rule number	Rule specification
1	The Subindex data items are packed in a row without gaps describing an octet sequence
2	The highest Subindex data item n starts right aligned within the octet sequence
3	UIntegerT and IntegerT with a length of ≥ 58 bit and < 64 bit are not permitted


6164

Table F.18 and Figure F.7 give an example for the access of an array. Its content is a set of parameters of the same basic data type.

Table F.18 – Example for the access of an ArrayT

Index	Subindex	Offset	Data items	Data Type
66	1	12	0x2	IntegerT, 'bitLength' = 3
	2	9	0x6	
	3	6	0x4	
	4	3	0x7	
	5	0	0x5	

6168

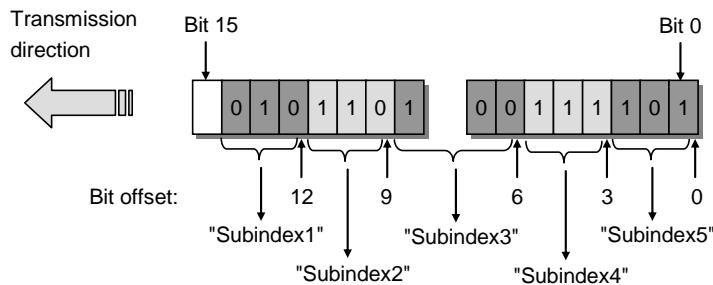

6169

Figure F.7 – Example of an ArrayT data structure**F.3.3 RecordT**

A record addressed by an Index is a data structure with data items of different data types. The Subindex allows addressing individual data items within the record on certain bit positions.

NOTE Bit positions within a RecordT may be obtained from the IODD of the particular Device.

The structuring rules for records are given in Table F.19.

Table F.19 – Structuring rules for RecordT

Rule number	Rule specification
1	The Subindices within the IODD shall be listed in ascending order from 1 to n describing an octet sequence. Gaps within the list of Subindices are allowed
2	Bit offsets shall always be indicated within this octet sequence (may show no strict order in the IODD)
3	The bit offset starts with the last octet within the sequence; this octet starts with offset 0 for the least significant bit and offset 7 for the most significant bit
4	The following data types shall always be aligned on octet boundaries: Float32T, StringT, OctetStringT, TimeT, and TimeSpanT
5	UIntegerT and IntegerT with a length of ≥ 58 bit shall always be aligned on one side of an octet boundary
6	It is highly recommended for UIntegerT and IntegerT with a length of ≥ 8 bit to align always on one side of an octet boundary
7	It is highly recommended for UIntegerT and IntegerT with a length of < 8 bit not to cross octet boundaries
8	A bit position shall not be used by more than one record item

6177

Table F.20 gives an example 1 for the access of a RecordT. It consists of varied parameters named "Status", "Text", and "Value".

Table F.20 – Example 1 for the access of a RecordT

Index	Subindex	Offset	Data items							Data Type	Name
47	1	88	0x23	0x45						UIntegerT, 'bitLength' = 16	Status
	2	32	H	E	L	L	O	0x00	0x00	StringT, 'fixedLength' = 7	Text
	3	0	0x56	0x12	0x22	0x34				UIntegerT, 'bitLength' = 32	Value

NOTE 'bitLength' and 'fixedLength' are defined in the IODD of the particular Device.

6181


Table F.21 gives an example 2 for the access of a RecordT. It consists of varied parameters named "Level", "Min", and "Max". Figure F.8 shows the corresponding data structure.

6184

Table F.21 – Example 2 for the access of a RecordT

Index	Subindex	Offset	Data items			Data Type	Name
46	1	2	0x32	0xF1		UIntegerT, 'bitLength' = 14	Level
	2	1	FALSE				BooleanT
	3	0	TRUE				BooleanT

NOTE 'bitLength' is defined in the IODD of the particular Device.

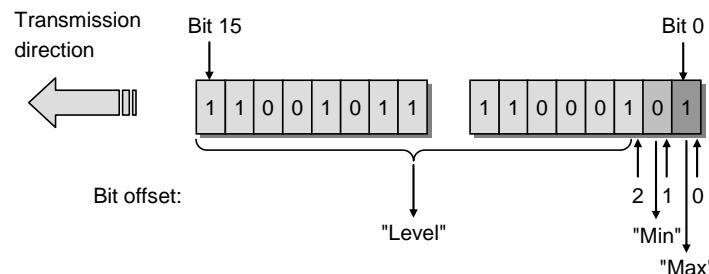

6185

6186

Figure F.8 – Example 2 of a RecordT structure

6187 Table F.22 gives an example 3 for the access of a RecordT. It consists of varied parameters
 6188 named "Control" through "Enable". Figure F.9 demonstrates the corresponding RecordT
 6189 structure of example 3 with the bit offsets.


6190

Table F.22 – Example 3 for the access of a RecordT

Index	Subindex	Offset	Data items		Data Type	Name
45	1	32	TRUE		BooleanT	NewBit
	2	33	FALSE		BooleanT	DR4
	3	34	FALSE		BooleanT	CR3
	4	35	TRUE		BooleanT	CR2
	5	38	TRUE		BooleanT	Control
	6	16	0xF8	0x23	OctetStringT, 'fixedLength' = 2	Setpoint
	7	8	0x41		StringT, 'fixedLength' = 1	Unit
	8	0	0xC3		OctetStringT, 'fixedLength' = 1	Enable

NOTE 'fixedLength' is defined in the IODD of the particular Device

6191

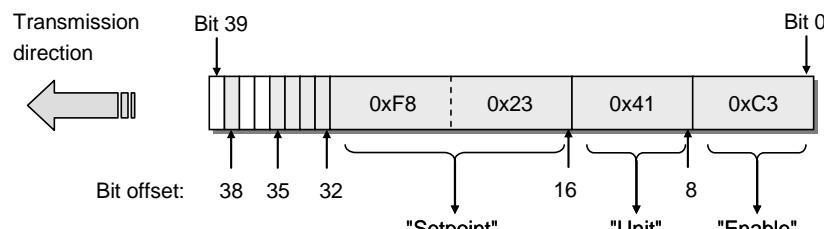

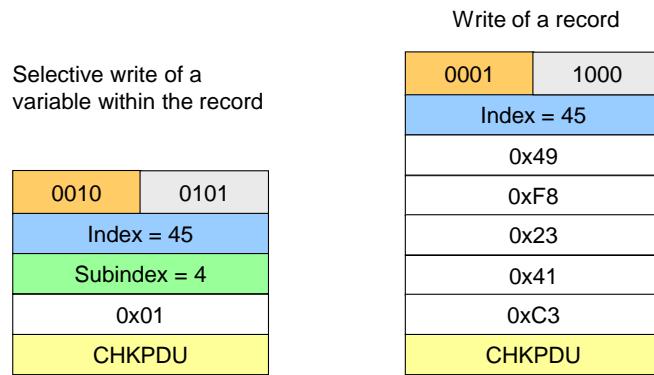
6192

Figure F.9 – Example 3 of a RecordT structure

6194 Figure F.10 shows a selective write request of a variable within the RecordT of example 3 and
 6195 a write request of the complete RecordT (see A.5.7).

6196

6197

**Figure F.10 – Write requests for example 3**

6198
6199
6200
6201

Annex G (normative)

Structure of the Data Storage data object

6202 Table G.1 gives the structure of a Data Storage (DS) data object within the Master (see
6203 11.4.2).

6204 **Table G.1 – Structure of the stored DS data object**

Part	Parameter name	Definition	Data type
Object 1	ISDU_Index	ISDU Index (0 to 0xFFFF)	Unsigned16
	ISDU_Subindex	ISDU Index (0 to 0xFF)	Unsigned8
	ISDU_Length	Length of the subsequent record	Unsigned8
	ISDU_Data	Record of length ISDU_Length	Record
Object 2	ISDU_Index	ISDU Index (0 to 0xFFFF)	Unsigned16
	ISDU_Subindex	ISDU Index (0 to 0xFF)	Unsigned8
	ISDU_Length	Length of the subsequent record	Unsigned8
	ISDU_Data	Record of length ISDU_Length	Record

Object <i>n</i>	ISDU_Index	ISDU Index (0 to 0xFFFF)	Unsigned16
	ISDU_Subindex	ISDU Index (0 to 0xFF)	Unsigned8
	ISDU_Length	Length of the subsequent record	Unsigned8
	ISDU_Data	Record of length ISDU_Length	Record

6205
6206 The Device shall calculate the required memory size by summarizing the objects 1 to *n* (see
6207 Table B.10, Subindex 3).

6208 The Master shall store locally in non-volatile memory the header information specified in
6209 Table G.2. See Table B.10.

6210 **Table G.2 – Associated header information for stored DS data objects**

Part	Parameter name	Definition	Data type
Header	Parameter Checksum	32-bit CRC signature or revision counter (see 10.4.8)	Unsigned32
	VendorID	See B.1.8	Unsigned16
	DeviceID	See B.1.9	Unsigned32
	FunctionID	See B.1.10	Unsigned16

6211 In case of empty Data Storage data object, the header shall be set to "0" and the
6212 ArgBlockLength shall be set to 12.

Annex H (normative)

Master and Device conformity

H.1 Electromagnetic compatibility requirements (EMC)

H.1.1 General

The EMC requirements of this specification are only relevant for the SDCI interface part of a particular Master or Device. The technology functions of a Device and its relevant EMC requirements are not in the scope of this specification. For this purpose, the Device specific product standards shall apply. For Master usually the EMC requirements for peripherals are specified in IEC 61131-2 or IEC 61000-6-2.

To ensure proper operating conditions of the SDCI interface, the test configurations specified in section H.1.6 (Master) or H.1.7 (Device) shall be maintained during all the EMC tests. The tests required in the product standard of equipment under test (EUT) can alternatively be performed in SIO mode.

H.1.2 Operating conditions

It is highly recommended to evaluate the SDCI during the startup phase with the cycle times given in Table H.1. In most cases, this leads to the minimal time requirements for the performance of these tests. Alternatively, the SDCI may be evaluated during normal operation of the Device, provided that the required number of M-sequences specified in Table H.1 took place during each test.

In case a test requires longer M-sequences than an M-sequence group specified in Table H.1, the error criteria shall be applied to every M-sequence group.

In case of Class B devices it is recommended to perform the EMC test under maximum ripple and load switching on Power 2.

H.1.3 Performance criteria

a) Performance criterion A

The SDCI operating at an average cycle time as specified in Table H.1 shall not show more than six detected M-sequence errors within the number of M-sequences given in Table H.1. Multiple kinds of errors within one M-sequence shall be counted as one error. No interruption of communication is permitted.

Table H.1 – EMC test conditions for SDCI

Transmission rate	Master		Device		Maximum of M-sequence errors
	t_{CYC}	Number of M-sequences of TYPE_2_5 (read) (6 octets)	t_{CYC}	Number of M-sequences of TYPE_0 (read) (4 octets)	
4,8 kbit/s	18,0 ms	300 (6 000)	100 T_{BIT} (20,84 ms)	350 (7 000)	6
38,4 kbit/s	2,3 ms	450 (9 000)	100 T_{BIT} (2,61 ms)	500 (10 000)	6
230,4 kbit/s	0,4 ms	700 (14 000)	100 T_{BIT} (0,44 ms)	800 (16 000)	6
NOTE1 The numbers of M-sequences are calculated according to the algorithm in I.2 and rounded up. The larger number of M-sequences (in brackets) are required if a certain test (for example fast transients/burst) applies interferences only with a burst/cycle ratio (see Table H.2)					
NOTE2 "Number of M-sequences" is defined as a group for the performance criteria for which the maximum number of detected errors is valid.					

6245

6246 b) Performance Criterion B

6247 The error rate of criterion A shall also be satisfied after but not during the test. No change of
 6248 actual operating state (e.g. permanent loss of communication) or stored data is allowed.

6249 **H.1.4 Required immunity tests**

6250 Table H.2 specifies the EMC tests to be performed.

6251 **Table H.2 – EMC test levels**

Phenomena	Test Level	Performance Criterion	Constraints
Electrostatic discharges (ESD) IEC 61000-4-2	Air discharge: $\pm 8 \text{ kV}$ Contact discharge: $\pm 4 \text{ kV}$	B	See H.1.4, a)
Radiofrequency electromagnetic field. Amplitude modulated IEC 61000-4-3	80 MHz – 1 000 MHz 10 V/m 1 400 MHz – 2 000 MHz 3 V/m 2 000 MHz – 2 700 MHz 3 V/m	A	See H.1.4, a), H.1.4, b), H.1.4, e).
Fast transients (Burst) IEC 61000-4-4	$\pm 1 \text{ kV}$	A	5 kHz or 100 kHz. The number of M-sequences in Table H.1 shall be increased by a factor of 20 due to the burst/cycle ratio 15 ms/300 ms. See H.1.4, c)
	$\pm 2 \text{ kV}$	B	
Surge IEC 61000-4-5	Not required for an SDCI link (SDCI link is limited to 20 m)		-
Radio-frequency common mode IEC 61000-4-6	0,15 MHz – 80 MHz 10 VEMF	A	See H.1.4, b) and H.1.4, d)
Voltage dips and interruptions IEC 61000-4-11	Not required for an SDCI link		

6252

6253 The following requirements also apply as specified in Table H.2.

- 6254 a) As this phenomenon influences the entire device under test, an existing device specific product standard shall take precedence over the test levels specified here.
- 6255 b) The test shall be performed with a step size of 1 % and a dwell of 1 s. If a single M-sequence error occurs at a certain frequency, that frequency shall be tested until the number of M-sequences according to Table H.1 has been transmitted or until 6 M-sequence errors occurred.
- 6256 c) Depending on the transmission rate the test time varies. The test time shall be at least one minute (with the transmitted M-sequences and the permitted errors increased accordingly).
- 6257 d) This phenomenon is expected to influence most probably the EUTs internal analog signal processing and only with a very small probability the functionality of the SDCI communication. Therefore, an existing device specific product standard shall take precedence over the test levels specified here.
- 6258 e) Measurement shall be performed at least for three orthogonal orientations of the Device with respect to the direction of the electromagnetic wave propagation.

6269

6270 H.1.5 Required emission tests

6271 The definition of emission limits is not in the scope of this specification. The requirements of
 6272 the Device specific product family or generic standards apply, usually for general industrial
 6273 environments the IEC 61000-6-4.

6274 All emission tests shall be performed at the fastest possible communication rate with the
 6275 fastest cycle time.

6276 H.1.6 Test configurations for Master


6277 H.1.6.1 General rules

6278 The following rules apply for the test of Masters:

- 6279 • In the following test setup diagrams only the SDCI and the power supply cables are
 6280 shown. All other cables shall be treated as required by the relevant product standard.
- 6281 • Grounding of power supply, Master, and Devices shall be according to the relevant
 6282 product standard or manual.
- 6283 • Where not otherwise stated, the SDCI cable shall have an overall length of 20 m. Excess
 6284 length laid as an inductive coil with a diameter of 0,3 m, where applicable mounted 0,1 m
 6285 above reference ground.
- 6286 • Where applicable, the auxiliary Devices shall be placed 10 cm above RefGND.
- 6287 • A typical test configuration consists of the Master and two Devices, except for the RF
 6288 common mode test, where only one Device shall be used.
- 6289 • Each port shall fulfill the EMC requirements.

6290 H.1.6.2 Electrostatic discharges


6291 Figure H.1 shows the test setup for electrostatic discharge according to IEC 61000-4-2.

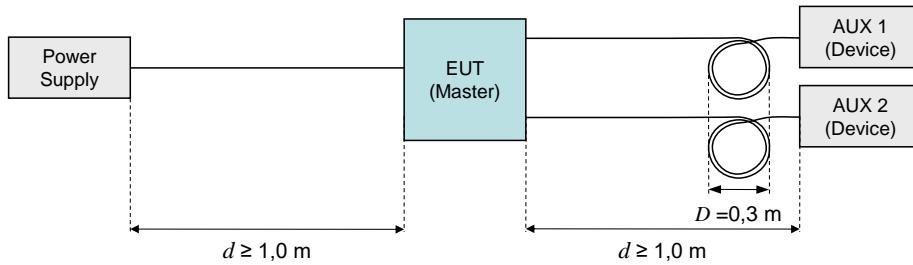

6292 **Figure H.1 – Test setup for electrostatic discharge (Master)**

6293 H.1.6.3 Radio-frequency electromagnetic field


6294 Figure H.2 shows the test setup for radio-frequency electromagnetic field according to
 6295 IEC 61000-4-3.

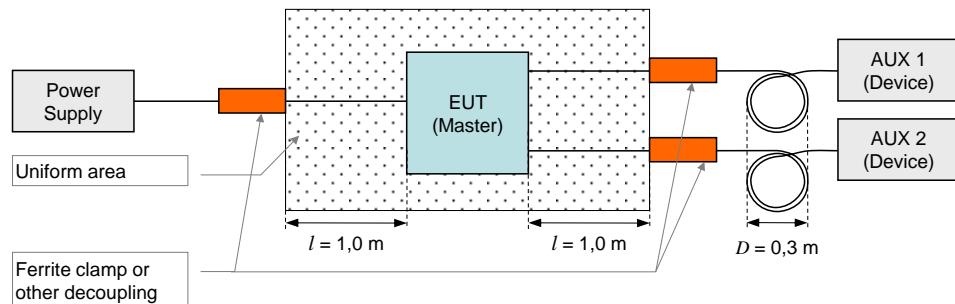

6297 **Figure H.2 – Test setup for RF electromagnetic field (Master)**

6299 **H.1.6.4 Fast transients (burst)**


6300 Figure H.3 shows the test setup for fast transients according to IEC 61000-4-4. No coupling
6301 into SDCI line to AUX 2 is required.

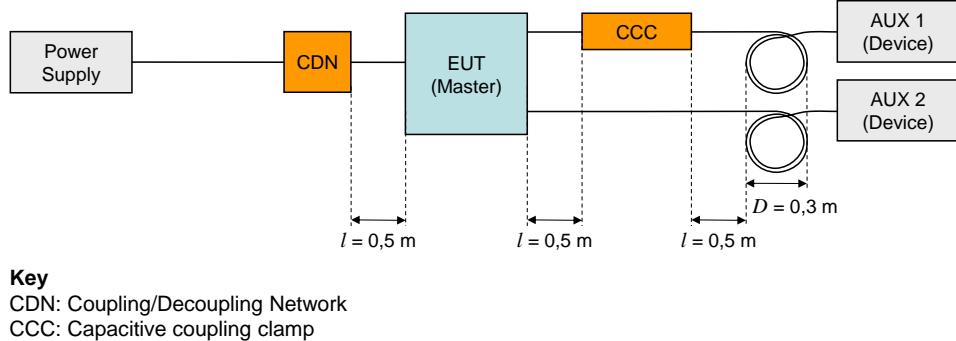

6302 **Figure H.3 – Test setup for fast transients (Master)**

6304 **H.1.6.5 Radio-frequency common mode**

6305 Figure H.4 shows the test setup for radio-frequency common mode according to
6306 IEC 61000-4-6.

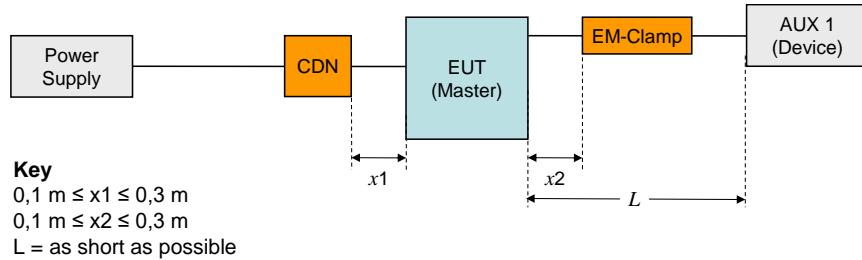

6307 **Figure H.4 – Test setup for RF common mode (Master)**

6309 **H.1.7 Test configurations for Devices**


6310 **H.1.7.1 General rules**

6311 For the test of Devices, the following rules apply:


- 6312 • In the following test setup diagrams only the SDCI and the power supply cables are
6313 shown. All other cables shall be treated as required by the relevant product standard.
- 6314 • Grounding of the Master and the Devices according to the relevant product standard or
6315 user manual.
- 6316 • Where not otherwise stated, the SDCI cable shall have an overall length of 20 m. Excess
6317 length laid as an inductive coil with a diameter of 0,3 m, where applicable mounted 0,1 m
6318 above RefGND.
- 6319 • Where applicable, the auxiliary Devices shall be placed 10 cm above RefGND.
- 6320 • Test with Device AUX 2 is optional

6321 **H.1.7.2 Electrostatic discharges**

6322 Figure H.5 shows the test setup for electrostatic discharge according to IEC 61000-4-2.

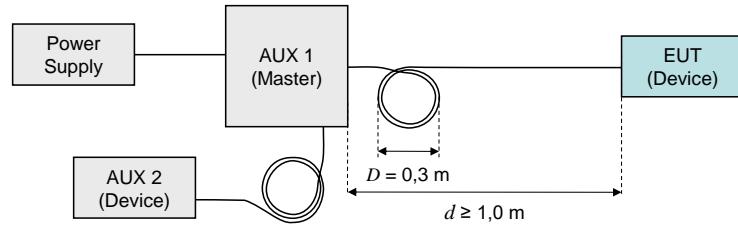


6323

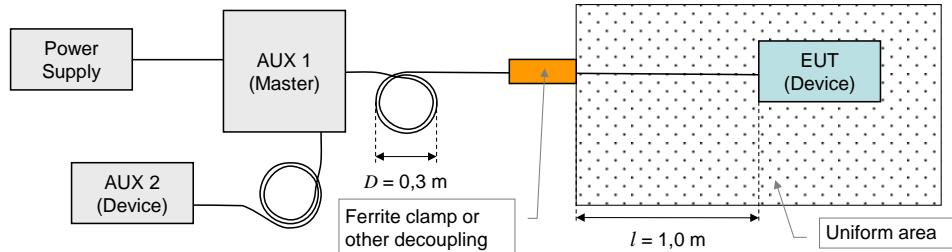6324 **Figure H.5 – Test setup for electrostatic discharges (Device)**6325 **H.1.7.3 Radio-frequency electromagnetic field**6326 Figure H.6 shows the test setup for radio-frequency electromagnetic field according to
6327 IEC 61000-4-3.

6328

6329 **Figure H.6 – Test setup for RF electromagnetic field (Device)**6330 **H.1.7.4 Fast transients (burst)**


6331 Figure H.7 shows the test setup for fast transients according to IEC 61000-4-4.

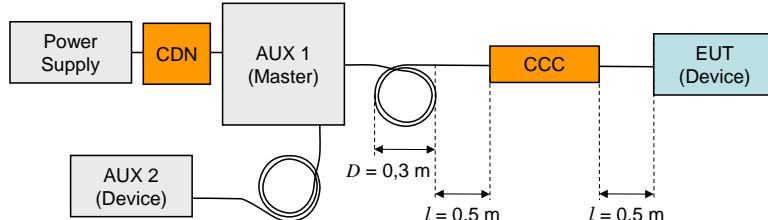**Key**

CDN: Coupling/Decoupling Network, here only used for decoupling

CCC: Capacitive coupling clamp

6332

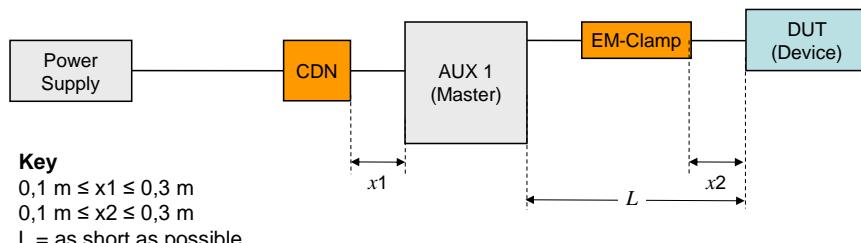6333 **Figure H.7 – Test setup for fast transients (Device)**6334 **H.1.7.5 Radio-frequency common mode**6335 Figure H.8 shows the test setup for radio-frequency common mode according to
6336 IEC 61000-4-6.

6337

6338 **Figure H.8 – Test setup for RF common mode (Device)**

H.2 Test strategies for conformity**H.2.1 Test of a Device**

The Master AUX 1 (see Figure H.5 to Figure H.8) shall continuously send an M-sequence TYPE_0 (read Direct Parameter page 2) message at the cycle time specified in Table H.1 and count the missing and the erroneous Device responses. Both numbers shall be added and indicated.

NOTE Detailed instructions for the Device tests are specified in [9].

H.2.2 Test of a Master

The Device AUX 1 (see Figure H.1 to Figure H.4) shall use M-sequence TYPE_2_5. Its input Process Data shall be generated by an 8 bit random or pseudo random generator. The Master shall copy the input Process Data of any received Device message to the output Process Data of the next Master message to be sent. The cycle time should be according to Table H.1. If not possible, the number of M-sequences for the test shall be calculated according to the algorithm in I.2 and rounded up. Used cycle time and number of M-sequences shall be documented in test records. The Device AUX 1 shall compare the output Process Data with the previously sent input Process Data and count the number of deviations. The Device shall also count the number of missing (not received within the expected cycle time) or received perturbed Master messages. All numbers shall be added and indicated.

NOTE 1 A deviation of sent and received Process Data indicates to the AUX1 that the EUT (Master) did not receive the Device message.

NOTE 2 Detailed instructions for the Master tests are specified in [9].

6360


6361
6362
6363
6364

Annex I (informative)

Residual error probabilities

6365 **I.1 Residual error probability of the SDCI data integrity mechanism**

6366 Figure I.1 shows the residual error probability (*REP*) of the SDCI data integrity mechanism
 6367 consisting of the checksum data integrity procedure ("XOR6") as specified in A.1.6 and the
 6368 UART parity. The diagram refers to IEC 60870-5-1 with its data integrity class I2 for a
 6369 minimum Hamming distance of 4 (red dotted line).

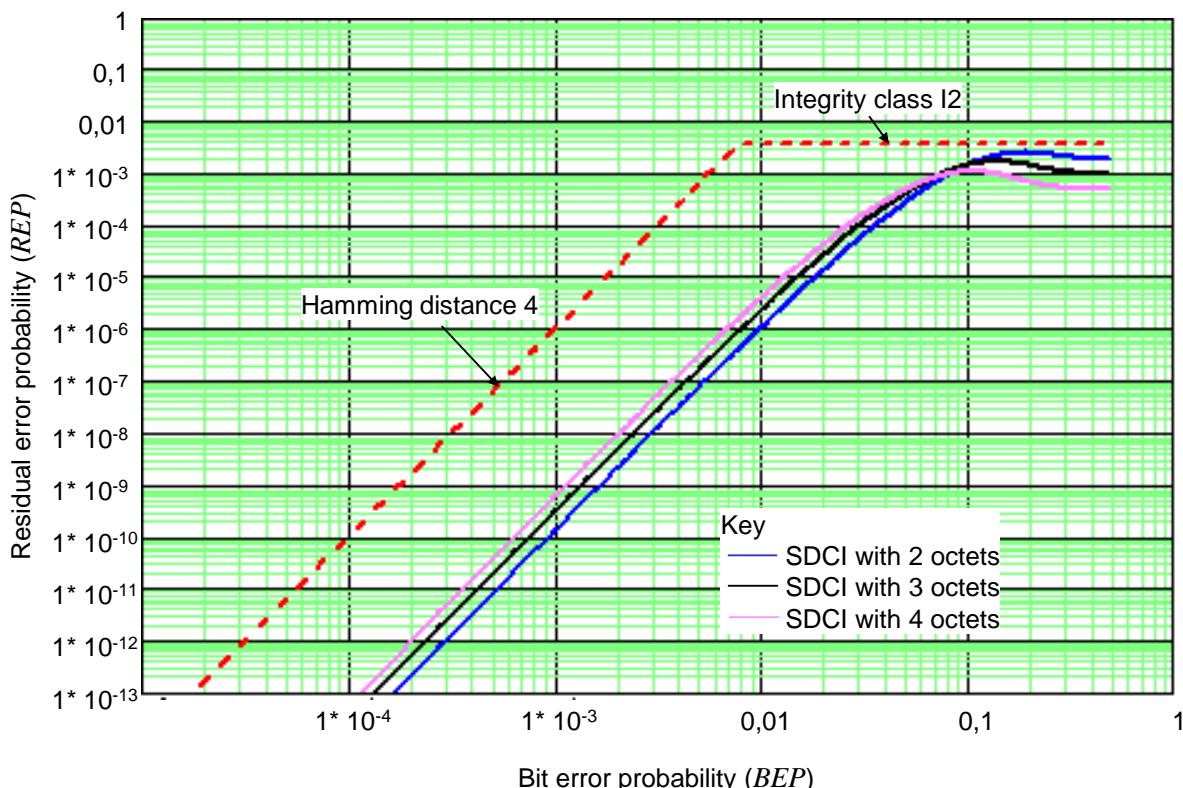

6370 **Figure I.1 – Residual error probability for the SDCI data integrity mechanism**

6371 The blue line shows the residual error curve for a data length of 2 octets. The black curve
 6372 shows the residual error curve for a data length of 3 octets. The purple curve shows the
 6373 residual error curve for a data length of 4 octets.
 6374

6375 **I.2 Derivation of EMC test conditions**

6376 The performance criterion A in H.1.3 is derived from requirements specified in IEC 61158-2 in
 6377 respect to interference susceptibility and error rates (citation; "frames" translates into
 6378 "messages" within this standard):

- 6379 • Only 1 undetected erroneous frame in 20 years at 1 600 frames/s
- 6380 • The ratio of undetected to detected frames shall not exceed 10^{-6}
- 6381 • EMC tests shall not show more than 6 erroneous frames within 100 000 frames

6382 With SDCI, the first requirement transforms into the Equation (I.1). This equation allows
 6383 determining a value of *BEP*. The equation can be resolved in a numerical way.

$$F20 \times R(BEP) \leq 1 \quad (I.1)$$

6384 The Terms in equation (I.1) are:

6385 $F20$ = Number of messages in 20 years

6386 $R(BEP)$ = Residual error probability of the checksum and parity mechanism (Figure I.1)

6387 BEP = Bit error probability from Figure I.1

6388 The objective of the EMC test is to prove that the BEP of the SDCI communication meets the
 6389 value determined in the first step. The maximum number of detected perturbed messages is
 6390 chosen to be 6 here for practical reasons. The number of required SDCI test messages can
 6391 be determined with the help of equation (I.2) and the value of BEP determined in the first
 6392 step.

$$NoTF \geq \frac{1}{BEP} \times \frac{1}{BitPerF} \times NopErr \quad (I.2)$$

6393 The Terms in equation (I.2) are:

6394 $NoTF$ = Number of test messages

6395 $BitPerF$ = Number of bits per message

6396 $NopErr$ = Maximum number of detected perturbed messages = 6

6397 Equation (I.2) is only valid under the assumption that messages with 1 bit error are more
 6398 frequent than messages with more bit errors. An M-sequence consists of two messages.
 6399 Therefore, the calculated number of test messages has to be divided by 2 to provide the
 6400 numbers of M-sequences for Table H.1.

Annex J (informative)

Example sequence of an ISDU transmission

Figure J.1 demonstrates an example for the transmission of ISDUs using an AL_Read service with a 16-bit Index and Subindex for 19 octets of user data with mapping to an M-sequence TYPE_2_5 for sensors and with interruption in case of an Event transmission.

6408

		Master				Device				
		FC	CKT	PD	OD	OD	PD	CKS		
comment (state, action) (see in Table 46)	cycle nr	R W	Com Chan. Flow	Frame Typ	Process Data	Master 8bit	Device 8bit	Process Data	CHK E PD	comment (state, action)
Idle_1	0	1111 0001	10 xxxxxx	xxxxxxxx		0000 0000	xxxxxxxx	0 0 xxxxxx		OnReq idle
ISDUREquest_2, transmission,	1	0111 0000	10 xxxxxx	xxxxxxxx	1011 0101					ISDUREquest_2, reception
ISDUREquest_2, transmission	2	0110 0001	10 xxxxxx	xxxxxxxx	Index(hi)					ISDUREquest_2, reception
ISDUREquest_2, transmission	3	0110 0010	10 xxxxxx	xxxxxxxx	Index(lo)					ISDUREquest_2, reception
ISDUREquest_2, transmission	4	0110 0011	10 xxxxxx	xxxxxxxx	Subindex					ISDUREquest_2, reception
ISDUREquest_2, transmission	5	0110 0100	10 xxxxxx	xxxxxxxx	CHKPDU					ISDUREquest_2, reception
ISDUWait_3, start ISDU Timer	6	1111 0000	10 xxxxxx	xxxxxxxx		0000 0001	xxxxxxxx	0 0 xxxxxx		ISDUWait_3, application busy
ISDUWait_3, inc. ISDU timer	7	1111 0000	10 xxxxxx	xxxxxxxx		0000 0001	xxxxxxxx	0 0 xxxxxx		ISDUWait_3, application busy
ISDUWait_3, inc. ISDU timer	8	1111 0000	10 xxxxxx	xxxxxxxx		0000 0001	xxxxxxxx	0 0 xxxxxx		ISDUWait_3, application busy
ISDUWait_3, inc. ISDU timer	9	1111 0000	10 xxxxxx	xxxxxxxx		0000 0001	xxxxxxxx	0 0 xxxxxx		ISDUWait_3, application busy
ISDUWait_3, inc. ISDU timer	10	1111 0000	10 xxxxxx	xxxxxxxx		0000 0001	xxxxxxxx	0 0 xxxxxx		ISDUWait_3, application busy
ISDUREsponse_4, reception Stop ISDU Timer	11	1111 0000	10 xxxxxx	xxxxxxxx	1101 0001					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	12	1110 0001	10 xxxxxx	xxxxxxxx	0001 0011					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	13	1110 0010	10 xxxxxx	xxxxxxxx	Data 1					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	14	1110 0011	10 xxxxxx	xxxxxxxx	Data 2					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	15	1110 0100	10 xxxxxx	xxxxxxxx	Data 3					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	16	1110 0101	10 xxxxxx	xxxxxxxx	Data 4					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	17	1110 0110	10 xxxxxx	xxxxxxxx	Data 5					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	18	1110 0111	10 xxxxxx	xxxxxxxx	Data 6					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	19	1110 1000	10 xxxxxx	xxxxxxxx	Data 7					ISDUREsponse_4, transmission
ISDUREsponse_4, no response, retry in next cycle	20	1110 1001	10 Err	xxxxxxxx						ISDUREsponse_4, korrupted CHK, don't send resp.
ISDUREsponse_4, no response, retry in next cycle	21	1110 1001	10 Err	xxxxxxxx						ISDUREsponse_4, corrupted CHK, don't send resp.
ISDUREsponse_4, reception	22	1110 1001	10 xxxxxx	xxxxxxxx	Data 8					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	34	1110 1010	10 xxxxxx	xxxxxxxx	Data 9					ISDUREsponse_4, transmission
ISDUREsponse_4, reception, start eventhandler	35	1110 1011	10 xxxxxx	xxxxxxxx	Data 10					ISDUREsponse_4, transmission, freeze event
Read_Event_2, reception	36	1100 0000	10 xxxxxx	xxxxxxxx	Diag State with detail					Read_Event_2, transmission
Read_Event_2, reception	37	110x xxxx	10 xxxxxx	xxxxxxxx	Event qualifier					Read_Event_2, transmission
Command handler_2, transmission set PDOOutdata state to invalid	38	0010 0000	10 xxxxxx	xxxxxxxx	1001 1001					CommandHandler_2, reception, set PDOOutdata state to invalid
Read_Event_2, reception	39	110x xxxx	10 xxxxxx	xxxxxxxx	ErrorCode msb					Read_Event_2, transmission
Read_Event_2, reception	40	110x xxxx	10 xxxxxx	xxxxxxxx	ErrorCode lsb					Read_Event_2, transmission
Read_Event_2, reception EventConfirmation_4, transmission, event handler idle	41	0100 0000	10 xxxxxx	xxxxxxxx						EventConfirmation, reception
ISDUREsponse_4, reception	42	1110 1100	10 xxxxxx	xxxxxxxx	Data 11					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	43	1110 1101	10 xxxxxx	xxxxxxxx	Data 12					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	44	1110 1110	10 xxxxxx	xxxxxxxx	Data 13					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	45	1110 1111	10 xxxxxx	xxxxxxxx	Data 14					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	46	1110 0000	10 xxxxxx	xxxxxxxx	Data 15					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	47	1110 0001	10 xxxxxx	xxxxxxxx	Data 16					ISDUREsponse_4, transmission
ISDUREsponse_4, reception	48	1110 0010	10 xxxxxx	xxxxxxxx	CHKPDU					ISDUREsponse_4, transmission
Idle_1	49	1111 0001	10 xxxxxx	xxxxxxxx		0000 0000	xxxxxxxx	0 0 xxxxxx		Idle_1
Idle_1	50	1111 0001	10 xxxxxx	xxxxxxxx		0000 0000	xxxxxxxx	0 0 xxxxxx		Idle_1
Idle_1	51	1111 0001	10 xxxxxx	xxxxxxxx		0000 0000	xxxxxxxx	0 0 xxxxxx		Idle_1
Idle_1	52	1111 0001	10 xxxxxx	xxxxxxxx		0000 0000	xxxxxxxx	0 0 xxxxxx		Idle_1
Write Parameter, transmission	53	0011 0000	10 xxxxxx	xxxxxxxx		xxxxxxxx	xxxxxxxx	0 0 xxxxxx		Write Parameter, reception
Read Parameter, reception	54	1011 0000	10 xxxxxx	xxxxxxxx		xxxxxxxx	xxxxxxxx	0 0 xxxxxx		Read Parameter, transmission
Idle_1	55	1111 0001	10 xxxxxx	xxxxxxxx		0000 0000	xxxxxxxx	0 0 xxxxxx		Idle_1
Idle_1	56	1111 0001	10 xxxxxx	xxxxxxxx		0000 0000	xxxxxxxx	0 0 xxxxxx		Idle_1
Idle_1	57	1111 0001	10 xxxxxx	xxxxxxxx		0000 0000	xxxxxxxx	0 0 xxxxxx		Idle_1

Figure J.1 – Example for ISDU transmissions (1 of 2)

6409

6410

ISDUREquest_2, transmission	58	0111 0000	10 xxxxxx	xxxxxxxx	0001 1011		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	59	0110 0001	10 xxxxxx	xxxxxxxx	Index		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	60	0110 0010	10 xxxxxx	xxxxxxxx	Data 1		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	61	0110 0011	10 xxxxxx	xxxxxxxx	Data 2		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	62	0110 0100	10 xxxxxx	xxxxxxxx	Data 3		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	63	0110 0101	10 xxxxxx	xxxxxxxx	Data 4		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	64	0110 0110	10 xxxxxx	xxxxxxxx	Data 5		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	65	0110 0111	10 xxxxxx	xxxxxxxx	Data 6		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	66	0110 1000	10 xxxxxx	xxxxxxxx	Data 7		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	67	0110 1001	10 xxxxxx	xxxxxxxx	Data 8		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	68	0110 1010	10 xxxxxx	xxxxxxxx	CHKPDU		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUWait_3, start ISDU Timer	69	1111 0000	10 xxxxxx	xxxxxxxx	0000 0001		xxxxxxxx	0 0 xxxxxx	ISDUWait_3, application busy
ISDUREsponse_4, reception Stop ISDU Timer	70	1111 0000	10 xxxxxx	xxxxxxxx	0101 0010		xxxxxxxx	0 0 xxxxxx	ISDUREsponse_4, transmission
ISDUREsponse_4, reception	71	1110 0001	10 xxxxxx	xxxxxxxx	CHKPDU		xxxxxxxx	0 0 xxxxxx	ISDUREsponse_4, transmission
Idle_1	72	1111 0001	10 xxxxxx	xxxxxxxx	0000 0000		xxxxxxxx	0 0 xxxxxx	Idle_1
Idle_1	73	1111 0001	10 xxxxxx	xxxxxxxx	0000 0000		xxxxxxxx	0 0 xxxxxx	Idle_1
ISDUREquest_2, transmission,	74	0111 0000	10 xxxxxx	xxxxxxxx	1011 0101		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	75	0110 0001	10 xxxxxx	xxxxxxxx	Index(hi)		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	76	0110 0010	10 xxxxxx	xxxxxxxx	Index(lo)		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	77	0110 0011	10 xxxxxx	xxxxxxxx	Subindex		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUREquest_2, transmission	78	0110 0100	10 xxxxxx	xxxxxxxx	CHKPDU		xxxxxxxx	0 0 xxxxxx	ISDUREquest_2, reception
ISDUWait_3, start ISDU Timer	79	1111 0000	10 xxxxxx	xxxxxxxx	0000 0001		xxxxxxxx	0 0 xxxxxx	ISDUWait_3, application busy
ISDUWait_3, inc. ISDU timer	80	1111 0000	10 xxxxxx	xxxxxxxx	0000 0001		xxxxxxxx	0 0 xxxxxx	ISDUWait_3, application busy
ISDUWait_3, inc. ISDU timer	81	1111 0000	10 xxxxxx	xxxxxxxx	0000 0001		xxxxxxxx	0 0 xxxxxx	ISDUWait_3, application busy
ISDUWait_3, inc. ISDU timer	82	1111 0000	10 xxxxxx	xxxxxxxx	0000 0001		xxxxxxxx	0 0 xxxxxx	ISDUWait_3, application busy
ISDUWait_3, inc. ISDU timer	83	1111 0000	10 xxxxxx	xxxxxxxx	0000 0001		xxxxxxxx	0 0 xxxxxx	ISDUWait_3, application busy
ISDUREsponse_4, reception Stop ISDU Timer	84	1111 0000	10 xxxxxx	xxxxxxxx	1101 0001		xxxxxxxx	0 0 xxxxxx	ISDUREsponse_4, transmission
ISDUREsponse_4, reception	85	1110 0001	10 xxxxxx	xxxxxxxx	0001 1110		xxxxxxxx	0 0 xxxxxx	ISDUREsponse_4, transmission
ISDUREsponse_4, reception	86	1110 0010	10 xxxxxx	xxxxxxxx	Data 1		xxxxxxxx	0 0 xxxxxx	ISDUREsponse_4, transmission
ISDUREsponse_4, ABORT	87	1111 1111	10 xxxxxx	xxxxxxxx	0000 0000		xxxxxxxx	0 0 xxxxxx	ISDUREsponse_4, ABORT
Idle_1	88	1111 0001	10 xxxxxx	xxxxxxxx	0000 0000		xxxxxxxx	0 0 xxxxxx	Idle_1
Idle_1	89	1111 0001	10 xxxxxx	xxxxxxxx	0000 0000		xxxxxxxx	0 0 xxxxxx	Idle_1

6411

Figure J.1 (2 of 2)

**Annex K
(informative)****Recommended methods for detecting parameter changes****K.1 CRC signature**

Cyclic Redundancy Checking belongs to the HASH function family. A CRC signature across all changeable parameters can be calculated by the Device with the help of a so-called proper generator polynomial. The calculation results in a different signature whenever the parameter set has been changed. It should be noted that the signature secures also the octet order within the parameter set. Any change in the order when calculating the signature will lead to a different value. The quality of securing (undetected changes) depends heavily on both the CRC generator polynomial and the length (number of octets) of the parameter set. The seed value should be > 0 . One calculation method uses directly the formula, another one uses octet shifting and lookup tables. The first one requests less program memory and is a bit slower, the other one requires memory for a lookup table (1×2^{10} octets for a 32-bit signature) and is fast. The parameter data set comparison is performed in state "Checksum_9" of the Data Storage (DS) state machine in Figure 104. Table K.1 lists several possible generator polynomials and their detection level.

Table K.1 – Proper CRC generator polynomials

Generator polynomial	Signature	Data length	Undetected changes
0x9B	8 bits	1 octet	$< 2^{-8}$ (not recommended)
0x4EAB	16 bits	$1 < \text{octets} < 3$	$< 2^{-16}$ (not recommended)
0x5D6DCB	24 bits	$1 < \text{octets} < 4$	$< 2^{-24}$ (not recommended)
0xF4ACFB13	32 bits	$1 < \text{octets} < 2^{32}$	$< 2^{-32}$ (recommended)

K.2 Revision counter

A 32-bit revision counter can be implemented, counting any change of the parameter set. The Device shall use a random initial value for the Revision Counter. The counter itself shall not be stored via Index List of the Device. After the download the actual counter value is read back from the Device to avoid multiple writing initiated by the download sequence. The parameter data set comparison is performed in state "Checksum_9" of the Data Storage (DS) state machine in Figure 104.

6441

Bibliography

- 6442 [1] IEC 60050 (all parts), *International Electrotechnical Vocabulary*, (available at
6443 <<http://www.electropedia.org>>)
- 6444 [2] IEC 60870-5-1:1990, *Telecontrol equipment and systems – Part 5: Transmission*
6445 *protocols – Section One: Transmission frame formats*
- 6446 [3] IEC 61158-2, *Industrial communication networks – Fieldbus specifications – Part 2:*
6447 *Physical layer specification and service definition*
- 6448 [4] IEC/TR 62453-61, *Field device tool interface specification – Part 61: Device Type*
6449 *Manager (DTM) Styleguide for common object model*
- 6450 [5] ISO/IEC 7498-1, *Information technology – Open Systems Interconnection – Basic*
6451 *Reference Model: The Basic Model*
- 6452 [6] IO-Link Community, *IO Device Description (IODD)*, Order No. 10.012 (available at
6453 <<http://www.io-link.com>>)
- 6454 [7] IO-Link Community, *IO-Link Common Profile*, Order No. 10.072 (available at
6455 <<http://www.io-link.com>>)
- 6456 [8] IO-Link Community, *IO-Link Communication*, V1.0, January 2009, Order No. 10.002
6457 (available at <<http://www.io-link.com>>)
- 6458 [9] IO-Link Community, *IO-Link Test Specification*, Order No. 10.032 (available at
6459 <<http://www.io-link.com>>)
- 6460 [10] IO-Link Community, *IO-Link Safety System Extensions*, Order No. 10.092 (available at
6461 <<http://www.io-link.com>>)
- 6462 [11] IO-Link Community, *IO-Link Wireless System Extensions*, Order No. 10.112 (available
6463 at <<http://www.io-link.com>>)
- 6464 [12] IO-Link Community, *IO-Link Common Gateway Profile*, work in progress
- 6465 -----

This page is intentionally left blank

© Copyright by:

IO-Link Community
c/o PROFIBUS Nutzerorganisation e.V.
Ohiostrasse 8
76149 Karlsruhe
Germany
Phone: +49 (0) 721 / 98 61 97 0
Fax: +49 (0) 721 / 98 61 97 11
e-mail: info@io-link.com
<http://www.io-link.com/>



IO-Link