



# IO-Link Safety System Extensions

**with SMI**

**Specification**

**Version 1.1.4**

**October 2024**

**Order No: 10.092**



**IO-Link**

**File name: IO-Link\_Safety\_System-Extensions\_10092\_V114\_Oct24**

This specification has been prepared by the IO-Link Safety technology working group, incorporating the final Standardized Master Interface (SMI), and covering CR-IDs up to 189. It is the basis for the international standard IEC 61139-2.

All specification from the IO-Link Interface specification and test specification is valid unless the deviations are specified in this specification.

Any comments, proposals, requests on this document are appreciated. Please use [www.io-link-projects.com](http://www.io-link-projects.com) for your entries and provide name and email address.

Login: **IOL-Safety11**

Password: **Report**

**Important notes:**

NOTE 1 The IO-Link Community Rules shall be observed prior to the development and marketing of IO-Link products. The document can be downloaded from the [www.io-link.com](http://www.io-link.com) portal.

NOTE 2 Any IO-Link device shall provide an associated IODD file. Easy access to the file and potential updates shall be possible. It is the responsibility of the IO-Link device manufacturer to test the IODD file with the help of the IODD-Checker tool available per download from [www.io-link.com](http://www.io-link.com).

NOTE 3 Any IO-Link devices shall provide an associated manufacturer declaration on the conformity of the device. A corresponding form with references to relevant documents is available per download from [www.io-link.com](http://www.io-link.com).

**NOTICE:**

The information contained in this document is subject to change without notice. The material in this document details a PNO specification in accordance with the license and notices set forth on this page. This document does not represent a commitment to implement any portion of a PNO specification in any company's products.

The attention of adopters is directed to the possibility that compliance with or adoption of PNO specifications may require use of an invention covered by patent rights. PNO shall not be responsible for identifying patents for which a license may be required by any PNO specification, or for conducting legal inquiries into the legal validity or scope of those patents that are brought to its attention. PNO specifications are prospective and advisory only. Prospective users are responsible for protecting themselves against liability for infringement of patents.

WHILE THE INFORMATION IN THIS DOCUMENT IS BELIEVED TO BE ACCURATE, PNO MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT INCLUDING, BUT NOT LIMITED TO ANY WARRANTY OF TITLE OR OWNERSHIP, IMPLIED WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR PARTICULAR PURPOSE OR USE.

In no event shall PNO be liable for errors contained herein or for indirect, incidental, special, consequential, reliance or cover damages, including loss of profits, revenue, data or use, incurred by any user or any third party. Compliance with PNO specifications does not absolve manufacturers, from the requirements of safety and regulatory agencies (TÜV, BIA, UL, CSA, etc.).

**USE OF TRADEMARKS:**

 **IO-Link** ® is registered trade mark. The use is restricted for members of the IO-Link Community. More detailed terms for the use can be found in the IO-Link Community Rules on [www.io-link.com](http://www.io-link.com).

PNO is the owner of several registered trademarks, such as PROFIBUS®, PROFINET®, omlox®, IO-Link®, MTP® and others. More detailed terms for the use can be found on the web page [www.profibus.com](http://www.profibus.com). Please select buttons "Downloads / Presentations & logos". In some cases, PNO is the licensee of registered trademarks owned by third parties and which may be relevant in regard with products compliant to this document.

PNO shall always be the sole entity that may authorize developers, suppliers and sellers of hardware and software to use certification marks, trademarks or other special designations to indicate compliance with a PNO specification. Products developed using a PNO specification may claim compliance or conformance with a PNO specification only if the hardware and/or software satisfactorily meets the certification requirements set by PNO. Products that do not meet these requirements may claim only that the product was based on a PNO specification and must not claim compliance or conformance with a PNO specification.

**COPYRIGHT**

Copyright © 2024 PROFIBUS Nutzerorganisation e.V.

Any unauthorized use of this publication may violate Copyright Law, Trademark Law and other legal regulations. This document contains information which is protected by Copyright. No part of this work covered by Copyright herein may be reproduced or used in any form or by any means -graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems--without permission of the publisher.

Publisher:

**IO-Link Community**  
c/o PROFIBUS Nutzerorganisation e.V.  
Ostrostrasse 8  
76149 Karlsruhe  
Germany  
Phone: +49 721 / 98 61 97 0  
Fax: +49 721 / 98 61 97 11  
E-mail: [info@io-link.com](mailto:info@io-link.com)  
Web site: [www.io-link.com](http://www.io-link.com)

## LICENSE AGREEMENT

### 1. License

1.1 Subject of this license agreement is this document issued by the Licenser, in electronic form. If applicable, also software may be provided.

1.2 The user of this document (Licensee) acquires the license solely from PROFIBUS Nutzerorganisation e.V., having its principal place of business in Karlsruhe, Germany (hereinafter referred to as "Licenser").

1.3 This document is not an industrial standard acknowledged by any standardization body or otherwise and may be further enhanced.

### 2. Rights and Duties of Licensee

2.1 Licenser hereby grants to Licensee the right to use this document exclusively for developing and supporting products compliant with this document. Licensee may copy this document for this purpose and for data backup purposes.

2.2 Licensee shall not be entitled to modify, decompile, reverse engineer or extract any individual parts of this document, unless this is permitted by mandatory Copyright Law. Furthermore, Licensee shall not be entitled to remove any alphanumeric identifiers, trademarks or copyright notices from this document and, insofar as Licensee is entitled to make copies of this document, Licensee shall copy them without alteration.

2.3 Licensee is not entitled to copy and redistribute this document to any third party, except for "Have Made" purposes. All copies must be obtained on an individual basis, directly from the website [www.de.profibus.com](http://www.de.profibus.com) or [www.profibus.com](http://www.profibus.com) or upon request from the Licenser.

### 3. Liability of Licenser

3.1 Licenser shall have no obligation to enhance the document and shall assume no liability in case the document or future versions thereof shall not be approved as an industrial standard.

3.2 Licenser's liability for defects as to quality or title of this document, especially in relation to the correctness or absence of defects or the absence of claims or third-party rights or in relation to completeness, usability and/or fitness for purpose are excluded, except for cases involving gross negligence, willful misconduct or fraudulent concealment of a defect.

3.3 Any further liability is excluded unless required by law, e.g. in cases of personal injury or death, willful misconduct, gross negligence, or in case of breach of fundamental contractual obligations. The damages in case of breach of fundamental contractual obligations is limited to the contract-typical, foreseeable damage if there is no willful misconduct or gross negligence.

### 4. Place of Jurisdiction and Applicable Law

4.1 The sole place of jurisdiction shall be the principal place of business of Licenser.

4.2 All relations arising out of the contract shall be governed by the substantive law of Germany, to the exclusion of the United Nations Convention on Contracts for the International Sale of Goods (CISG).

#### Conventions:

In this specification the following key words (in **bold** text) will be used:

<b>shall:</b>	indicates a mandatory requirement. Designers shall implement such mandatory requirements to ensure interoperability and to claim conformity with this specification.
<b>should:</b>	indicates flexibility of choice with a strongly preferred implementation.
<b>can:</b>	indicates flexibility of choice with no implied preference (possibility and capability).
<b>may:</b>	indicates a permission.
<b>highly recommended:</b>	indicates that a feature shall be implemented except for well-founded cases. Vendor shall document the deviation within the user manual and within the manufacturer declaration.

## CONTENTS

INTRODUCTION.....	14
1    Scope .....	16
2    Normative references .....	16
3    Terms, definitions, symbols, abbreviated terms, and conventions .....	17
3.1    Terms and definitions.....	17
3.2    Common terms and definitions .....	17
3.3    Terms and definitions related to SDCI-FS .....	20
3.4    Symbols and abbreviated terms .....	21
3.5    Conventions.....	23
3.5.1    Behavioral descriptions.....	23
3.5.2    Memory and transmission octet order .....	23
4    Overview of SDCI-FS .....	23
4.1    Purpose of the technology and feature levels.....	23
4.1.1    Base SDCI-FS technology .....	23
4.1.2    From "analog" and "switching" to communication.....	24
4.1.3    Minimized paradigm shift from FS-DI to FS-Master .....	25
4.1.4    Following the SDCI paradigm (SIO vs. OSSDe/FS-DI) .....	26
4.1.5    Port class B .....	28
4.1.6    "USB-Master" with safety parameterization .....	28
4.1.7    Interoperability matrix of safety devices .....	28
4.2    Positioning within the automation hierarchy .....	29
4.3    Wiring, connectors, and power supply .....	30
4.4    Relationship to SDCI.....	30
4.5    Communication features and interfaces .....	30
4.6    Parameterization.....	30
4.7    Role of FS-Master and FS-Gateway .....	31
4.8    Mapping to upper-level systems .....	31
4.9    Structure of the document.....	31
5    Extensions to the Physical Layer (PL).....	32
5.1    Overview .....	32
5.2    Extensions to PL services .....	32
5.2.1    PL_SetMode.....	32
5.2.2    PL_Ready.....	32
5.3    Transmitter/receiver .....	33
5.3.1    Assumptions for the expansion to OSSDe.....	33
5.3.2    OSSDe specifics.....	33
5.3.3    Start-up of an FS-Device (Ready pulse).....	36
5.3.4    Extensions to electric characteristics of a receiver in FS-Device and FS-Master .....	37
5.4    Extensions to electric and dynamic characteristics of an FS-Device .....	37
5.5    Extensions to electric and dynamic characteristics of an FS-Master Port (FS-DI) .....	37
5.6    FS-Master Port FS-DI interface .....	38
5.7    Wake-up coordination .....	39

5.8	Fast start-up .....	39
5.9	Power supply .....	39
5.10	Medium.....	40
5.10.1	Constraints .....	40
5.10.2	Connectors .....	40
5.10.3	Cable characteristics .....	40
6	Extensions to SIO.....	40
7	Extensions to the data link layer (DL) .....	40
7.1	Overview .....	40
7.2	State machine of the FS-Master DL-mode handler .....	40
7.3	State machine of the FS-Device DL-mode handler .....	42
8	Extensions to the Master Configuration Manager (CM) .....	44
9	Extensions of the FS-Device.....	45
9.1	Principle architecture and models .....	45
9.1.1	FS-Device architecture .....	45
9.1.2	FS-Device model .....	46
9.2	Parameter Manager (PM).....	46
9.3	Process Data Exchange (PDE) .....	47
9.4	Data Storage (DS) .....	47
9.4.1	General considerations and extensions including safety .....	47
9.4.2	Backup levels .....	47
10	Extensions of the FS-Master.....	48
10.1	Principle architecture .....	48
10.2	SMI service extensions .....	49
10.2.1	Overview .....	49
10.2.2	SMI_FSMasterAccess.....	50
10.2.3	SMI_SPDUIn .....	51
10.2.4	SMI_SPDUOut.....	52
10.2.5	SMI_FSPDInOut .....	52
10.2.6	SMI_PDIIn .....	53
10.2.7	SMI_PDOOut .....	53
10.3	ArgBlock extensions .....	53
10.3.1	Overview .....	53
10.3.2	FSMasterAccess.....	54
10.3.3	FSCPAuthenticity .....	54
10.3.4	FSPortConfigList .....	54
10.3.5	FSPortStatusList .....	56
10.3.6	SPDUIn .....	58
10.3.7	SPDUOut.....	58
10.3.8	FSPDInOut .....	59
10.4	Safety Layer Manager (SLM) .....	60
10.4.1	Purpose.....	60
10.4.2	FS_PortModes.....	60
10.4.3	FSP parameter .....	60
10.5	Process Data Exchange (PDE) .....	63
10.6	Data Storage (DS) .....	65
11	Safety communication layer (SCL).....	65
11.1	Functional requirements.....	65

11.2	Communication errors and safety measures.....	65
11.3	SCL services .....	66
11.3.1	Positioning of safety communication layers (SCL).....	66
11.3.2	FS-Master SCL services .....	66
11.3.3	FS-Device SCL services .....	68
11.4	SCL protocol.....	69
11.4.1	Protocol phases to consider.....	69
11.4.2	FS-Device faults .....	70
11.4.3	Safety PDU (SPDU).....	70
11.4.4	FS-Input and FS-Output data.....	71
11.4.5	Port number.....	71
11.4.6	Status and control .....	71
11.4.7	CRC signature.....	72
11.4.8	TADI safety considerations (normative) .....	73
11.4.9	Data types for SDCI-FS .....	73
11.5	SCL behaviour .....	74
11.5.1	General .....	74
11.5.2	SCL state machine of the FS-Master .....	75
11.5.3	SCL state machine of the FS-Device .....	77
11.5.4	Sequence charts for several use cases.....	80
11.5.5	Monitoring of safety times.....	86
11.5.6	Reaction in the event of a malfunction .....	87
11.5.7	Start-up (communication).....	89
11.6	SCL management .....	89
11.6.1	Parameter overview (FSP and FST).....	89
11.6.2	Parameterization approaches .....	90
11.7	Integrity measures .....	91
11.7.1	IODD integrity.....	91
11.7.2	Tool integrity .....	91
11.7.3	Transmission integrity.....	91
11.7.4	Verification record .....	92
11.7.5	Authentication .....	92
11.7.6	Storage integrity .....	92
11.7.7	FS I/O data structure integrity.....	93
11.7.8	Technology parameter (FST) based on IODD .....	93
11.7.9	Technology parameter (FST) based on existing Dedicated Tool (IOPD).....	95
11.8	Creation of FSP and FST parameters .....	95
11.9	Integration of Dedicated Tools (IOPD).....	96
11.9.1	IOPD interface.....	96
11.9.2	Standard interfaces .....	96
11.9.3	Backward channel .....	97
11.10	Validation.....	98
11.11	Passivation .....	98
11.11.1	Motivation and means .....	98
11.11.2	Port selective (FS-Master) .....	98
11.11.3	Signal selective (FS-Terminal) .....	98
11.11.4	Qualifier settings in case of communication .....	98
11.11.5	Qualifier handling in case of FS-DI .....	99
11.12	SCL diagnosis.....	100

12	Functional safe processing (FS-P) .....	101
12.1	Recommendations for efficient I/O mappings .....	101
12.2	Embedded FS controller .....	101
Annex A (normative)	Extensions to parameters .....	102
A.1	Indices and parameters for SDCI-FS .....	102
A.2	Parameters in detail .....	103
A.2.1	FSP_Authenticity .....	103
A.2.2	FSP_Port .....	103
A.2.3	FSP_AuthentCRC .....	104
A.2.4	FSP_ProtVersion .....	104
A.2.5	FSP_ProtMode .....	104
A.2.6	FSP_Watchdog .....	104
A.2.7	FSP_IO_StructCRC .....	104
A.2.8	FSP_TechParCRC .....	106
A.2.9	FSP_ProtParCRC .....	106
A.2.10	FSP_VerifyRecord .....	106
A.2.11	FSP_TimeToReady .....	106
A.2.12	FSP_MinShutDownTime .....	106
A.2.13	FSP_WCDT .....	106
A.2.14	FSP_OFDT .....	107
A.2.15	FSP_ParamDescCRC .....	107
Annex B (normative)	Extensions to EventCodes .....	108
B.1	Additional FS-Device EventCodes .....	108
B.2	Additional Port EventCodes .....	108
Annex C (normative)	Extensions to Data Types .....	110
C.1	Data types for SDCI-FS .....	110
C.2	BooleanT (bit) .....	110
C.3	IntegerT (16) .....	111
C.4	IntegerT (32) .....	111
C.5	Safety Code .....	112
Annex D (normative)	CRC generator polynomials .....	113
D.1	Overview of CRC generator polynomials .....	113
D.2	Residual error probabilities .....	113
D.3	Implementation considerations .....	115
D.3.1	Overview .....	115
D.3.2	Bit shift algorithm (16 bit) .....	115
D.3.3	Lookup table (16 bit) .....	115
D.3.4	Bit shift algorithm (32 bit) .....	116
D.3.5	Lookup table (32 bit) .....	117
D.3.6	Seed values .....	118
D.3.7	Octet order for CRC calculation .....	118
Annex E (normative)	IODD extensions .....	119
E.1	General .....	119
E.2	Schema .....	119
E.3	IODD constraints .....	119
E.3.1	General rules .....	119
E.3.2	Description of the IODD structure .....	119
E.3.3	Behaviour of "Reset" SystemCommands in SDCI-FS .....	127

E.3.4	Profile Characteristic .....	127
E.3.5	ProcessDataInput and ProcessDataOutput .....	127
E.4	IODD conventions .....	127
E.4.1	Naming .....	127
E.4.2	Process Data (PD) .....	127
E.4.3	IODD conventions for user interface .....	128
E.4.4	Master Tool features .....	128
E.5	Securing .....	128
E.5.1	General .....	128
E.5.2	DefaultValues for FSP .....	129
E.5.3	FSP_Authenticity .....	129
E.5.4	FSP_Protocol .....	129
E.5.5	FSP_IO_Description .....	130
E.5.6	Sample serialization for FSP_ParamDescCRC .....	130
E.5.7	FST and FSP parameters and Data Storage .....	131
E.5.8	Sample IODD of an FS-Device .....	131
Annex F (normative) Device tool Interface (DTI) for SDCI .....		143
F.1	Purpose of DTI .....	143
F.2	DTI Overview .....	143
F.2.1	Functions and Elements of the Invocation Interface .....	143
F.2.2	Functions and elements of the Communication Interface .....	144
F.2.3	Security .....	144
F.3	Dedicated Tool Invocation interface .....	144
F.3.1	Overview .....	144
F.3.2	Detection of Dedicated Tool .....	145
F.3.3	Program Interface Description – PID .....	148
F.3.4	Temporary Parameter File – TPF .....	150
F.3.5	Temporary Backchannel File – TBF .....	155
F.3.6	Invocation behaviour .....	157
F.4	Device data objects (DDO) .....	157
F.4.1	General .....	157
F.4.2	Structure of DDO package .....	158
F.5	Communication Interface .....	158
F.5.1	General .....	158
F.5.2	Principle of DTI communications .....	159
F.5.3	Definition of the Communication Interface .....	160
F.5.1	Description of the Communication Interface .....	160
F.6	Reaction on incorrect tool behaviour .....	160
F.7	Compatibility .....	161
F.7.1	Schema validation .....	161
F.7.2	Version policy .....	161
F.8	Schema definitions for PID, TPF and TBF .....	161
F.8.1	General .....	161
F.8.2	Schema of the PID .....	161
F.8.3	Schema of the TPF .....	163
F.8.4	Schema of the TBF .....	165
F.8.5	Schema of DTI primitives .....	166
F.9	Schema Definitions of the Communication Interface .....	166
F.9.1	Schema for DTI_DTQ .....	169

F.9.2	Schema for DTI_MTR .....	170
F.9.3	Schema for DTI Online Channel Base Types .....	171
F.10	Yaml file IO-Link DTI OPENAPI .....	172
Annex G (normative)	Main scenarios of SDCI-FS.....	175
G.1	Overview .....	175
G.2	Sequence chart of commissioning.....	177
G.3	Sequence chart of replacement.....	178
G.4	Sequence chart of misconnection .....	178
Annex H (normative)	System requirements .....	179
H.1	Indicators.....	179
H.1.1	General .....	179
H.1.2	FS-DI.....	179
H.1.3	Safety communication .....	179
H.1.4	Acknowledgment request.....	179
H.2	Installation guidelines, electrical safety, and security .....	179
H.3	Safety function response time .....	180
H.4	Duration of demands.....	180
H.5	Maintenance and repair .....	180
H.6	Safety manual.....	180
Annex I (informative)	Information for test and assessment of SDCI-FS components.....	181
Bibliography	.....	182
Figure 1	– Positioning of SDCI-FS in functional safety automation .....	14
Figure 2	– Relationship of this document to standards .....	15
Figure 3	– Memory and transmission octet order.....	23
Figure 4	– SDCI-FS communication layer model .....	24
Figure 5	– Port interface extensions for SDCI-FS.....	24
Figure 6	– Migration to SDCI-FS .....	25
Figure 7	– Minimized paradigm shift from FS-DI to FS-Master .....	26
Figure 8	– FS-Master types and feature levels .....	26
Figure 9	– Original pin layout of SDCI including IO-Link Safety extensions (Port class A) .....	27
Figure 10	– Level "d" of an FS-Master (Class B) .....	28
Figure 11	– Off-site configuration and parameterization .....	28
Figure 12	– SDCI-FS within the automation hierarchy .....	29
Figure 13	– The SDCI physical layer of an FS-Master (class A) .....	32
Figure 14	– The physical layer of an FS-Device (class A) .....	32
Figure 15	– Cross compatibility OSSD and OSSDe .....	33
Figure 16	– Principle OSSDe function .....	34
Figure 17	– Test pulses to detect cross connection faults .....	35
Figure 18	– OSSD timings .....	36
Figure 19	– Typical start-up of an OSSD sensor .....	36
Figure 20	– Start-up of an FS-Device .....	36
Figure 21	– Charge capability at power-up .....	38
Figure 22	– FS-DI input filter conflict resolution .....	38

Figure 23 – Start-up of an FS-Device .....	39
Figure 24 – Required fast start-up timings .....	39
Figure 25 – State machine of the FS-Master DL-mode handler .....	41
Figure 26 – State machine of the FS-Device DL-mode handler .....	42
Figure 27 – Extension to the Configuration Manager (VerifyRecord) .....	44
Figure 28 – Principle architecture of the FS-Device .....	45
Figure 29 – The FS-Device model.....	46
Figure 30 – Principle architecture of the FS-Master .....	48
Figure 31 – SMI service extensions .....	50
Figure 32 – FSP parameter use cases .....	61
Figure 33 – PDE Splitter (only in IO-Link PortMode = “SAFETYCOM”).....	64
Figure 34 – PDE Composer (only in IO-Link PortMode = “SAFETYCOM”) .....	64
Figure 35 – Positioning of the SDI-FS Safety Communication Layer (SCL) .....	66
Figure 36 – FS-Master Safety Communication Layer services .....	67
Figure 37 – FS-Device Safety Communication Layer services .....	68
Figure 38 – Protocol phases to consider .....	69
Figure 39 – Safety PDUs of FS-Master and FS-Device .....	70
Figure 40 – The 1 % share rule of IEC 61784-3:2021.....	72
Figure 41 – SCL state machine of the FS-Master .....	75
Figure 42 – SCL state machine of the FS-Device .....	77
Figure 43 – FS-Master and FS-Device both with power ON.....	80
Figure 44 – FS-Master power OFF → ON .....	81
Figure 45 – FS-Device with delayed SCL start .....	82
Figure 46 – FS-Device with power OFF and ON.....	83
Figure 47 – FS-Master detects CRC signature error.....	84
Figure 48 – FS-Device detects CRC signature error.....	85
Figure 49 – Monitoring of the SCL cycle time .....	86
Figure 50 – Parameter types and assignments.....	90
Figure 51 – FSCP-Host-centric system .....	91
Figure 52 – Structure of the FSP_VerifyRecord.....	92
Figure 53 – Start-up of SDI-FS .....	93
Figure 54 – Securing of FST parameters via Dedicated Tool.....	94
Figure 55 – Modification of FST parameters via Dedicated Tool.....	95
Figure 56 – Creation of FSP and FST parameters.....	96
Figure 57 – Example of a communication hierarchy .....	97
Figure 58 – Motivation for Port selective passivation.....	98
Figure 59 – Qualifier handler (communication).....	99
Figure 60 – Qualifier handler (FS-DI) .....	99
Figure 61 – Qualifier behaviour per FS-Master Port .....	100
Figure 62 – Mapping efficiency issues .....	101
Figure A.1 – Instance of an FS I/O data description .....	105
Figure A.2 – Example FS I/O data structure with non-safety data.....	105
Figure A.3 – Securing of safety parameters .....	107

Figure C.1 – Example of a BooleanT data structure .....	110
Figure C.2 – Safety Code of an output message .....	112
Figure C.3 – Safety Code of an input message .....	112
Figure D.1 – CRC-16 generator polynomial.....	114
Figure D.2 – CRC-32 generator polynomial.....	114
Figure D.3 – Bit shift algorithm in "C" language (16 bit).....	115
Figure D.4 – CRC-16 signature calculation using a lookup table .....	115
Figure D.5 – Bit shift algorithm in "C" language (32 bit).....	117
Figure D.6 – CRC-32 signature calculation using a lookup table .....	117
Figure E.1 – Algorithm to build the FSP parameter CRC signatures .....	129
Figure F.1 – Principle of DTI invocation interface.....	145
Figure F.2 – Structure of the registry .....	146
Figure F.3 – Example of a DTI registry.....	146
Figure F.4 – Detection of a Dedicated Tool in registry.....	148
Figure F.5 – Menu for Dedicated Tool invocation .....	149
Figure F.6 – Purpose of Device data objects (DDO).....	158
Figure F.7 – Communication routes between Dedicated Tool and Device.....	159
Figure F.8 – REST API Communication .....	160
Figure F.9 – XML schema of the PID file .....	162
Figure F.10 – XML schema TPF.....	163
Figure F.11 – XML schema of a TBF.....	165
Figure F.12 – XML Schema DTI_DTQ .....	167
Figure F.13 – DTI_MTR response .....	168
Figure F.14 – DTI_MTR negative response.....	169
Figure G.1 – Commissioning with test and armed operation .....	177
Figure G.2 – FS-Device replacement .....	178
Figure G.3 – FS-Device misconnection .....	178
Table 1 – Operational modes of feature level "a" to "c" (Port class A) .....	27
Table 2 – Interoperability matrix of safety devices.....	29
Table 3 – PL_Ready .....	33
Table 4 – OSSD states and conditions .....	34
Table 5 – Cross connection faults .....	35
Table 6 – Extension to electric and dynamic characteristics of the FS-Device (OSSDe) .....	37
Table 7 – Extensions to electric and dynamic characteristics of the Port interface .....	38
Table 8 – Cable characteristics .....	40
Table 9 – State transition tables of the FS-Master DL-mode handler .....	41
Table 10 – State transition tables of the FS-Device DL-mode handler .....	43
Table 11 – State transition tables of the Configuration Manager .....	44
Table 12 – Extension to Data Storage (DS) state machine .....	47
Table 13 – Data Storage Backup Levels .....	47
Table 14 – SMI services used for FS-Master.....	49
Table 15 – SMI_FSMasterAccess .....	50

Table 16 – SMI_FSPDInOut.....	52
Table 17 – ArgBlock types and ArgBlockIDs .....	53
Table 18 – FSMasterAccess .....	54
Table 19 – FSCPAuthenticity .....	54
Table 20 – FSPortConfigList .....	54
Table 21 – FSPortStatusList .....	56
Table 22 – SPDUIIn .....	58
Table 23 – SPDUOut .....	58
Table 24 – FSPDInOut .....	59
Table 25 – Use case reference table.....	61
Table 26 – Communication errors and safety measures .....	65
Table 27 – SCL services of FS-Master.....	67
Table 28 – SCL services of FS-Device .....	69
Table 29 – Protocol phases to consider .....	70
Table 30 – Control and counting (Control&MCnt) .....	71
Table 31 – Status and counting mirror (Status&DCnt) .....	71
Table 32 – MCount and DCount_i values .....	71
Table 33 – FS process I/O data types .....	73
Table 34 – Rules for the layout of values and qualifiers .....	74
Table 35 – Order of values and qualifier .....	74
Table 36 – Definition of terms used in SCL state machine of the FS-Master.....	75
Table 37 – FS-Master SCL states and transitions .....	75
Table 38 – Definition of terms used in SCL state machine of the FS-Device.....	78
Table 39 – FS-Device SCL states and transitions .....	78
Table 40 – Timing constraints .....	86
Table 41 – Qualifier bits "GOOD/BAD" .....	99
Table 42 – State transition table for the qualifier behaviour.....	100
Table A.1 – Indices for SDI-FS .....	102
Table A.2 – Coding of protocol version .....	104
Table A.3 – Coding of protocol mode .....	104
Table A.4 – Generic FS I/O data structure description .....	105
Table B.1 – FS-Device SCL specific EventCodes.....	108
Table B.2 – FS-Master SCL specific EventCodes.....	108
Table C.1 – Data types for SDI-FS .....	110
Table C.2 – BooleanT for SDI-FS .....	110
Table C.3 – Example of BooleanT within a RecordT.....	110
Table C.4 – IntegerT(16).....	111
Table C.5 – IntegerT(16) coding .....	111
Table C.6 – IntegerT(32).....	111
Table C.7 – IntegerT(32) coding .....	111
Table D.1 – CRC generator polynomials for SDI-FS .....	113
Table D.2 – Definition of variables used in Figure D.3.....	115
Table D.3 – Definition of variables used in Figure D.4.....	115

Table D.4 – Lookup table for CRC-16 signature calculation .....	116
Table D.5 – Definition of variables used in Figure D.5.....	117
Table D.6 – Definition of variables used in Figure D.4.....	117
Table D.7 – Lookup table for CRC-32 signature calculation .....	117
Table E.1 – Specific behavior of FS-Device "Reset" SystemCommands.....	127
Table E.2 – User actions to replace DefaultValues.....	129
Table E.3 – RecordItems of FSP_Protocol where allowed values shall be serialized .....	129
Table E.4 – Sample serialization for FSP_ParamDescCRC.....	130
Table F.1 – Description of PID file elements .....	149
Table F.2 – Elements of a TPF .....	150
Table F.3 – Elements of the TBF.....	155
Table F.4 – Invocation cases and behaviours .....	157
Table F.5 – Reaction on incorrect tool behaviour .....	160
Table G.1 – Main scenarios of SDCI-FS.....	175

## 1 INTRODUCTION

2 The base technology of IO-Link™<sup>1</sup> is subject matter of the international standard IEC 61131-9  
 3 being part of a series of standards on programmable controllers and the associated peripherals  
 4 such as remote I/O (RIO).


5 It specifies a single-drop digital communication interface technology – named SDCI, which  
 6 extends the traditional switching input and output interfaces as defined in IEC 61131-2 towards  
 7 a point-to-point communication link using coded switching. This technology enables the cyclic  
 8 exchange of digital input and output process data between a Master and its associated Devices  
 9 (sensors, actuators, I/O terminals, etc.). The Master can be part of a fieldbus communication  
 10 system or any stand-alone processing unit. The technology also enables the acyclic transfer of  
 11 parameters to Devices and the propagation of diagnosis information from the Devices to the  
 12 upper-level automation system (controller, host) via the Master.

13 Physical topology is point-to-point from each Device to the Master using 3 wires over distances  
 14 up to 20 m. The SDCI physical interface is backward compatible with the usual 24 V I/O  
 15 signalling specified in IEC 61131-2 and supports three transmission rates of 4,8 kbit/s,  
 16 38,4 kbit/s and 230,4 kbit/s are supported.

17 The main advantages of the SDCI technology are:

- 18 • dual use of either switching signals (DI/DO) or coded switching communication  
 19 respectively,
- 20 • traditional switching sensors and actuators now providing alternatively single drop  
 21 digital communication within the same Device,
- 22 • one thin, robust, very flexible cable without shielding for power supply and signalling,
- 23 • lowest-cost digital communication down to the lowest end sensors and actuators.

24  
 25 The functional safety variant of SDCI is called SDCI-FS. Figure 1 shows an example positioning  
 26 of SDCI-FS in functional safety automation.

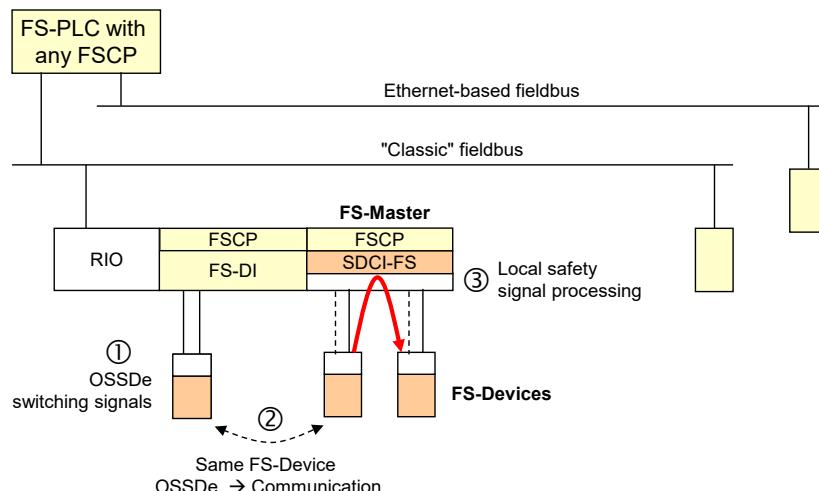

27  
 28 **Figure 1 – Positioning of SDCI-FS in functional safety automation**

29 In this example, a remote I/O is connected to a functional safety programmable controller using  
 30 one of the FSCPs of the IEC 61784-3 series to communicate with an FS-DI module and a  
 31 gateway to an SDCI-FS FS-Master. FS-Devices with OSSDe can be connected to FS-DIs or

---


1 IO-Link™ is a trade name of the "IO-Link Community". This information is given for the convenience of users of this specification and does not constitute an endorsement by the IO-Link Community of the trade name holder or any of its products. Compliance to this document does not require use of the registered logos for IO-Link™. Use of the registered logos for IO-Link™ requires permission of the "IO-Link Community".

32 FS-Masters. All FS-Devices can communicate with any FS-Master using the SDCI-FS protocol  
 33 regardless of the upper-level FSCP-system. The same is true for safety actuators (FS-Devices)  
 34 such as drives with integrated safety. This means the largest component commonality ① for  
 35 sensors and actuators similar to the DI and DO interfaces standardized within IEC 61131-2.

36 Safety sensors with OSSDe interfaces – equipped with SDCI-FS communication – can be  
 37 parameterized via auxiliary tools such as "USB-Masters", then connected to an FS-DI and  
 38 operated in OSSDe mode. They also can be operated in OSSDe mode on an FS-Master that  
 39 supports FS-DI functionality. In case these safety sensors are equipped with SDCI-FS  
 40 communication in addition, they can be operated in both modes ②, either OSSDe or SDCI-FS.  
 41 This corresponds to the SDCI SIO paradigm.

42 The concept of SDCI-FS allows for local safety signal processing if the gateway/FS-Master  
 43 provides a local safety controller ③.

44 This document provides the necessary extensions to IEC 61131-9 for functional safety  
 45 communication including definition for the use of OSSDe and parameterization within the  
 46 domain of safety for machinery. Figure 2 shows its relationships to international fieldbus and  
 47 safety standards as well as to relevant specifications (see Clause 2 and bibliography). Any  
 48 functional safety starts with risk assessment and risk reduction (ISO 12100). One possibility of  
 49 risk reduction is the usage of electrical or electronic control systems. For the design of those,  
 50 standards such as IEC 61508, IEC 62061, and ISO 13849 can be used. Environmental  
 51 conditions such as EMC are covered by for example IEC 61000-6-7. Further aspects are  
 52 installations and security issues. A number of product standards complement the generic or  
 53 sector standards.

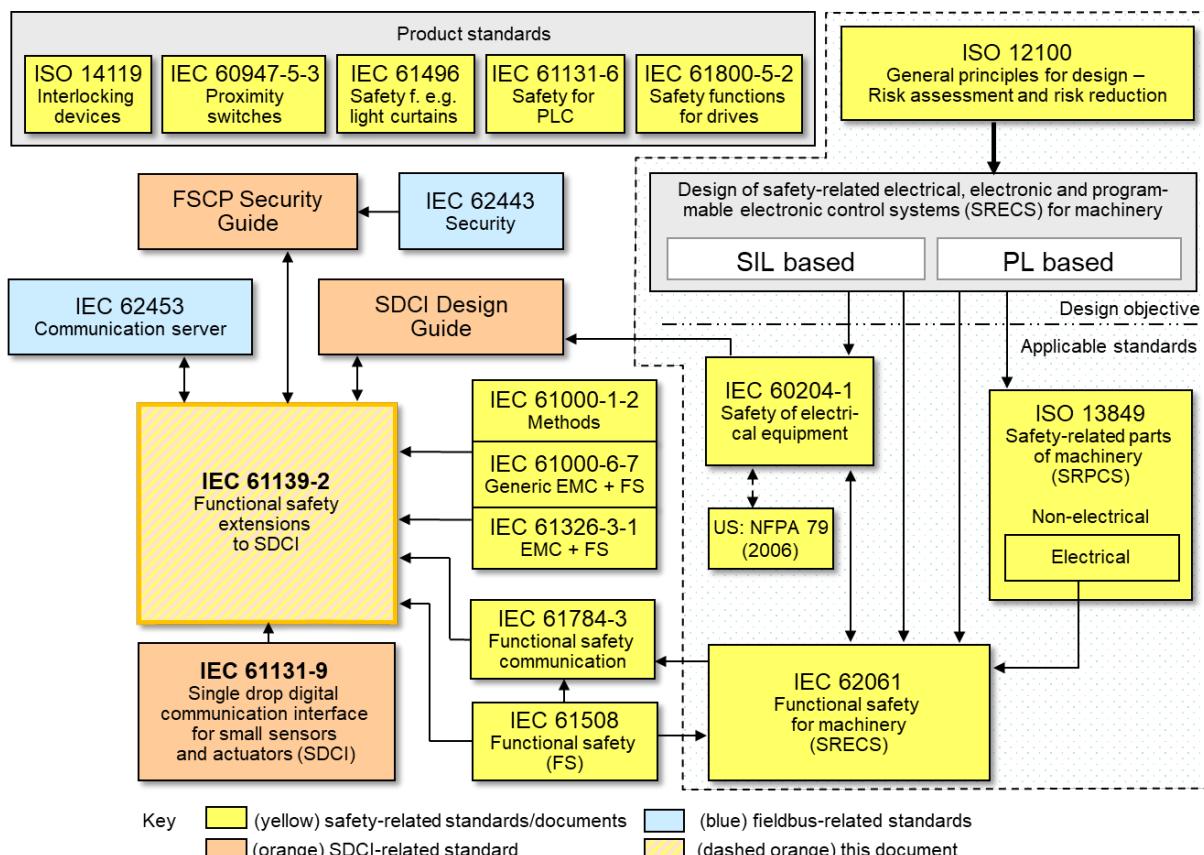

54 **Figure 2 – Relationship of this document to standards**

55 56 SDCI-FS can be used for functional safety applications according to IEC 62061 and IEC 61508  
 57 up to SIL3 and/or according to ISO 13849 up to PLe.

59                   **INDUSTRIAL NETWORKS –**  
60                   **SINGLE-DROP DIGITAL COMMUNICATION INTERFACE –**

62                   **Part 2: Functional safety extensions**

64                   **1 Scope**

65     This part of IEC 61139 specifies the extensions to SDCI in IEC 61131-9 for functional safety.  
66     This comprises:

- 67        • a defined OSSDe interface for redundant switching signals based on IEC 61131-2,  
68        • minor modifications/extensions to state machines of SDCI to support the safety  
69        operations,  
70        • a lean functional safety communication protocol on top of the standard SDCI  
71        communication which is a black channel according to IEC 61784-3:2021,  
72        • protocol management functions for configuration, parameterization, and commissioning,  
73        • IODD extensions for functional safety,  
74        • a Device tool interface to support Dedicated Tools according to functional safety  
75        standards.

76     This document does not cover:

- 78        • communication interfaces or systems including multi-point or multi-drop linkages,  
79        • communication interfaces or systems including multi-channel or encrypted linkages,  
80        • wireless communication interfaces or systems,  
81        • integration of SDCI-FS into upper-level systems such as fieldbuses/FSCPs.

82                   **2 Normative references**

83     The following documents are referred to in the text in such a way that some or all of their content  
84     constitutes requirements of this document. For dated references, only the edition cited applies.  
85     For undated references, the latest edition of the referenced document (including any  
86     amendments) applies.

87     IEC 60204-1, *Safety of machinery – Electrical equipment of machines – Part 1: General  
88     requirements*

89     IEC 61010-2-201, *Safety requirements for electrical equipment for measurement, control and  
90     laboratory use – Part 2-201: Particular requirements for control equipment*

91     IEC 61131-2, *Industrial-process measurement and control – Programmable controllers – Part 2:  
92     Equipment requirements and tests*

93     IEC 61131-9:2022<sup>2</sup>, *Programmable controllers – Part 9: Single-drop digital communication  
94     interface for small sensors and actuators (SDCI)*

95     IEC 61496-1, *Safety of machinery – Electro-sensitive protective equipment – Part 1: General  
96     requirements and tests*

97     IEC 61508-3, *Functional safety of electrical/electronic/programmable electronic safety-related  
98     systems - Part 3: Software requirements*

---

2 Under preparation. Stage at the time of publication: IEC/AFDIS 61131-9:2021

99 IEC 61784-3, *Industrial communication networks - Profiles - Part 3: Functional safety fieldbuses*  
100 - *General rules and profile definitions*

101 IEC 62061, *Safety of machinery – Functional safety of safety-related control systems*

102 IEC 62443 (all parts), *Security for industrial automation and control systems*

103 ISO 13849-1, *Safety of machinery – Safety-related parts of control systems – Part 1: General*  
104 *principles for design*

### 105 **3 Terms, definitions, symbols, abbreviated terms, and conventions**

#### 106 **3.1 Terms and definitions**

107 For the purposes of this document, the terms and definitions given in IEC 61131-1 and IEC  
108 61131-2 apply. ISO and IEC maintain terminological databases for use in standardization at the  
109 following addresses:

- 110 • IEC Electropedia: available at <https://www.electropedia.org/>
- 111 • ISO Online browsing platform: available at <https://www.iso.org/obp/ui>

#### 112 **3.2 Common terms and definitions**

##### 113 **3.2.1**

##### **address**

115 part of the M-sequence control to reference data within data categories of a communication  
116 channel

##### 117 **3.2.2** **application layer**

119 AL

120 <SDCI><sup>3</sup> part of the protocol responsible for the transmission of Process Data objects and On-  
121 request Data objects

##### 122 **3.2.3** **block parameter**

124 consistent parameter access via multiple Indices or Subindices

##### 125 **3.2.4** **checksum**

127 <SDCI> complementary part of the overall data integrity measures in the data link layer in  
128 addition to the UART parity bit

##### 129 **3.2.5** **coded switching**

131 SDCI communication, based on the standard binary signal levels of IEC 61131-2

##### 132 **3.2.6** **COM1**

134 SDCI communication mode with transmission rate of 4,8 kbit/s

##### 135 **3.2.7** **COM2**

137 SDCI communication mode with transmission rate of 38,4 kbit/s

##### 138 **3.2.8** **COM3**

140 SDCI communication mode with transmission rate of 230,4 kbit/s

---

<sup>3</sup> Angle brackets indicate validity of the definition for the SDCI technology

141   **3.2.9**

142   **COMx**

143   one out of three possible SDCI communication modes COM1, COM2, or COM3

144   **3.2.10**

145   **communication channel**

146   logical connection between Master and Device

147   NOTE 1 to entry: Four communication channels are defined: process channel, page and ISDU channel (for  
148   parameters), and diagnosis channel.

149   **3.2.11**

150   **communication error**

151   unexpected disturbance of the SDCI transmission protocol

152   **3.2.12**

153   **cycle time**

154   time to transmit an M-sequence between a Master and its Device including the following idle  
155   time

156   **3.2.13**

157   **Device**

158   single passive peer to a Master such as a sensor or actuator

159   NOTE 1 to entry: Uppercase "Device" is used for SDCI equipment, while lowercase "device" is used in a generic  
160   manner.

161   **3.2.14**

162   **Direct Parameter**

163   directly (page) addressed parameter transferred acyclically via the page communication  
164   channel without acknowledgement

165   **3.2.15**

166   **dynamic parameter**

167   part of a Device's parameter set defined by on-board user interfaces such as teach-in buttons  
168   or control panels in addition to the static parameters

169   **3.2.16**

170   **Event**

171   instance of a change of conditions in a Device

172   NOTE 1 to entry: Uppercase "Event" is used for SDCI Events, while lowercase "event" is used in a generic manner.

173   NOTE 2 to entry: An Event is indicated via the Event flag within the Device's status cyclic information, then acyclic  
174   transfer of Event data (typically diagnosis information) is conveyed through the diagnosis communication channel.

175   **3.2.17**

176   **fallback**

177   transition of a Port from coded switching to switching signal mode

178   **3.2.18**

179   **ISDU**

180   indexed service data unit used for acyclic acknowledged transmission of parameters that can  
181   be segmented in a number of M-sequences

182   **3.2.19**

183   **M-sequence**

184   sequence of two messages comprising a Master message and its subsequent Device message

185   **3.2.20**

186   **M-sequence control**

187   first octet in a Master message indicating the read/write operation, the type of the  
188   communication channel, and the address, for example offset or flow control

189   **3.2.21**

190   **M-sequence type**

191   one particular M-sequence format out of a set of specified M-sequence formats

**3.2.22****Master**

active peer connected through Ports to one up to n Devices and which provides an interface to the gateway to the upper-level communication systems or PLCs

NOTE 1 to entry: Uppercase "Master" is used for SDCI equipment, while lowercase "master" is used in a generic manner.

**3.2.23****message**

<SDCI> sequence of UART frames transferred either from a Master to its Device or vice versa following the rules of the SDCI protocol

**3.2.24****On-request Data**

acyclically transmitted data upon request of the Master application consisting of parameters or Event data

**3.2.25****physical layer**

first layer of the ISO-OSI reference model, which provides the mechanical, electrical, functional, and procedural means to activate, maintain, and de-activate physical connections for bit transmission between data-link entities

NOTE 1 to entry: Physical layer also provides means for wake-up and fallback procedures.

[SOURCE: ISO/IEC 7498-1, 7.7.2, modified – text extracted from subclause, note added]

**3.2.26****Port**

<SDCI> communication medium interface of the Master to one Device

**3.2.27****Port operating mode**

state of a Master's Port that can be either INACTIVE, DO, DI, FIXEDMODE, or SCANMODE

**3.2.28****Process Data**

input or output values from or to a discrete or continuous automation process cyclically transferred with high priority and in a configured schedule automatically after start-up of a Master

**3.2.29****SIO**

Port operation mode in accordance with digital input and output defined in IEC 61131-2 that is established after power-up or fallback or unsuccessful communication attempts

**3.2.30****switching signal**

binary signal from or to a Device when in SIO mode (as opposed to the "coded switching" SDCI communication)

**3.2.31****System Management**

SM

<SDCI> means to control and coordinate the internal communication layers and the exceptions within the Master and its Ports, and within each Device

**3.2.32****UART frame**

<SDCI> bit sequence starting with a start bit, followed by eight bits carrying a data octet, followed by an even parity bit and ending with one stop bit

**3.2.33****wake-up**

procedure for causing a Device to change its mode from SIO to SDCI

**3.2.34****wake-up request**

WURQ

physical layer service used by the Master to initiate wake-up of a Device, and put it in a receive ready state

249

**3.3 Terms and definitions related to SDCI-FS**

251 For the purposes of this document, the following additional terms and definitions apply.

**3.3.1****error**

254 discrepancy between a computed, observed, or measured value or condition and the true, 255 specified or theoretically correct value or condition

256 NOTE 1 to entry: Errors may be due to design mistakes within hardware/software and/or corrupted information 257 due to electromagnetic interference and/or other effects.

258 NOTE 2 to entry: Errors do not necessarily result in a *failure* or a *fault*.

259 SOURCE: [IEC 61508-4:2010, 3.6.11, modified – The notes have been added.]

**3.3.2****failure**

262 termination of the ability of a functional unit to perform a required function or operation of a 263 functional unit in any way other than as required

264 NOTE 1 to entry: The definition in IEC 61508-4 is the same, with additional notes.

265 NOTE 2 to entry: Failure may be due to an error (for example, problem with hardware/software design or message 266 disruption)

267 SOURCE: [IEC 61508-4:2010, 3.6.4, modified – The notes have been removed and replaced 268 by a new note and the figure has been deleted.]

**3.3.3****fault**

271 abnormal condition that may cause a reduction in, or loss of, the capability of a functional unit 272 to perform a required function

273 NOTE 1 to entry: IEV 191-05-01 defines "fault" as a state characterized by the inability to perform a required 274 function, excluding the inability during preventive maintenance or other planned actions, or due 275 to lack of external resources.

276 SOURCE: [IEC 61508-4:2010, modified – The reference to Figure 4 of IEC 61508-4:2010 in the 277 note has been removed.]

**3.3.4****FS-Device**

280 single passive peer such as a functional safety sensor or actuator to a Master with functional 281 safety capabilities

**3.3.5****FS-Master**

284 active peer with functional safety capabilities connected through Ports to one up to  $n$  Devices 285 or FS-Devices and which provides an interface to the gateway to the upper-level communication 286 systems (NSR or SR) or controllers with functional safety capabilities

**3.3.6****FSP parameter**

289 parameter set for the administration and operation of the SDCI-FS protocol

**3.3.7****FST parameter**

parameter set for the safety-related technology of an FS-Device, for example light curtain

**3.3.8****Safety PDU**

Safety Protocol Data Unit

SPDU

PDU transferred through the safety communication channel

[SOURCE: IEC 61784-3:2021, 3.1.47, modified – Notes have been removed and admitted term has been added.]

**3.4 Symbols and abbreviated terms**

AIDA	Automatisierungsinitiative Deutscher Automobilhersteller (Automation initiative of the German automotive manufacturers)	
AL	application layer	
BEP	bit error probability	
C/Q	connection for communication (C) or switching (Q) signal (SIO)	
CRC	cyclic redundancy check	
DDO	Device data object	
DI	digital input	
DIP	dual in-line package	
DL	data link layer	
DO	digital output	
DS	data storage	
DTI	Device Tool Interface	
DTM	Device Type Manager	[IEC 62453 all parts]
FDI	Field Device Integration	[IEC 62769 all parts]
FDT	Field Device Tool	[IEC 62453 all parts]
FS	functional safety	
FSCP	functional safety communication profile (e.g. IEC 61784-3 series)	
FS-AI/AO	functional safety analog input/analog output	
FS-DI/DO	functional safety digital input/digital output	
FSP	functional safety protocol (parameter)	
FST	functional safety technology (parameter)	
FS-Input	functional safety input data (useable netto safe input data)	
FS-Output	functional safety output data (useable netto safe output data)	
I/O	input / output	
IODD	IO Device Description	
IOPD	SDCI Parameterization and Diagnostic tool	
I/Q	connection with several options: DI, OSSD2e, or DO	
L-	power supply (-)	
L+	power supply (+)	
LSO, MSO	least significant octet, most significant octet	
M12	circular connector	[IEC 61076-2-113]
N24	24 V extra power supply (-); Port class B	
NSR	non-safety-related	
OD	On-request Data	
OK	"OK", values or state correct	

OSSD	output signal switching device (self-testing electronic device with built-in OSSD)	[IEC 61496-1]
OSSDe	output signal switching device (self-testing electronic device with built-in OSSD according to this document)	
OSSD1/2e	pin assignment of both OSSDe signals	
OSSDm	output signal switching device (relay and solid state outputs)	[IEC 60947-5-5]
P24	24 V extra power supply (+); Port class B	
PD	Process Data	
PDin	functional safety input process data (from an FS-Master's view)	
PDout	functional safety output process data (from an FS-Master's view)	
PDCT	Port and Device configuration tool	
PDU	protocol data unit	
PFH	average frequency of a dangerous failure per hour	[IEC 61508-4]
PID	program interface description	
PL	physical layer	
PLC	programmable logic controller	
PS	power supply (measured in V)	
RIO	remote I/O	
rms	root mean square ("effective")	
SCL	safety communication layer	
SDCI	single-drop digital communication interface	[IEC 61131-9]
SDCI-FS	single-drop digital communication interface for functional safety	
SIO	standard input output (digital switching mode)	[IEC 61131-2]
SLM	safety layer manager	
SM	system management	
SPDU	safety protocol data unit	
SR	safety-related	
SSI	synchronous serial interface (usually for encoders)	
TAF	temporary acknowledgment file	
TBF	temporary backchannel file	
TPF	temporary parameter file	
UART	universal asynchronous receiver transmitter	
UML 2	unified modeling language, edition 2	[ISO/IEC 19505-2]
USB	universal serial bus	[ <a href="https://www.usb.org">https://www.usb.org</a> ]
WURQ	wake-up request pulse	
XML	extensible markup language	

302 **3.5 Conventions**

303 **3.5.1 Behavioral descriptions**

304 For the behavioural descriptions, the notations of UML 2 are used, mainly for state and  
305 sequence diagrams (see [1]<sup>4</sup>, [2], [3]).


306 Events to trigger a transition usually can be a signal, service call, or timeout. Logic conditions  
307 (true/false) shall be the result of a [guard]. To alleviate the readability and the maintenance of  
308 the state machines, the diagrams do not provide the actions associated with a transition. These  
309 actions are listed within a separate state-transition table according to [4].

310 The state diagrams shown in this document are entirely abstract descriptions. They do not  
311 represent a complete specification for implementation.

312 **3.5.2 Memory and transmission octet order**

313 Figure 3 demonstrates the order that shall be used when transferring WORD based data types  
314 from memory to transmission and vice versa.

315 NOTE Existing microcontrollers can differ in the way WORD based data types are stored in memory: "big endian"  
316 and "little endian". If designs are not considering this fact, octets can be erroneously permuted for  
317 transmission.

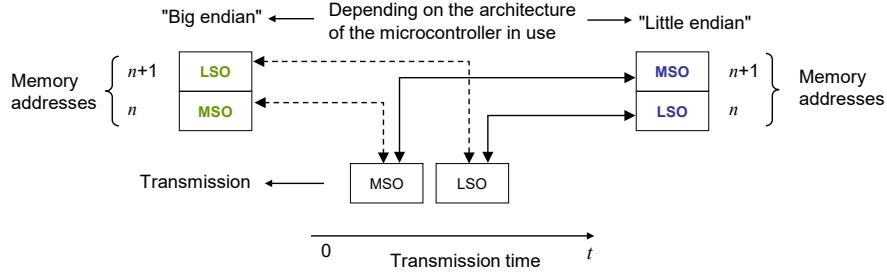

318 **Figure 3 – Memory and transmission octet order**

319 **4 Overview of SDCI-FS**


320 **4.1 Purpose of the technology and feature levels**

321 **4.1.1 Base SDCI-FS technology**

322 This document specifies a new lean functional safety communication protocol on top of the  
323 existing SDCI transmission system specified in IEC 61131-9. Figure 4 illustrates how the  
324 corresponding SDCI-FS communication layers are located within the architectural models of  
325 Master and Device such that they become FS-Master and FS-Device. Most of the original SDCI  
326 design remains unchanged for this document. Deviations from the original SDCI design are  
327 explicitly mentioned. If not mentioned explicitly, all rules of the original standard design apply.  
328

---

4 Numbers in square brackets refer to the bibliography.

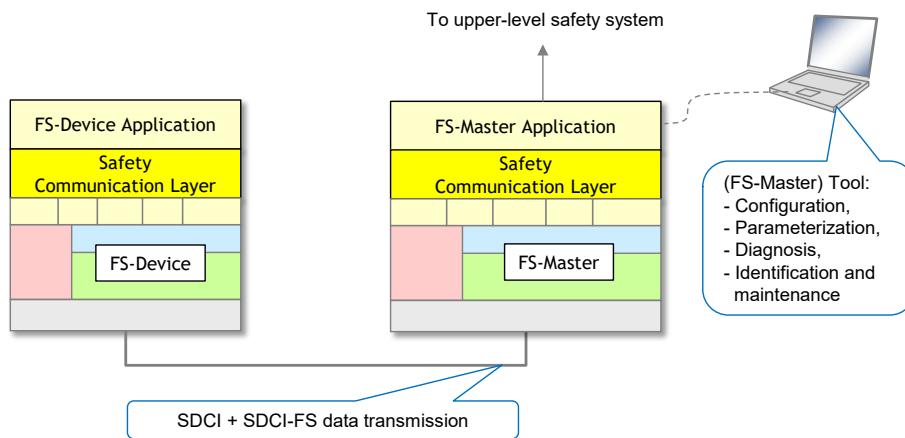

329

**Figure 4 – SDCI-FS communication layer model**

331 The SDCI-FS communication layer accommodates the functional safe transmission protocol.  
 332 This protocol generates a safety PDU consisting of the FS-I/O data, protocol control or status  
 333 data, and a CRC signature. The safety PDU together with optionally non-safety-related data is  
 334 transmitted as SDCI Process Data between an FS-Master and one single FS-Device (point-to-  
 335 point). It is suitable for functional safety applications up to SIL3 or PLe and the PFH for one  
 336 connection is less than  $10^{-9}/\text{h}$ .

337 SDCI-FS increases the number of Port modes and thus requires changes to the Physical Layer  
 338 and Configuration/System Management.

339 Changes are required for the Master-(Software)-tool to provide the necessary safety-related  
 340 configuration and parameterization of the protocol (FSP-Parameter) as well as of the particular  
 341 FS-Device technology (FST-Parameter).

342 SDCI-FS also supports OSSDe as a migration strategy, like the SIO mode. It does not support  
 343 • wireless connections between FS-Master and FS-Device (see Clause H.2),  
 344 • cascaded FS-Master/FS-Device systems.


345

#### 346 4.1.2 From "analog" and "switching" to communication

347 In "Safety-for-Machinery", usually the switch states (on/off) of relays or sensors are transmitted  
 348 similar to standard SDCI (SIO) as a 24 V or 0 V signal to FS-DI-Modules within remote I/Os. In  
 349 contrast to standard SDCI-FS, due to safety requirements, these signals are redundant, either  
 350 equivalent (OSSDe = 11 → 00) or antivalent (OSSDm = 01 → 10) switching.

351 NOTE OSSDe stands for concepts described in IEC 61496-1 and OSSDm for IEC 60947-5-5 concepts (see [5]).

352 The electrical characteristics for the OSSDe interface are following IEC 61131-2, type 1 (see  
 353 Figure 5).

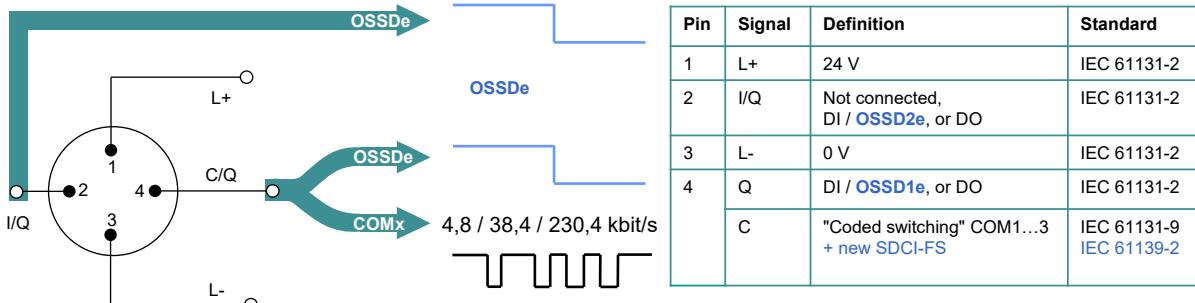


354 Key: OSSDe = Equivalent switching redundant signals

355

**Figure 5 – Port interface extensions for SDCI-FS**

356 Measurement of physical quantities such as temperature, pressure, position, or strain (FS-AI-  
 357 Modules) has several interface solutions such as 4 to 20 mA, 0 to 10 V, or SSI, but no common  
 358 signal transmission technology (see Figure 6, left).

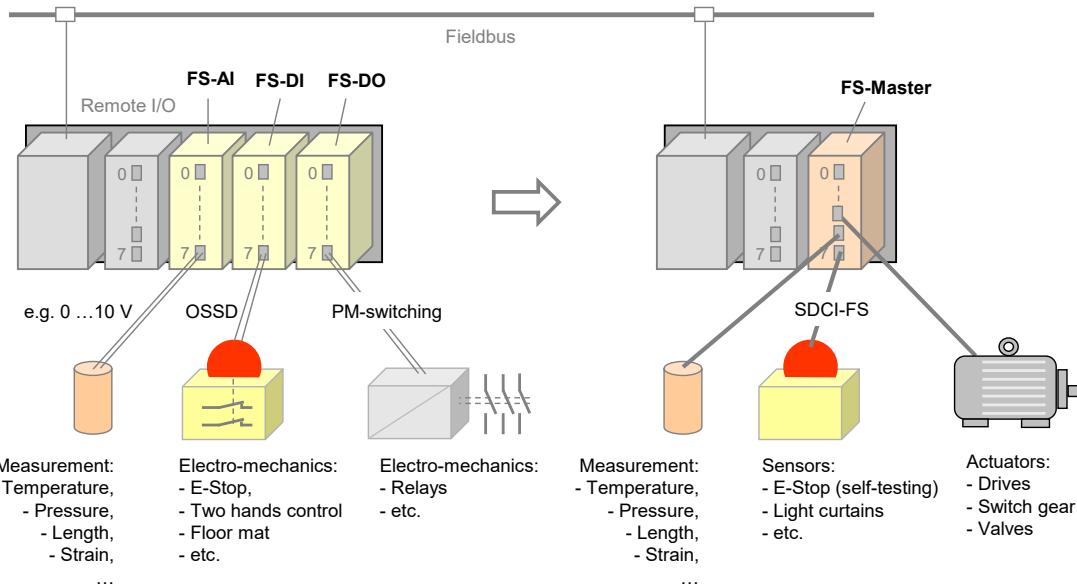

359  
 360 **Figure 6 – Migration to SDCI-FS**

361 Actuators such as motors can be de-energized via FS-DO-Modules and connected relays as  
 362 shown in Figure 6 (left).

363 Without additional interfaces, it was not possible in all cases to configure or parameterize the  
 364 safety devices or to receive diagnosis information.

365 SDCI-FS can now provide a functional safe and reliable solution for process data exchange  
 366 (signal states and measurement values) via single drop digital communication (SDCI), as well  
 367 as parameterization and diagnosis (see Figure 6, right).

#### 368 **4.1.3 Minimized paradigm shift from FS-DI to FS-Master**


369 Similar to nowadays safety devices for FS-DI modules (see Figure 7) and in contrast to FSCP-  
 370 based safety devices, it is not necessary to

- 371 a) setup an *authenticity code switch* or *adequate software solution*,
- 372 b) assign a *watchdog time*,
- 373 c) use any software tool in case of *FS-Device replacement*.

374 Authenticity is guaranteed through checking of the correct FS-Device to the assigned FS-Master  
 375 Port during commissioning like FS-DI modules. However, SDCI-FS provides means to discover  
 376 any incorrect plugging.

377 SDCI-FS uses a watchdog timer for the transmission of safety data in time (Timeliness). The  
 378 system is able to calculate the required watchdog time automatically due to the point-to-point  
 379 nature of the transmission.

380 FS-Device replacement without tools can be achieved using the original SDCI Data Storage  
 381 mechanism.

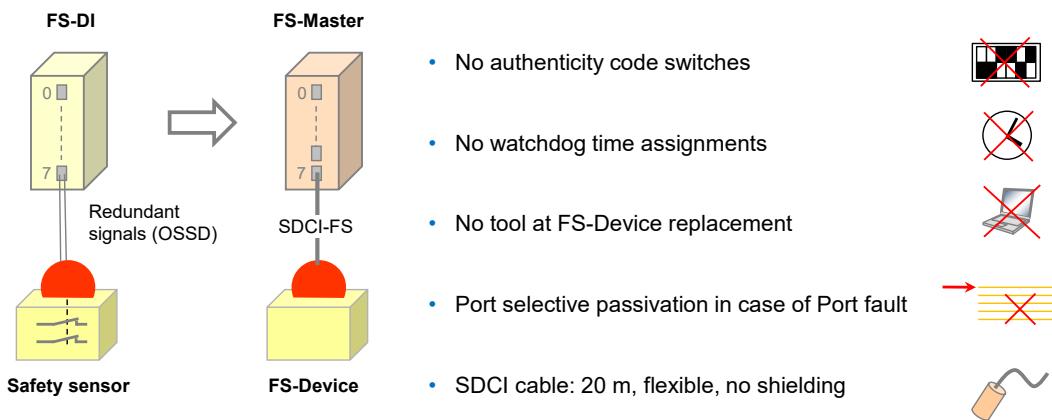


#### 4.1.4 Following the SDCI paradigm (SIO vs. OSSDe/FS-DI)

394 Standard SDCI-FS supports a Port type A (4 pin) without extra power supply and a Port type B

395 (5 pin) with extra 24 V power supply (see IEC 61131-9). SDCI-FS takes care of several

396 specification levels "a" to "d" (see Figure 8). The number of pins refers to the possible FS-


397 Master pins.

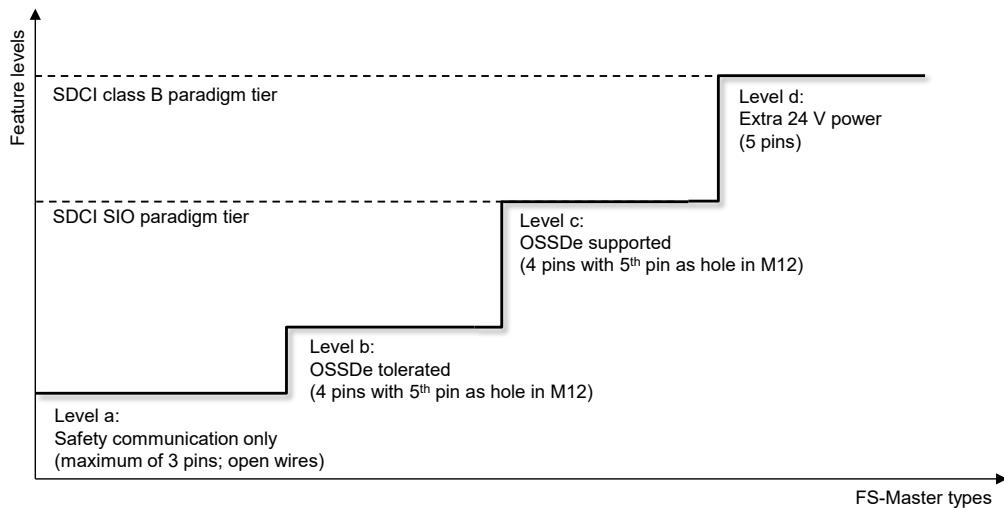

399 **Figure 8 – FS-Master types and feature levels**

400 The original pin layouts of SDCI for Port class A are shown in Figure 9 together with the

401 extensions for level "a" through "c". Table 1 shows the details of these levels.

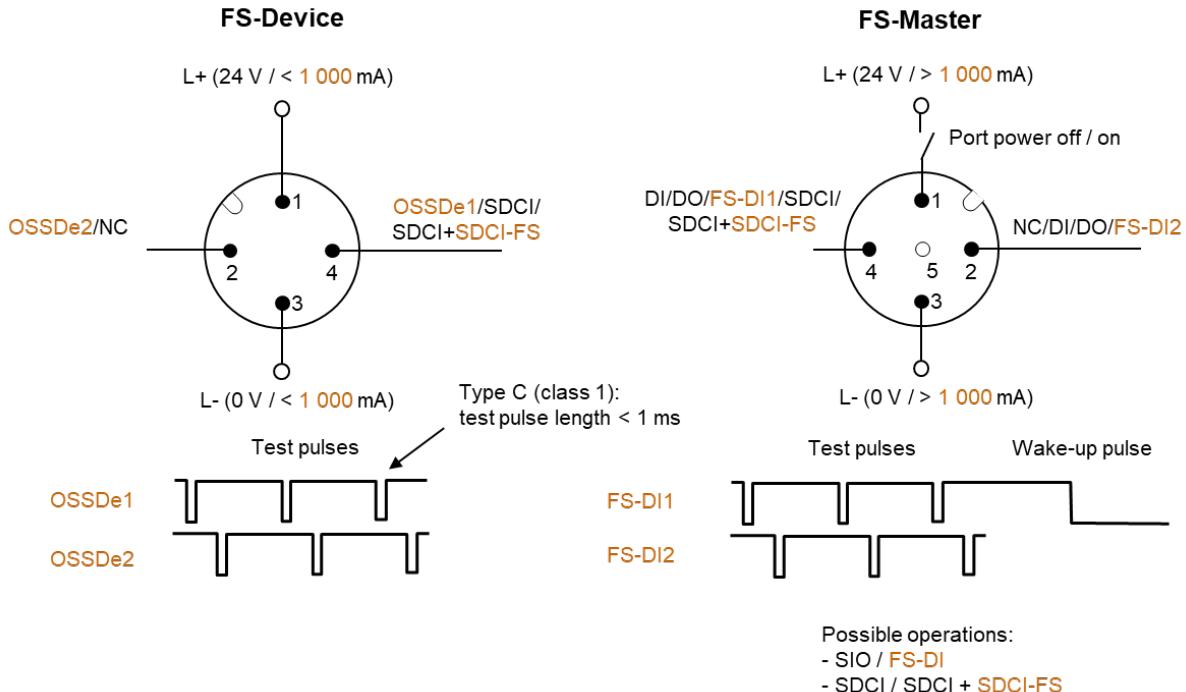

402

403 **Figure 9 – Original pin layout of SDCI including IO-Link Safety extensions (Port class A)**404 Level "a" provides communication only (Pin 1, 3, and 4). That means support for sensor-type  
405 FS-Devices and actuator-type FS-Devices.406 Due to the redundant nature of most of the safety device interfaces, SDCI-FS considers pin 2  
407 for the redundant signal path (e.g. OSSD2e) besides pin 4 for the primary signal path (e.g.  
408 OSSD1e)<sup>5</sup>. Thus, level "b" allows FS-Devices to provide OSSDe outputs besides the SDCI-FS  
409 communication capability. They can be parameterized with the help of a "USB-Master" and be  
410 connected to any FS-DI module in switching mode. When connected to an FS-Master, safety  
411 and standard non-safety communication is possible.412 Level "c" corresponds to the SIO level of standard SDCI Master. In this case, the FS-Master  
413 supports an FS-DI mode besides communication (Pin 1, 3, 4 and 2).414 Table 1 shows the pin layout and possible operational modes for the feature levels "a" to "c" of  
415 the Port class A FS-Device and FS-Master.416 **Table 1 – Operational modes of feature level "a" to "c" (Port class A)**

Feature level	FS-Device		FS-Master	
	Pin 2	Pin 4	Pin 2	Pin 4
"a"	- NC	- SDCI - SDCI + SDCI-FS	- NC, DI, DO	- DI, DO - SDCI - SDCI + SDCI-FS
"b"	- OSSD2e - NC	- OSSD1e - SDCI - SDCI + SDCI-FS	- NC, DI, DO	- DI, DO - SDCI - SDCI + SDCI-FS
"c"	- OSSD2e - NC	- OSSD1e - SDCI - SDCI + SDCI-FS	- NC, DI, DO - FS-DI2	- DI, DO - FS-DI1 - SDCI - SDCI + SDCI-FS


417

5 FS-Devices are based on electronics and not on relays. Thus, the electronic version OSSDe is considered.

#### 418 4.1.5 Port class B

419 A Port class B provides for an extra 24 V power supply for actuators supplementing the main  
 420 24 V power supply of SDCI. See IEC 61131-9 for constraints on this extra power supply  
 421 especially the requirement for electrical isolation of Power 2 from Power 1.

422 Figure 10 shows the pin layout, signal, and power supply assignment as well as the internal  
 423 switch for L+.

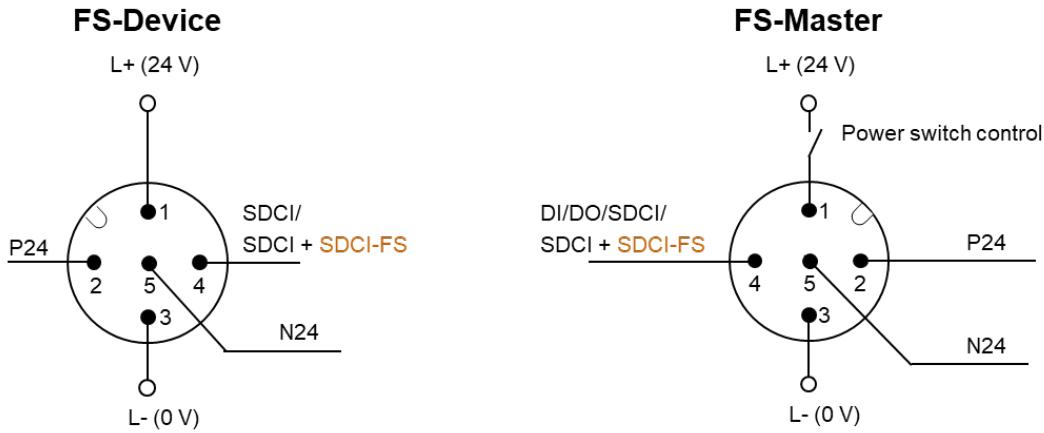


424  
425 **Figure 10 – Level "d" of an FS-Master (Class B)**

#### 426 4.1.6 "USB-Master" with safety parameterization

427 It is possible to use upgraded "USB-Masters" for off-site configuration, parameterization and  
 428 test as shown in Figure 11.

429 Due to functional safety requirements, it will be necessary to extend the Master-tool software  
 430 for the functional safe configuration and parameterization of the FS-Device technology (FST-  
 431 Parameters). See Annex F.4.1 for use case.

432 Table 2 shows the device types that can be supported by such a "USB-Master".

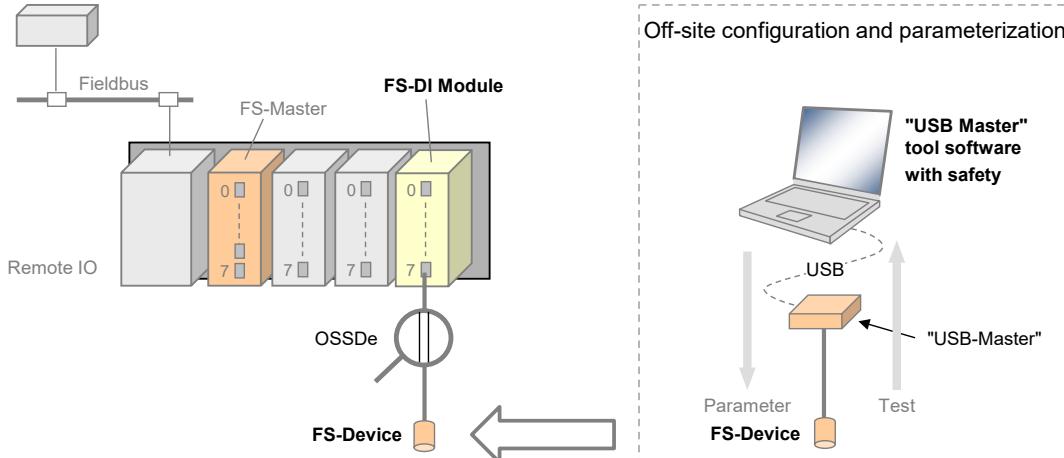

433  
434 **Figure 11 – Off-site configuration and parameterization**

#### 435 4.1.7 Interoperability matrix of safety devices

436 Table 2 provides an overview of typical safety sensors and actuators and their interoperability  
 437 with FS-Masters of different feature levels, a "USB-Master" upgraded to safety parameterization,  
 438 and conventional FS-DI modules connected to FSCPs.

439

**Table 2 – Interoperability matrix of safety devices**

Device type	FS-Master			"USB-Master" with safety parameterization	FS-DI module (FSCP)
	Communication "a"	OSSDe tolerated "b"	OSSDe supported "c"		
Sensor with OSSDe	-	-	OSSDe	-	OSSDe
Sensor with OSSDe and SDCI	-	-	OSSDe	SDCI <sup>a</sup>	OSSDe
Sensor with OSSDe and SDCI-FS	SDCI-FS	SDCI-FS	OSSDe or SDCI-FS	SDCI	OSSDe
Sensor with SDCI-FS communication only, e.g. light curtain	SDCI-FS	SDCI-FS	SDCI-FS	SDCI	-
Sensor with OSSDm, e.g. E-Stop	-	-	-	-	OSSDm
Actuator with SDCI-FS, e.g. 400 V power drive, low voltage switch gear	SDCI-FS	SDCI-FS	SDCI-FS	SDCI	-
Key SDCI-FS = SR and NSR data exchange a Pin layout may differ	USB = Universal Serial Bus, currently the most common interface amongst possible others for offsite parameterization tools due to fast communication combined with power supply				


440

## 4.2 Positioning within the automation hierarchy

Figure 12 shows the positioning of SDCI-FS within the automation hierarchy.

Classic safety is relay based and thus seemed to be straightforward, easily manageable, and reliable. However, the same criteria that led to the success of fieldbuses, led to the success of functional safety communication profiles (FSCP) on top of the fieldbuses also: reduced wiring, variable parameterization, detailed diagnosis, and more flexibility. SDCI is the perfect complement to the fieldbus communication and bridges the gap to the lowest cost sensors and actuators. It not only provides communication, but power supply on the same flexible and unshielded cable. One type of sensor can be used in the traditional switching mode or in the coded switching mode (communication).

SDCI-FS follows exactly this paradigm with its OSSDe.

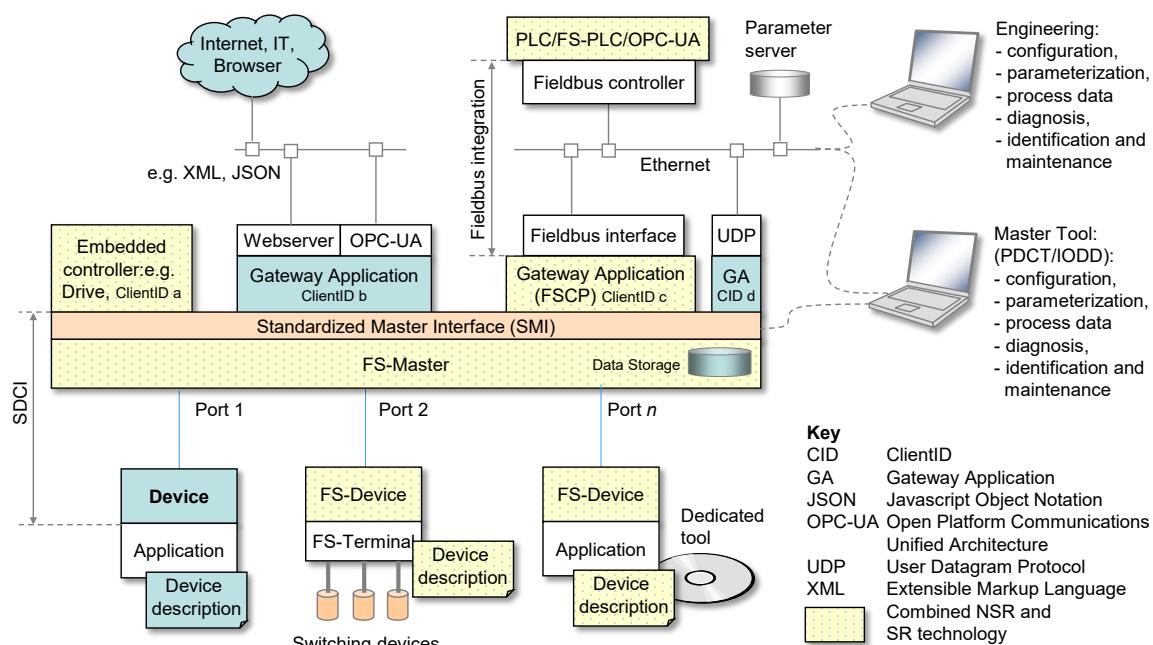

452

453

**Figure 12 – SDCI-FS within the automation hierarchy**

454 It aims for two main application areas. One is building up safety functions across the SDCI-FS  
455 communications and the functional safety communications across fieldbuses. The other builds  
456 up safety functions "locally" between an "embedded" safety controller and safety sensors/actua-  
457 tors using SDCI-FS communication.

458 SDCI-FS allows for building up power saving FS-Devices ("green-line"), for self-testing safety  
459 sensors in order to avoid yearly testing, for the reduction of interface types (e.g. 0 to 10 V, 4 to  
460 20 mA, etc.), and for robust and reliable transmission of safety information.

461 Finally, it is a precondition for new automation concepts such as Industry 4.0 or the Internet-of-  
462 Things (IoT).

#### 463 **4.3 Wiring, connectors, and power supply**

464 Port class A types (3 to 4 wires): Cables and connectors as specified in IEC 61131-9 for Class  
465 A can be used for SDCI-FS also. However, due to the higher permitted power supply current of  
466 up to 1000 mA per Port, the overall loop resistance  $RL_{eff}$  can only be 1,2 Ohm. No shielding is  
467 required.

468 Port class B types (5 wires): Cable, wire gauges, shielding, maximum switched currents,  
469 interference, signal levels, etc. are not specified within this document.

#### 470 **4.4 Relationship to SDCI**

471 The SDCI communication and its SIO mode are used as the base vehicle ("black channel") for  
472 SDCI-FS. Besides SDCI-FS, any FS-Master Port can also be configured for standard SDCI  
473 operation.

474 Another new Port configuration mode enables the SDCI-FS communication. Standard state  
475 machines are slightly extended to support

- 476 • detection of a Ready pulse from the FS-Device on Pin 4;
- 477 • power supply (Pin 1) switching OFF/ON in case an FS-Device missed the Wake-up  
478 sequence and started its OSSDe operation;
- 479 • transmission of functional safety protocol parameters (FSP) during PREOPERATE from  
480 FS-Master to the FS-Device;
- 481 • activation of the SDCI-FS communication layer (SCL);
- 482 • activation of the FS Process Data Exchange within the Safety Layer Manager:

#### 484 **4.5 Communication features and interfaces**

485 FS Process Data from and to an FS-Device are always packed into a safety code envelop  
486 consisting of the Port number, a safety PDU counter, protocol Control/Status information, and  
487 a CRC signature. The minimum safety PDU size is 4 octets in case of no FS Process Data.  
488 SDCI-FS uses M-Sequence TYPE\_2\_V.

489 Only a subset of the SDCI data types is permitted: Boolean (packed as record), IntegerT(16),  
490 and IntegerT(32).

491 Parameterization within the domain of safety for machinery requires a "Dedicated Tool" per FS-  
492 Device or FS-Device family. The Device Tool Interface (DTI) based on proven technology has  
493 been chosen for the links between FS-Master Tool, FS-Device, and its "Dedicated Tool". The  
494 FS-Master Tool shall provide communication means for a "Dedicated Tool" to allow for the  
495 transmission of safety technology parameters (FST parameters) to and from an FS-Device. The  
496 "Dedicated Tool" and the FS-Device are both responsible for sufficient means to secure the  
497 transmitted data, for example via CRC signature or read-back.

#### 498 **4.6 Parameterization**

499 SDCI-FS comprises a three-tier concept. The first tier is IODD based and contains all basic  
500 non-safety parameters for a Device or FS-Device.

501 The second tier requires an extension of the IODD for the fixed set of protocol parameters  
502 (FSP). These parameters are safety-related and secured via CRC signature against unintended  
503 changes of the IODD file. The interpreter of the FS-Master Tool provides a safety-related  
504 extension for the handling of the FSP parameters. Usually, the FS-Master Tool is able to  
505 determine and suggest the FSP parameter assignments (instance values) automatically and  
506 thus relieves the user from assigning these values initially. He can check the plausibility of the  
507 values and modify them if required.

508 The third tier deals with technology specific safety parameters (FST) of an FS-Device. SDCL-  
509 FS classifies two types of FS-Devices. Type "basic" requires only a few orthogonal FST  
510 parameters, whereas type "complex" can have a number of FST parameters requiring business  
511 rules and verification or validation wizards. Usually, the latter comes already with existing PC  
512 software ("Dedicated Tool") used for several functional safety communication profiles for  
513 fieldbuses.

514 The FST parameters for type "basic" are coded as any non-safety parameter within the IODD.  
515 They can be modified and downloaded to the FS-Device as usual. However, a diverse second  
516 path allows for checking these assignments for correctness. At the end of a parameterization  
517 session, the user launches a safety-related "Dedicated Tool" (FS-IOPD) for the calculation of a  
518 CRC signature across all FST instance values provided by the FS-Master Tool.

519 For both types of FS-Devices, the "Dedicated Tool" presents a CRC signature, which the user  
520 can copy into one of the FSP parameters. Upon reception of the FSP parameters at start-up,  
521 the FS-Device calculates a CRC signature across the locally stored instance values and  
522 compares it with the received CRC signature.

523 This method is used also for the check after using the SDCL Data Storage mechanism.

#### 524 **4.7 Role of FS-Master and FS-Gateway**

525 The role of the FS-Master is extended to safe monitoring of Process Data, transferred to and  
526 from FS-Devices with respect to timeliness, authenticity, and data integrity according to IEC  
527 61784-3:2021. Concerning authenticity, it uses the authenticity code assigned to the FS-Master  
528 by the upper-level FSCP system and the Port number. This prevents from local Port related  
529 misconnections and misconnections whenever several FS-Masters are located side by side.

530 An FS-Master can be equipped by a safety controller, for example according to IEC 61131-6,  
531 or vice versa, and thus build-up a stand-alone safety system with its own complete safety  
532 functions.

533 With the help of an FS-Gateway in conjunction with the FS-Master, safety functions can be  
534 build-up across the upper-level FSCP system using the safety sensors and actuators connected  
535 to the FS-Master.

#### 536 **4.8 Mapping to upper-level systems**

537 Specification of the mapping to an upper-level FSCP system is the responsibility of the fieldbus  
538 organization. SDCL-FS made provisions to meet the majority of FSCPs for example via reduced  
539 number of data types, descriptions of safety IO data, Port selective passivation, and operator  
540 acknowledgment signals to prevent from automatic restart of machines.

#### 541 **4.9 Structure of the document**

542 The structure of this document complies mostly with the structure of IEC 61131-9. Clause 5  
543 specifies the extensions to the Physical Layer (PL), mainly the OSSDe/FS-DI issues, the wake-  
544 up behavior, and the additional Port modes. Extensions to SIO are specified in Clause 6, those  
545 to data link layer (DL) in Clause 7, those to system management (SM) in Clause 8, those to the  
546 FS-Device in Clause 9, and those to the FS-Master in Clause 10.


547 The core part of this document is the safety communication layer (SCL) in Clause 11. It  
548 comprises the SCL services, protocol, state machines, and management. In addition, it deals  
549 with integrity measures, with protocol (FSP) and technology (FST) parameters, with the  
550 integration of "Dedicated Tools" via Device Tool Interface (DTI) technology, with Port selective  
551 passivation, and with SCL diagnosis. Clause 12 complements the core part by functional safety  
552 processing either through mapping to the upper-level system or local.

553 Extensions to parameters and commands are specified in Annex A, those to EventCodes in  
 554 Annex B, and those to data types in Annex C. CRC polynomial issues are presented in Annex D,  
 555 the IODD aspects in Annex E, the Device Tool Interface technology in Annex F, main scenarios  
 556 in Annex G, and the system requirements in Annex H. Annex I provides information on test and  
 557 assessment. Annexes A, C, D, and E are safety related.

## 558 5 Extensions to the Physical Layer (PL)

### 559 5.1 Overview


560 Figure 13 shows the adapted physical layer of an FS-Master (class A).

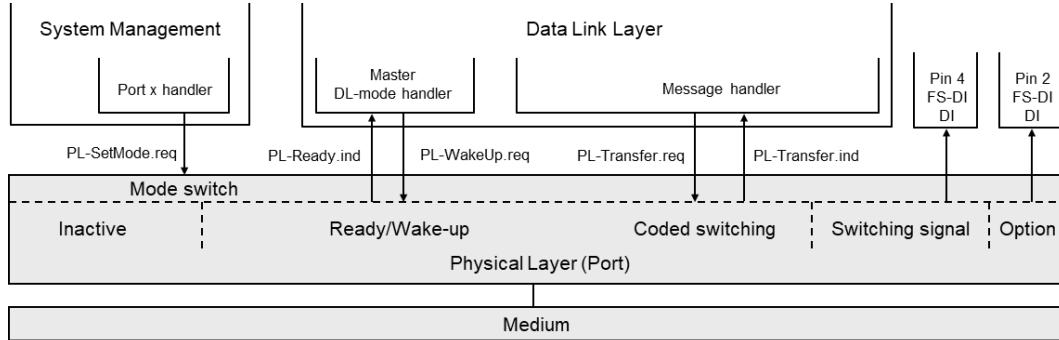

562 **Figure 13 – The SDCI physical layer of an FS-Master (class A)**

563 Pins 2 and 4 shall be scanned simultaneously to achieve FS-DI functionality. The FS-Master  
 564 shall scan the C/Q line for the Ready signal of the FS-Device (see A.2.11).

565 Figure 14 shows the adapted physical layer of an FS-Device (class A).

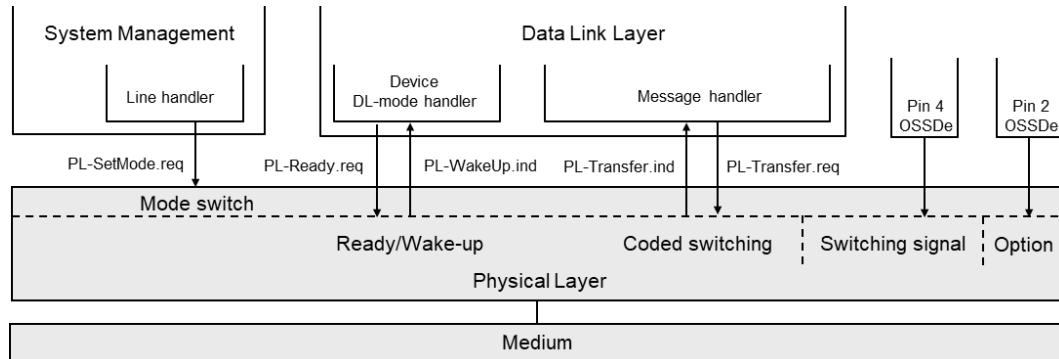

567 **Figure 14 – The physical layer of an FS-Device (class A)**

568 Pins 2 and 4 carry the OSSDe signals. FS-Device shall set the Ready pulse after internal  
 569 testing.

## 570 5.2 Extensions to PL services

### 571 5.2.1 PL\_SetMode

572 The PL-SetMode service is extended by the additional TargetMode "FS-DI" (C/Q line and I/Q  
 573 line in digital input mode).

### 574 5.2.2 PL\_Ready

575 The PL-Ready service initiates or indicates a Ready signal on the C/Q line. Whenever the FS-  
 576 Device finished its internal safety-related hardware and software tests, it sets this signal. The  
 577 FS-Master polls this signal and upon reception initiates the wake-up sequence. This  
 578 unconfirmed service has no parameters. The service primitives are listed in Table 3.

579

**Table 3 – PL\_Ready**


Parameter name	.req	.ind
<none>		

580

### 5.3 Transmitter/receiver

#### 5.3.1 Assumptions for the expansion to OSSDe

Figure 15 shows the cross compatibility between OSSD based safety sensors and OSSDe based FS-Devices.

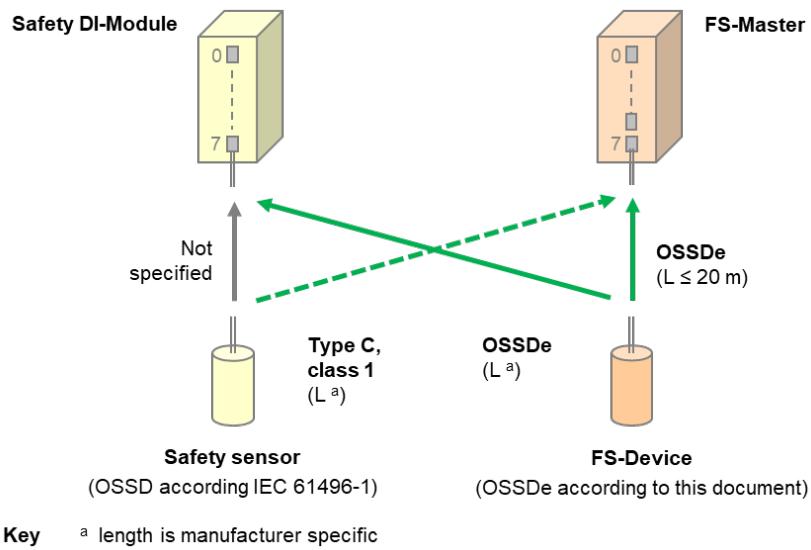

585

**Figure 15 – Cross compatibility OSSD and OSSDe**

The following assumptions are the basis for the design of the OSSDe expansion:

- The SIO paradigm of SDI shall apply for SDI-FS in order to allow manufacturers the combined function of OSSDe and SDI-FS communication within one FS-Device.
- A Port on the FS-Master (with "FS-DI" according to Figure 9) shall have fixed configurations as either SDI-FS or FS-DI interface with no or minor adjustments in respect to addressing, watchdog times, discrepancy times, or filter times.
- In order to allow OSSD based sensors on the market to be connected to the FS-Master, the FS-DI interface shall support an exactly specified interface.
- The FS-DI interface shall only be designed as input for the FS-Master Port (safety sensors, Class A connectors). Most actuators are supplied by three-phase alternating current such as power drives, low voltage switch gears, motor starters, etc.


#### 5.3.2 OSSDe specifics

##### 5.3.2.1 General

Similar to the SIO approach, FS-Master according to level "c" support connectivity to existing functional safety devices with OSSDe. OSSDe in this document is defined as two outputs with signals that are both switching in equivalent manner as opposed to antivalent manner, where one signal is normally off and the other normally on (OSSDm).

The FS-Master Port is designed to achieve a maximum of possible compatibility to existing OSSD devices.

Figure 16 shows a corresponding reference model adapted to SDI-FS. The information- "source" on the left corresponds for example to a sensor device, whereas the information- "sink" on the right side represents an input of the FS-Master Port class A. Power is supplied by the sink.

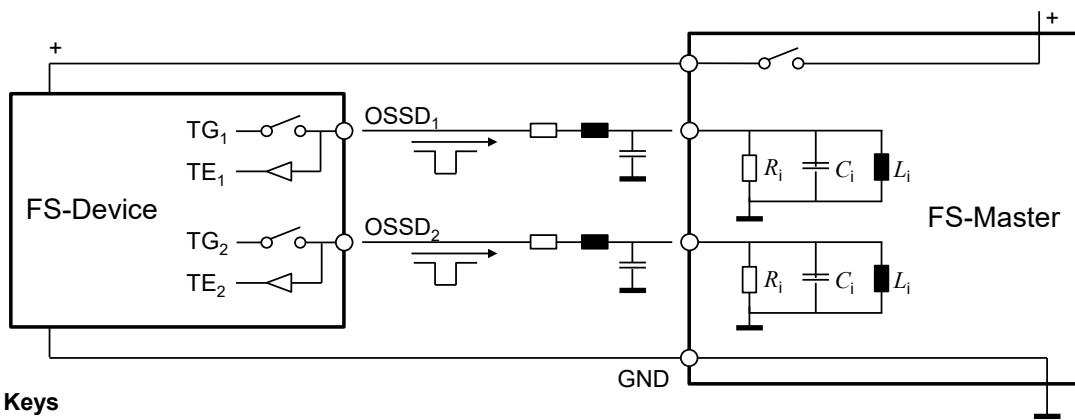

610

**Figure 16 – Principle OSSDe function**

612 The worst-case values for the line resistance and capacitance are defined in Table 8. In case  
 613 of SDCI-FS, line inductance is negligible at a length of 20 m. The design of the FS-Master Port  
 614 shall ensure values for  $R_i$ ,  $C_i$ , and  $L_i$  guaranteeing proper signal behavior according to Table 7.

615 Table 4 shows the OSSD states and conditions defined in IEC 61496-1:2020.

**Table 4 – OSSD states and conditions**

State	Cause	Voltage range	Current
OFF	Demand	- 3 V to + 2 Vrms (+ 5 V peak)	< 2 mA (leakage) NOTE
ON	No demand	+ 11 V to + 30 V	> 2 mA
NOTE IEC 61131-9 permits 5 mA for the voltage range of 5 V to 15 V			

617 **OFF state:**

618 For this interface, the OFF state is defined as the "powerless" state, where voltage and current  
 619 of at least one OSSDe shall be within (voltage) and below (current) defined limits (see Table  
 620 4). If the safety function is demanded, or the source (the device) detects a fault, the OSSDe  
 621 signals shall go to the OFF state. Antivalent voltage levels, so-called discrepancy, on both  
 622 OSSDe outputs of the device shall be treated as OFF state. The duration of this state shall be  
 623 within a specified discrepancy tolerance time. If the tolerance time is exceeded, the Port is  
 624 considered to be faulty.

625 **ON state:**

626 For this interface, the ON state is defined as the "powered" state, where voltage and current on  
 627 both OSSDe outputs shall be within the voltage range and above defined current limits, when  
 628 sunked by IEC 61131-2 inputs (see Table 4). Test pulses within specified ranges in voltage  
 629 levels, durations and intervals are permitted. Antivalent voltage levels, so-called discrepancy,  
 630 on both OSSDe outputs of the device shall be treated as OFF state.

631


### 5.3.2.2 Detection of cross connection faults

Tests are required for the detection of the cross-connection faults specified in IEC 61496-1 and shown in Table 5.

**Table 5 – Cross connection faults**

Fault	Diagnostics
Short circuit between OSSD 1 and OSSD 2	Test pulses (runtime diagnosis)
Short circuit between OSSD 1 or OSSD 2 and V+	Test pulses (runtime diagnosis)
Short circuit between OSSD 1 or OSSD 2 and V-	Test pulses (runtime diagnosis)
Open circuit of the power supply return cable (V-)	Type test, maximum leakage current
Open circuit of the functional earth (bonding) conductor	Type test, no functional earth
Open circuit of the screen of screened cable	Not required due to no shielding
Incorrect wiring	Discrete wiring only, organizational issue (test during commissioning)

The means for detecting short circuits are test pulses at runtime. The means for testing the behavior in case of open circuits is the type test during the assessment. Figure 17 shows the test pulses approach for the detection of cross connection faults. A cross fault occurs if at least one channel detects signal high during the test pulse.

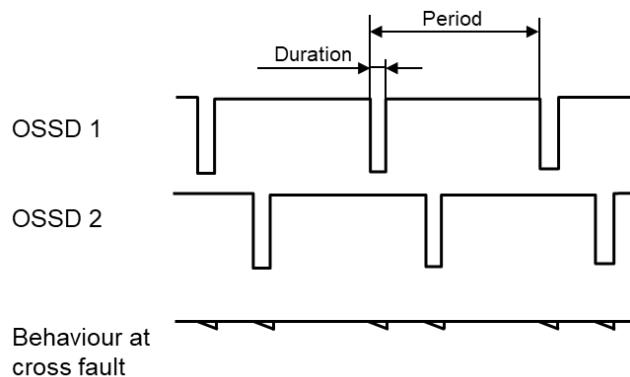

**Figure 17 – Test pulses to detect cross connection faults**


Three methods of testing (intervals) are commonly used:

- Test pulses at each program cycle of the safety device (dependency on configuration)
- Test pulses at fixed times
- Test pulses after any commutation OFF → ON

### 5.3.2.3 FS-Device OSSDe output testing

The test pulses of this interface type for testing the transmission line are created and evaluated on the safety device side. This way the source can diagnose the correct functioning of the output stage. In case of any detected error both OSSDe outputs shall be switched to the safe state (Lock-out condition = OFF).

The test pulses are created in a periodic manner on both OSSD lines. In order to detect short circuits between the lines or between the lines and power-supply, the test pulses of both lines can be time-shifted to each other (see Figure 18).

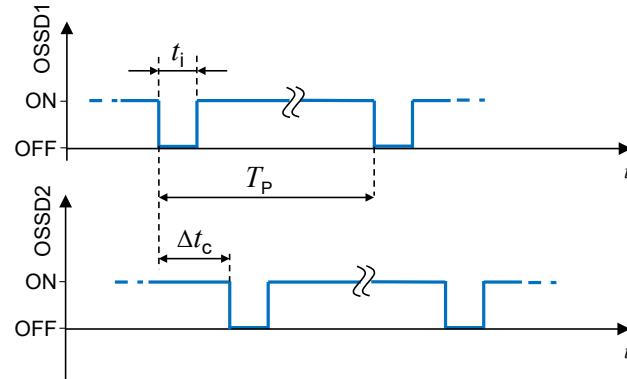

655

656 **Figure 18 – OSSD timings**


657 The following parameters specify the characteristics of the test pulses on the OSSD interface:

- 658 • Period of test pulses ( $T_P$ )
- 659 • Duration of test pulses ( $t_i$ )
- 660 • Time-shift between test pulses of both channels ( $\Delta t_c$ )


661 FS-Devices shall implement a test pulse length  $t_i \leq 1000 \mu\text{s}$  (see Table 6).662 **5.3.3 Start-up of an FS-Device (Ready pulse)**

663 Figure 19 shows the typical start-up sequence of an OSSD sensor without SDCl-FS capability.  
 664 During self-test for functional safety, both OSSD signals shall be OFF. When finished, the  
 665 sensor switches to ON and starts test pulses. A demand causes the sensor to switch OFF. A  
 666 fault causes the sensor to switch to lock-out condition (OFF) and to remain in this state until  
 667 repair.

668 NOTE For simplicity, the figure shows only one OSSD channel.

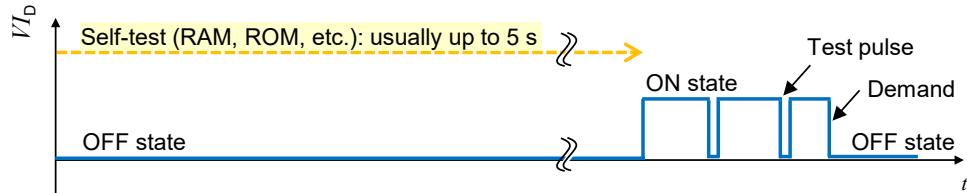

669

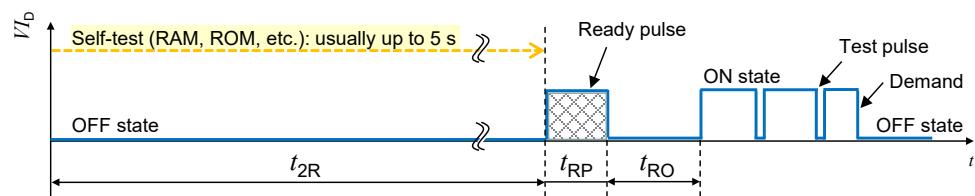670 **Figure 19 – Typical start-up of an OSSD sensor**671 Figure 20 shows the start-up of an FS-Device with OSSDe capability connected to a classic FS-DI module.  
 672

673

674 **Figure 20 – Start-up of an FS-Device**

675 In contrast to a classic sensor, the FS-Device provides only on pin 4 (see Figure 9) a so-called  
 676 Ready-pulse of a certain length to indicate the FS-Master its readiness after self-testing. After  
 677 a certain recovery time, the FS-Device switches to ON and starts test pulses like a classic  
 678 safety sensor.

679 Timings and Wake-up behavior of the FS-Device are specified in 5.7.

680      **5.3.4 Extensions to electric characteristics of a receiver in FS-Device and FS-Master**

681      The FS-Master ignores pulses below 11 V (max. 15 mA or max. 30 mA) that are shorter than  
682      1 ms.

683      **5.4 Extensions to electric and dynamic characteristics of an FS-Device**

684      In general, the specified values and ranges of IEC 61131-9 apply.

685      The electric and dynamic parameters for the OSSDe interface of an FS-Device are specified in  
686      accordance with IEC 61131-9. Extensions see Table 6.

687      **Table 6 – Extension to electric and dynamic characteristics of the FS-Device (OSSDe)**

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
$IS_D$	DC current on L+	n/a	n/a	1000	mA	See 5.9 See NOTE 3
$t_{2R}$	Time to Ready pulse	n/a	n/a	5 (default), > 5 to 655 as exception	s	See Figure 20 and A.2.11
$t_{RP}$	Duration of Ready pulse	500	n/a	1000	μs	See Figure 20
$t_{RW}$	End of Ready pulse to ready for Wake-up	n/a	n/a	50	μs	See Figure 23
$t_{RO}$	End of Ready pulse to OSSD mode	1,1	n/a	Data sheet	s	See Figure 20
$T_P / t_i$	Test pulse period factor	100	n/a	n/a	–	See Figure 18 NOTE 4
$t_i$	Test pulse duration	n/a	n/a	1000	μs	See Figure 18 NOTE 5
$\Delta t_c$	Time-shift	0	n/a	Data sheet	ms	See Figure 18
$t_{disD}$	Discrepancy time	n/a	n/a	Data sheet	–	Demands may occur during tests

NOTE 1 Pull-down of residual voltage with deactivated high-side output driver stage and activated low-side driver stages (if available e.g. push-pull drivers) with externally limited DC driver current of 50 mA maximum

NOTE 2 Characteristics in this table assume interface type 1 according to IEC 61131-2

NOTE 3 The average DC current on L+ must not exceed 1000 mA. During the switching slopes (0.2 \* Tbit) on C/Q an overcurrent on L+ must not exceed 2000 mA. Transients on the L+ current are in general allowed to be 1500 mA for a maximum of 5 μs.

NOTE 4 If Test pulse period factor is less than 100 it shall be described in the data sheet.

NOTE 5 Characteristics assume OSSD type "C", class "1" in [6]

688

689      It is the responsibility of the FS-Device designer to select appropriate ASICs according to IEC  
690      61131-9 and/or to provide mitigating circuitry to meet the requirements of IEC 61496-1.

691      The FS-Device shall be able to reach a stable operational state (ready for Wake-up:  $T_{RDL}$ ) while  
692      consuming the maximum charge (see equation (1)).

$$QIS_D = ISIR_M \times 50 \text{ ms} + (T_{RDL} - 50 \text{ ms}) \times IS_M \quad (1)$$

693

694      **5.5 Extensions to electric and dynamic characteristics of an FS-Master Port (FS-DI)**


695      In general, the specified values and ranges of IEC 61131-9 apply. The definitions in Table 7  
696      extend these for the electrical characteristics of an FS-Master Port.

697

**Table 7 – Extensions to electric and dynamic characteristics of the Port interface**

Property	Designation	Minimum	Typical	Maximum	Unit	Remark
$IS_M$	Supply current for FS-Devices (DC current on L+)	200	n/a	1000	mA	Rules in 5.9. shall be considered
$t_i$	Test pulse duration	n/a	n/a	1	ms	See Figure 18 NOTE 1 NOTE 2
NOTE 1 Test pulses are generated by the OSSD device. The FS-Master has to consider this value for an appropriate input filter design. (See 5.6)						
NOTE 2 Characteristics assume OSSD type "C", class "1" in [6]						

698 The Master shall provide a charge of at least 20 mAs within the first 50 ms after a power-on  
 699 time of 5 ms without any overload-shutdown (see Figure 21). After 50 ms the current limitations  
 700 for  $IS_M$  in Table 7 apply.

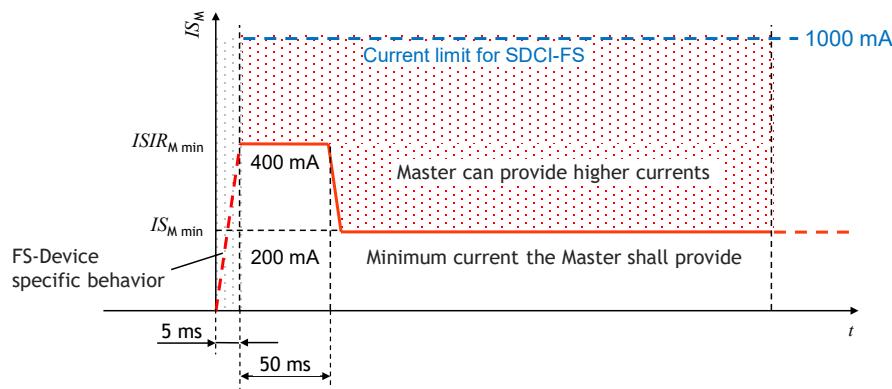

701


**Figure 21 – Charge capability at power-up**

## 5.6 FS-Master Port FS-DI interface

704 Since OSSD safety sensors can provide different test pulse patterns, the FS-Master Port shall  
 705 have a suitable input filter, or evaluation algorithm. For the sake of EMC considerations, a  
 706 combination of both can be used. This means, that the time, in which the signal is below  $U_{Hmin}$   
 707 shall be less than the maximum allowed test pulse duration.

708 Any state different to both signals "high", except test pulses, shall be interpreted as safe state.

709 The EMC levels shall be considered for the layout of an input filter. The communication  
 710 transmission rate 230 kbit/s conflicts with the input filter. Possible conflict resolution is shown  
 711 in Figure 22.

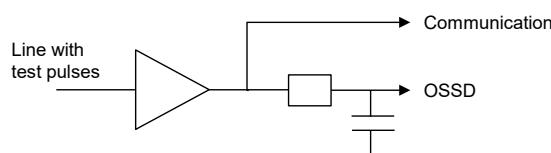

712

**Figure 22 – FS-DI input filter conflict resolution**


714 In general, the specified values and ranges of IEC 61131-9 apply. Basis is interface type 1 of  
 715 IEC 61131-2. Deviating and supplementary electric and dynamic parameters for the FS-DI  
 716 interfaces are specified in Table 7.

717 The following standards shall apply

- 718 - ISO 13849
- 719 - IEC 62061

## 5.7 Wake-up coordination

Figure 23 shows the start-up of an FS-Device (see IEC 61131-9 for standard timing definitions). After accomplished self-tests, it indicates its readiness for Wake-up through an ON/Ready pulse on the C/Q line (see A.2.11). If no Wake-up occurs within a defined time frame, it starts with test pulses (see Figure 19).

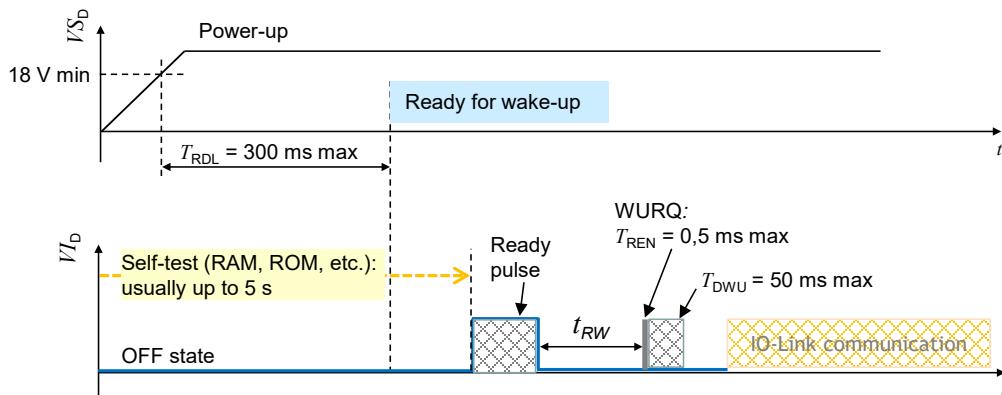


**Figure 23 – Start-up of an FS-Device**

NOTE Actually, some safety light curtain vendors offer activation of functionality if some connection conditions are activated during start-up phase (e.g. override)

## 5.8 Fast start-up

Figure 24 illustrates requirements for certain functional safety applications such as for a tool changer on a robot. A so-called fast start-up in non-safety cases shall be achieved within 0,5 s and in case of functional safety within 1 s.

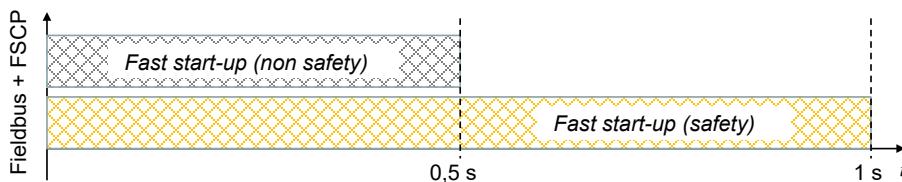

**Figure 24 – Required fast start-up timings**

NOTE Current safety devices usually require up to 5 seconds for self-testing prior to functional safe operation. The Ready-pulse concept allows for easier achievable realizations of these requirements (see A.2.11).

## 5.9 Power supply

An FS-Master Port shall be able to switch its power supply on and off. This enables the FS-Master to restart an FS-Device once it failed to establish communication and started OSSDe operation instead.

The FS-Master Port is the only power supply for SDCI related parts of the FS-Device. Any external power source of the FS-Device shall be totally nonreactive to these parts.

FS-Master shall provide all Ports with a minimum supply of 200 mA and at least one Port with a minimum supply of 1000 mA. The FS-Master shall specify the total maximum current consumption of all its Ports and the derating rules.

Higher currents can conflict with the power switching components and cause interference with the signal lines. The "ripple" requirement in Table 6 shall be considered. The overall cable loop resistance shall be not more than 1,2 Ω.

## 5.10 Medium

### 5.10.1 Constraints

For the sake of simplicity in technology and commissioning, SDCI-FS expects a wired point-to-point connection or equivalent consistent transmission and powering between FS-Master and an FS-Device. No storing elements in between the FS-Master port and the FS-Device port are permitted.

### 5.10.2 Connectors

Connectors as specified in IEC 61131-9 for Class A are permitted.

### 5.10.3 Cable characteristics

Table 8 shows the cable characteristics for SDCI-FS and non-safety Devices if higher power supply currents than 200 mA are applied.

**Table 8 – Cable characteristics**

Property	Designation	Minimum	Typical	Maximum	Unit
$L$	Cable length	0	n/a	20	m
$RL_{\text{eff}}$	Overall loop resistance	n/a	n/a	1,2	$\Omega$
$CL_{\text{eff}}$	Effective line capacitance	n/a	n/a	3,0	nF (<1 MHz)

NOTE These characteristics can deviate from the original characteristics defined in IEC 61131-9.

## 6 Extensions to SIO

SIO is only defined for Pin 4 of the Master/Device Port in IEC 61131-9. OSSDe requires inclusion of Pin 2 as specified in Clause 5. Configuration can be performed within the Master/Device applications layer (see Figure 28 and Figure 30).

For FS-Devices the meaning of SIO differs from IEC 61131-9. SIO means OSSDe without the IO-Link fallback mechanism. To achieve this the following rules apply:

- FS-Devices which implement OSSDe shall provide this information in the IODD using the attribute `sioSupported="true"`.
- Independent from OSSDe support all FS-Devices shall report "SIO mode not supported" to the IO-Link Master as described in B.1.6 of IEC 61131-9 to avoid fallback.

## 7 Extensions to the data link layer (DL)

### 7.1 Overview

Figure 28 and Figure 30 show the DL building blocks of FS-Device and FS-Master. No new or changed services are required. However, both DL-mode handlers are extended by the Ready-pulse feature as shown in 7.2 and 7.3.


### 7.2 State machine of the FS-Master DL-mode handler

Figure 25 shows the modifications of the FS-Master DL-mode handler versus the Master DL-mode handler in IEC 61131-9.

A new state "WaitOnReadyPulse\_10" considers the requirement for the FS-Master to wait on the Ready-pulse of an FS-Device (see 5.7) prior to establish communication via `DL_SetMode_STARTUP`.

The maximum waiting time is  $t_{2R}$  as defined in Table 6. Whenever the time expired, the FS-Master shall run a power-OFF/ON cycle for the connected FS-Device in order to initiate a retry for another Ready-pulse.

787 The criterion to use the extra path is the guard [safety], which is derived from the new Port  
 788 configuration "FS\_PortModes" (see 10.4.2).

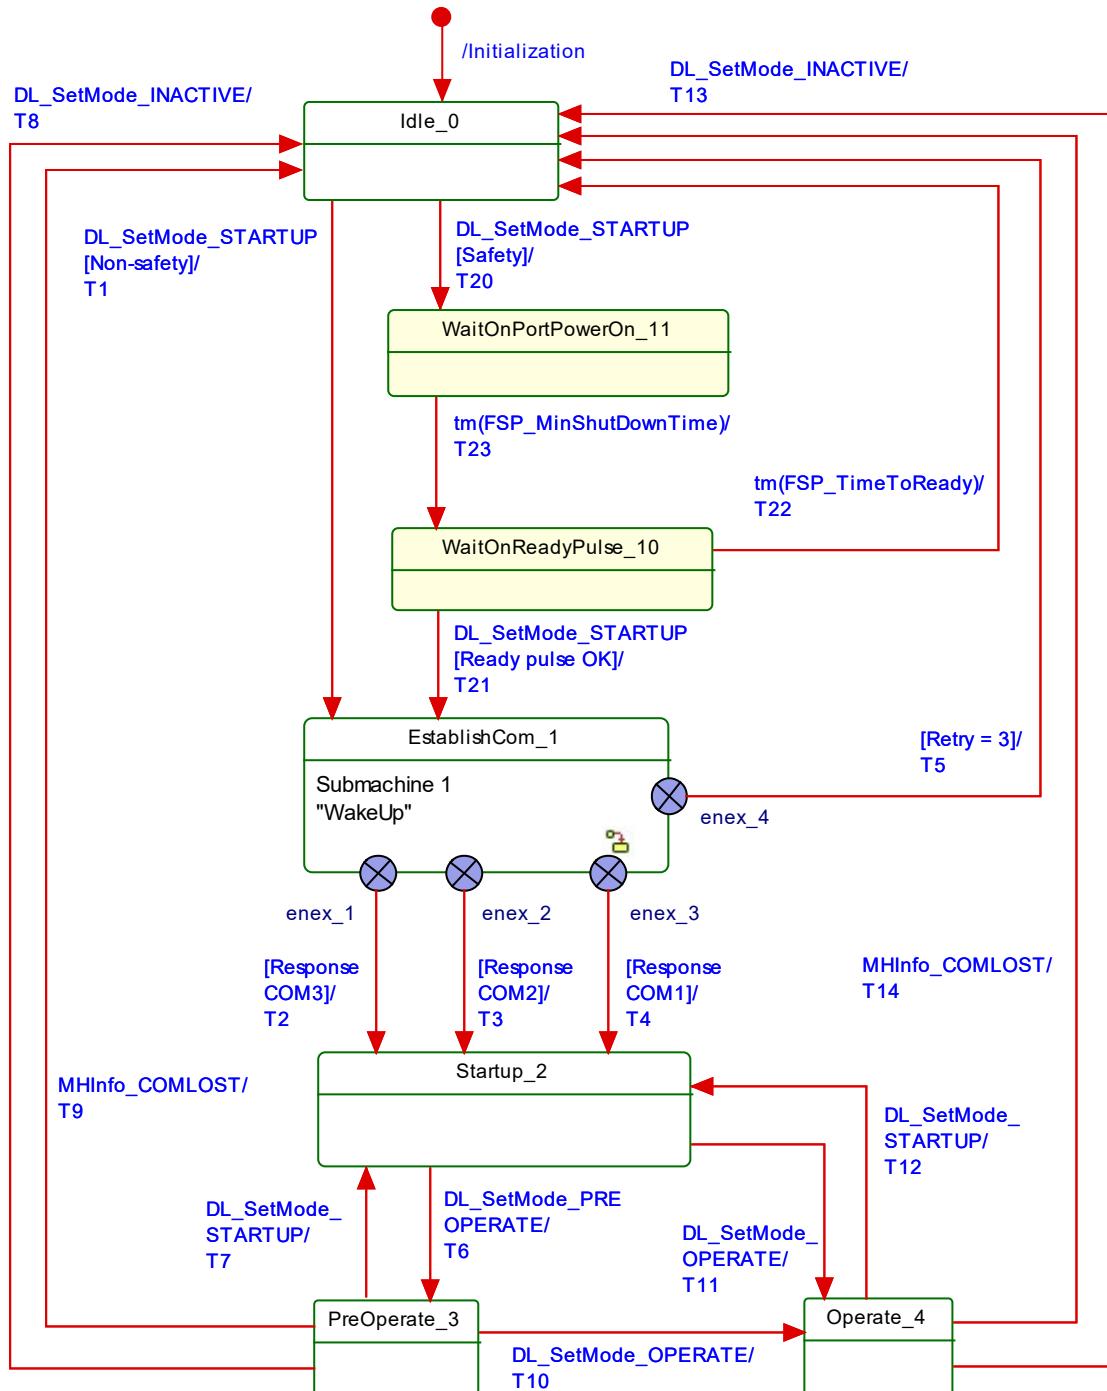

789

790

**Figure 25 – State machine of the FS-Master DL-mode handler**

791 Table 9 shows the additional state and transitions as well as internal items considering the  
 792 Ready-pulse feature.

793

**Table 9 – State transition tables of the FS-Master DL-mode handler**


STATE NAME	STATE DESCRIPTION
Idle_0 to SM: Retry_9	See Table 42 in IEC 61131-9:2022

STATE NAME		STATE DESCRIPTION	
WaitOnReadyPulse_10		Waiting on the Ready-pulse from FS-Device. A timer is started with the given value of the parameter FSP_TimeToReady within FSPortConfigList (see A.2.11 and 10.3.4).	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1 to T19	*	*	See Table 42 in IEC 61131-9:2022
T20	0	11	This path is taken only if the new configuration parameter "Safety" has been assigned to "SafetyCom" respectively and issue PortPowerOffOn (FSP_MinShutDownTime)
T21	10	1	Set Retry = 0.
T22	10	0	FS-Master was not able to detect a Ready-pulse within FSP_TimeToReady
T23	11	10	Wait for FSP_MinShutDownTime
INTERNAL ITEMS		TYPE	DEFINITION
MH_xxx to xx_Conf...		Call	See Table 42 in IEC 61131-9:2022
Safety		Guard	New configuration parameter "Safety": either value "SafetyCom"
Ready pulse OK		Guard	Ready pulse detected

796

### 7.3 State machine of the FS-Device DL-mode handler

Figure 26 shows the modifications of the FS-Device DL-mode handler versus the Device DL-mode handler in IEC 61131-9.

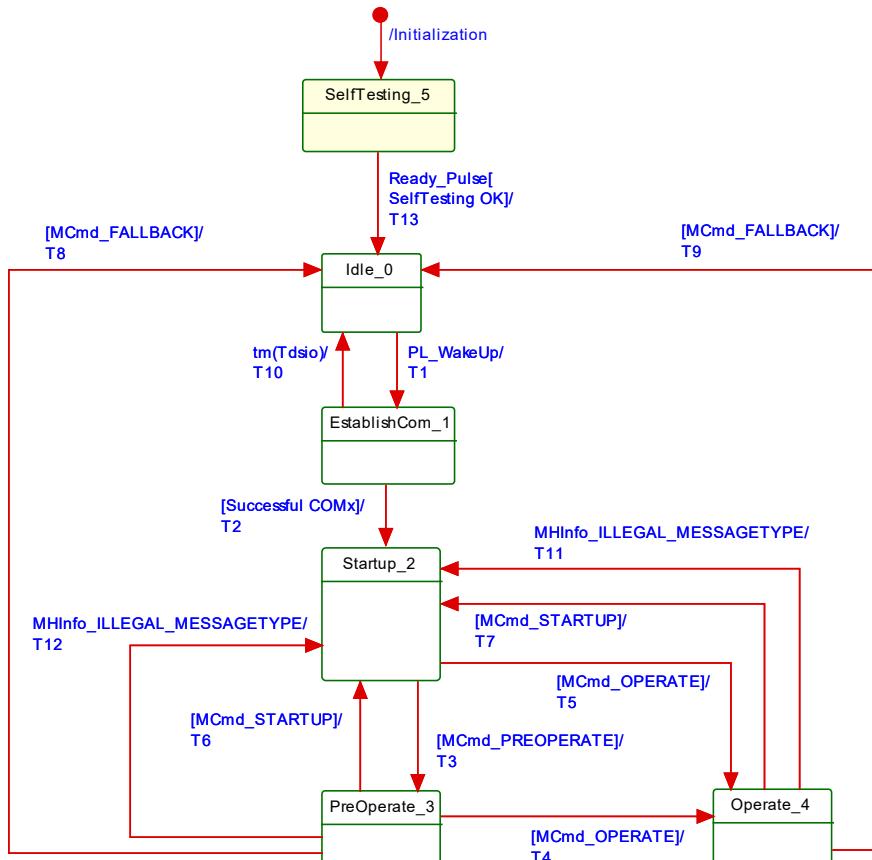

800

Figure 26 – State machine of the FS-Device DL-mode handler

802 A new state "SelfTesting\_5" considers the requirement for the FS-Device to indicate its  
 803 readiness for a wake-up procedure after its internal safety self-testing via a test pulse in pin 4.  
 804 Self-testing may actually take more than the maximum permitted start-up time  $T_{RDL}$  of a non-  
 805 safety Device (see 5.7).

806 **Table 10 – State transition tables of the FS-Device DL-mode handler**

STATE NAME		STATE DESCRIPTION	
Idle_0 to Operate_4		See Table 43 in IEC 61131-9:2022	
SelfTesting_5		Safety check through self-testing of µC, RAM, etc. This may take more than the permitted start-up time $T_{RDL}$ of a non-safety Device (see A.2.11).	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1 to T12	*	*	See Table 43 in IEC 61131-9:2022
T13	5	0	Create a signal (Ready_Pulse) on pin 4 for duration of $t_{RP}$ , when self-testing is completed (see $t_{2R}$ in Table 6).
INTERNAL ITEMS		TYPE	DEFINITION
$T_{RDL}$		Time	See Table 10 in IEC 61131-9:2022
$t_{RP}$		Time	See Table 6
Self-testing OK		Guard	Self-testing completed


807

808

809

## 8 Extensions to the Master Configuration Manager (CM)

One part of the integrity measures is a verification record (VerifyRecord) an FS-Master sends to the FS-Device during start-up as explained in 11.7.4 and shown in Figure 53. This requires an extension to the Configuration Manager as shown in Figure 27.

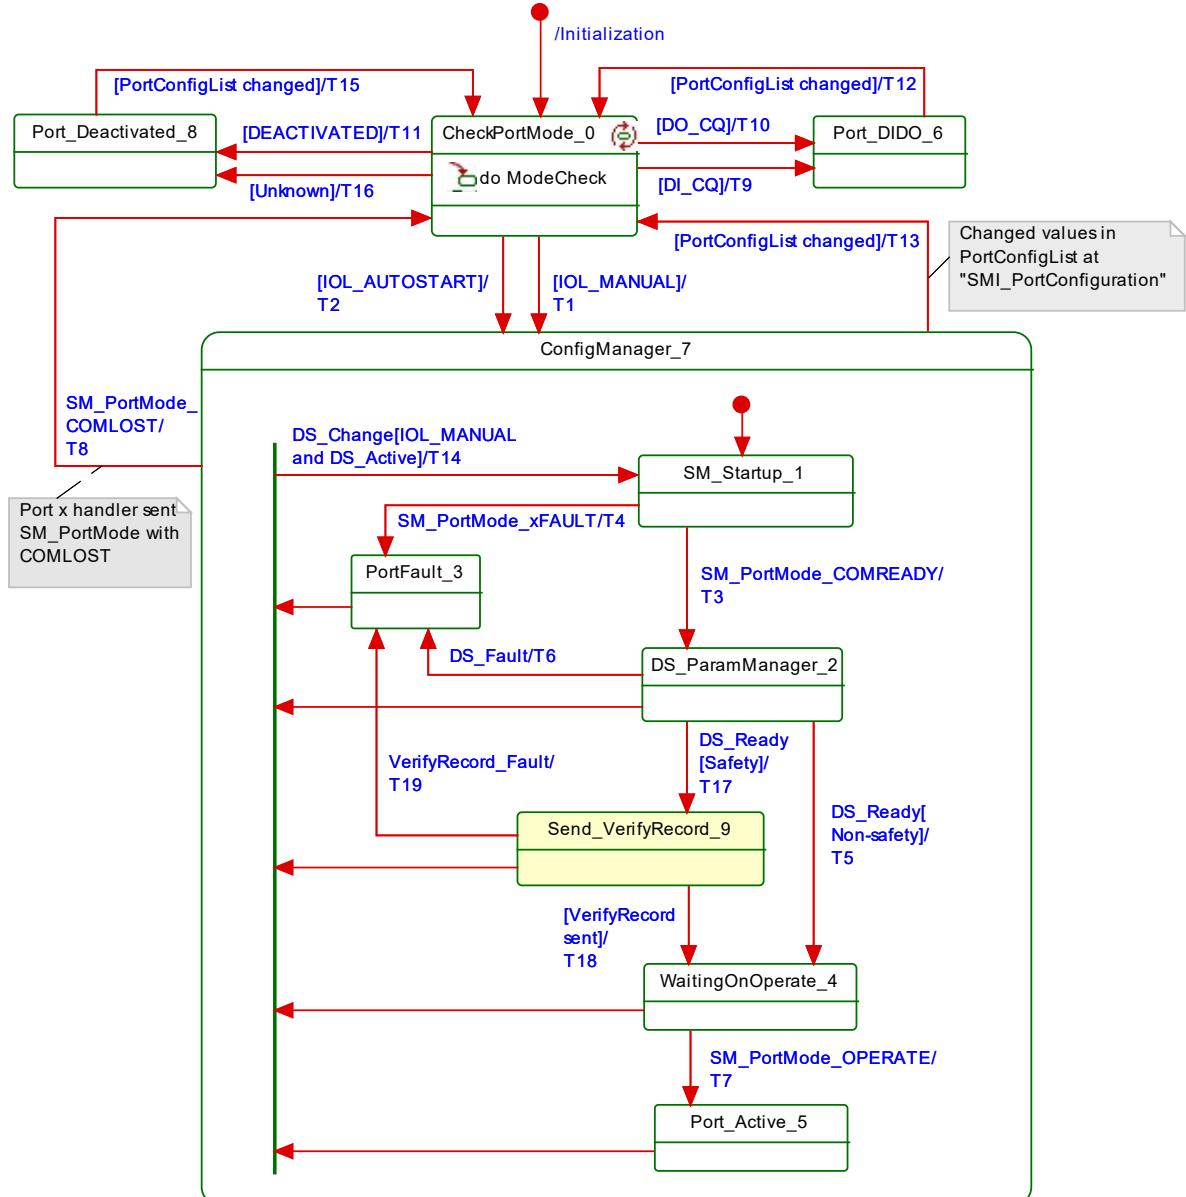

**Figure 27 – Extension to the Configuration Manager (VerifyRecord)**

A new state "Send\_VerifyRecord\_9" considers the requirement for the FS-Master to send the VerifyRecord and Table 11 the additional state, transitions, and internal items.

**Table 11 – State transition tables of the Configuration Manager**

STATE NAME	STATE DESCRIPTION
CheckPortMode_0 to Port_Deactivated_8	See Table 126 in IEC 61131-9:2022
Send_VerifyRecord_9	FS_Master sends its stored FSP_VerifyRecord to "hidden" Index 0x4202 (see A.2.10)

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1 to T16	*	*	See Table 43 in IEC 61131-9:2022
T17	2	9	–
T18	9	4	SM_Operate
T19	9	3	Update parameter elements of "PortStatusList": - PortStatusInfo = PORT_DIAG: Launch SMI_PortEvent with error 0x2007 - RevisionID = (real) RRID - Transmission rate = COMx - VendorID = (real) RVID - DeviceID = (real) RDID - Port QualityInfo = invalid
INTERNAL ITEMS	TYPE	DEFINITION	
Safety	Guard	FS-Device in FS mode	
Non-safety	Guard	FS-Device in non-FS mode	

820


821

## 9 Extensions of the FS-Device

### 9.1 Principle architecture and models

#### 9.1.1 FS-Device architecture

Figure 28 shows the principle architecture of the FS-Device. It does not include safety measures for implementation such as redundancy for the safety-related parts.

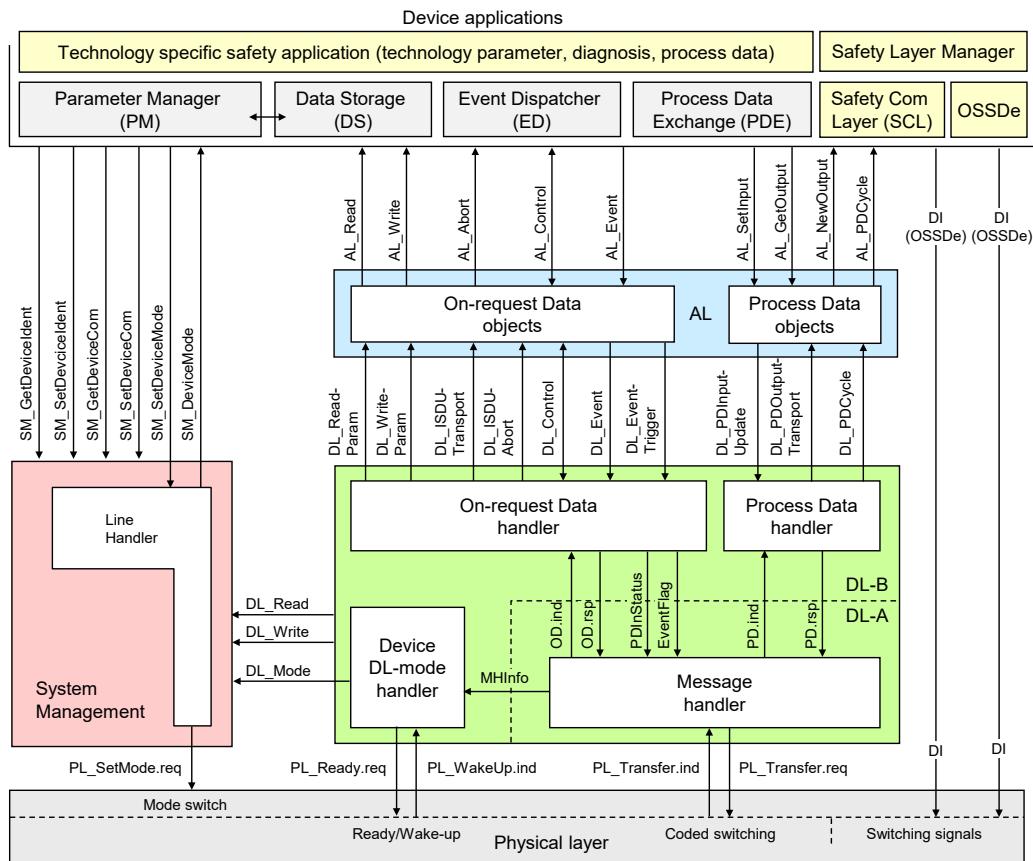

827

**Figure 28 – Principle architecture of the FS-Device**

An FS-Device comprises first the technology specific functional safety application. "Emergency switching off" safety devices for example can be designed such that "classic" OSSDe operation or safety communication can be configured. A Safety Layer Manager is responsible for the handling of a safety bit via the OSSDe building block or a safety PDU using the Safety Communication Layer (see Clause 11).

834 It checks correctness of parameters at each start-up of the FS-Device whenever the  
 835 FSP\_VerifyRecord has been written during PREOPERATE. The safety communication layer  
 836 (SCL) engine will be started if all parameters are verified to be correct. Otherwise, an error  
 837 message will be indicated and the SCL remains inactive or stops.


### 838 9.1.2 FS-Device model

839 According to the requirement of mixed NSR and SR parameter and process data, the FS-Device  
 840 model has been modified and adapted.

841 That means the FS-Device Index model is split into an NSR and an SR part. Figure 29 shows  
 842 the areas of concern. The allocation of the SR part ("FSP" parameter) is defined within the  
 843 IODD of the FS-Device.

844 During commissioning (the SCL is running), the assignment of FSP parameter values take  
 845 place. These instance values are secured by CRC signatures and transferred as record to the  
 846 FS-Master and to the FS-Device (see 11.7.4). At each start-up of an FS-Device, the stored  
 847 entire verification record (VerifyRecord) in the FS-Master is transferred in a diverse manner and  
 848 the FS-Device can check the locally stored instance parameter values for integrity via  
 849 comparison and CRC signatures. This check includes technology specific "FST" parameters,  
 850 which are not transferred at each start-up. The FS-Device displays its FSP parameters at  
 851 predefined Indices (see Figure 29).

852 Technology specific parameters (FST) could be handled either in an open manner to a certain  
 853 extend as standard non-safety parameters (see 11.7.8) or in a protected manner in hidden  
 854 internal memory (see 11.7.9).

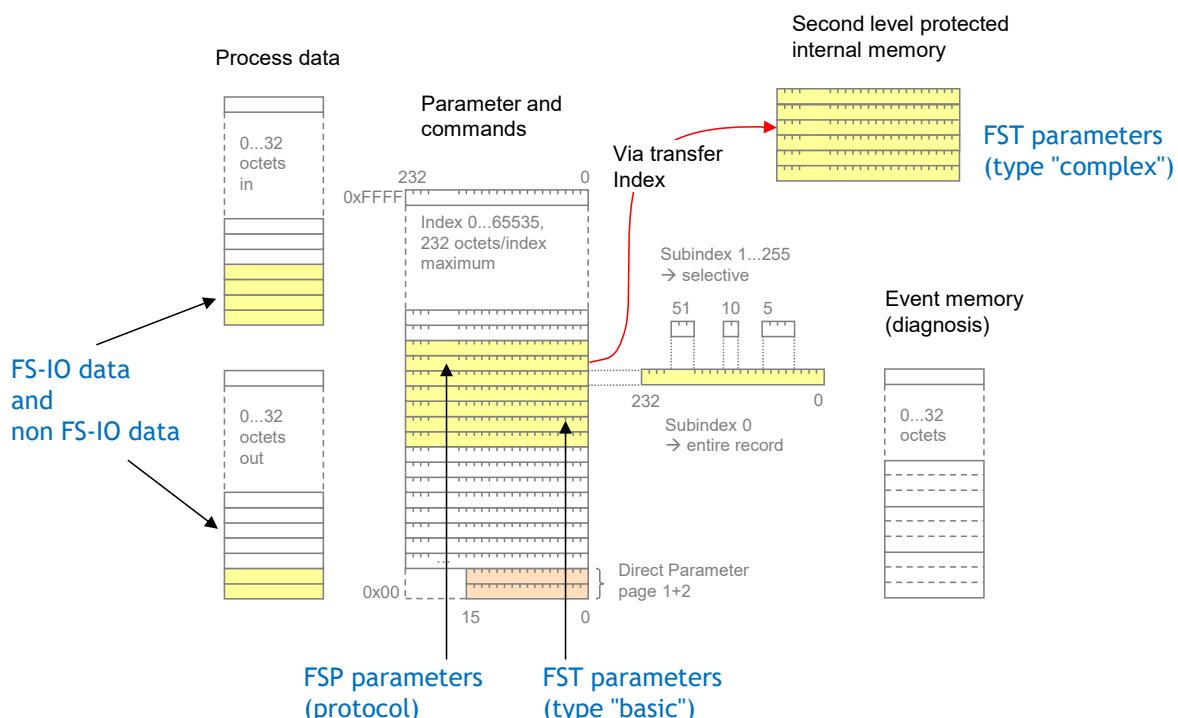

855  
856 **Figure 29 – The FS-Device model**

857 The maximum space for FS-I/O data and non-FS-I/O data to share is 32 octets. The space shall  
 858 be filled with FS-I/O data first followed by the non-FS-I/O data. The border is variable. Assuming  
 859 a maximum safety protocol trailer of 6 octets, the maximum possible space for FS-I/O data is  
 860 25 octets.

### 861 9.2 Parameter Manager (PM)

862 There are no extensions or modifications of the Parameter Manager required.

### 9.3 Process Data Exchange (PDE)

Depending on "Safety" configuration, Process Data Exchange takes over or passes FS-Process Data (see 11.4.3 Safety PDU) from/to the Safety Layer Manager.

### 9.4 Data Storage (DS)

#### 9.4.1 General considerations and extensions including safety

The technology specific (FST) parameters are secured by a particular CRC signature (FSP\_TechParCRC) included in the FSP parameter set. Additional authenticity parameters are used in case of FS-Device replacement.

The Data Storage mechanism for FS-Devices is based on the general mechanism for non-safety-related Devices as specified in IEC 61131-9. This version of Data Storage requires that Device Access Lock (Index 0x000C) bit "0" and "1" shall always be unlocked (= "0").

A small extension is required to the Data Storage (DS) state machine of the FS-Device with respect to the "Back-to-box" mechanism (authenticity values = "0"). Transition T8 in IEC 61131-9:2022 (see [24]), Table 100 considers this check as shown in Table 12.

**Table 12 – Extension to Data Storage (DS) state machine**

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1 to T8	*	*	See Table 100 in IEC 61131-9:2022
T9	3	2	<p>In case of Safety: if the device is not in "Back-to-box" mode, and the Command was "DS_Download_End", and there was a change in the FSP- and FST-Parameter or the device is configured for commissioning mode:</p> <ul style="list-style-type: none"> <li>- return 0x8022 – service temporarily not available – Device control.</li> <li>- Unlock local parameter access. Set State_Property = "Inactive"</li> </ul> <p>In all other cases:</p> <ul style="list-style-type: none"> <li>- Set DS_UPLOAD_FLAG = FALSE, unlock local parameter access</li> <li>- Set State_Property = "Inactive"</li> </ul>
T10 to T11	*	*	See Table 100 in IEC 61131-9:2022

Table 13 lists the Data Storage backup levels specified in IEC 61131-9. This Clause describes some specialties to be considered for functional safety.

**Table 13 – Data Storage Backup Levels**

Backup Level	Behavior
Commissioning ("Disable")	<p>Any change of active parameters within the Device will <i>not</i> lead to a backup of the Data Storage.</p> <p>Device replacement <i>without</i> automatic/semi-automatic Data Storage.</p>
Production ("Backup/Restore")	<p>Changes of active parameters within the Device will be copied/saved.</p> <p>Device replacement <i>with</i> automatic/semi-automatic Data Storage supported.</p>
Production ("Restore")	<p>Any change of active parameters within the Device will <i>not</i> be copied/saved.</p> <p>If the parameter set is marked to be saved, the "frozen" parameters will be restored by the Master.</p> <p>However, Device replacement <i>with</i> automatic/semi-automatic Data Storage <i>of frozen parameters</i> is supported.</p>

In case of functional safety, commissioning cannot be completed without verification and validation of FSP and FST parameters as well as of entire safety functions according to the relevant safety manuals.

The difference to "Criteria for backing up parameters" in IEC 61131-9:2022 is that in case of local parameter modifications (for example by means of teach-in or touch panel), the FSP\_TechParCRC shall be assigned with the help of the FS-Master Tool and "Dedicated Tool".

## 10 Extensions of the FS-Master

### 10.1 Principle architecture

Figure 30 shows the principle architecture of the FS-Master offering the extended Standard Master Interface (SMI) according to IEC 61131-9:2022. It allows for a stringent separation of the standard Master as "Black Channel" and the functional safety parts of SDCI-FS and an FSCP x that can be "encapsulated" within the Gateway Application layer. Implementation of the FS-DI is vendor specific.

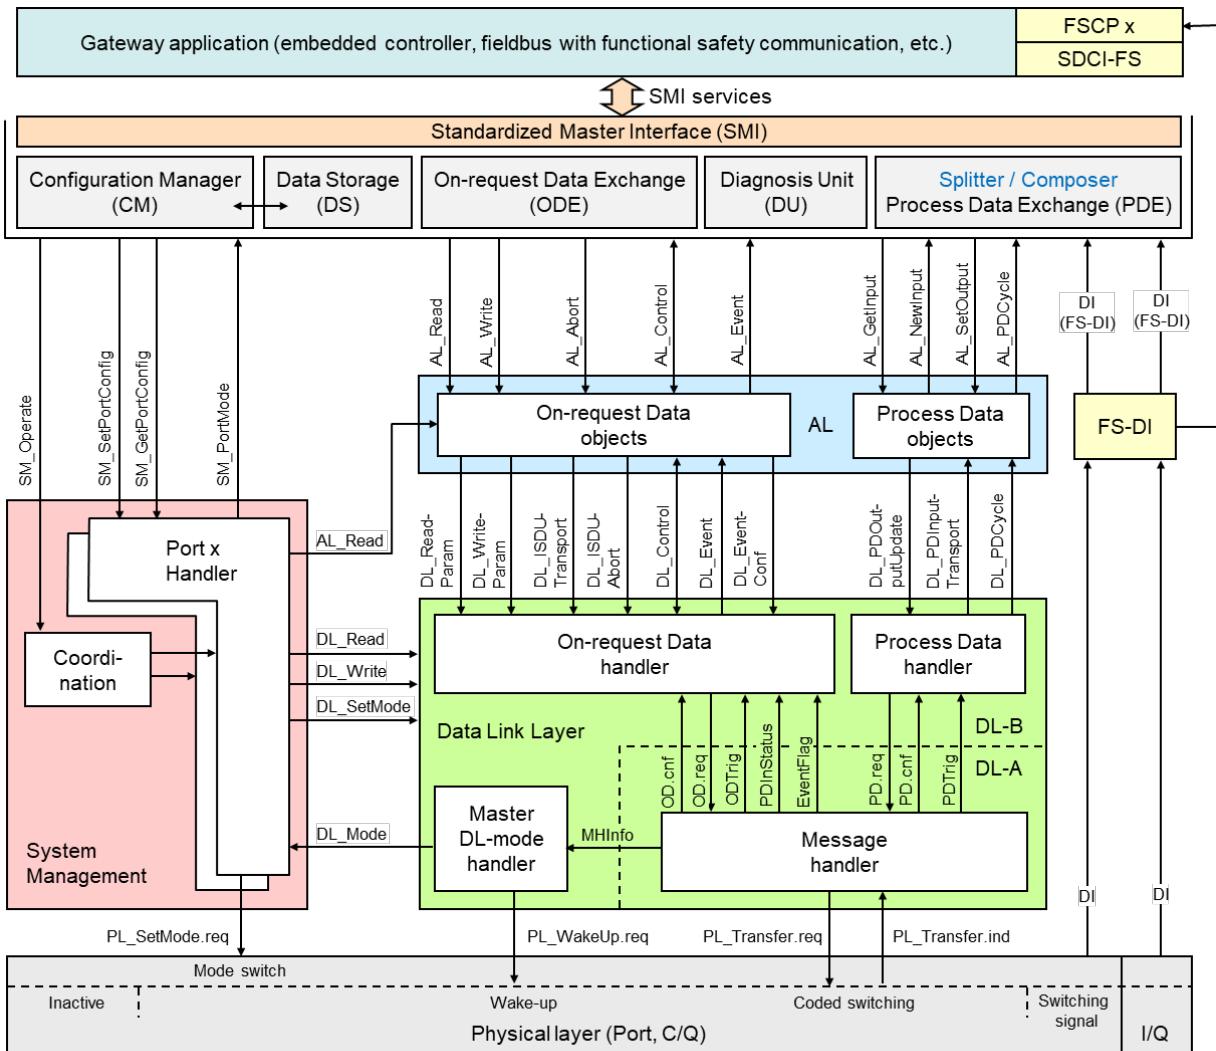


Figure 30 – Principle architecture of the FS-Master

An FS-Master contains the original standard Master ("black channel") except for the Ready-pulse and its handling (see 5.3.3 and 7.2), the second DI at Pin 2 (M12) for FS-DI operation. The Master application Configuration Manager (CM) has been modified to cope with more Port configurations and to send a verification record at each start-up. The Process Data Exchange (PDE/Splitter/Composer) application is now responsible for splitting mixed incoming SR and NSR Process Data respectively for composing outgoing SR and NSR Process Data.

## 906 10.2 SMI service extensions

### 907 10.2.1 Overview


908 Basics of SMI services have been introduced in IEC 61131-9. In this document additional SMI  
 909 services are specified as shown in Table 14 and in Figure 31: SMI\_SPDUIIn and SMI\_SPDUOut.  
 910 Both are handling the safety parts (SPDU = complete safety data and safety code) of mixed SR  
 911 and NSR Process Data. Table 14 provides an overview of the important SMI services used for  
 912 FS-Masters. The entire set of services can be retrieved from IEC 61131-9.

913 **Table 14 – SMI services used for FS-Master**

Service name	Master	ArgBlockID	Remark
SMI_MasterIdentification	R	0x0001	–
SMI_FSMasterAccess	R	0x0100	See 10.2.2
SMI_PortConfiguration	R	0x8100	See IEC 61131-9
SMI_ReadbackPortConfiguration	R	0x8100	See IEC 61131-9
SMI_PortStatus	R	0x9100	See IEC 61131-9
SMI_DSToParServ	R	0x7000	Data Storage to parameter server
SMI_ParServToDS	R	0x7000	Data Storage from parameter server
SMI_DeviceWrite	R	0x3000	ISDU transport
SMI_DeviceRead	R	0x3001	ISDU transport
SMI_PortPowerOffOn	R	0x7003	–
SMI_DeviceEvent	I	–	–
SMI_PortEvent	I	–	–
SMI_PDIn	R	0x1001	See 10.2.6
SMI_PDOout	R	0x1002	See 10.2.7
SMI_PDInOut	R	0x1003	–
SMI_SPDUIIn	R	0x1101	See 10.2.3
SMI_SPDUOut	R	0x1102	See 10.2.4
SMI_FSPDUIOut	R	0x1103	See 10.2.5
SMI_PDInIQ	R	0x1FFE	–
SMI_PDOoutIQ	R	0x1FFF	–
Key			
I Initiator of service		yellow marked services are either extended or additional ones for SDCI-FS	
R Receiver (Responder) of service			

914

915 Figure 31 provides an overview of the important SMI services used for FS-Master, the safety  
 916 layers within the Gateway and details of the FS-Master applications.

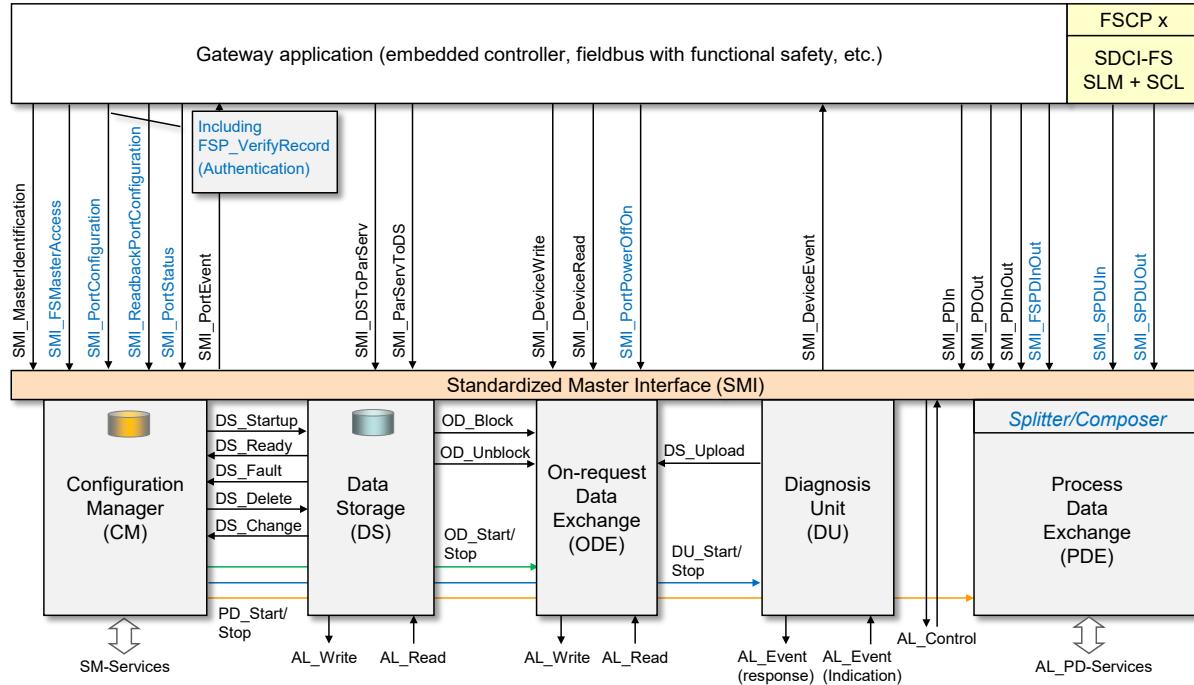

917

918

**Figure 31 – SMI service extensions**

919 The SMI\_MasterIdentification presents as MasterType an FS-Master (= "3" according to IEC  
 920 61131-9). The corresponding SMI\_FSMasterAccess service provides the FSCP Authenticity  
 921 codes of the FS-Master being an FSCP device on a safety fieldbus. The SMI services for  
 922 configuration and Port status are only expanded by using different Arguments (ArgBlocks) as  
 923 shown in 10.3. By means of the SMI service "SMI\_PortConfiguration", for example, the  
 924 authenticity, protocol, and IO data structure information is transferred to the Configuration  
 925 Manager and stored there. See 10.4 on how this information is used to accommodate the Safety  
 926 Communication Layers and to authenticate safety operation. The Port command service  
 927 "SMI\_PortPowerOffOn" is responsible for switching OFF and ON power of a particular Port.

928 Two new SMI services provide access to the safety parts of a mixed SR and NSR I/O process  
 929 data structure as shown in 10.2.3, 10.2.4, and 10.5.

### 930 **10.2.2 SMI\_FSMasterAccess**

931 User role and corresponding password can be provided to the FS-Master safety projects and  
 932 MasterType specific information can be retrieved by this SMI service (see Figure 31).

933 Table 15 shows the structure of the service following the rules defined in IEC 61131-9.

934 **Table 15 – SMI\_FSMasterAccess**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (0x0101)	M	
ArgBlockLength	M	
ArgBlock ("FSMasterAccess": 0x0100)	M	
Result (+)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x0100)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	

Parameter name	.req	.cnf
Result (-)	S	
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0x0100)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

935

**Argument**

936 The specific parameters of the service request are transmitted in the argument.

937

**ClientID**

938

**PortNumber**

939

**ExpArgBlockID**

940 This parameter contains the ArgBlockID of "FSCPAuthenticity" (0x0101, see Table 19)

941

**ArgBlockLength**

942 This parameter contains the length of the subsequent ArgBlock

943

**ArgBlock**

944 This parameter contains the ArgBlock "FSMasterAccess" (0x0100, see Table 18)

945

**Result (+):**

946 This selection parameter indicates that the service request has been executed successfully.

947

**ClientID**

948

**PortNumber**

949

**RefArgBlockID**

950 This parameter contains as reference the ID of the ArgBlock sent by the request (0x0100)

951

**ArgBlockLength**

952 This parameter contains the length of the subsequent ArgBlock

953

**ArgBlock**

954 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Table 19)

955

**Result (-):**

956 This selection parameter indicates that the service request failed

957

**ClientID**

958

**PortNumber**

959

**RefArgBlockID**

960 This parameter contains as reference the ID of the ArgBlock sent by the request (0x0100)

961

**ArgBlockLength**

962 This parameter contains the length of the "JobError" ArgBlock

963

**ArgBlock**

964 This parameter contains the ArgBlock "JobError" (0xFFFF, see IEC 61131-9)

965

Permitted values in prioritized order:

966 PORT\_NUM\_INVALID (incorrect Port number)

967 ARGBLOCK\_NOT\_SUPPORTED (ArgBlock unknown)

968 ARGBLOCK\_LENGTH\_INVALID (incorrect ArgBlock length)

969 ARGBLOCK\_INCONSISTENT (incorrect ArgBlock content type)

970 SERVICE\_TEMP\_UNAVAILABLE (Master busy)

971

**10.2.3 SMI\_SPDUI**972 This service allows for cyclically reading Safety Protocol Data Units (SPDU) from an FSInBuffer  
973 (see 10.5) and shall only be available for internal use by the SCL. Coding of this SMI service  
974 follows the definitions in IEC 61131-9.  
975

976 The expected ArgBlockID is "0x1101". The ArgBlock is specified in 10.3.6.

977 **10.2.4 SMI\_SPDOut**

978 This service allows for cyclically writing Safety Protocol Data Units (SPDU) to an FSOutBuffer  
 979 (see 10.5) and shall only be available for internal use by the SCL. Coding of this SMI service  
 980 follows the definitions in IEC 61131-9.

981 The ArgBlockID is "0x1102". The ArgBlock is specified in 10.3.7.

982 **10.2.5 SMI\_FSPDInOut**

983 This service allows for periodically reading input from an FSInBuffer and InBuffer and output  
 984 from an FSOutBuffer and OutBuffer (see 10.5). Table 16 shows the structure of the service.

985 **Table 16 – SMI\_FSPDInOut**

Parameter name	.req	.cnf
Argument		
ClientID	M	
PortNumber	M	
ExpArgBlockID (0x1103)	M	
ArgBlockLength	M	
ArgBlock (VoidBlock: 0xFFFF0)	M	
Result (+)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (associated to ExpArgBlockID)	M	
Result (-)		S
ClientID	M	
PortNumber	M	
RefArgBlockID (ID of request ArgBlock 0xFFFF0)	M	
ArgBlockLength	M	
ArgBlock (JobError: 0xFFFF)	M	

986

987 **Argument**

988 The specific parameters of the service request are transmitted in the argument.

989 **ClientID**

990 **PortNumber**

991 **ExpArgBlockID**

992 This parameter contains the ArgBlockID of "FSPDInOut" (0x1103, see Table 24)

993 **ArgBlockLength**

994 This parameter contains the length of the subsequent ArgBlock

995 **ArgBlock**

996 This parameter contains the ArgBlock "VoidBlock" (0xFFFF0)

997 **Result (+):**

998 This selection parameter indicates that the service request has been executed successfully.

999 **ClientID**

1000 **PortNumber**

1001 **RefArgBlockID**

1002 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFF0)

1003 **ArgBlockLength**

1004 This parameter contains the length of the subsequent ArgBlock

1005

1006 ArgBlock

1007 This parameter contains the ArgBlock associated to the ExpArgBlockID (see Table 24)

## **Result (-):**

1009 This selection parameter indicates that the service request failed.

1009 This selection parameter indicates that the service request failed

1010 ClientID

## PortNumber

1012 RelArgBlockID

1013 This parameter contains as reference the ID of the ArgBlock sent by the request (0xFFFFU)

## ArgBlockLength

1015 This parameter contains the length of the "JobError" ArgBlock

1016 ArgBlock

1017 This parameter contains the ArgBlock "JobError" (0xFFFF)

1018 Permitted values in prioritized order:  
1019 PORT, NHIM, INVALID (5)

1019 PORT\_NUM\_INVALID (incorrect Port number)  
1020 ABC\_BLOCK\_NOT\_SUPPORTED (ABCBlock unknown)

1020 ARGBLOCK\_NOT\_SUPPORTED (ArgBlock unknown)  
1021 ARGBLOCK\_LENGTH\_INVALID (incorrect ArgBlock

1021 ARGBLOCK\_LENGTH\_INVALID (incorrect ArgBlock length)  
1022 DEVICE\_NOT\_IN\_OPERATE (Process Data not accessible)

1022 DEVICE\_NOT\_IN\_OPERATE (Process Data not accessible)

## 10.2.6 SMI\_PDI

1024 This service allows for cyclically reading Process Data from an InBuffer (see 10.5). In IO-Link  
1025 PortMode = "SAFETYCOM" this service contains only the NSR data of the Process Data In. In  
1026 IO-Link PortMode = "IOL\_MANUAL" or PortMode = "IOL\_AUTOSTART" this service contains  
1027 the complete PDU.

1028 The ArgBlockID is "0x1001".

## 10.2.7 SMI\_PDOOut

1030 This service allows cyclically writing Process Data to an OutBuffer (see 10.5). In IO-Link  
1031 PortMode = "SAFETYCOM" this service contains only the NSR data of the Process Data Out.  
1032 In IO-Link PortMode = "IOL\_MANUAL" or PortMode = "IOL\_AUTOSTART" this service contains  
1033 the complete PDU.

1034 The ArgBlockID is "0x1002".

### 10.3 ArgBlock extensions

### 10.3.1 Overview

1037 Table 17 shows new ArgBlock types for FS-Masters: "FSMasterAccess", "FSCPAAuthenticity",  
1038 "FSPortConfigList", "FSPortStatusList", "SPDUIIn", "SPDUIOut", and "FSPDUIInOut".

**Table 17 – ArgBlock types and ArgBlockIDs**

ArgBlock type	ArgBlockID	Remark
FSMasterAccess	0x0100	See 10.3.2
FSCPAuthenticity	0x0101	See 10.3.3
PDIIn	0x1001	–
PDOOut	0x1002	–
PDIInOut	0x1003	–
SPDUIIn	0x1101	See 10.3.6
SPDUOut	0x1102	See 10.3.7
FSPDUIInOut	0x1103	See 10.3.8
DS_Data	0x7000	Data Storage object

ArgBlock type	ArgBlockID	Remark
PortPowerOffOn	0x7003	–
PortConfigList	0x8000	–
FSPortConfigList	0x8100	See 10.3.4
PortStatusList	0x9000	–
FSPortStatusList	0x9100	See 10.3.5
Key  yellow marked ArgBlocks are additional ones for SDCI-FS		

1040

### 10.3.2 FSMasterAccess

The ArgBlock "FMSMasterAccess" in Table 18 shows the password for FS-Master access and the corresponding password to reset the entire FS-Master project including the existing password.

1045

**Table 18 – FMSMasterAccess**

Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x0100
2	FMSMasterPassword	This element contains the password for accessing the entire FS-Master project. Default is 0x00000000.	Unsigned32	–
6	FSResetMasterPW	This element contains the password for resetting the entire FS-Master project including the FMSMasterPassword. Default is 0x00000000.	Unsigned32	–
10	FSUserRole	Reserved. Default: 0x00	Unsigned8	–

1046

### 10.3.3 FSCPAuthenticity

The ArgBlock "FSCPAuthenticity" in Table 19 shows FSCP authenticity codes assigned to the FS-Master through the upper-level FSCP engineering tool or via DIP switches.

1050

**Table 19 – FSCPAuthenticity**

Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x0101
2	FSP_Authenticity1	FSCP A-Code part1	Unsigned32	–
6	FSP_Authenticity2	FSCP A-Code part2	Unsigned32	–

1051

### 10.3.4 FSPortConfigList

Table 20 shows the ArgBlockType "FSPortConfigList" suitable for FS-Masters. It considers additional PortModes and expands by Safety PDU lengths, the FSP\_VerifyRecord (see 10.3.3 and A.2.10) as well as the FS I/O data structure description (see 11.7.7 and Table A.4).

1056

**Table 20 – FSPortConfigList**

Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x8100
2	PortMode	This element contains the Port mode expected by the SMI client, e.g. gateway application. All modes are mandatory, except FS-DI. They shall be mapped to the Target Modes of "SM_SetPortConfig" (see IEC 61131-9:2022). 0: DEACTIVATED (SM: INACTIVE → Port is deactivated; input and output Process Data are "0";	Unsigned8	0x00 to 0xFF

Offset	Element name	Definition	Data type	Values
		<p>Master shall not perform activities at this Port)</p> <p>1: IOL_MANUAL (SM: CFGCOM → Target Mode based on user defined configuration including validation of RID, VID, DID)</p> <p>2: IOL_AUTOSTART <sup>a</sup> (SM: AUTOCOM → Target Mode w/o configuration and w/o validation of VID/DID; RID gets highest revision the Master is supporting; Validation: NO_CHECK)</p> <p>3: DI_C/Q (Pin 4 at M12) <sup>b</sup> (SM: DI → Port in input mode SIO)</p> <p>4: DO_C/Q (Pin 4 at M12) <sup>b</sup> (SM: DO → Port in output mode SIO)</p> <p>5 to 48: Reserved for future versions</p> <p>49: SAFETYCOM (implying IOL_MANUAL behavior)</p> <p>50: Reserved for future versions</p> <p>51: FS_DI (Pin 2 + Pin 4 at M12) (Not for FS-Masters of type Port Class B; Values in offset 16 to 37 are don't care; SPDUInLength in offset 40 = 1 octet; value in offset 41 is don't care)</p> <p>52 to 96: Reserved for extensions such as Safety or Wireless)</p> <p>97 to 255: Manufacturer specific</p>		
3	Validation&Backup	<p>This element contains the InspectionLevel to be performed by the Device and the Backup/Restore behavior.</p> <p>0: No Device check</p> <p>1: Type compatible Device V1.0</p> <p>2: Type compatible Device V1.1</p> <p>3: Type compatible Device V1.1, Backup + Restore</p> <p>4: Type compatible Device V1.1, Restore</p> <p>5 to 255: Reserved</p>	Unsigned8	0x00 to 0xFF
4	I/Q behavior (Manufacturer or profile specific)	<p>This element defines the behavior of the I/Q signal (Pin2 at M12 connector). All assignments are "don't care" if PortMode is chosen to be OSSDE.</p> <p>0: Not supported</p> <p>1: Digital Input</p> <p>2: Digital Output</p> <p>3 to 255: Reserved</p>	Unsigned8	0x00 to 0xFF
5	PortCycleTime	<p>This element contains the Port cycle time expected by the SMI client. AFAP is default. They shall be mapped to the ConfiguredCycleTime of "SM_SetPortConfig"</p> <p>0: AFAP (As fast as possible – SM: FreeRunning → Port cycle timing is not restricted. Default value in Port mode IOL_MANUAL)</p> <p>1 to 255: TIME (SM: For coding see Table B.3 in IEC 61131-9. Device shall achieve the indicated Port cycle time. An error shall be created if this value is below MinCycleTime of the Device or in case of other misfits)</p>	Unsigned8	0x00 to 0xFF
6	VendorID	This element contains the 2 octets long VendorID expected by the SMI client	Unsigned16	0x0001 to 0xFFFF

Offset	Element name	Definition	Data type	Values
8	DeviceID	This element contains the 3 octets long DeviceID expected by the SMI client	Unsigned32	0x000001 to 0xFFFF
12	FSP_TimeToReady	This element provides the time from power-up to the Ready pulse of the FS-Device such that the FS-Master knows how long to wait on it. Default maximum time is 5 s (see A.2.11)	Unsigned16	0x0001 to 0x7FFF (see Table A.1)
14	FSP_MinShutdownTime	This element provides the minimum time for shut down of the FS-Device after Port power off prior to a restart	Unsigned16	0x0064 to 0x03E8 (see Table A.1)
16	FSP_Authenticity1	FSCP A-Code part1 (see IEC 61784-3 series)	Unsigned32	–
20	FSP_Authenticity2	FSCP A-Code part2 (see IEC 61784-3 series)	Unsigned32	–
24	FSP_Port	Port number	Unsigned8	0x01 to 0xFF
25	FSP_AuthentCRC	CRC signature across complete authentication	Unsigned16	–
27	FSP_ProtVersion	Version of the SDCI-FS protocol	Unsigned8	0x01 to 0xFF
28	FSP_ProtMode	SDCI-FS protocol mode	Unsigned8	–
29	FSP_WatchdogTime	Watchdog time of FS-Master and FS-Device	Unsigned16	0x0001 to 0xFFFF
31	FSP_IO_StructCRC	CRC signature across FS IO data description	Unsigned16	–
33	FSP_TechParCRC	CRC signature across technology parameter	Unsigned32	–
37	FSP_ProtParCRC	CRC signature across protocol parameter	Unsigned16	–
39	IO_DescVersion	Version of this generic structure description	Unsigned8	1
40	SPDUIInLength	FS-DI data (1 octet) or length of incoming SPDU ( $m$ ); see 10.5 and Table A.4	Unsigned8	1 or 4 to (32 – $n$ ) octets
41	TotalOfInBits	Set of input BooleanT (bits)	Unsigned8	0x00 to 0xFF
42	TotalOfInOctets	Set of input BooleanT (octets)	Unsigned8	–
43	TotalOfInInt16	Input IntegerT(16)	Unsigned8	–
44	TotalOfInInt32	Input IntegerT(32)	Unsigned8	–
45	SPDUIOutLength	Length of outgoing SPDU ( $o$ ); see 10.5 and Table A.4	Unsigned8	4 to (32 – $p$ ) octets
46	TotalOfOutBits	Set of output BooleanT (bits)	Unsigned8	0x00 to 0xFF
47	TotalOfOutOctets	Set of output BooleanT (octets)	Unsigned8	–
48	TotalOfOutInt16	Output IntegerT(16)	Unsigned8	–
49	TotalOfOutInt32	Output IntegerT(32)	Unsigned8	–

<sup>a</sup> In PortMode "IOL\_Autostart" parameters VendorID, DeviceID, and Validation&Backup are treated don't care.

<sup>b</sup> In PortModes "DI\_C/Q" and "DO\_C/Q" all parameters are don't care except "I/Q behavior".

1057

### 10.3.5 FSPortStatusList

Table 21 shows the ArgBlockType "FSPortStatusList" suitable for FS-Masters. Content of "FSPortStatusInfo" shall be derived from "PortMode" in IEC 61131-9).

1061

**Table 21 – FSPortStatusList**

Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x9100
2	PortStatusInfo	This element contains status information of the Port. 0: NO_DEVICE No communication (COMLOST). However, Port configuration	Unsigned8 (enum)	0x00 to 0xFF

Offset	Element name	Definition	Data type	Values
		<p>IOL_MANUAL or IOL_AUTOSTART was set.</p> <p>1: DEACTIVATED Port configuration DEACTIVATED is set.</p> <p>2: PORT_DIAG This value to be set If a DiagEntry indicates an upcoming diagnosis of the Port during startup, validation, and Data Storage (group error). Device is in PREOPERATE and DiagEntry contains the diagnosis cause.</p> <p>3: Reserved</p> <p>4: OPERATE This value to be set if the Device is in OPERATE, even in case of Device error.</p> <p>5: DI_C/Q Port configuration "DI" is set.</p> <p>6: DO_C/Q Port configuration "DO" is set.</p> <p>7: FS_DI (FS-DI at C/Q and I/Q)</p> <p>8: SCL_ENABLED (Port ready for safety data exchange)</p> <p>9 to 253: Reserved</p> <p>254: PORT_POWER_OFF Shutdown of Port is active caused by SMI_PortPowerOffON</p> <p>255: NOT_AVAILABLE (Port status currently not available)</p>		
3	PortQualityInfo	<p>This element contains status information on Process Data</p> <p>Bit0: 0 = VALID 1 = INVALID</p> <p>Bit1: 0 = PDOUTVALID 1 = PDOUTINVALID</p> <p>Bit2 to Bit7: Reserved</p>	Unsigned8	–
4	RevisionID	<p>This element contains information of the SDCl protocol revision of the Device</p> <p>0: NOT_DETECTED (No communication at that Port)</p> <p>&lt;&gt;0: Copied from Direct parameters page, address 4</p>	Unsigned8	0x00 to 0xFF
5	TransmissionRate	<p>This element contains information on the effective Port transmission rate.</p> <p>0: NOT_DETECTED (No communication at that Port)</p> <p>1: COM1 (transmission rate 4,8 kbit/s)</p> <p>2: COM2 (transmission rate 38,4 kbit/s)</p> <p>3: COM3 (transmission rate 230,4 kbit/s)</p> <p>4 to 255: Reserved for future use</p>	Unsigned8	0x00 to 0xFF
6	MasterCycleTime	<p>This element contains information on the Master cycle time.</p> <p>For coding see IEC 61131-9 B.1.3.</p>	Unsigned8	–
7	InputDataLength	<p>This element contains the input data length as number of octets of the Device provided by the PDIn service</p>	Unsigned8	0x00 to 0x20
8	OutputDataLength	<p>This element contains the output data length as number of octets for the Device accepted by the PDOut service</p>	Unsigned8	0x00 to 0x20

Offset	Element name	Definition	Data type	Values
9	VendorID	This element contains the 2 octets long VendorID expected by the SMI client	Unsigned16	0x0000 to 0xFFFF
11	DeviceID	This element contains the 3 octets long DeviceID expected by the SMI client	Unsigned32	0x0000001 to 0xFFFFFFFF
15	NumberOfDiags	This element contains the number $x$ of diagnosis entries (DiagEntry0 to DiagEntry $x$ )	Unsigned8	0x00 to 0xFF
16	DiagEntry0	This element contains the "EventQualifier" and "EventCode" of a diagnosis (Event).	Struct Unsigned8/16	–
19	DiagEntry1	Further entries up to $x$ if applicable...	...	–

1062

### 10.3.6 SPDUIIn

Table 22 shows the structure of the ArgBlock "SPDUIIn" as illustrated in 10.5.

**Table 22 – SPDUIIn**

Offset	Element name	Definition	Data type
0	ArgBlockID	0x1101	Unsigned16
2	SPDUIIn0	Safety Protocol Data Unit in (octet 0)	Unsigned8
3	SPDUIIn1	Safety Protocol Data Unit in (octet 1)	Unsigned8
		...	
SPDUIInLength + 2	SPDUIIn $m$	Safety Protocol Data Unit in (octet $m$ )	Unsigned8

1066

### 10.3.7 SPDUOut

Table 23 shows the structure of the ArgBlock "SPDUOut" as illustrated in 10.5.

**Table 23 – SPDUOut**

Offset	Element name	Definition	Data type
0	ArgBlockID	0x1102	Unsigned16
2	SPDUOut0	Safety Protocol Data Unit out (octet 0)	Unsigned8
3	SPDUOut1	Safety Protocol Data Unit out (octet 1)	Unsigned8
		...	
SPDUOutLength + 2	SPDUOut $o$	Safety Protocol Data Unit out (octet $o$ )	Unsigned8

1070

1071 **10.3.8 FSPDInOut**

1072 Table 24 shows the structure of the ArgBlock "FSPDInOut" as illustrated in 10.5.

1073

**Table 24 – FSPDInOut**

Offset	Element name	Definition	Data type	Values
0	ArgBlockID	Unique ID	Unsigned16	0x1103
2	PQI	Port Qualifier Information	Unsigned8	–
3	OE	Output Enable	Unsigned8	–
4	SPDUIInLength	This element contains the length of the Device's SPDUIIn.	Unsigned8	0x00 to 0x1F
5	PDILength	This element contains the length of the Device's non-safe input Process Data (PDI0 to PDIn).	Unsigned8	0x00 to 0x20
6	SPDUIIn0	Safety Protocol Data Unit in (octet 0)	Unsigned8	0x00 to 0xFF
7	SPDUIIn1	Safety Protocol Data Unit in (octet 1)	Unsigned8	0x00 to 0xFF
...				
$m+6$	SPDUIIn $m$	Safety Protocol Data Unit in (octet $m$ )	Unsigned8	0x00 to 0xFF
$(m+6) + 1$	PDI0	Input Process Data (octet 0)	Unsigned8	0x00 to 0xFF
$(m+6) + 2$	PDI1	Input Process Data (octet 1)	Unsigned8	0x00 to 0xFF
...				
$(m+6) + (n+1)$	PDIn $n$	Input Process Data (octet $n$ )	Unsigned8	0x00 to 0xFF
$(m+6) + (n+1) + 1$	SPDUIOutLength	This element contains the length of the Device's SPDUIOut.	Unsigned8	0x00 to 0x1F
$(m+6) + (n+1) + 2$	PDOLength	This element contains the length of the Device's non-safe output Process Data (PDO0 to PDO $p$ ).	Unsigned8	0x00 to 0x20
$(m+6) + (n+1) + 3$	SPDUIOut0	Safety Protocol Data Unit out (octet 0)	Unsigned8	0 to 0xFF
$(m+6) + (n+1) + 4$	SPDUIOut1	Safety Protocol Data Unit out (octet 1)	Unsigned8	0x00 to 0xFF
...				
$(m+6) + (n+1) + (o+3)$	SPDUIOut $o$	Safety Protocol Data Unit out (octet $o$ )	Unsigned8	0x00 to 0xFF
$(m+6) + (n+1) + (o+3) + 1$	PDO0	Output Process Data (octet 0)	Unsigned8	0x00 to 0xFF
$(m+6) + (n+1) + (o+3) + 2$	PDO1	Output Process Data (octet 1)	Unsigned8	0x00 to 0xFF
...				
$(m+6) + (n+1) + (o+3) + (p+1)$	PDO $p$	Output Process Data (octet $p$ )	Unsigned8	0x00 to 0xFF

1074

**1075    10.4 Safety Layer Manager (SLM)****1076    10.4.1 Purpose**

1077    The Safety Layer Manager takes care of the safety PDU, whenever safety communication has  
1078    been configured or of one safety bit, whenever FS-DI has been configured for a particular Port.  
1079    It uses SMI services for this purpose as specified in 10.2.3 and 10.2.4.

1080    It holds the FSP parameters consisting of the authenticity record and the protocol record (see  
1081    11.7.4) as well as of the FS I/O structure description (see Table A.1 and E.5.5) for the  
1082    FS\_IO\_Data\_Mapper.

1083    After verification of all parameters, the safety communication layer (SCL) engine will be started  
1084    and PortStatusInfo will be set to "8" (SCL\_ENABLED) (see 10.3.5).

1085    SLM or SCL respectively use the Diagnosis Unit (DU) in Figure 30 to propagate the  
1086    PortEventCodes of Table B.2.

**1087    10.4.2 FS\_PortModes**

1088    The FS-Master shall support the following PortModes of standard NSR Masters:

- 1089       • DEACTIVATED
- 1090       • IOL\_MANUAL (basis of SCL operation)
- 1091       • IOL\_AUTOSTART (usually only in case of totally unknown connected Devices)
- 1092       • DI\_C/Q
- 1093       • DO\_C/Q (Devices and FS-Devices are short-circuit proof)

1094    In addition, the FS-Master shall support two FS\_PortModes and one optionally:

**1095    SAFETYCOM**

1096    This setting enables safety communication of SR and NSR Process Data of a Port.

**1097    FS\_DI**

1098    This setting enables FS-DI operation of a Port. This mode is optional.

1099    All these PortModes can be set up via the SMI\_PortConfiguration (see 10.2.1) and the ArgBlock  
1100    "FSPortConfigList" (see 10.3.4).

**1101    10.4.3 FSP parameter****1102    10.4.3.1 FSP parameter use cases**

1103    Figure 32 illustrates some use cases related to the FSP parameters (see A.1).

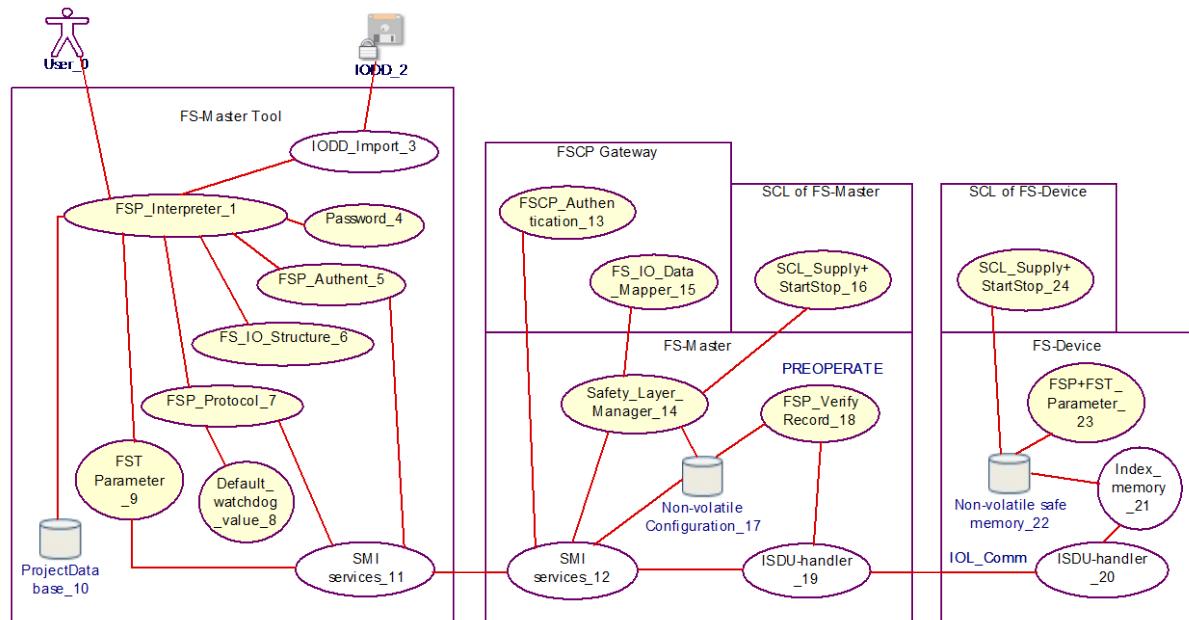
**Figure 32 – FSP parameter use cases**

Table 25 shows a listing of the items in Figure 32 and references clauses within this document or IEC 61131-9.

**Table 25 – Use case reference table**

No.	Item	Type	Reference	Remarks
0	User	Roles: - Observer - Maintenance - Specialist	–	Responsibility of the software tool manufacturer
1	FSP_Interpreter	GUI-functions	E.g. Figure 54	–
2	IODD (secured)	Device description	Annex E	–
3	IODD_Import	Activity	Annex E	–
4	Password	Activity	10.4.3.2	Access protection
5	FSP_Authent	Activity	11.7.5	–
6	FS_IO_Structure	FS I/O description	Clause A.1	–
7	FSP_Protocol	Activity	11.7.6	–
8	Default_watchdog_value	Activity	A.2.6	–
9	FST_Parameter	Activity	–	–
10	ProjectDatabase	FS-Master Tool	–	Proprietary
11	Standardized Master Interface (SMI)	Communication	10.4.3.1	–
12	Standardized Master Interface (SMI)	Communication	10.4.3.1	–
13	FSCP_Authentication	Activity	11.7.5	–
14	Safety_Layer_Manager	Activity	10.4	–
15	FS_IO_Data_Mapper	Gateway application	12.1	FSCP Integration
16	SCL_Supply+StartStop	FS-Master SCL	11.5.2	–
17	Non-volatile memory	FS-Master	–	Implementation
18	FSP_VerifyRecord	Verification	11.7.4	–
19	ISDU-Handler	FS-Master DL	IEC 61131-9	Standard SDCI
20	ISDU-Handler	FS-Device DL	IEC 61131-9	Standard SDCI

No.	Item	Type	Reference	Remarks
21	Index_memory	Activity	IEC 61131-9	Standard SDCI
22	Non-volatile memory	FS-Device	–	Implementation
23	FSP+FST parameter	Activities	–	–
24	SCL_Supply+StartStop	FS-Device SCL	11.5.3	–

1109

1110 In the following, a typical parameterization session of a project in the ProjectDatabase is  
 1111 described, where a new FS-Device is planned, configured, and parameterized for a particular  
 1112 Port. After installation of IODD and associated Dedicated Tool, the user of an FS-Master Tool  
 1113 opens the parameter tab page (see illustration in Figure 54). After entry of the password for  
 1114 safety projects (see 10.4.3.2), FSP parameters are enabled to be displayed and Dedicated  
 1115 Tools are enabled to be launched.

1116 When online, the FS-Master Tool uses the Standardized Master Interface (SMI) to the FS-  
 1117 Master specified in IEC 61131-9. Any transmission error (see Table 26) can falsify the message  
 1118 bits and thus, each FSP parameter record is secured by CRC signature.

1119 The choice of the SMI service call technology is the responsibility of the respective integration  
 1120 into a fieldbus (see IEC 61131-9).

1121 The *authenticity parameter* values carry "0" as default within the IODD of an FS-Device. FS-  
 1122 Master Tool acquires FSCP Authenticity values with the help of the SMI\_FSMasterAccess  
 1123 service (see 10.2.2) and suggests these as actual values. For details see 10.4.3.3.

1124 The IODD contains the *I/O data structure description* of the safety Process Data as a record  
 1125 secured by CRC signature (see A.2.7 and E.5.6). This information is used for the mapping to  
 1126 FSCP I/O data and checked by FS-Device (see 11.7.7).

1127 Most of the *protocol parameter* values are preset by default values provided by the FS-Device  
 1128 manufacturer within the IODD, except for the value of FSP\_TechParCRC, which has a particular  
 1129 responsibility. A value of "0" followed by a Port power OFF/ON means commissioning/test (see  
 1130 Annex G). The consequences are:

- changes of FST parameters become effective right upon acceptance by the FS-Device;
- no Data Storage backup.

1131 From now on the SDCI-FS system can run in "monitored operational mode". That means  
 1132 personnel are required to watch the machine.

1133 The user can now enter and test the technology specific parameters (see illustration in Figure  
 1134 54). After verification and validation, the user launches the Dedicated Tool, confirms the value  
 1135 assignments, and transfers the CRC signature to the FSP\_TechParCRC field. The  
 1136 corresponding SMI\_PortConfiguration cares for the FSP\_VerifyRecord within the FS-Master.  
 1137 With an FSP\_TechParCRC value of ≠ "0", the system can be armed:

- Data Storage;
- Verification of authenticity, protocol, and technology parameters, as well as IO data  
 1142 description at start-up.

1143 After parameter assignment, the FSP and FST parameter instance values can be stored in the  
 1144 ProjectDatabase.

1145 Another Port power OFF/ON will cause the FS-Device to perform safety selftests prior to  
 1146 communication and the FS-Master to transmit the FSP\_VerifyRecord to the FS-Device. Its  
 1147 Safety Layer Manager verifies all parameters, passes relevant protocol parameters, and  
 1148 launches the SCL. In case of mismatch a corresponding Event is activated and the SCL will not  
 1149 operate.

1150 The SLM propagates the I/O structure description to the FS\_IO\_DataMapper. The  
 1151 FSP\_VerifyRecord is propagated to the local FS-Master safety communication layer (SCL). It  
 1152 verifies all parameters, passes relevant protocol parameters, launches the SCL, and sets

1153 PortStatusInfo to "8" (SCL\_ENABLED). In case of mismatch a corresponding Event is activated  
1154 and the SCL will not operate.

#### 1155 **10.4.3.2 Protection**

1156 An FS-Master Tool creates and maintains safety projects and the FS-Master stores safety  
1157 parameters within configuration data. Both require protection from easy manipulation. FS-  
1158 Master Tool can use password parameters within the SMI\_FSMasterAccess service (10.2.2) for  
1159 that purpose. Usage depends on the security concept of the upper-level system and on the  
1160 inheritance concept of password protection. It is optional.

1161 Dedicated Tools may have password mechanisms for their FS-Devices independent from the  
1162 FS-Master (see 10.2.2).

#### 1163 **10.4.3.3 FSP authenticity parameter record**

1164 FSP authenticity parameters are specified in Clause A.1. The FSP authenticity record includes  
1165 the FSCP authenticity code, a Port number, and a CRC signature. An FS-Master Tool shall  
1166 always update the CRC signature when changes occur and only write entire consistent records.

1167 For stand-alone FS-Masters the entry of unique and unambiguous values per FS-Master is  
1168 required per machine or production center if there is a possibility to misconnect FS-Devices  
1169 amongst different FS-Masters.

#### 1170 **10.4.3.4 FSP protocol parameter record**

1171 FSP protocol parameters are specified in Clause A.1. Manufacturer/vendor presets values and  
1172 defines ranges within the IODD for protocol version and mode, Port mode, watchdog, and  
1173 TechParCRC.

1174 Manufacturer/vendor shall determine the preset value for the watchdog timer considering the  
1175 FS-Device response time at the indicated transmission rate (COMx). The FS-Master Tool can  
1176 calculate and suggest a value based on the performance data of the used FS-Master and on  
1177 the preset value from the IODD.

1178 An FS-Master Tool shall always update the CRC signature when changes occur and only write  
1179 entire consistent records.

#### 1180 **10.4.3.5 FS I/O data structure description**

1181 With the help of this information, the mapping process within the FSCP gateway can be  
1182 controlled or monitored (see 11.7.7 and A.2.7).

1183 The FS-Device shall check the validity of its implemented safety PDin/PDout structure via the  
1184 FSP\_IO\_StructCRC signature provided by the FSP\_VerifyRecord.

#### 1185 **10.4.3.6 Verification record**

1186 The FS-Master takes the FSP\_VerifyRecord from the SMI\_PortConfiguration service (see  
1187 10.3.3 and 11.7.4).

1188 Default value of the FSP\_VerifyRecord is all octets "0". "0" means that the FSP\_VerifyRecord  
1189 is not valid. If the element FSP\_TechParCRC is "0" the FSP\_VerifyRecord shall not be stored.  
1190 After a PowerOffOn on the FS-Master, the FSP\_VerifyRecord shall have the last valid value  
1191 without FSP\_TechParCRC "0" or the default value with all octets "0" if there was no valid  
1192 FSP\_VerifyRecord before. This applies not only for the FSP\_VerifyRecord but for the complete  
1193 PortConfiguration.


### 1194 **10.5 Process Data Exchange (PDE)**

1195 The FS-Master application Process Data Exchange (PDE) provides additional features called  
1196 "Splitter" and "Composer".

1197 Figure 33 shows the mechanism of splitting the SPDUIIn part and the Input Data from the  
1198 complete SR and NSR data. The SR part is stored within an FSInBuffer and the NSR part within  
1199 the InBuffer.

1200 In case of PortConfiguration "FS\_DI", the signal status of C/Q is stored as "FS\_DI1" in Bit "0" of octet "0", and signal status of I/Q is stored as "FS\_DI2" in Bit "1" of octet "0".

1201  
1202 See IEC 61131-9 for definitions of "PQI" and "PQ". PDIn valid/invalid only refer to non-safety data.

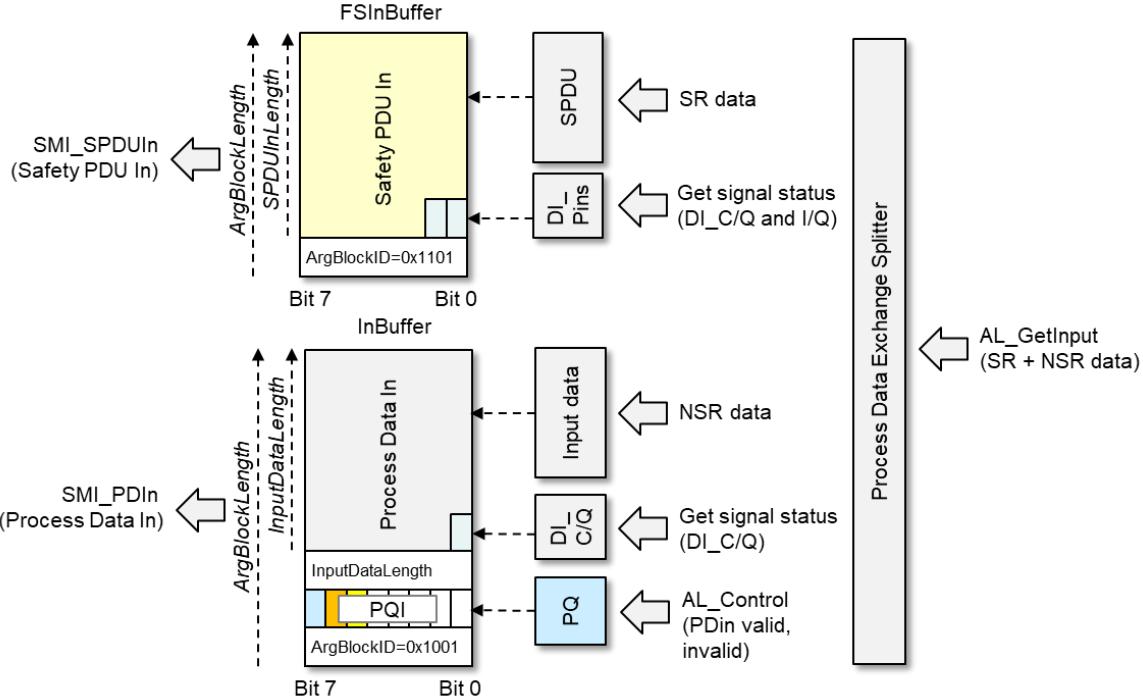


1204

1205 **Figure 33 – PDE Splitter (only in IO-Link PortMode = “SAFETYCOM”)**

1206 Figure 34 shows the mechanism of composing the complete SR and NSR data. Both are prepared for the AL\_SetOutput service out of the SPDU Out part from the FSOutBuffer and out of the Process Data Out from the OutBuffer.

1207  
1208  
1209 See IEC 61131-9 for definitions of "OE" and "OE detect".

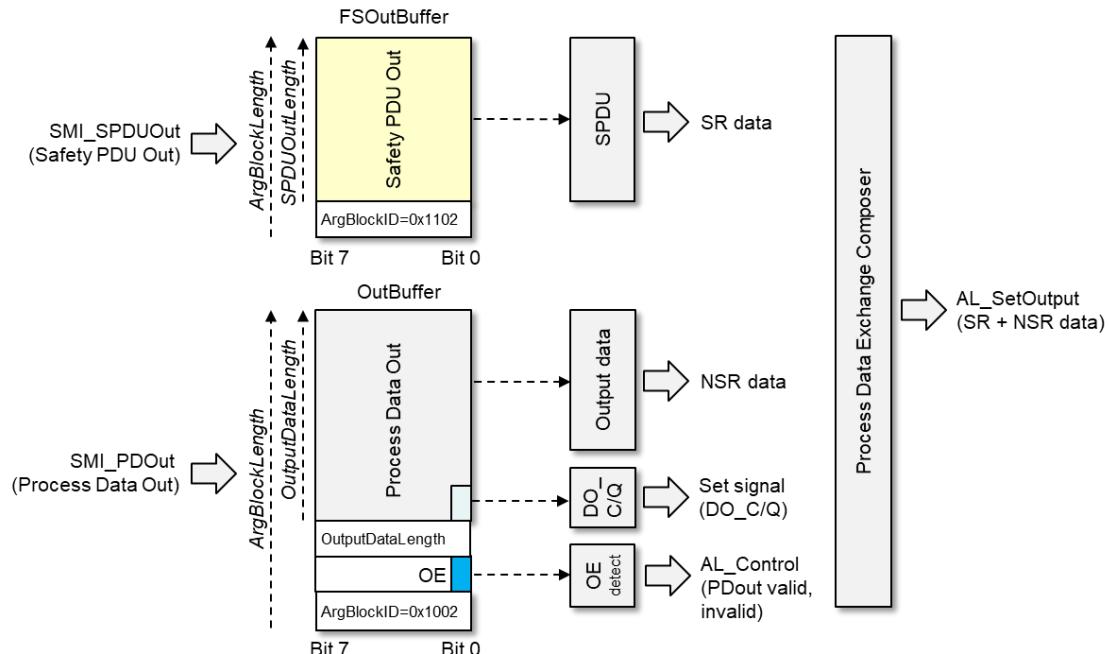

1210

1211 **Figure 34 – PDE Composer (only in IO-Link PortMode = “SAFETYCOM”)**

## 10.6 Data Storage (DS)

Data Storage for the purpose of parameter backup and Device/FS-Device replacement is specified in IEC 61131-9. A brief description and adaptations for SDCI-FS can be found in 9.4.

## 11 Safety communication layer (SCL)

### 11.1 Functional requirements

The functional requirements for SDCI-FS are laid down in [8]. Main application area is "safety for machinery". Usually this means operational stop of a machine until clearance or repair and restart only after an operator acknowledgement. Primarily relevant are IEC 62061 and ISO 13849.

Other major requirements are suitability for up to SIL3/PLe safety functions, Port specific passivation, and parameterization using Dedicated Tools. Safety measures and residual error rates for timeliness, authenticity, and data integrity ("TADI") of safety messages (safety PDUs) shall be compliant with IEC 61784-3:2021.

### 11.2 Communication errors and safety measures

The point-to-point communication basis of SDCI allows for a very lean protocol type and a hardware independent safety communication layer stack with a small memory footprint. Table 26 shows the communication errors to be considered and the chosen safety measures:

- (Sequence) counter / inverted counter;
- Watchdog timer and receipt messages;
- Connection validation at commissioning, start-up, and repair, and
- Cyclic redundancy check for data integrity.

**Table 26 – Communication errors and safety measures**

Communication error	Protocol safety measures			
	Counter/Inverted counter	Timeout with receipt	PortNum + Connection validation <sup>a</sup>	Cyclic redundancy check (CRC)
Corruption	–	–	–	X
Unintended repetition	X	X	–	–
Incorrect sequence	X	–	–	–
Loss	X	X	–	–
Unacceptable delay	–	X	–	–
Insertion	X	–	–	–
Masquerade	–	–	X	X
Addressing	–	–	X	–
Loop-back of messages	X	–	X	–

<sup>a</sup> Connection validation comprises an FSCP authenticity (see A.2.1) and the FS-Master Port number.

It is assumed, that there are no storing elements within the SDCI communication path between FS-Master and FS-Device. Thus, a three-bit counter is sufficient as a safety measure. A value 0b000 of this counter on FS-Master side indicates a start or reset position of this counter. In cyclic mode it counts to 0b111 and returns to 0b001.

The message "send" and "receive" concept of SDCI allows for a simple watchdog timer and message receipt safety measure concept corresponding to the "de-energize to trip" principle.

It is assumed that an FS-Master is the owner of a functional safety connection ID of the upper-level FSCP communication system (FSCP authenticity) similar to an FS-DI-Module within a

1244 remote I/O. A customer is required to perform a validation procedure, whenever a change  
 1245 occurred with the connected safety devices. SDCI-FS relies on such a concept. Additionally,  
 1246 due to the standard "data storage" mechanism of SDCI and the functional safety nature of the  
 1247 FS-Master, it is possible to provide a more convenient mechanism.

1248 A CRC signature is used for the data integrity check of transmitted safety PDUs.

### 1249 11.3 SCL services


#### 1250 11.3.1 Positioning of safety communication layers (SCL)

1251 Figure 35 shows the positioning of the SDCI-FS Safety Communication Layer (SCL).

1252 For each Port with a connected FS-Device an instance of the SCL is required. The SCLs are  
 1253 exchanging safety PDUs consisting of output Process Data (PDout) together with safety code  
 1254 to the FS-Device and input Process Data (PDin) together with safety code from the FS-Device.  
 1255 The SCLs are using standard SDCI communication as a "black channel".

1256 Sufficient availability through for example correct installations, low-noise power supplies, and  
 1257 low interferences are preconditions for this "black channel" to avoid so-called nuisance/spurious  
 1258 trips. These trips cause production stops and subsequently may cause management to remove  
 1259 safety equipment.

1260 This document does not specify implementation related safety measures such as redundant  
 1261 microcontrollers, RAM testing, etc. It is the responsibility of the manufacturer/vendor to take  
 1262 appropriate measures against component failures or errors according to IEC 61508 (all parts).

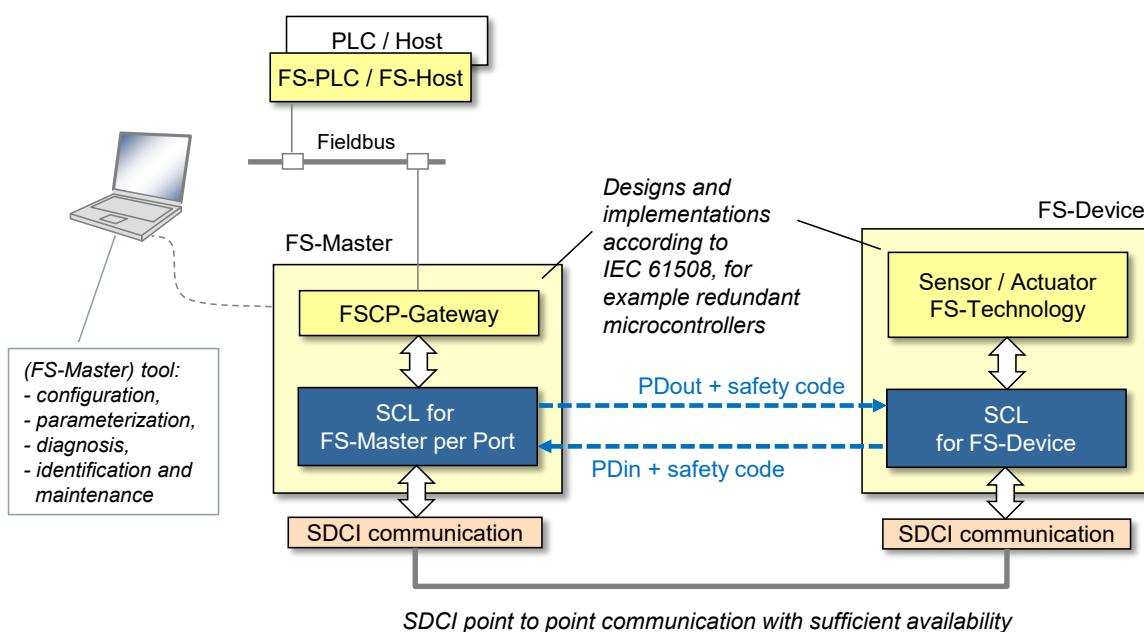


1263

1264 **Figure 35 – Positioning of the SDCI-FS Safety Communication Layer (SCL)**

#### 1265 11.3.2 FS-Master SCL services

1266 SDCI-FS applications include (but are not limited to) connections to upper-level FSCP fieldbus  
 1267 systems. FSCPs usually also provide safety codes and control/monitoring services (signals).

1268 Figure 36 shows the FS-Master Safety Communication Layer signals (services) depicted by  
 1269 arrows in the upper part of the figure. For each FSCP to be connected to, a mapping or  
 1270 emulation of corresponding SCL services is required.

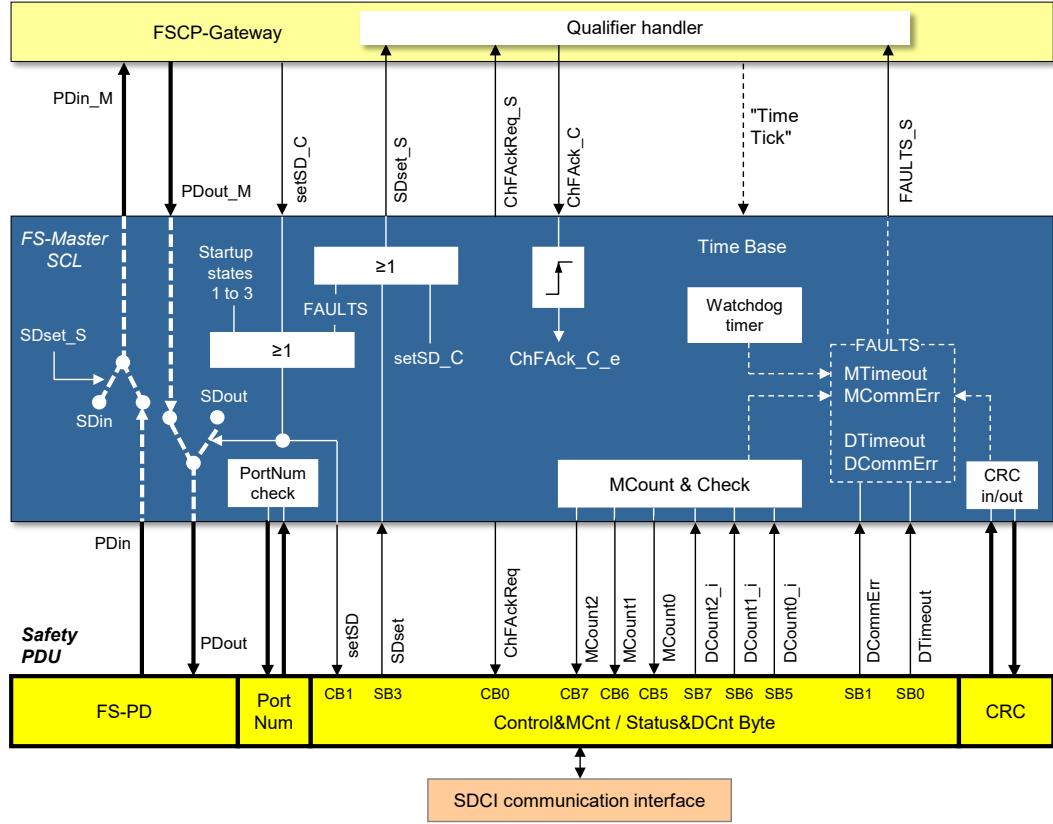

1271

1272 **Figure 36 – FS-Master Safety Communication Layer services**

1273 A service name carries either an extension "\_C" (Control), if it controls the safety  
1274 communication activities or an extension "\_S" (Status), if it is reporting on the activities.

1275 Some of the service names correspond to the signal names of the Control Byte or Status Byte  
1276 (see lower part of the figure and 11.4.5). That means they are correlated, but there is some  
1277 control logic of the SCL in between. This control logic is time discrete and not continuous even  
1278 if it is depicted as logic OR ("≥") box. Definitive are the state charts and the state transition  
1279 tables of the SCL (see 11.5.2).

1280 The following services in Table 27 shall be available to the FSCP gateway or to a programmer  
1281 of an FS-Master system.

1282

**Table 27 – SCL services of FS-Master**

Service/signal	Definition
PDin_M, PDout_M	These services carry the actual Process Data values, both SDin (all bits "0") and SDout (all bits "0") in case of safe state or the real process values from or to the FS-Device.
SDin, SDout	These services carry Process Data values all zero.
setSD_C	In case of emergency, safety control programs usually set output Process Data (PDout_M) for an actuator to "0". However, in some cases, for example burner ventilators, shut down may not be a safe state. This service, if set to "1", is additional information allowing an FS-Device to establish a safe state no matter what the values of Process Data are. Independent from PDout_M, this service causes the SCL to send SDout values to the FS-Device and to send SDin to the FSCP gateway (PDin_M) via SDset_S.
SDset_S	This service, if set to "1", causes the qualifier handler to set the qualifier bit for the Process Data of the connected FS-Device (see 11.11.4). In addition, it causes the SCL to send SDin to the FSCP gateway (PDin_M).
ChFAckReq_S	The FS-Master SCL sets this service to "1" in case of disappeared FAULTS or FS-Master timeouts. It shall be propagated via FSCP and indicated to the operator.
ChFAck_C	After check-up and/or repair, the operator is requested to acknowledge a "ChFAckReq_S" service via a "1". This is a precondition for the SCL to resume regular

Service/signal	Definition
	operation after 3 transmission cycles with SDin and SDout values. The operator shall release the pressed acknowledgment button to enable further acknowledgments. See "Internal Items" in Table 37.
FAULTS_S	Any communication error (counter mismatch or CRC signature error) and/or timeouts cause the qualifier handler to set the qualifier bit for the Process Data of the connected FS-Device (see 11.11.4).

1283


1284 The lower part of the figure shows a combined input and output safety PDU specified in 11.4.3  
 1285 and 11.4.5.

### 11.3.3 FS-Device SCL services

1287 Figure 37 shows the FS-Device Safety Communication Layer services depicted by arrows in  
 1288 the upper part of the figure.

1289 A service name carries either an extension "\_DC" (Device Control) if it controls the FS-Device  
 1290 technology or an extension "\_DS" (Device Status) if it is reporting its status.

1291 Some of the service names correspond to the signal names of the Control Byte or Status Byte  
 1292 (see lower part of the figure and 11.4.5). That means they are correlated, but there is some  
 1293 control logic of the SCL in between. This control logic is time discrete and not continuous even  
 1294 if it is depicted as logic OR ("≥") box. Definitive are the state charts and the state transition  
 1295 tables of the SCL (see 11.5.3).

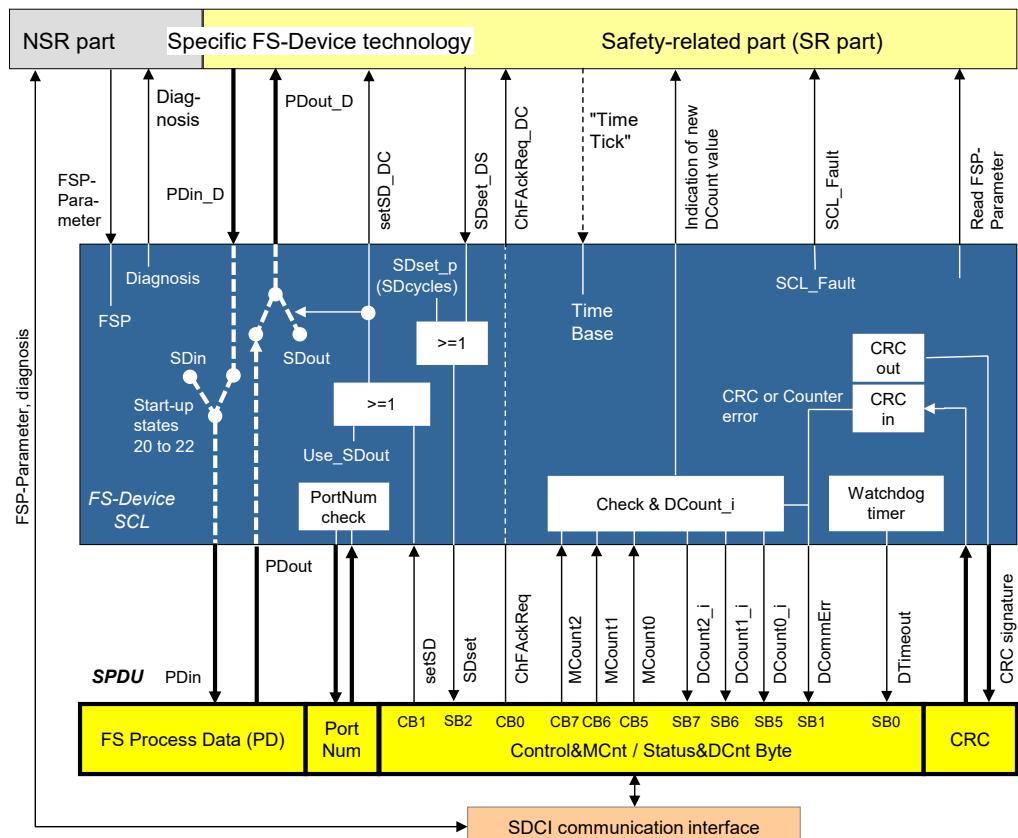

1296

1297 **Figure 37 – FS-Device Safety Communication Layer services**

1298 The following services in Table 28 shall be available to the safety-related part of the FS-Device  
 1299 technology. Some services are non-safety-related and shall be available to the non-safety-  
 1300 related part of the FS-Device.

1301

**Table 28 – SCL services of FS-Device**

Service/signal	Definition
PDin_D, PDout_D	These services carry the actual Process Data values. Real process values from the FS-Device and SDout (all bits "0") in case of safe state or the real process values to the FS-Device.
SDin, SDout	These services carry Process Data values all zero. Signal Use_SD indicates the usage of Process Data all zero.
setSD_DC	In case of emergency, safety control programs usually set output Process Data (PDout) for an actuator to "0". However, in some cases, for example burner ventilators, shut down may not be a safe state. This service, if set to "1", is additional information allowing an FS-Device to establish a safe state no matter what the values of Process Data are. Independent from PDout, this service causes the SCL to send SDout values to the FS-Device.
SDset_DS	This service, if set to "1", indicates that the FS-Device either reacts on a setSD_DC = "1" when the safe state is established or has been forced to establish safe state due to error or failure and delivers input Process Data values "0" (PDin_D).
ChFAckReq_DC	This service, if set to "1", indicates a pending operator acknowledgment. This signal is not safety-related and can be used to control an indicator, for example LED (light emitting diode).
Time tick	The SCL can be designed totally hardware independent if a periodic service call controls a time base inside the SCL.
Indication of new DCount value	Short demands of FS-Devices may not trip a safety function due to its chain of independent communication cycles across the network. Therefore, a demand shall last for at least two SCL cycles. This service provides the necessary information to implement the demand extension if required.
SCL_Fault	This service provides faults (errors) of the SCL software.
Read_FSP_Parameter	This service allows the FS-Device technology for reading the current FSP (protocol) parameter
<b>Non-safety-related services:</b>	
FSP_Parameter	The FS-Master transmits the FSP parameter record (block) at each start-up during PREOPERATE to the FS-Device. These parameters are propagated to the SCL using this service.
Diagnosis	SCL diagnosis information can be propagated to the SDCI Event system using this service.


1302

1303 The lower part of Figure 37 shows a combined input and output safety PDU specified in 11.4.3  
 1304 and 11.4.5.

## 11.4 SCL protocol

### 11.4.1 Protocol phases to consider

1307 Figure 38 shows the principle protocol phases to consider for the design according IEC 61784-  
 1308 3:2021.

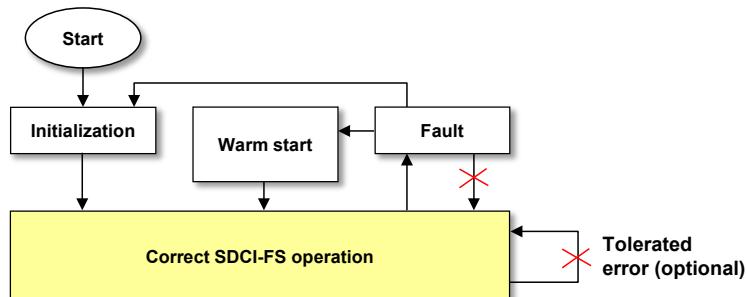

1309

**Figure 38 – Protocol phases to consider**

1311 The principle protocol phases and the corresponding requirements are listed in Table 29.

1312

**Table 29 – Protocol phases to consider**

Phase	Activities	Requirements
Initialization	Establish communication, transfer FSP parameter to FS-Device, SD cycles	- Actuator shall be de-energized - SDout values shall be used during the first 3 SCL communication cycles
Setup or change	Commissioning, FST parameter backup	- As long as the FSP_TechParCRC is set to "0", cyclic data exchange of PD values and SCL is enabled.
Operation	Process Data exchange, power-down of FS-Device	- It is the responsibility of the FS-Device technology to detect undervoltages and to set SD values.
Restart after transition from fault	Timeout, operator acknowledgment	- Operator acknowledgment is required prior to a restart - MCounter reset (resynchronization) - SDout values shall be used during the first 3 SCL communication cycles
Warm start after transition from fault	CRC or counter error, operator acknowledgment	- Operator acknowledgment is required prior to a restart - SDout values shall be used during the first 3 SCL communication cycles
Shutdown	Contact bouncing, EMC voltage dips/changes	- It is the responsibility of the FS-Device technology to detect undervoltages and to set SD values.



1313

#### 11.4.2 FS-Device faults

1314 The SCL protocol copes with faults occurring during transmission of safety PDUs such as CRC errors or timeouts. It is the responsibility of the designer of the FS-Device to cope with FS-Device faults and to make sure that the necessary functional safety actions will take place, for example setting of safety Process Data and the SDset\_DS service.

#### 11.4.3 Safety PDU (SPDU)

1315 Figure 39 shows the structure of SPDUs of the FS-Master and FS-Device together with standard input and output data. The design follows the concept of explicit transmission of the safety measures for timeliness and authenticity according to IEC 61784-3:2021 in contrast to the implicit transmission via inclusion in the overall CRC signature calculation.

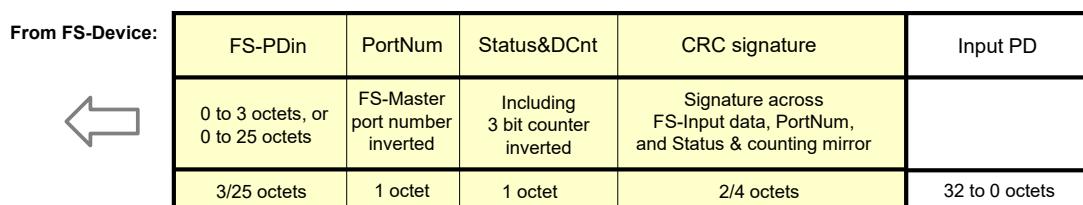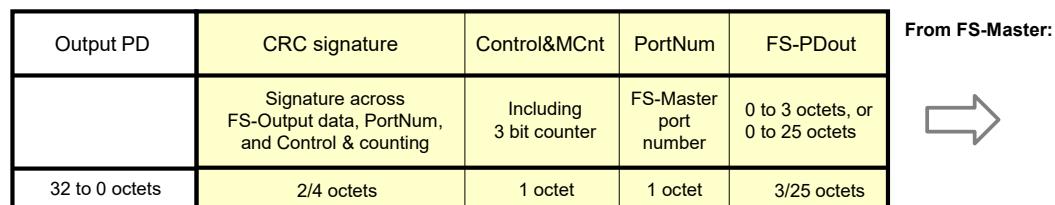

1324

**Figure 39 – Safety PDUs of FS-Master and FS-Device**

1325 The timeliness measure is represented by a 3-bit counter within the protocol management octets (see 11.4.6).

1326 With respect to authenticity, only the FS-Master Port number is included in cyclic checking due to requested usage of unchanged SDCI implementations ("Black channel"). However, complete authenticity checking is performed during commissioning and at start-up.

1331 The design is an enhancement of the original "de-energize to trip" principle. In case of a timeout,  
 1332 or a CRC error, or a counter error, or a PortNum error, the associated qualifier bit will be set. It  
 1333 will be only released after an explicit operator acknowledgment on the FS-Master side.

1334 PD validity shall be applied only on the non-safe part of the process data (Output PD, Input  
 1335 PD).

#### 1336 **11.4.4 FS-Input and FS-Output data**

1337 The maximum possible size of the FS-Input and FS-Output data reaches from 0 to 25 octets  
 1338 depending on the amount of required standard SDCI data. See 11.4.7 for optimization issues  
 1339 and trade-offs. The possible data types are listed in Table 33.

1340 NOTE Currently the safety code consists of only 4 or 6 octets and theoretically 26 octets could be available.

#### 1341 **11.4.5 Port number**

1342 One octet carries the FS-Master Port number or value of FSP\_Port respectively (see A.2.2).  
 1343 FS-Device returns the inverted value of the Port number. The port number is the physical port  
 1344 number of the master and is identically in the SDCI black channel.

#### 1345 **11.4.6 Status and control**

1346 One octet is used in both transmission directions for the protocol flow of SDCI-FS. Table 30  
 1347 shows the signals to control the protocol layer of an FS-Device and a counter value for the  
 1348 timeliness check together with a local watchdog timer adjusted through the "FSP\_Watchdog"  
 1349 parameter (see A.2.6).

1350 **Table 30 – Control and counting (Control&MCnt)**

<b>CB7</b>	<b>CB6</b>	<b>CB5</b>	<b>CB4</b>	<b>CB3</b>	<b>CB2</b>	<b>CB1</b>	<b>CB0</b>
Sequence counter, bit 2	Sequence counter, bit 1	Sequence counter, bit 0	Reserved ("0")	Reserved ("0")	Reserved ("0")	Activate safe state	Channel fault acknowledge request (indication)
MCount2	MCount1	MCount0	–	–	–	SetSD	ChFAckReq

1351

1352 Table 31 shows the feedback of the protocol layer of an FS-Device and the inverted counter  
 1353 value for the timeliness check. The counter values are inverted to prevent from undetected loop-  
 1354 back errors.

1355 **Table 31 – Status and counting mirror (Status&DCnt)**

<b>SB7</b>	<b>SB6</b>	<b>SB5</b>	<b>SB4</b>	<b>SB3</b>	<b>SB2</b>	<b>SB1</b>	<b>SB0</b>
Sequence counter, bit 2; inverted	Sequence counter, bit 1; inverted	Sequence counter, bit 0; inverted	Reserved ("0")	Reserved ("0")	Safe state activated	Communication error: CRC or counter /Port incorrect	Communication fault: Timeout
DCount2_i	DCount1_i	DCount0_i	–	–	SDset	DCommErr	DTimeout

1356

1357 Table 32 shows the values of MCount and DCount\_i during protocol operation.

1358

**Table 32 – MCount and DCount\_i values**

<b>Phase</b>	<b>MCount</b>		<b>DCount_i</b>	
	<b>Dec</b>	<b>Bin</b>	<b>Dec</b>	<b>Bin</b>
Initial or after timeout	0	000	7	111
Cyclic	1	001	6	110
	2	010	5	101
	3	011	4	100

	4	100	3	011
	5	101	2	010
	6	110	1	001
	7	111	0	000


1359

1360 **11.4.7 CRC signature**

1361 For the design of the CRC mechanism and the calculation of the residual error probability/rate  
 1362 several parameters and assumptions are required:

- 1363 • No multi-drop, multi-channel, or encrypted transmission in SDCL. Thus, the Binary  
 1364 Symmetric Channel (BSC) model can be applied.
- 1365 • Explicit transmission of safety measures as opposed to implicit transmission. In this  
 1366 case, formulas are available within IEC 61784-3:2021.
- 1367 • The sampling rate of safety PDUs is assumed to be a maximum of 1000 sampled safety  
 1368 PDUs per second.
- 1369 • The monitoring times for errors in safety PDUs are listed in Table 40. Any detected CRC  
 1370 error within the safety communication layer shall trip the corresponding safety function  
 1371 (safe state). During the monitoring time only one nuisance trip is permitted. Maintenance  
 1372 is required.
- 1373 • The generator polynomials in use shall be proven to be proper within the SPDU range.
- 1374 • The seed value to be used for the CRC signature calculation is "1" (see D.3.6).
- 1375 • In case the result of the CRC signature calculation leads to a "0", a "1" shall be sent  
 1376 and evaluated at the receiver side correspondingly.
- 1377 • The assumed bit error probability for calculations is  $10^{-2}$ .

1378 Figure 40 shows the so-called 1 % share rule of the IEC 61784-3:2021. For SDCL-FS it means,  
 1379 the residual error rate of an SDCL-FS logical connection shall not exceed 1 % of the average  
 1380 frequency of a dangerous failure (PFH) of that safety function with the highest SIL the safety  
 1381 communication is designed for, which is SIL3. This value is  $10^{-9}/h$ .

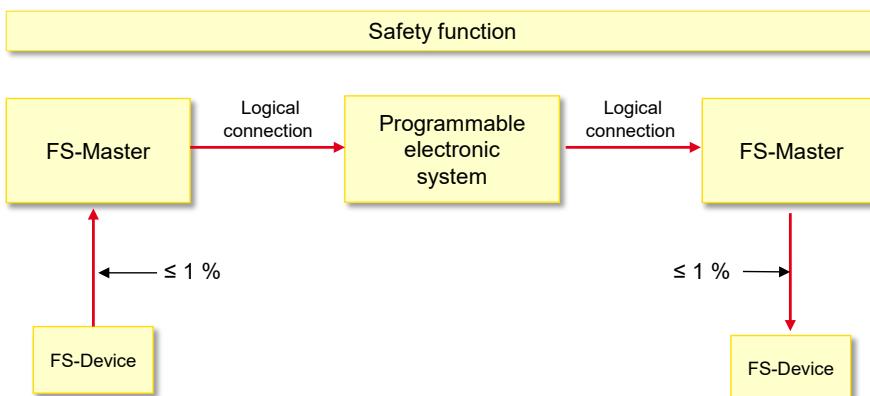

1382

1383 **Figure 40 – The 1 % share rule of IEC 61784-3:2021**

1384 Calculations under the above conditions have shown the following possibilities (see Annex D):

- 1385 – For a CRC-16 proper polynomial (0x4EAB) 3 octets of Process Data (safety PDU length =  
 1386 7 octets),
- 1387 – For a CRC-32 proper polynomial (0xF4ACFB13) 25 octets of Process Data (safety PDU  
 1388 length = 31 octets).

1389 It is highly recommended that the 32-bit CRC is chosen, also for devices with up to 3 octets due to the  
 1390 enhancement of the IEC 61784-3.

1391    **11.4.8 TADI safety considerations (normative)**

1392    In order for the SCL protocol to be compliant with IEC 61784-3:2021 (see 11.1), considerations  
 1393    and calculations shall be performed to prove that the overall PFH for

1394    – timeliness,

1395    – authenticity (masquerade, loopback), and

1396    – data integrity,

1397    is less than  $10^{-9}/h$  (Figure 40).

1398    The measures for timeliness are specified in 11.4.6 and consist of the 3-bit counter in  
 1399    combination with a watchdog timer within the SCL. This provides an added measure of data  
 1400    integrity and SCL state checking. However, in accordance with IEC 61784-3:2021, 5.8.8, due  
 1401    to the point-to-point nature of the SDCI-FS and no storage elements are allowed, the residual  
 1402    error rate for timeliness,  $RR_T$  is 0.

1403    The measure for authenticity and masquerade checking is provided by the explicit transmission  
 1404    of a Port number in the SPDUs that is checked by the receiving SCL endpoint. This provides an  
 1405    added measure of data integrity checking. However, in accordance with IEC 61784-3:2021,  
 1406    5.8.7, due to the point-to-point nature of the SDCI-FS, the rate of occurrence for misdirected  
 1407    SPDUs ( $R_A$ ) is 0, and therefore, the residual error rate for authenticity,  $RR_A$  is 0. Similarly, the  
 1408    rate of occurrence for masqueraded SPDUs ( $R_M$ ) is 0, and therefore, the residual error rate for  
 1409    masquerade,  $RR_M$  is 0.

1410    The measures for data integrity are provided by the CRC signature across safety process data,  
 1411    Port number, and Control&MCnt or Status&DCnt respectively as shown in 11.4.3. The  
 1412    calculation of the residual error probability can be performed at a bit error probability of  $10^{-2}$   
 1413    using the information in Annex D of this document. Designers shall observe the maximum  
 1414    sample rate specified in 11.4.7. The PFH monitor limits the maximum number of detected  
 1415    corrupted SPDUs for a given time interval (see 11.5.5).

1416    **11.4.9 Data types for SDCI-FS**

1417    **11.4.9.1 General**

1418    The cyclically exchanged functional safety data structures between FS-Device and FS-Master  
 1419    comprise FS process I/O data and the SDCI-FS protocol trailer. They are transmitted in Safety  
 1420    PDUs.

1421    Acyclically exchanged functional safety data structures are transmitted in SDCI On-request  
 1422    Data (OD) containers either from a Dedicated Tool or from a user program within an FS-PLC.  
 1423    In this case additional securing mechanisms (e.g. CRC signature) are required at each and  
 1424    every transfer or after a parameter block.

1425    **11.4.9.2 FS process I/O data (PDin and PDout)**

1426    For the FS process I/O data a well-defined set of data types and a corresponding description is  
 1427    defined for both FS-Device and FS-Master for correct processing and mapping to the upper-  
 1428    level FSCPs. Table 33 lists the three permitted data types (see Annex C).

1429    **Table 33 – FS process I/O data types**

Data type	Coding	Length	See IEC 61131-9:2022	Device example
BooleanT/bit	BooleanT ("packed form" for efficiency, no WORD structures); assignment of signal names to bits is possible.	1 bit	F.2.2; Table F.22, and Figure F.9	Proximity switch
IntegerT(16)	IntegerT (enumerated or signed)	2 octets	F.2.4; Table F.4, Table F.7, and Figure F.3	Protection fields of laser scanner

Data type	Coding	Length	See IEC 61131-9:2022	Device example
IntegerT(32)	IntegerT (enumerated or signed)	4 octets	F.2.4; Table F.4, Table F.6, and Figure F.3	Encoder or length measurement ( $\approx \pm 2$ km, resolution 1 $\mu\text{m}$ )

1430

#### 11.4.9.3 Qualifier

FS-Devices normally do not require qualifiers (see 11.11.2). The qualifier bits are configured together with the Process Data (or Safe Data = SD) during the mapping to the upper-level FSCP system. The data structures depend on the rules of these FSCP systems.

In case of FS-Terminals (see 11.11.3) the rules in Table 34 for the layout of binary and digital data and their qualifier bits apply.

**Table 34 – Rules for the layout of values and qualifiers**

No.	Rule
1	Only Boolean (DI, DO) and IntegerT(16) or IntegerT(32) (AI, AO) data types shall be used. Any value shall be assigned to one of these categories.
2	Boolean values precede Integer values
3	IntegerT(16) precedes IntegerT(32) values
4	Values precede qualifier in an octet-wise manner
5	Qualifiers follow directly input values. In case of no input values only the qualifiers for output values are placed.
6	Qualifier for input values precede qualifier for output values
7	Qualifiers for each category (DI, DO, AI, AO) are packed separately in an octet-wise manner
8	If data types are missing the remaining data types catch up

1438

Table 35 shows the ranking of values and qualifiers.

1440

**Table 35 – Order of values and qualifier**

Order	To FS-Master	To FS-Device
1	Value DI	Value DO
2	Value AI	Value AO
3	Qualifier DI	–
4	Qualifier AI	–
5	Qualifier DO	–
6	Qualifier AO	–

1441

#### 11.4.9.4 SDCI-FS protocol trailer

The data types for the protocol trailer ("safety code") are specified in Clause C.5.

#### 11.4.9.5 FSP and FST parameter

No particular data type definitions are required.


### 11.5 SCL behaviour

#### 11.5.1 General

The state machines for the FS-Master and the FS-Device safety communication layer are designed using the chosen safety measures in Table 26 and the protocol signals in 11.4.5.

### 11.5.2 SCL state machine of the FS-Master

Figure 41 shows the FS-Master state machine for wired SDCI point-to point communication.

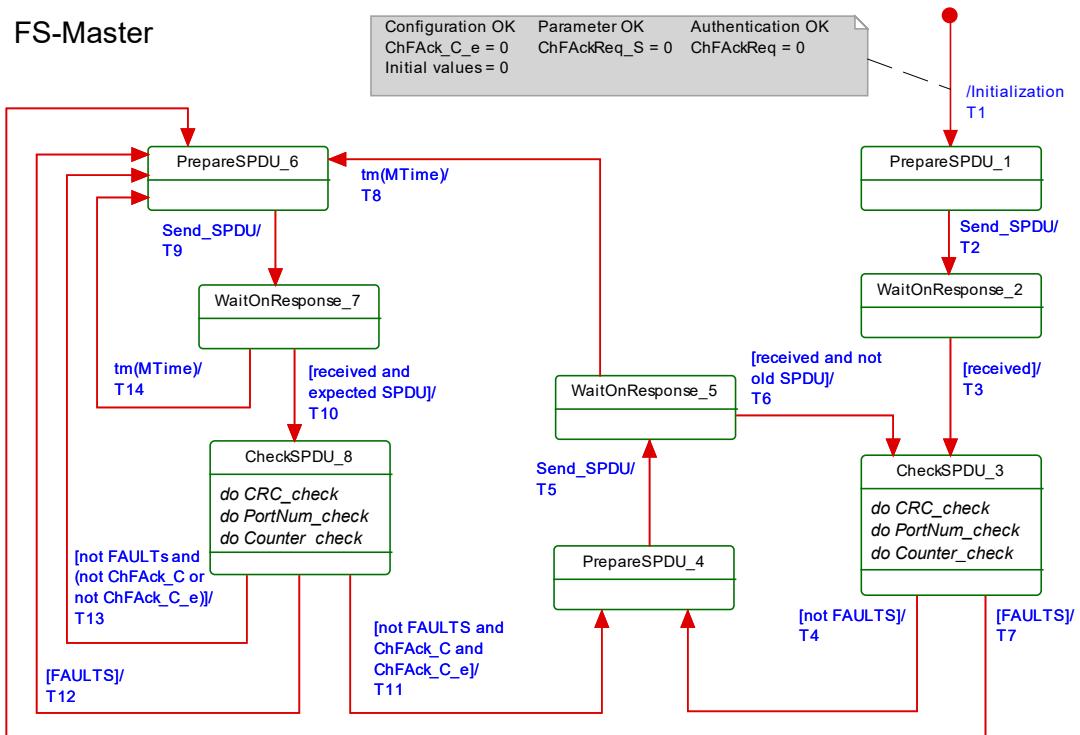

**Figure 41 – SCL state machine of the FS-Master**

1454 The terms used in Figure 41 are defined in Table 36.

**Table 36 – Definition of terms used in SCL state machine of the FS-Master**

Term	Definition
ChFAck_C	Operator acknowledgment for the safety function via the FS-Gateway
FAULTS	<p>MTIMEOUT: FS-Master timeout when waiting on an FS-Device SPDU response, or        MCOMMERR: FS-Master detects a corrupted FS-Device SPDU response (incl. counter/Port error), or        DTIMEOUT: FS-Device reported a timeout of its SCL via Status&amp;DCNT Byte, or        DCOMMERR: FS-Device reported a CRC (incl. counter/Port error) by its SCL via Status&amp;DCNT Byte</p>

**Table 37 – FS-Master SCL states and transitions**

STATE NAME	STATE DESCRIPTION
Initialization	Initial state of the FS-Master SCL instance upon power-on (one per Port).
1 PrepareSPDU	Preparation of a ( <i>regular</i> ) SPDU for the FS-Device. Send SPDU when prepared.
2 WaitOnResponse	SCL is waiting on SPDU from FS-Device. SPDU with all octets "0" shall be ignored.
3 CheckSPDU	Check received SPDU for not FAULTS (→ T4). In case of FAULTS: errors within the Status&DCnt Byte (DCommErr, DTimeout, SDset) → T7
4 PrepareSPDU	Preparation of a ( <i>regular</i> ) SPDU for the FS-Device. Send SPDU when prepared.
5 WaitOnResponse	SCL is waiting on next SPDU from FS-Device not carrying the previous DCount_i. SPDU with all octets "0" shall be ignored.
6 PrepareSPDU	Preparation of an ( <i>exceptional</i> ) SPDU for the FS-Device (due to MTimeout, missing OpAck, or FAULTS).
7 WaitOnResponse	SCL is waiting on next SPDU from FS-Device not carrying the previous DCount_i. When received → T10, after MTimeout → T14.

1457

STATE NAME		STATE DESCRIPTION	
8 CheckSPDU		Check received SPDU for a CRC error (MCommErr) and for potential FS-Device faults within the Status&DCnt Byte (DTimeout, DCommErr). Once a fault occurred, no automatic restart of a safety function is permitted unless an operator acknowledgement signal (ChFAck_C) arrived (see Figure 36). Hint: A delay time may be required avoiding the impact of an occasional system shutdown.	
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T1	0	1	use SD, setSD =1, SDset_S =1 MCount = 0
T2	1	2	–
T3	2	3	–
T4	3	4	MCount = MCount + 1 <b>if</b> MCount = 8 <b>then</b> MCount = 1 <b>if</b> SDset =1 or setSD_C =1 <b>then</b> use SDin, SDset_S =1 <b>else</b> use PDin, SDset_S =0 <b>if</b> setSD_C =1 <b>then</b> use SDout, setSD =1 <b>else</b> use PDout, setSD =0
T5	4	5	restart MTimer
T6	5	3	–
T7	3	6	use SD, setSD =1, SDset_S =1 MCount = MCount + 1 <b>if</b> MCount = 8 <b>then</b> MCount = 1
T8	5	6	use SD, setSD =1, SDset_S =1 MCount = 0
T9	6	7	restart MTimer
T10	7	8	–
T11	8	4	ChFAckReq =0, ChFAckReq_S =0, ChFAck_C_e =0, MCount = MCount + 1 <b>if</b> MCount = 8 <b>then</b> MCount = 1 <b>if</b> SDset =1 or setSD_C =1 <b>then</b> use SDin, SDset_S =1 <b>else</b> use PDin, SDset_S =0 <b>if</b> setSD_C =1 <b>then</b> use SDout, setSD =1 <b>else</b> use PDout, setSD =0
T12	8	6	ChFAckReq =0, ChFAckReq_S =0, ChFAck_C_e =0, use SD, setSD =1, SDset_S =1 MCount = MCount + 1 <b>if</b> MCount = 8 <b>then</b> MCount = 1
T13	8	6	ChFAckReq =1, ChFAckReq_S =1, /*set qualifier/acknowledgment request*/ <b>if</b> ChFAck_C = 0 <b>then</b> ChFAck_C_e =1 use SD, setSD =1, SDset_S =1 MCount = MCount + 1 <b>if</b> MCount = 8 <b>then</b> MCount = 1
T14	7	6	ChFAckReq =0, ChFAckReq_S =0, ChFAck_C_e =0, use SD, setSD =1, SDset_S =1 MCount = 0
INTERNAL ITEMS		TYPE	DEFINITION
MTimer		Timer	This timer checks the arrival of the next valid SPDU from the FS-Device in time. The FS-Master Tool is responsible to define this watchdog time. Value range is 1 to 65 535 ms.


1458

INTERNAL ITEMS	TYPE	DEFINITION
ChFAck_C_e	Flag	By means of this auxiliary variable (bit) it is ensured that the safe state will be left only after a signal change of ChFAck_C from 0 → 1 (edge). Without this mechanism an operator could overrule safe states by permanently actuating the ChFAck_C signal.
FAULTS	Flags	Permanent storage of the following errors or failures can be omitted within the FS-Master, if it can be assumed that the upper-level FSCP system prevents from automatic restart of safety functions (no FS-Device persistence): - MCommErr or MTimeout - DCommErr, including counter/Port error (Status&DCnt Bit 1 and PortNum) - DTimeout (Status&DCnt Bit 0)
Expected SPDU	Guard	Mirrored inverted counter (DCount_i = inverted MCount)
Not old SPDU	Guard	Counter value ≠ value of previous SPDU
do CRC_check	Activity	SCL calculates CRC signature across received SPDU while "seed" value = "0" and compares with received CRC signature
do PortNum_check	Activity	SCL checks whether PortNum carries the correct FS-Master Port number
do Counter_check	Activity	SCL checks whether DCount carries an expected value (mirror)
NOTE Variables within ACTIONS are defined in 11.3		

1459

### 11.5.3 SCL state machine of the FS-Device

Figure 42 shows the corresponding FS-Device state machine.

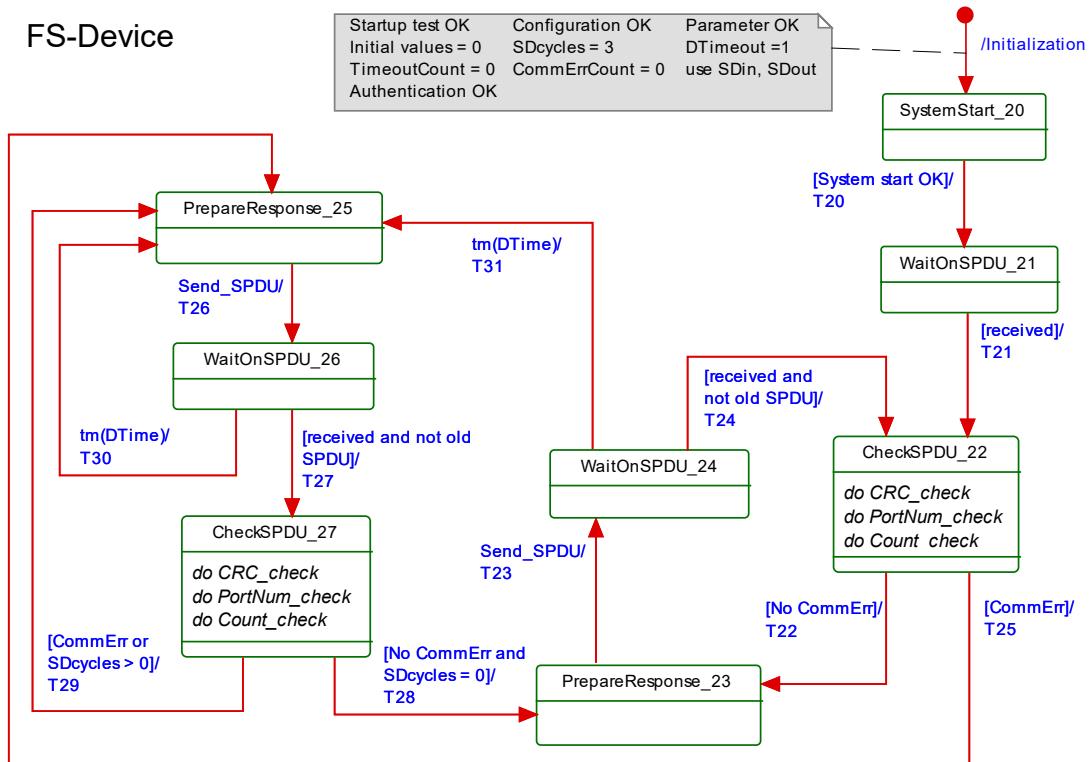

1462

**Figure 42 – SCL state machine of the FS-Device**

1463 The terms used in Figure 42 are defined in Table 38.

1465

**Table 38 – Definition of terms used in SCL state machine of the FS-Device**

Term	Definition
CommErr	The SCL of the FS-Device detected a CRC or counter/Port error in the received SPDU
CommErrCount	See INTERNAL ITEM in Table 39
SDcycles	See INTERNAL ITEM in Table 39
DTimeout	FSP_WatchdogTime expired
TimeoutCount	See INTERNAL ITEM in Table 39

1466

1467

**Table 39 – FS-Device SCL states and transitions**

STATE NAME	STATE DESCRIPTION		
Initialization	Initialization of the FS-Device upon power-on. Upon power-on, the FS-Device (actuator) sets the PDout to "0". Upon power-on the FS-Device (sensor) is sending "0".		
20 SystemStart	Immediately after FSP parameterization the FS-Device sets PDout to SDout values. Immediately after FSP parameterization it is sending Process Data (PD).		
21 WaitOnSPDU	SCL is waiting on next SPDU from FS-Master. SPDU with all octets "0" shall be ignored.		
22 CheckSPDU	Check received SPDU from FS-Master for CRC errors; set ChFAckReq_DC = ChFAckReq. When guard "No CommErr" = true → T22. When guard "CommErr" = true → T25		
23 PrepareResponse	Preparation of ( <i>regular</i> ) SPDU response for the FS-Master (response message)		
24 WaitOnSPDU	SCL is waiting on next ( <i>regular</i> ) SPDU from FS-Master not carrying the previous MCount. After FSP_WatchdogTime expired → T31. When SPDU received and guard "MCounter_incremented" = true → T24 ( <i>regular</i> cycle)		
25 PrepareResponse	Preparation of ( <i>exceptional</i> ) SPDU response for the FS-Master (due to DTimeout or DCommErr = error report bits in Status&DCnt Byte)		
26 WaitOnSPDU	SCL is waiting on next SPDU from FS-Master not carrying the previous MCount. SPDU with all octets "0" shall be ignored. After FSP_WatchdogTime expired → T30. When SPDU received and guard "MCounter_incremented" = true → T27		
27 CheckSPDU	Check received SPDU from FS-Master for CRC errors; set ChFAckReq_DC = ChFAckReq. When guard "No CommErr and SDcycles =0" = true → T28. When guard "CommErr or SDcycles >0" = true → T29		
TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T20	20	21	–
T21	21	22	–
T22	22	23	<pre> use PDin_D, DCommErr = 0, /*Status&amp;DCnt, Bit 1*/ DTimeout = 0, /*Status&amp;DCnt, Bit 0*/ DCount_i = MCount_inv, restart DTimer if SDcycles &lt;&gt; 0 then   use SDout, setSD_DC=1, SDset = 1,      /*during SDcycles: SDset_p =1*/   SDcycles = SDcycles - 1 else   use PDout, setSD_DC=0, SDset = 0 if setSD =1 /*use_SD =1*/ then   use SDout, setSD_DC=1,</pre>
T23	23	24	<pre> if SDset_DS = 1 /* FS-Device fault*/ then SDset = 1</pre>
T24	24	22	–

1468

TRANSITION	SOURCE STATE	TARGET STATE	ACTION
T25	22	25	<pre>use PDin_D, use SDout, setSD_DC=1, SDset = 1, DCommErr =1, /*Status&amp;DCnt, Bit 1*/ CommErrCount = 1, DCount_i = MCount_inv, SDcycles = 3, restart DTimer</pre>
T26	25	26	–
T27	26	27	–
T28	27	23	<pre>use PDin_D, use SDout, setSD_DC=0, SDset = 0, DCount_i = MCount_inv, DCommErr =0, /*Status&amp;DCnt, Bit 1*/ DTimeout =0, /*Status&amp;DCnt, Bit 0*/ restart DTimer,</pre>
T29	27	25	<pre>use PDin_D, use SDout, setSD_DC=1, SDset = 1, DCount_i = MCount_inv, restart DTimer if CommErr then   DCommErr = 1, /*Status&amp;DCnt, Bit 1*/   CommErrCount = 1,   SDcycles = 3, else   SDcycles = SDcycles -1   if CommErrCount = 1   then     DCommErr = 1, /*Status&amp;DCnt, Bit 1*/     CommErrCount = 0     else DCommErr = 0 /*Status&amp;DCnt, Bit 1*/   if TimeoutCount = 1   then     DTimeout = 1, /*Status&amp;DCnt, Bit 0*/     TimeoutCount = 0   else DTimeout = 0 /*Status&amp;DCnt, Bit 0*/</pre>
T30	26	25	<pre>use PDin_D, use SDout, setSD_DC=1, SDset =1, DTimeout =1, /*Status&amp;DCnt, Bit 0*/ TimeoutCount =1, SDcycles = 3, restart DTimer, DCount_i = MCount_inv</pre>
T31	24	25	<pre>use PDin_D, use SDout, setSD_DC=1, SDset =1, DTimeout =1, /*Status&amp;DCnt, Bit 0*/ TimeoutCount =1, SDcycles = 3, restart DTimer, DCount_i = MCount_inv</pre>
INTERNAL ITEM		TYPE	DEFINITION
MCount_inv		Variable	Inverse value of current MCount value
SDcycles		Counter	This decremental counter is used to cause the SCL setting SDout and SDset for at least 3 cycles during start-up and after a fault. Value range is 3 to 0.
CommErrCount		Counter	This decremental counter is used to guarantee the bit "DCommErr" within the Status&DCnt Byte is being set at least for 1 cycle or for a maximum of 2 cycles. Value range is 1 to 0.
TimeoutCount		Counter	This decremental counter is used to guarantee the bit "DTimeout" within the Status&DCnt Byte is being set at least for 1 cycle or for a maximum of 2 cycles. Value range is 1 to 0.
do CRC_check		Activity	SCL calculates CRC signature across received SPDU while "seed" value = "0" and compares with received CRC signature
do PortNum_check		Activity	SCL checks whether PortNum carries the correct FS-Master Port number

INTERNAL ITEM	TYPE	DEFINITION
do Counter_check	Activity	SCL checks whether MCount carries "0" (first SPDUs) or either "0" or the expected subsequent value (all other SPDUs)
NOTE Variables within ACTIONS are defined in 11.3		


1470

1471 It is very unlikely for an FS-Device to receive SPDUs with all octets "0". The SCL within the FS-  
 1472 Device shall ignore such an SPDUs. Normally, at least the CRC signature will be "1" if Process  
 1473 Data and Control Byte are "0" according to the rules in 11.4.7.

#### 11.5.4 Sequence charts for several use cases

##### 11.5.4.1 FS-Master and FS-Device both with power ON

1476 Figure 43 shows the sequence chart of a regular start-up of both FS-Master and FS-Device.

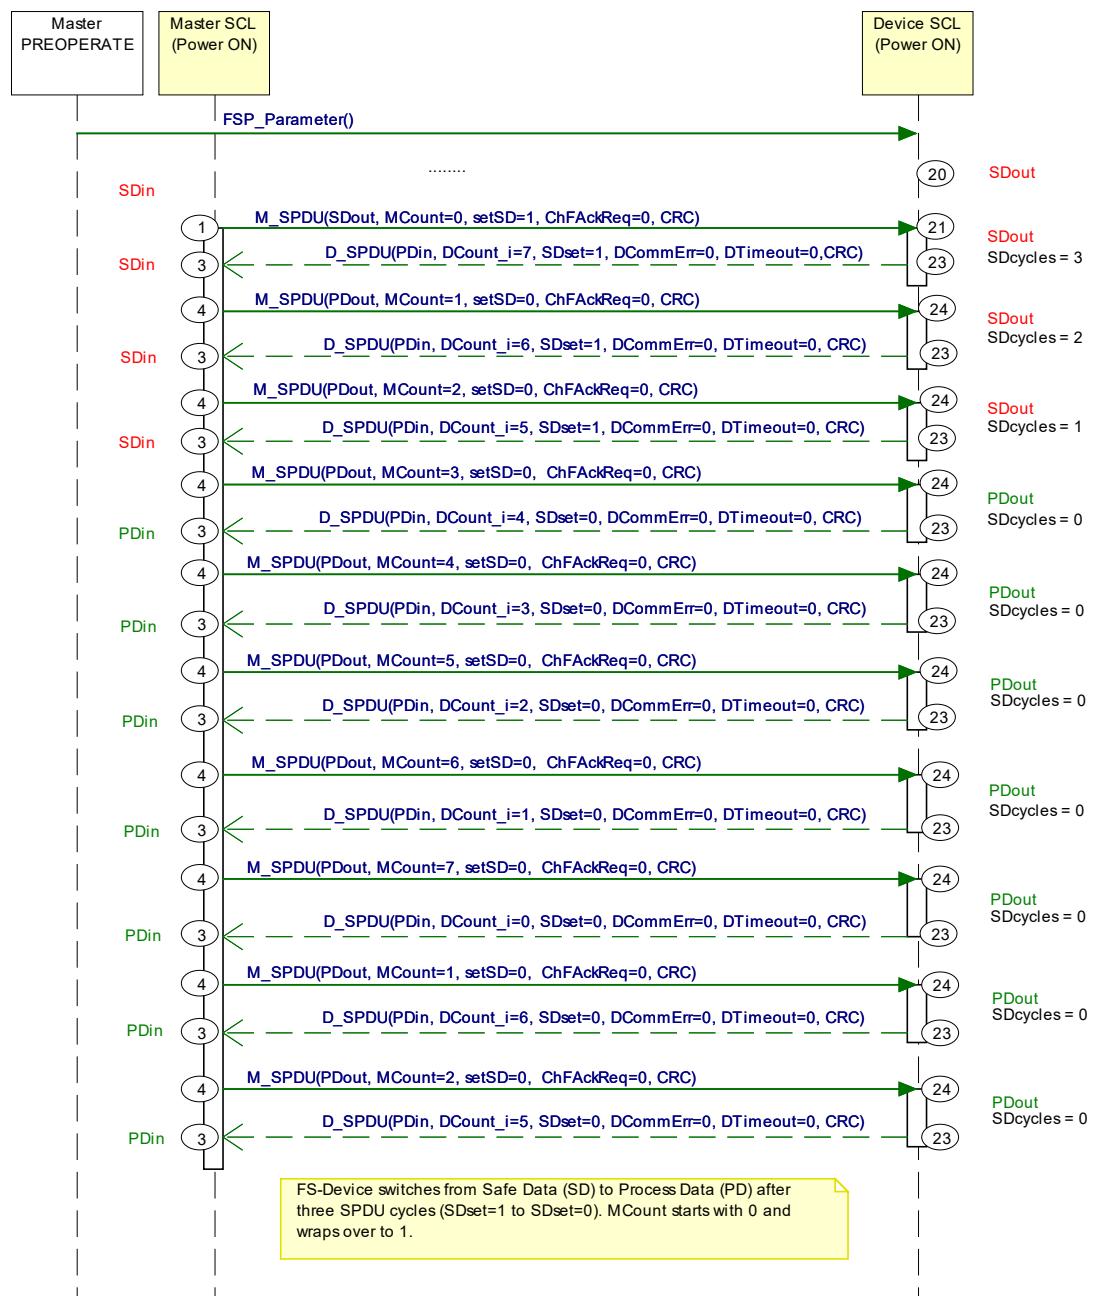

1477

1478


Figure 43 – FS-Master and FS-Device both with power ON

1479 Upon power-on both FS-Master and FS-Device are providing SDin (PDin = "0") and SDout  
 1480 (PDout = "0") respectively. Both keep these values for 3 communication cycles (SDcycles)  
 1481 before switching to the regular mode, where only the MCounter and DCounter values are  
 1482 changing.

1483

#### 1484 11.5.4.2 FS-Master with power OFF → ON

1485 Figure 44 shows the sequence chart of regular operation while FS-Master has been switched  
 1486 OFF and ON again.

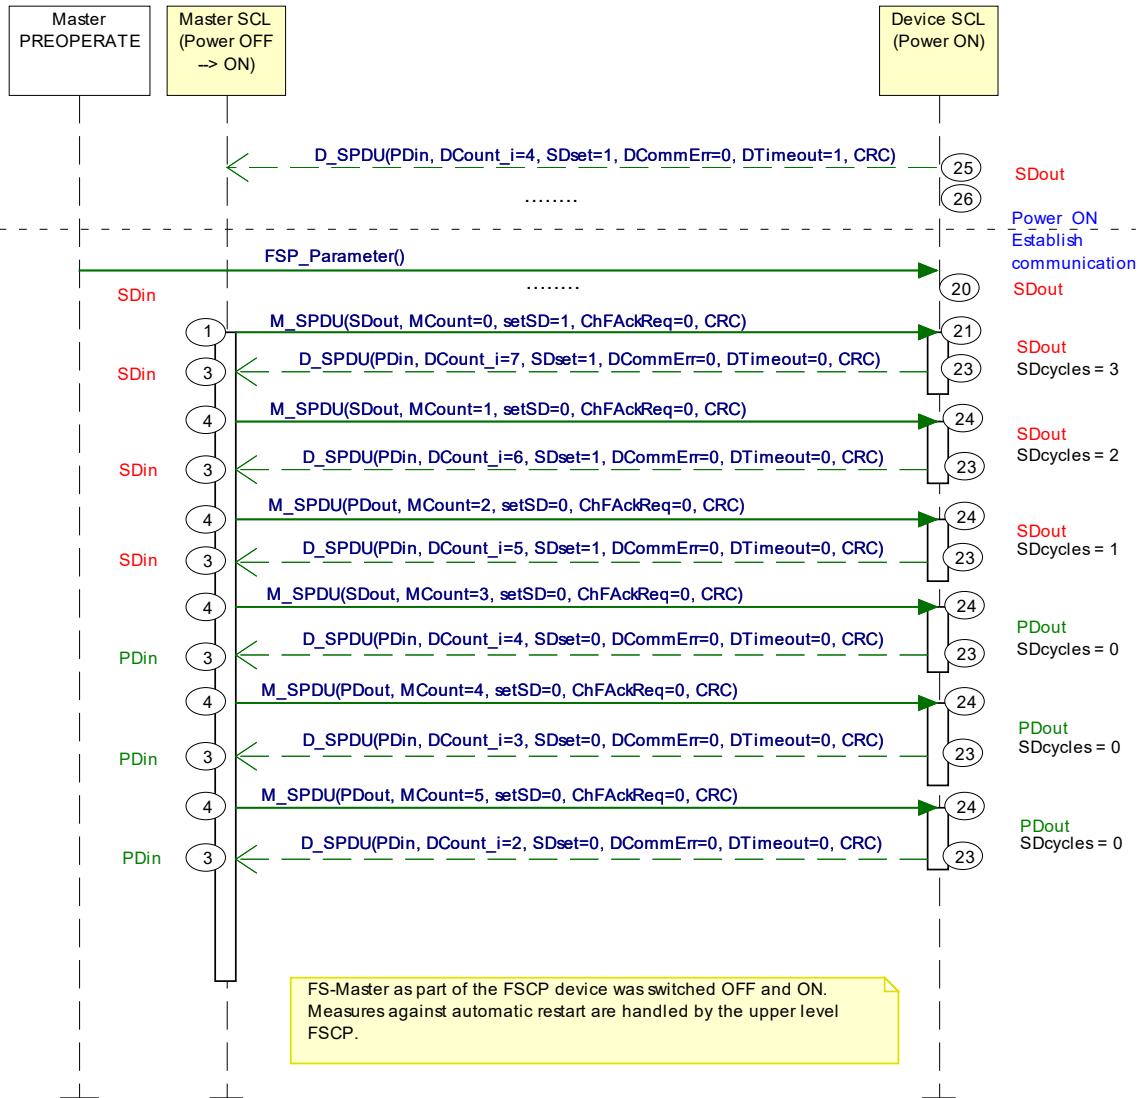

1487


1488

**Figure 44 – FS-Master power OFF → ON**

1489 The FS-Device communication part is always powered by the FS-Master. Thus, if the FS-Master  
 1490 is switched OFF and ON, the FS-Device is just following, and a regular start-up occurs. Since  
 1491 the FS-Master is part of an upper-level FSCP system, this FSCP system is responsible to  
 1492 prevent from automatic restart of safety functions in this case.

1493 **11.5.4.3 FS-Device with delayed SCL start**

1494 Figure 45 shows the sequence chart when the SCL start within the FS-Device is delayed.

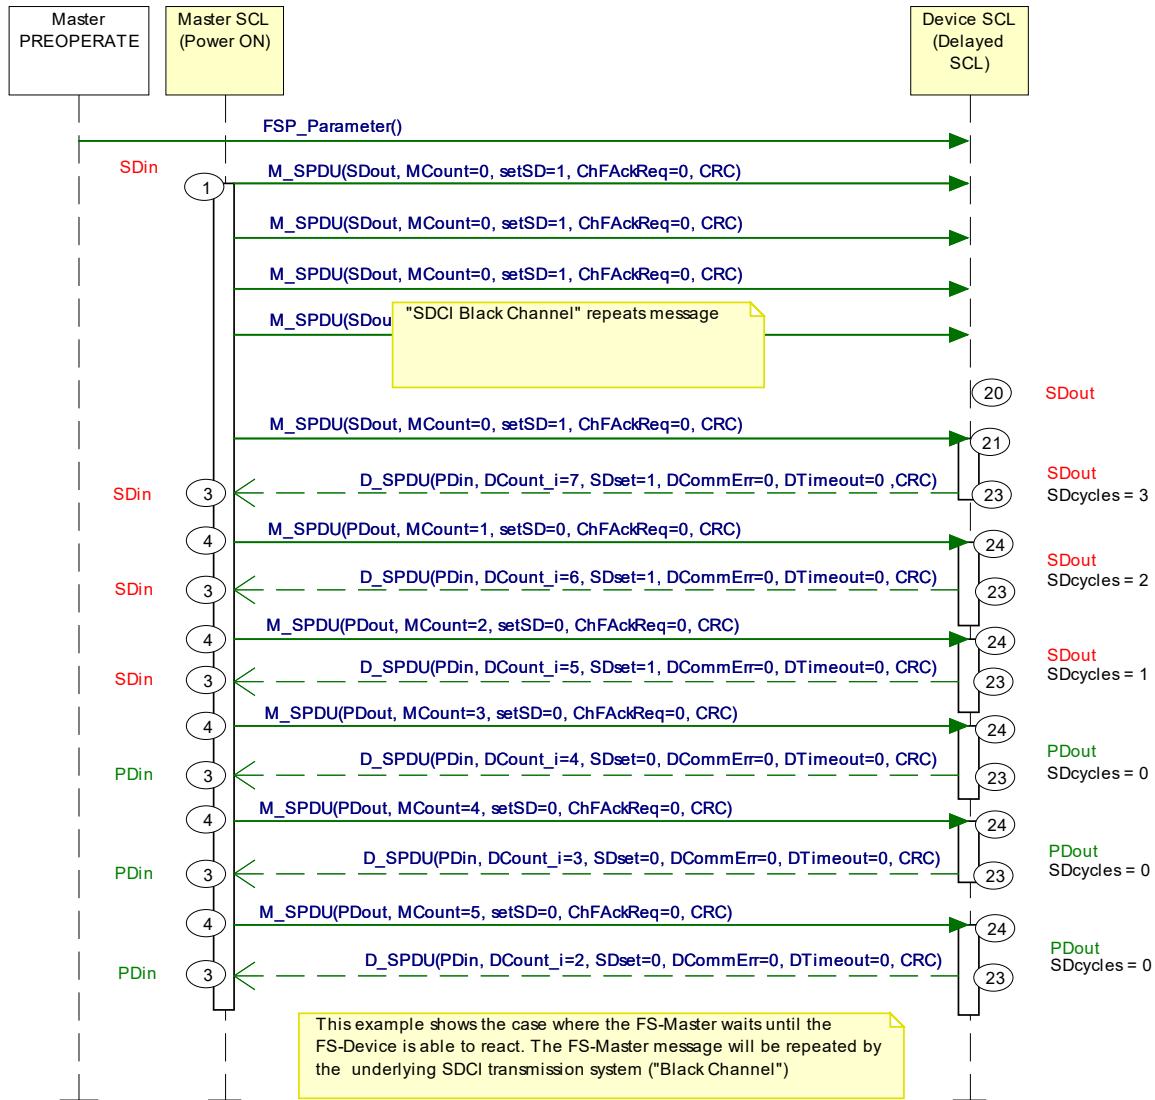

1495


1496 **Figure 45 – FS-Device with delayed SCL start**1497 This diagram shows how an FS-Master SCL waits on the SCL of the FS-Device in case of  
1498 delays. The initial SPDU of the FS-Master is repeated by the SDCI transmission system (black  
1499 channel) until the SCL of the FS-Device is ready to process in state 21.1500 As long as the SCL of the FS-Device is not ready, the response SPDU contains all "0" and the  
1501 FS-Master SCL will ignore such an SPDU. PDvalid/invalid of SDCI is reserved for the non-  
1502 safety part of the entire message.

1503

#### 11.5.4.4 FS-Device with power OFF and ON

1504

Figure 46 shows the sequence chart when the FS-Device switches power OFF and ON again.

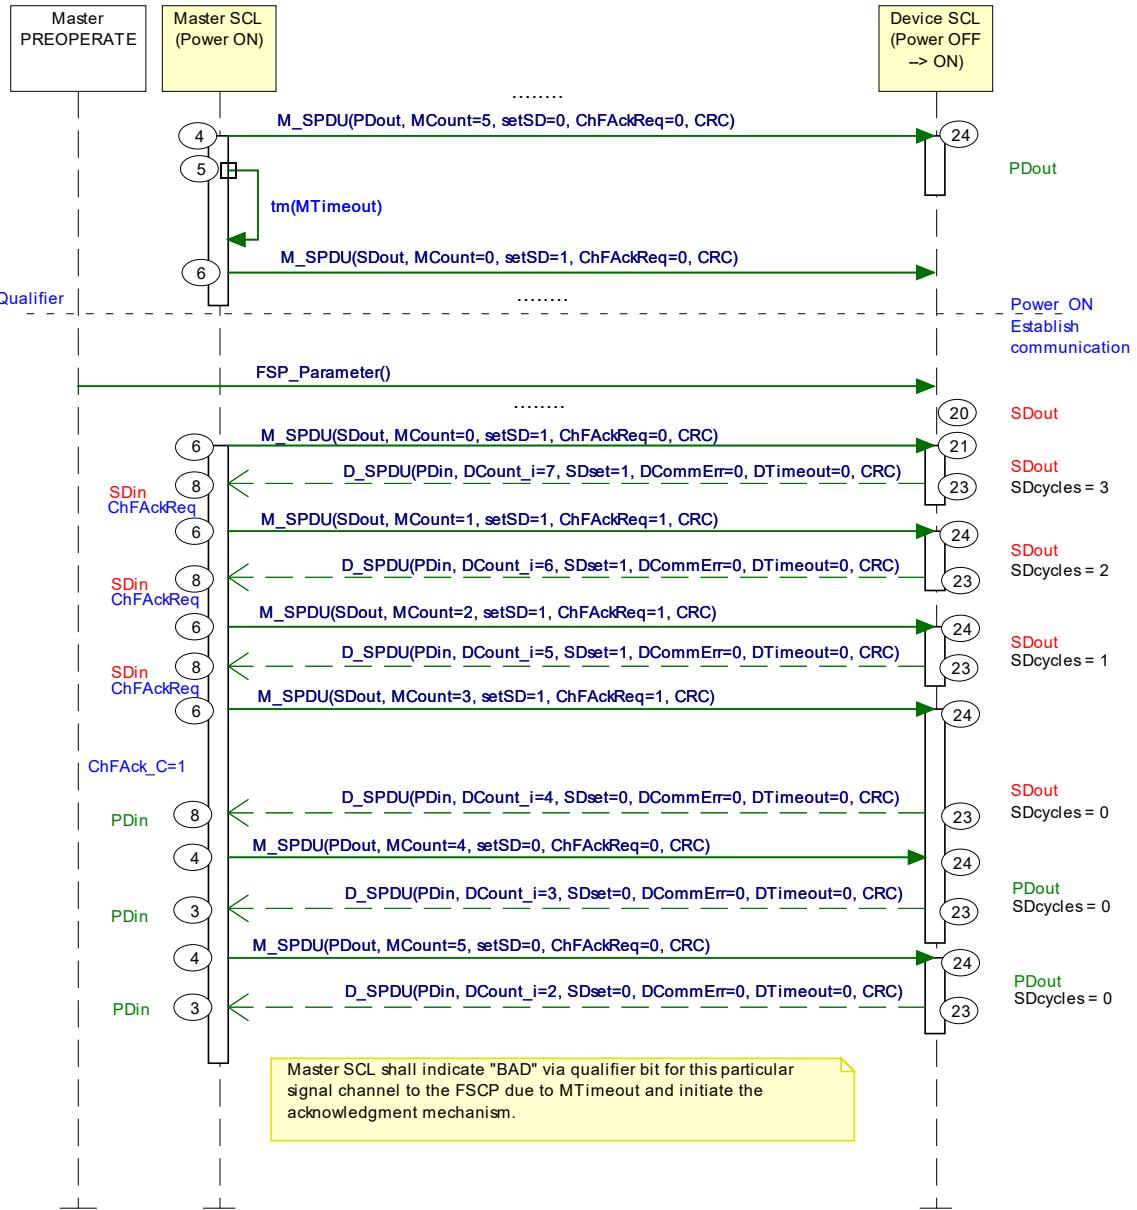

1505

**Figure 46 – FS-Device with power OFF and ON**

1506

This case assumes for example a short unplug and plug of the FS-Device causing a FAULT (MTimeout) on the FS-Master side. This FAULT causes a Qualifier bit to be set that requires via ChFAckReq (=1) an acknowledgment via ChFAck\_C (=1). FS-Master and FS-Device keep SDin and SDout until this acknowledgment arrived.

1507


1508

1509

1510

1511 **11.5.4.5 FS-Master detects CRC signature error**

1512 Figure 47 shows the sequence chart when the FS-Master detects a CRC signature error.

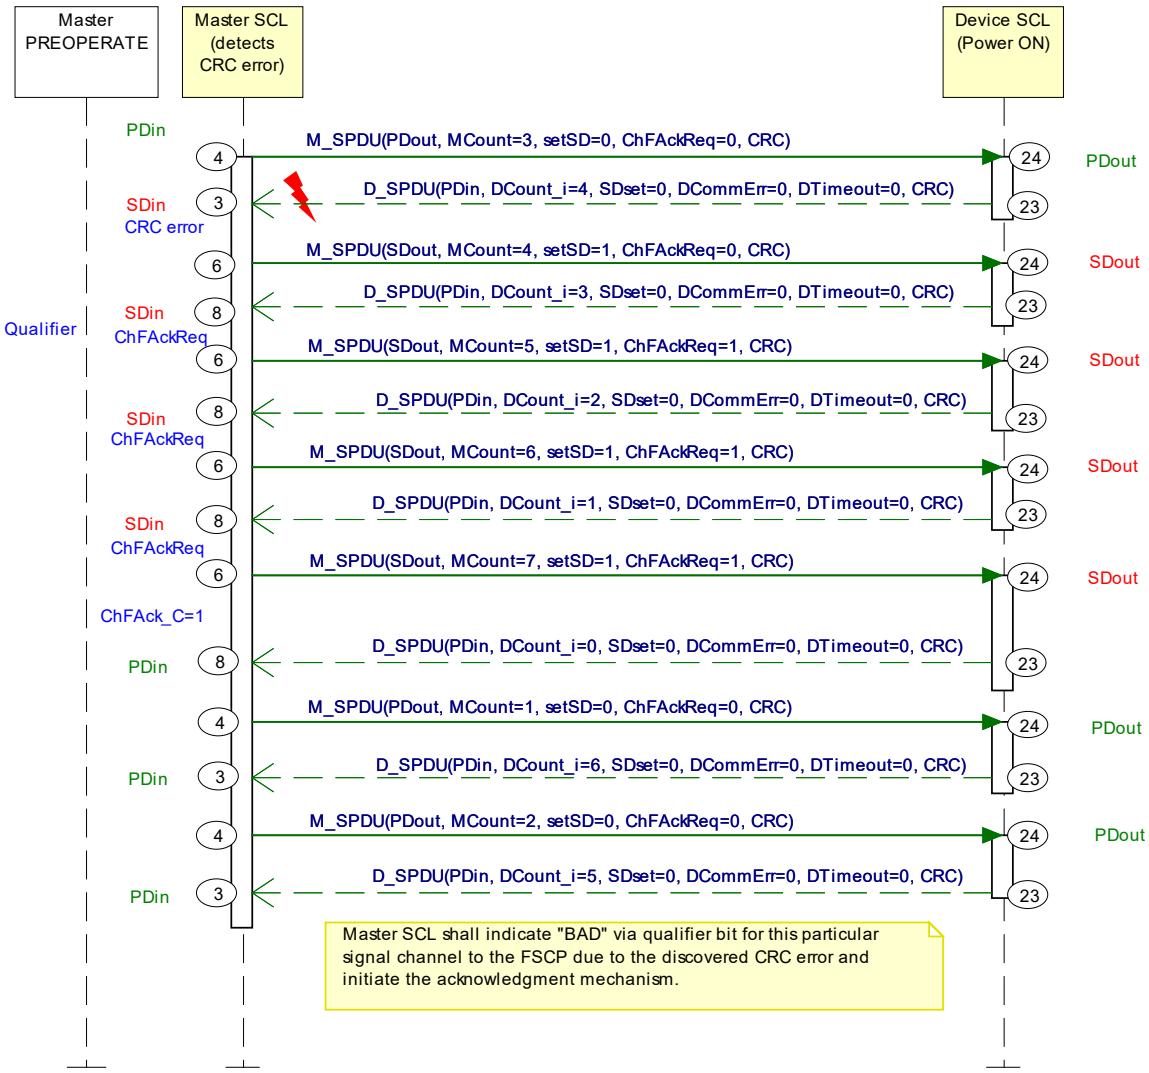

1513

1514


**Figure 47 – FS-Master detects CRC signature error**

1515 FS-Master received an SPDU with falsified data or falsified CRC signature which results in a  
 1516 "CRC error" (MCommErr). Both FS-Master and FS-Device switch to SDin and SDout  
 1517 respectively and the FS-Master/Gateway creates a qualifier bit and indicates a ChFAckReq  
 1518 signal. This signal is indicated also to the FS-Device via ChFAckReq (=1) for indication via LED  
 1519 (light emitting diode) to the user.

1520 FS-Master and FS-Device keep SDin and SDout until the acknowledgment ChFAck\_C (=1)  
 1521 arrived.

1522 **11.5.4.6 FS-Device detects CRC signature error**

1523 Figure 48 shows the sequence chart when the FS-Device detects a CRC signature error.

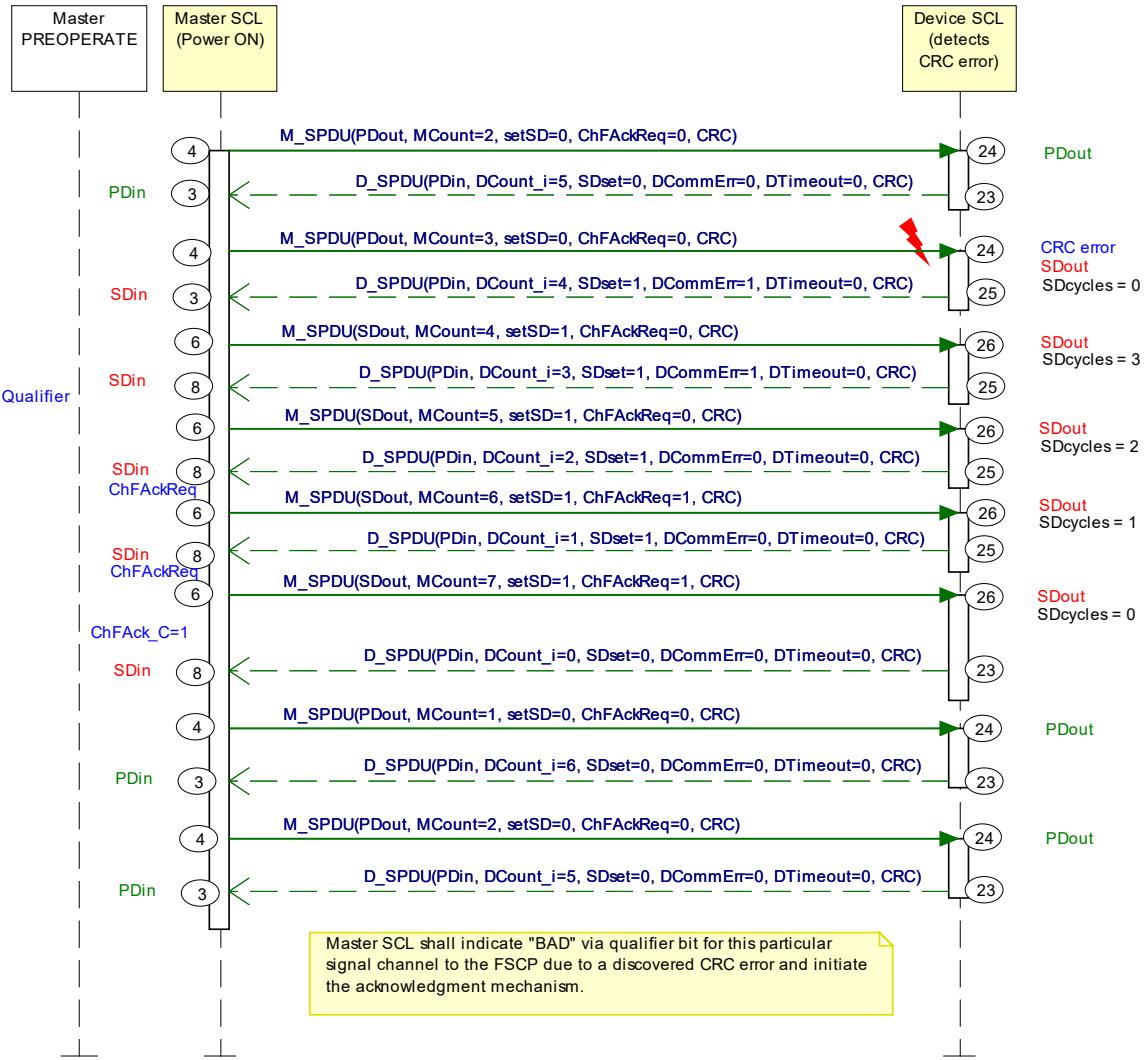

1524

1525


**Figure 48 – FS-Device detects CRC signature error**

1526 FS-Device received an SPDU with falsified data or falsified CRC signature which results in a  
 1527 "CRC error" (DCommErr). Both FS-Master and FS-Device switch to SDin and SDout  
 1528 respectively caused by FS-Device Status Byte information (SDset=1 and DCommErr=1). The  
 1529 FS-Master/Gateway creates a qualifier bit and indicates a ChFackReq signal. This signal is  
 1530 indicated also to the FS-Device via ChFackReq (=1) for indication via LED (light emitting diode)  
 1531 to the user.

1532 The FS-Device runs through 3 SDcycles and afterwards FS-Master and FS-Device keep SDin  
 1533 and SDout until the acknowledgment ChFack\_C (=1) arrived.

1534 **11.5.5 Monitoring of safety times**

1535 Figure 49 illustrates SDCI times and safety times.

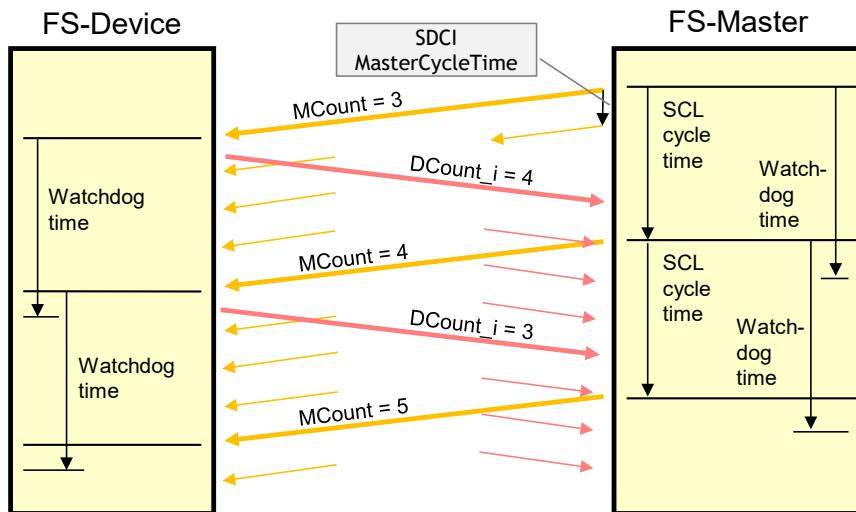

1536

1537 **Figure 49 – Monitoring of the SCL cycle time**

1538 The base SDCI system ("black channel") transmits SPDUs within the MasterCycleTime from  
 1539 the FS-Master to the FS-Device and back. The same SPDU, for example with MCount = 3, may  
 1540 be sent several times before the Safety Communication Layer (SCL) starts the next SCL cycle  
 1541 with MCount = 4. In the meantime, the FS-Master received the response SPDU from the FS-  
 1542 Device with DCount\_i = 4.

1543 Table 40 shows timing constraints.

1544 **Table 40 – Timing constraints**

Item	Constraints
Synchronization	At each start-up and after an FS-Master timeout, the FS-Master SCL uses MCount = 0
SCL cycle time	The SCL cycle time comprises the transmission time of the FS-Master SPDU, the FS-Device processing time, the transmission time of the FS-Device response SPDU, and the FS-Master processing time until the next FS-Master SPDU (see Figure 49)
Watchdog time	The entire SCL cycle time is monitored by the watchdog timer, whose time value is defined by the parameter FSP_Watchdog (see A.2.6).
Counter check	The counter values are included in the cyclic CRC signature calculation. An incorrect CRC signature value will already lead immediately to a safe state. The immediate counter check in some states is used for discarding "outdated SPDUs".
Repetition	Repetition in case of detected incorrect CRC signatures is not provided
PFH-Monitor	The FS-Master holds the information about the reliability of both SPDU transmissions from the FS-Device and to the FS-Device (see Table 31, bit 1). Thus, the FS-Master monitors the average frequency of a dangerous failure within a given time frame (PFH-Monitor time). The FS-Master state machine is designed such that any corrupted SPDU leads always to a safe state. Whenever the unlikely event of a detected corrupted SPDU occurs during the shift of production or operation, the responsible operator is assigned to play the role of the PFH-Monitor and can tolerate the indication and acknowledge it. In case of frequent indications more often than once per PFH-Monitor time, a check of the installation or the transmission quality should be performed (see Clause H.6).
PFH-Monitor time (h)	10

1545

**11.5.6 Reaction in the event of a malfunction****11.5.6.1 General**

Subclauses 11.5.6.2 to 11.5.6.10 specify possible communication errors. They are derived from 5.3 in IEC 61784-3:2021 and refer to Table 26 in this document. Additional notes are provided to indicate the typical behaviour of the SDCI black channel.

**11.5.6.2 Corruption**

Messages may be corrupted due to errors within a communication participant, due to errors on the transmission medium, or due to message interference.

NOTE 1 Bit falsifications within messages during transfer is a normal phenomenon for any standard communication system. Such errors are detected at receivers with high probability by use of a hash function, in case of SDCI a checksum (CKT or CKS), and the message is ignored (see IEC 61131-9:2022, Clause A.1). After two retries the Master initiates a complete restart with wake-up.

NOTE 2 If the recovery or repetition procedures take longer than a specified deadline, a message is classed as "Unacceptable delay" (see 11.5.6.6).

*Countermeasures:*

The CRC signature as specified in 11.4.7 detects the bit errors in messages between FS-Master and FS-Device to the extent required for SIL3 applications. The CRC signature is generated across the SPDU including the PD or SD data, the Port number, and the Control&MCnt or Status&DCnt octet for cyclic communication.

At start-up, the FSP parameters are sent once to the FS-Device via ISDU services. They are secured by the 16-bit FSP\_ProtoParCRC signature. The frequency of its occurrence is assumed to be 1/day as parameter for the calculation of the residual error rate.

**11.5.6.3 Unintended repetition**

Due to an error, fault or interference, messages are repeated.

NOTE Repetition by the sender is a normal procedure when an expected acknowledgment/response is not received from a target station, or when a receiver station detects a missing message and asks for it to be resent.

*Countermeasures:*

The data within the black channel are transferred cyclically. Thus, an incorrect message/SPDU with the latest received counter value that is inserted once will be ignored. The thereby possible delay of a demand can be one DTime or MTime respectively.

**11.5.6.4 Incorrect sequence**

Due to an error, fault or interference, the predefined sequence (for example natural numbers, time references) associated with messages from a particular source is incorrect.

NOTE In SDCI only one sequence is active from one source, the message handler.

*Countermeasures:*

The receiver will detect any incorrect sequence due to the stringently sequential expectation of the MCount and DCount values.

**11.5.6.5 Loss**

Due to an error, fault or interference, a message or acknowledgment is not received.

*Countermeasures:*

Lost information will be detected by stringently changing and examining the MCount/DCount and/or MTime/DTime within the safety communication layer of the respective receiver.

**11.5.6.6 Unacceptable delay**

Messages may be delayed beyond their permitted arrival time window, for example due to bit falsifications in the transmission medium, congested transmission lines, interference, or due to

1592 communication participants sending messages in such a manner that services are delayed or  
1593 denied (for example FIFOs in switches, bridges, routers).

1594 NOTE 1 SDCI provides a point-to-point communication interface with defined message sequences and thus the  
1595 probability for congestion and storage of messages is extremely low.

1596 *Countermeasures:*

1597 A consecutive counter in each message (MCount/DCount) together with a watchdog timer  
1598 (MTIME/DTIME) will detect unacceptable delays.

#### 1599 **11.5.6.7 Insertion**

1600 Due to a fault or interference, a message is received that relates to an unexpected or unknown  
1601 source entity.

1602 NOTE 1 These messages are additional to the expected message stream, and because they do not have expected  
1603 sources, they cannot be classified as Correct, Unintended repetition, or Incorrect sequence.

1604 NOTE 2 SDCI provides a point-to-point communication interface (Port) and thus the probability for insertion of  
1605 messages is extremely low.

1606 *Countermeasures:*

1607 The receiver will detect any incorrect sequence due to the stringently sequential expectation of  
1608 the MCount and DCount values.

#### 1609 **11.5.6.8 Masquerade**

1610 Due to a fault or interference, a message is inserted that relates to an apparently valid source  
1611 entity, so a misdirected non-safety related message may be received by a safety related  
1612 participant, which then treats it as safety related correct message.

1613 NOTE 1 Communication systems used for safety-related applications can use additional checks to detect  
1614 Masquerade, such as authorised source identities and passphrases or cryptography.

1615 NOTE 2 SDCI provides a point-to-point communication interface (Port) and thus the probability for insertion of  
1616 messages is extremely low.

1617 *Countermeasures:*

1618 In case of NSR data instead of a regular SPDU, the CRC signature mechanism of the SCL will  
1619 detect this incident.

1620 After changes of wiring, the FS-Devices can detect misconnections through the  
1621 FSP\_Authenticity1/2 and FSP\_Port parameters (see A.2.1 and A.2.2) at start-up.

#### 1622 **11.5.6.9 Addressing**

1623 Due to a fault or interference, a safety related message is delivered to the incorrect safety  
1624 related participant, which then treats reception as correct. This includes the so-called loopback  
1625 error case, where the sender receives back its own sent message.

1626 NOTE 1 The probability of not detecting a misdirected non-safety related message is lower than the probability of  
1627 not detecting a misdirected safety related message since the SPDU structures are similar due to the  
1628 shared protocol procedures.

1629 NOTE 2 SDCI provides a point-to-point communication interface (Port) and thus the probability for insertion of  
1630 messages is extremely low. However, FS-Master may use internal bus mechanisms to address Ports.

1631 *Countermeasures:*

1632 Port addressing errors can be detected by the Port number (PortNum) within the SPDU.

1633 After changes of wiring, the FS-Devices can detect misconnections through the  
1634 FSP\_Authenticity1/2 and FSP\_Port parameters (see A.2.1 and A.2.2) at start-up.

#### 1635 **11.5.6.10 Loop-back**

1636 A special addressing error is the so-called loopback error case, where the sender receives back  
1637 its own sent message.

1638 *Countermeasures:*

1639    SDCI-FS provides for inverted values of MCount as DCount and inverted values of the Port  
1640    number (PortNum) returned from the FS-Device.

### 1641    **11.5.7 Start-up (communication)**

1642    An FS-Device starts always after an FS-Master since the FS-Master shall be the only one to  
1643    power-up at least the communication part of the FS-Device. Both devices usually require time  
1644    for safety self-tests that may exceed the standard timings defined in IEC 61131-9.

1645    Due to the initial behavior of an FS-Device as an OSSDe, the start-up is coordinated and  
1646    specified in 5.7, 7.2, and 7.3.

1647    The start-up of the underlying SDCI communication system is specified in IEC 61131-9 and  
1648    illustrated in an abstract and simplified manner in Figure 53 for easier comprehension. Any  
1649    deviating FSP authenticity or protocol parameter CRC signature shall lead to a safe state of the  
1650    particular FS-Master Port and prevent the SCL from being started.

## 1651    **11.6 SCL management**

### 1652    **11.6.1 Parameter overview (FSP and FST)**

1653    Annex A specifies several functional safety related parameters for communication protocol  
1654    services (FSP) as well as for the handling and integrity purposes of FS-Device technology  
1655    parameters (FST).

1656    The parameters are subdivided into 4 groups:

- 1657       • Authenticity
- 1658       • Safety communication
- 1659       • FS-I/O structure description
- 1660       • Auxiliary parameters

1661    The authenticity parameters combine the safety connection ID ("A-Code") of the FS-Master  
1662    (assigned by the upper-level FSCP system) with the Port number of the connected FS-Device.  
1663    Due to the point-to-point nature of the FS-Device communication with its Master, a one-time  
1664    check at start-up is sufficient to ensure authenticity (see 11.7.4).


1665    The Safety Communication Layers (SCL) require parameters for protocol versions, protocol  
1666    modes such as CRC-16 or CRC-32, watchdog for timeliness, CRC signature to secure  
1667    technology parameters, and a CRC signature to secure the safety communication parameters.

1668    The next group contains a description of the FS I/O data structure, the FS-Device wants to  
1669    exchange with the FSCP-Host. This description facilitates the mapping to the description which  
1670    some FSCP systems require for set-up. During the mapping process the FS-Master Tool  
1671    appends the qualifier bits, which are necessary for Port-selective passivation.

1672    Auxiliary parameters are specified for several purposes. For example, to secure the functional  
1673    safety parameter description within the IODD, to support the automatic calculation of approxi-  
1674    mate values of safety function response times, and to inform about the start-up self-testing time  
1675    of an FS-Device until the Ready pulse appears.

1676    Figure 50 shows an overview of the components and the activities around parameterization.

1677    An FS-Master as a gateway comes with an associated description file for the upper-level system  
1678    (FSCP). With the help of an engineering tool and these parameters, the FS-Master receives  
1679    during commissioning for example its FSCP connection ID ("A-Code" for authenticity) and its  
1680    FSCP watchdog time ("T-Code" for timeliness). Thus, the FSCP communication cycles are  
1681    independent from the SDCI-FS communication cycles between FS-Master and FS-Device.

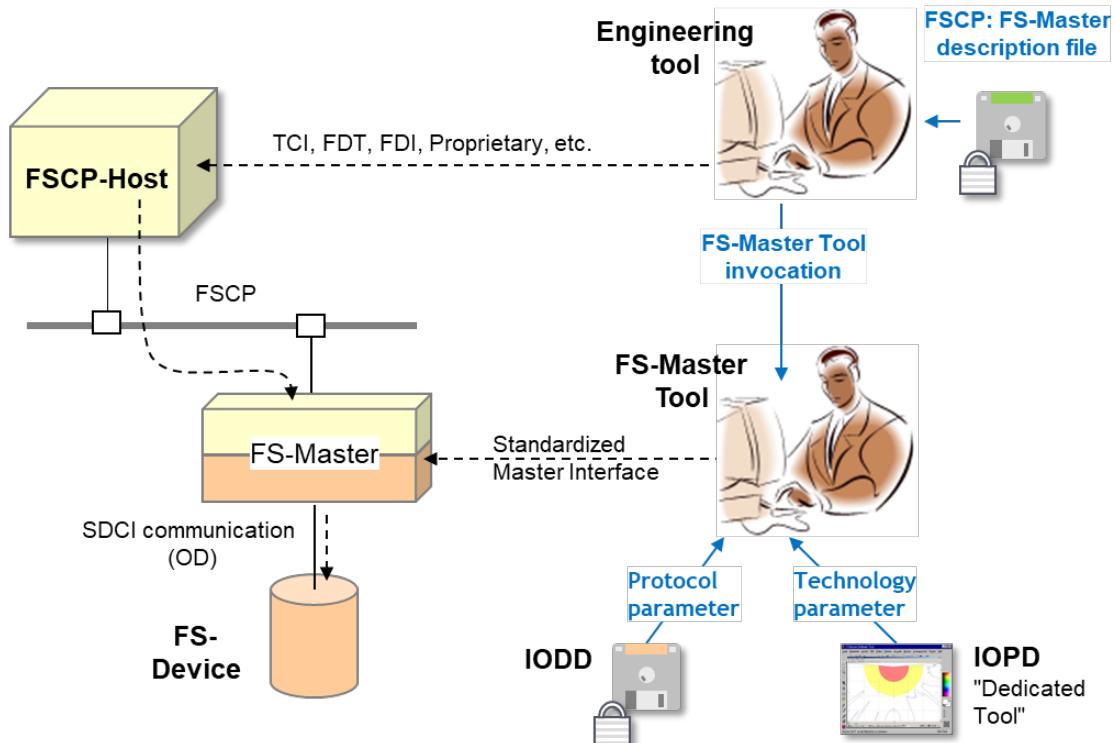

1682

1683

**Figure 50 – Parameter types and assignments**

1684 An FS-Master with its SDCI side can be configured and parameterized with the help of its FS-  
 1685 Master Tool. The IODD of an FS-Device contains besides the non-safety parameters also the  
 1686 safety section with the parameters in Annex A. The parameters can be set-up off-site or online  
 1687 the same way as with a non-safety system during "commissioning-test" (see Table G.1). The  
 1688 FSCP authenticity parameter can be copied from the engineering tool display to the FS-Master  
 1689 tool display (see A.2.1).

1690 It is possible to describe a small set of technology parameters (FST) in a non-safety manner,  
 1691 thus allowing the usage of the SDCI standard Data Storage mechanism as described in 9.4.

1692 However, a separate Dedicated (IOPD) Tool, developed according to IEC 61508-3 shall be used  
 1693 to calculate a CRC signature across the instances of the FST parameters. This CRC signature  
 1694 shall be entered into the respective FSP parameter (see A.2.8).

1695 The IOPD tool uses a new standardized IOPD communication interface (DTI, see Annex F) and  
 1696 the same path to the FS-Device as the FS-Master Tool itself.

### 1697 11.6.2 Parameterization approaches


#### 1698 11.6.2.1 FS-Master-centric

1699 The configuration and parameterization of a stand-alone SDCI-FS system corresponds mainly  
 1700 to the approach described in 11.6.1. The authenticity uses a default value in this case (see  
 1701 A.2.1).

1702 Figure 50 shows a loosely coupled system, where the parameterization is performed within the  
 1703 SDCI-FS part. Within the FSCP system, predefined FS I/O data structures are available and  
 1704 can be selected during commissioning.

### 11.6.2.2 FSCP-Host-centric

Some automation application areas prefer an FSCP-Host-centric approach. In this case, all parameters are expected to be stored within the FSCP-Host and downloaded at start-up into the FS-Master (FSCP-subsystem) and further down into the FS-Device.

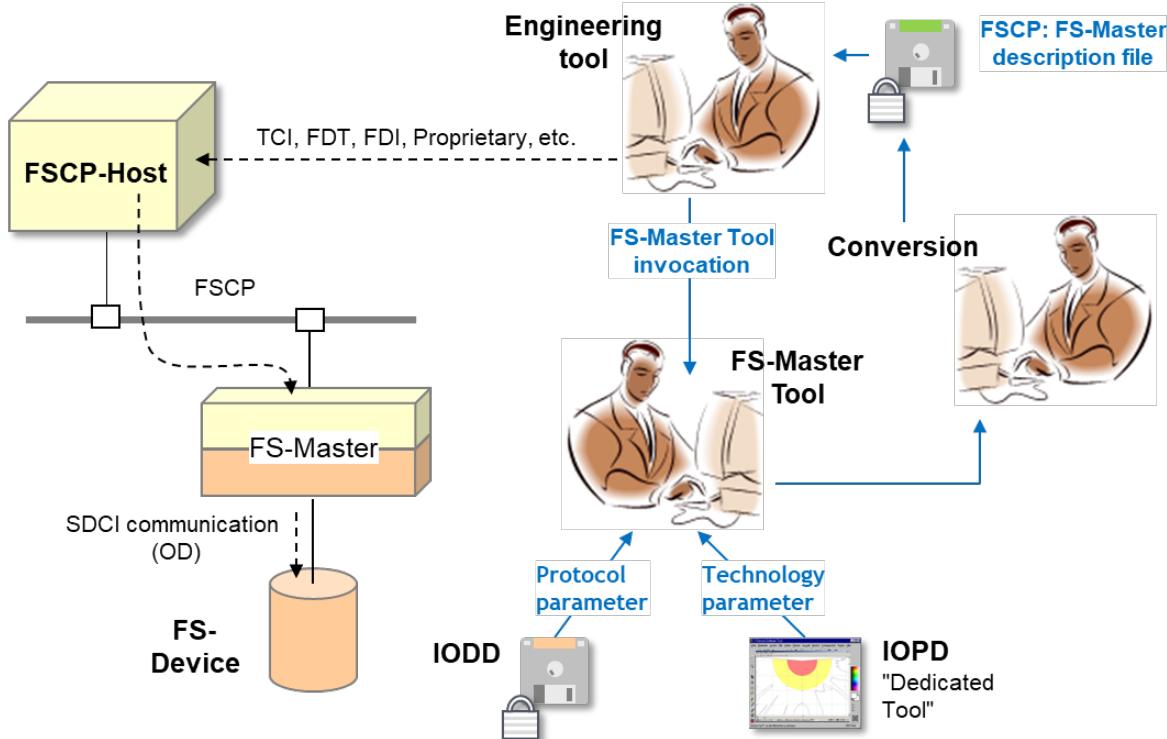

**Figure 51 – FSCP-Host-centric system**

Due to the fieldbus-independent design of SDCl and SDCl-FS, all parameters can for example be converted into the fieldbus device description file. It is one of the objectives of SDCl-FS to optimize the design of safety parameters such that an efficient conversion is possible.

## 11.7 Integrity measures

### 11.7.1 IODD integrity

The parameters specified in Annex A are coded in an IODD file using XML. In order to protect the safety parameter description within this file, a CRC signature ("FSP\_ParamDescCRC") shall be calculated across its safety-related parts (see Annex D and Annex E.5.6). Usually, the IODD file travels many ways and the CRC signature helps detecting potentially scrambled bits.

### 11.7.2 Tool integrity

When opening the IODD, the FS-Master Tool (interpreter of the IODD file) shall calculate the CRC signature across the safety-related parts and compare the result with the parameter "FSP\_ParamDescCRC".

During the data manipulations within the FS-Master Tool as well as within Device Tools/IOPDs ("Dedicated Tools") such as display, intended modification, storage/retrieval, and down/upload, parameter values could become incorrect. It is the responsibility of the designer to develop the software tools according to the software safety level requested in ISO 13849-1 or IEC 61508-3.

### 11.7.3 Transmission integrity

Since communication between the FS-Master Tool and the FS-Device is proprietary, it is the responsibility of the FS-Master Tool to ensure transmission integrity and authenticity, for example through CRC signatures and/or read back (see Table 26 and D.3.1).

### 11.7.4 Verification record

In either the FS-Master-centric or in the FSCP-Host-centric approach an FSP\_VerifyRecord of parameter data is stored in the FS-Master per Port/FS-Device as shown in Figure 52.

FSP parameter	
0	UIntegerT (32)
1	FSP_Authenticity1 (FSCP dependent)
2	
3	
4	UIntegerT (32)
5	FSP_Authenticity2 (extension)
6	(FSCP dependent)
7	
8	UIntegerT (8)
9	FSP_AuthentCRC
10	
11	UIntegerT (8)
12	UIntegerT (8)
13	UIntegerT (16)
14	
15	UIntegerT (16)
16	
17	UIntegerT (32)
18	
19	
20	
21	UIntegerT (16)
22	

End of FSP\_VerifyRecord

**Figure 52 – Structure of the FSP\_VerifyRecord**

The authenticity parameters are secured by FSP\_AuthentCRC for transmission from FS-Master tool to FS-Master and further to the FS-Device. The procedure of the FSCP authenticity acquisition from the FSCP gateway and subsequent handling of the FSP authenticity record is described in 10.4.3.3. FSP\_ProtoParCRC secures protocol parameters as described in 10.4.3.4.

### 11.7.5 Authentication

The SLM of the FS-Master uses the FSP\_VerifyRecord received from Configuration Manager. Thus, the FSP\_Authenticity codes within the record can be compared with the actual FSCP Authenticity values in the safety part of the Gateway.


### 11.7.6 Storage integrity

Both records (authenticity and protocol) of Figure 52 are stored in both FS-Master and FS-Device and may fail over time (see also Table A.1).

At each regular start-up, the Configuration Manager transfers the FSP\_VerifyRecord to the FS-Device during PREOPERATE as shown in Figure 53 and described in 10.4.3.1 and A.2.10. Figure 53 is derived from the Master message handler in IEC 61131-9 and provides an abstract and simplified picture of the essential states and transitions.

The FS-Device will detect a potential mismatch between the downloaded authenticity parameter set and the already stored values in the FS-Device, for example if FS-Devices are misconnected to a different Port or even to a different FS-Master (see Figure 32).

The protocol parameters are propagated to the Safety Communication Layer at each start-up.

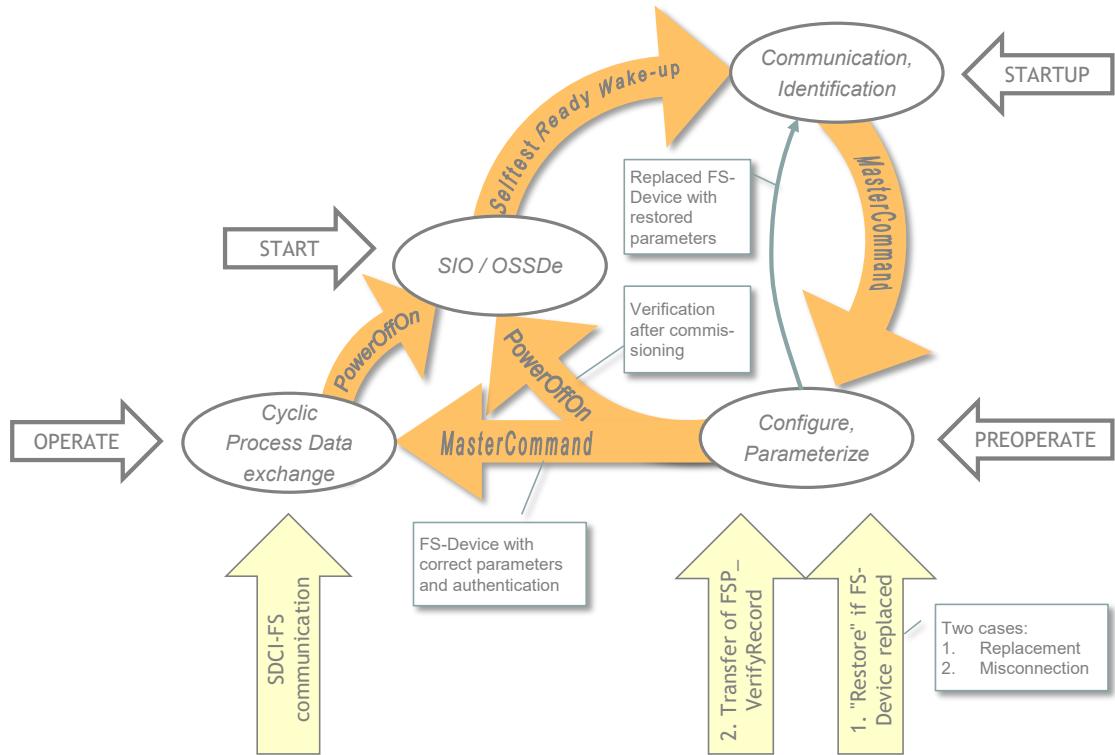**Figure 53 – Start-up of SDCI-FS**

In case the FS-Device has been replaced due to a failure, the technology specific parameters (FST) and the FSP parameters are "restored" from Data Storage if the FS-Device carries all authenticity parameters = "0", or all of the FSP- and FST-Parameter are not changed. If Authenticity is not "0", or any of the FSP- and FST-Parameter differs, the FS-Device shall ignore them and keep the existing (see 9.4, E.5.7, and step 1. in Figure 53). In this case a misconnection can be assumed, or the FS-Device has already been in use and requires testing and a reset of the authenticity parameters (see Annex G).

#### 11.7.7 FS I/O data structure integrity

All I/O data of the connected FS-Devices should be mapped in an efficient manner into the FSCP I/O data as shown in 12.1.

Due to the additional qualifier bits required for Port-selective passivation, the original FS-Device specific data structure is not directly visible within the FSCP I/O data structure exchanged with the FSCP-Host.

The safety-related interpreter of the FS-Master Tool transfers the entire instance data together with the CRC signature to the FS I/O data mapper as shown in 10.4.3.1 (see also A.2.7).


#### 11.7.8 Technology parameter (FST) based on IODD

One of the objectives of SDCI-FS is FS-Device exchange without tools by using the original data storage mechanism of SDCI. As a precondition, the FST-parameter description is required within the IODD (see E.5.7).

The FST parameters are displayed in this case within the FS-Master Tool (see Figure 54, FST-Parameters section). Values can be assigned as for non-safety parameters only during "commissionning-test" (see Table G.1).

The user is responsible for correct values within the FS-Device using adequate validation procedures. The FS-Master Tool can assist for example via read back and display of the parameters.

1784 Securing of the FST parameter via signature shall not be performed by the FS-Master Tool. A  
 1785 separate "Dedicated Tool" (Device tool) provided by the FS-Device manufacturer shall be used  
 1786 instead as shown in Figure 59 and explained in the following.

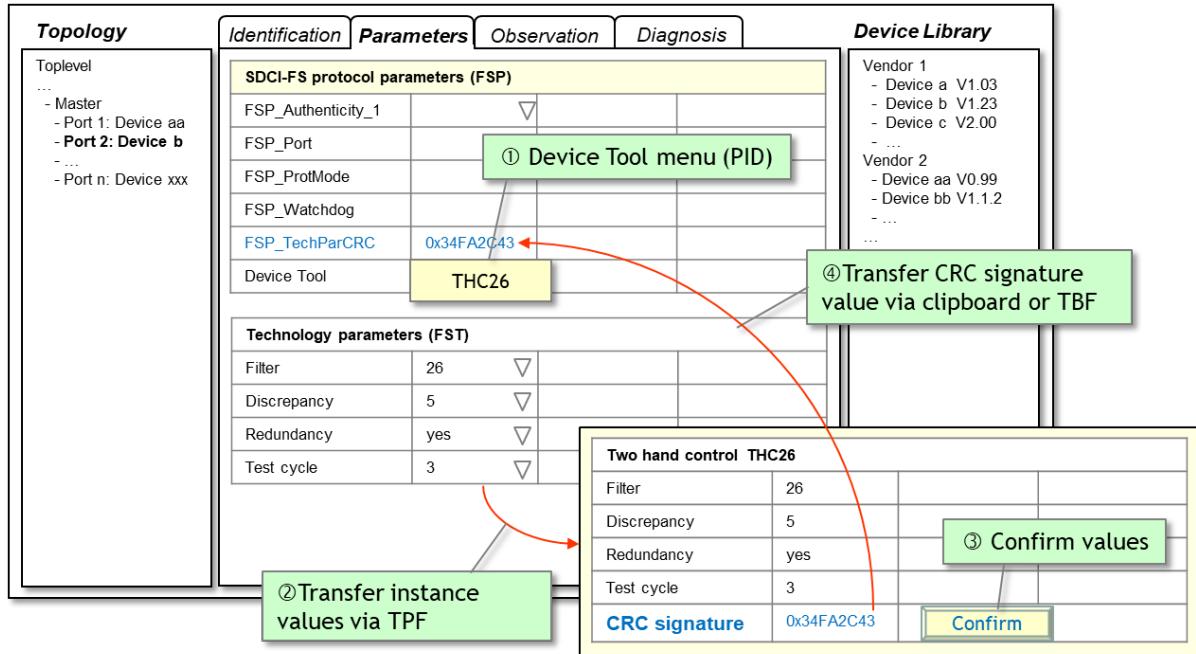

1787


1788 **Figure 54 – Securing of FST parameters via Dedicated Tool**

1789 After test and validation, the Dedicated Tool is invoked via menu (step①). Instance values are  
 1790 transferred via TPF (step②) and displayed again. The user compares the instance values and  
 1791 confirms the correctness via the "Confirm" button (step③). The Dedicated Tool then calculates  
 1792 the CRC signature across the instance data of the FST parameters (see "CRC signature" in  
 1793 Figure 54), which can be copied and pasted or transferred via TBF into the "FSP\_TechParCRC"  
 1794 field of the FSP parameters (step ④).

1795 Since this parameter is part of the FSP parameter block, the FS-Device can check the integrity  
 1796 of these FST parameters together with the protocol parameters.

### 11.7.9 Technology parameter (FST) based on existing Dedicated Tool (IOPD)

In cases, where existing safety devices already have their PC program with password protection, wizards, teach-in functions, verification instructions, online monitoring, diagnosis, special access to device history for the manufacturer, etc., an FST parameter description may not be available. Figure 55 shows an example.

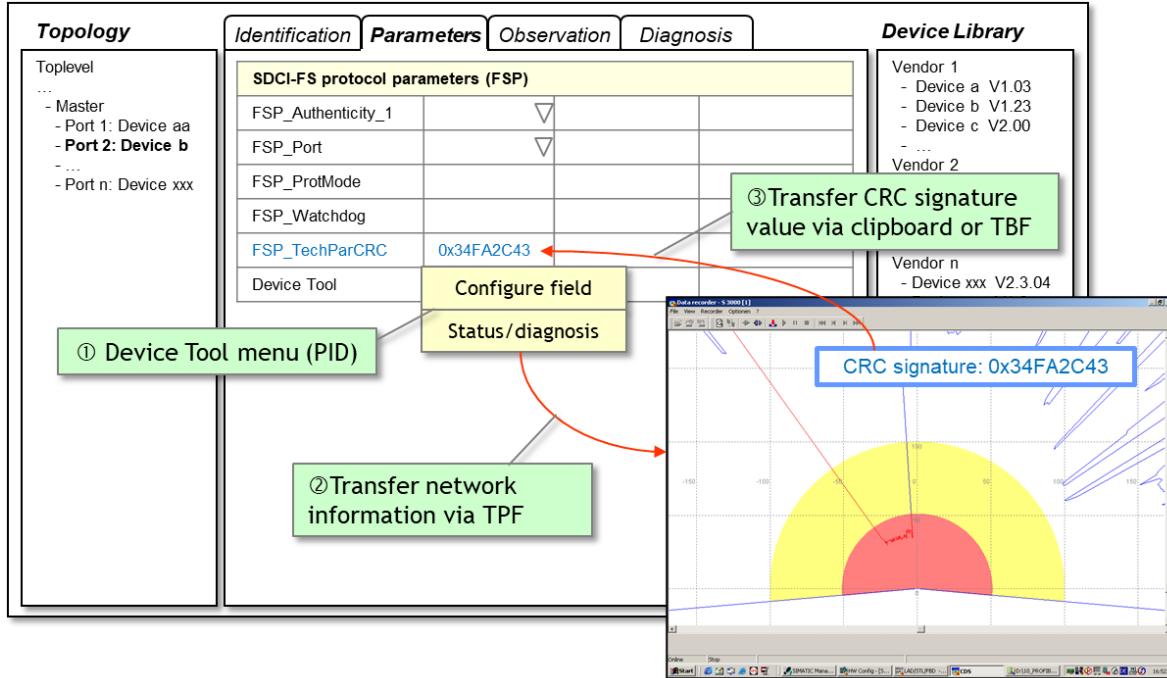

**Figure 55 – Modification of FST parameters via Dedicated Tool**

Such a Dedicated Tool requires communication with its particular FS-Device and therefore access to a Communication Interface (see Annex F.5). It can be invoked via menu entries (step①) and thus jump directly into for example configuration or status/diagnosis functions. Network information is transferred via TPF (step②). After test and validation, it shall provide a display of the calculated CRC signature across the instance data, which can be copied and pasted into the "FSP\_TechParCRC" field of the FSP parameters (step③).

These FS-Devices shall be supported by the data storage mechanism of SDCI and an FS-Device replacement without tools is possible.


The Data Storage limit per FS-Device is 2048 octets according to IEC 61131-9.

### 11.8 Creation of FSP and FST parameters

Standards for "Safety-for-Machinery" such as ISO 13849-1 and IEC 62061 require "Dedicated Tools" for the parameterization of safety devices. For the ease of development and logistics of software tools it is recommended to use the process described in Figure 56.

For FS-Devices with only a few FST parameters, no business logic, and no wizard and help systems, one particular "Dedicated Tool Framework" could be developed in a safe manner according to IEC 61508-3 and equipped with the necessary communication interfaces. Technology provider can provide such a framework for the FST parameters of a particular FS-Device (Option 1 in Figure 56). FS-Device developers can individualize the framework using the brand name, company name, and FS-Device identifiers to one dedicated tool (IOPD). This executable Dedicated Tool software can be certified by assessment bodies.

For FS-Devices with more complex FST parameters, the IOPD can be developed individually, or existing tools can be used. In both cases the tools can be equipped with the necessary communication interfaces (Option 2 in Figure 56).

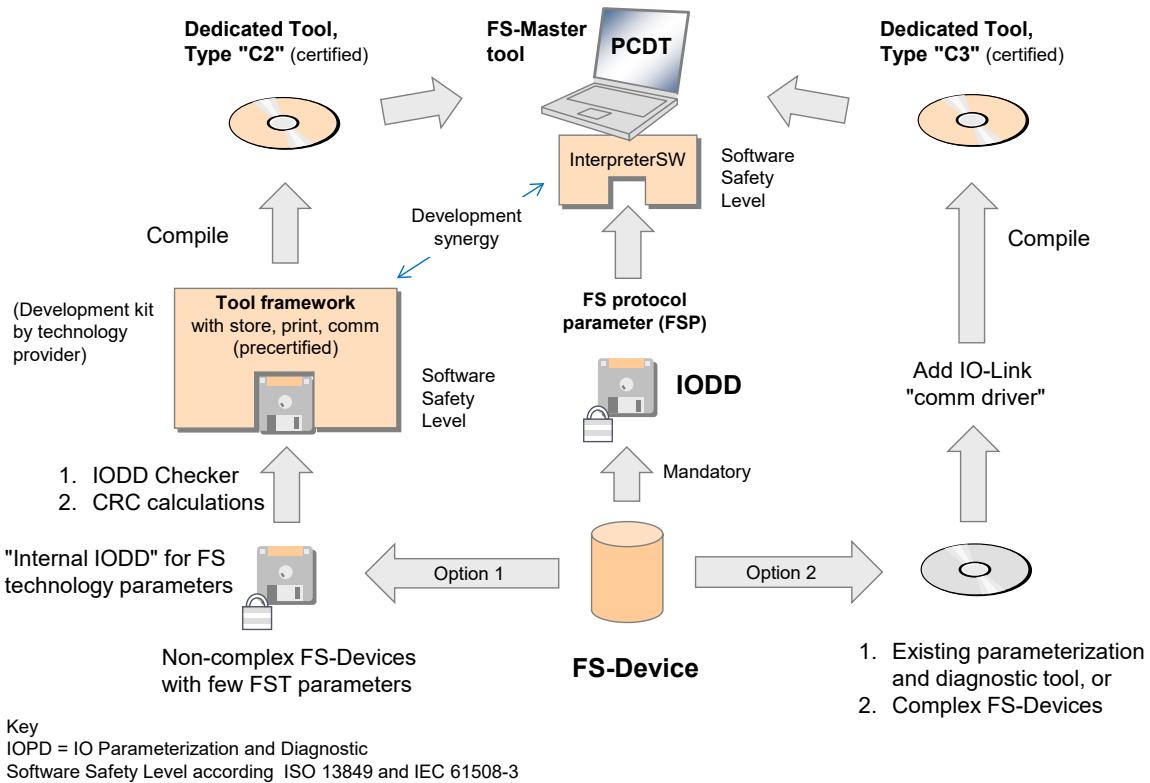

**Figure 56 – Creation of FSP and FST parameters**

In any case, the dedicated tool (IOPD) shall calculate and display the CRC signature across all FST parameters. This signature can be copied into the entry field of the FSP parameter "FSP\_TechParCRC", such that an FS-Device can verify the correctness of locally stored FST parameters after start-up and download of the FSP parameter set to the FS-Device.

For each and every FS-Device the same set of FSP (protocol) parameters shall be created in an extended IODD for SDCI-FS. This IODD is mandatory and contains the usual conventional parameters and additionally the FSP parameters.

## 11.9 Integration of Dedicated Tools (IOPD)

### 11.9.1 IOPD interface

Usually, a so-called Master Tool (PCDT) provides engineering support for a Master and its Devices via Device descriptions in form of XML files (IODD). In principle, this is the same for FS-Master and FS-Device. For functional safety besides an extended IODD it is necessary for an FS-Device vendor to provide an additional Dedicated Tool (IOPD) as shown in Figure 56.

In order for the IOPD to communicate with its FS-Device a new standardized communication interface is required.

### 11.9.2 Standard interfaces

Usually, Master Tools are integrated using existing standards such as FDT, the FDI (see [9]), or proprietary solutions. Such a variety is not acceptable for FS-Devices and therefore, easy, and proven-in-use technology has been selected and adopted for SDCI-FS. It is called "Device Tool Interface" (DTI).


Annex F provides the specification for this interface.

Figure 57 illustrates the communication hierarchy of FDT and others for the fieldbus as well as the connection via the "Device Tool Interface" and the underlying SDCI communication.

The FS-Dedicated Tool (IOPD) does not have to know about the fieldbus environment it is connected to. The example in Figure 57 illustrates how it sends a "Read Index 0x4231" service

1854 and how the FS-Master Tool packs this service into a fieldbus container and passes it to the  
 1855 fieldbus Communication Interface.

1856 The addressed FS-Master is connected to the fieldbus and receives this container. It unpacks  
 1857 the SDCI Read service and performs it with the addressed FS-Device connected to a Port.

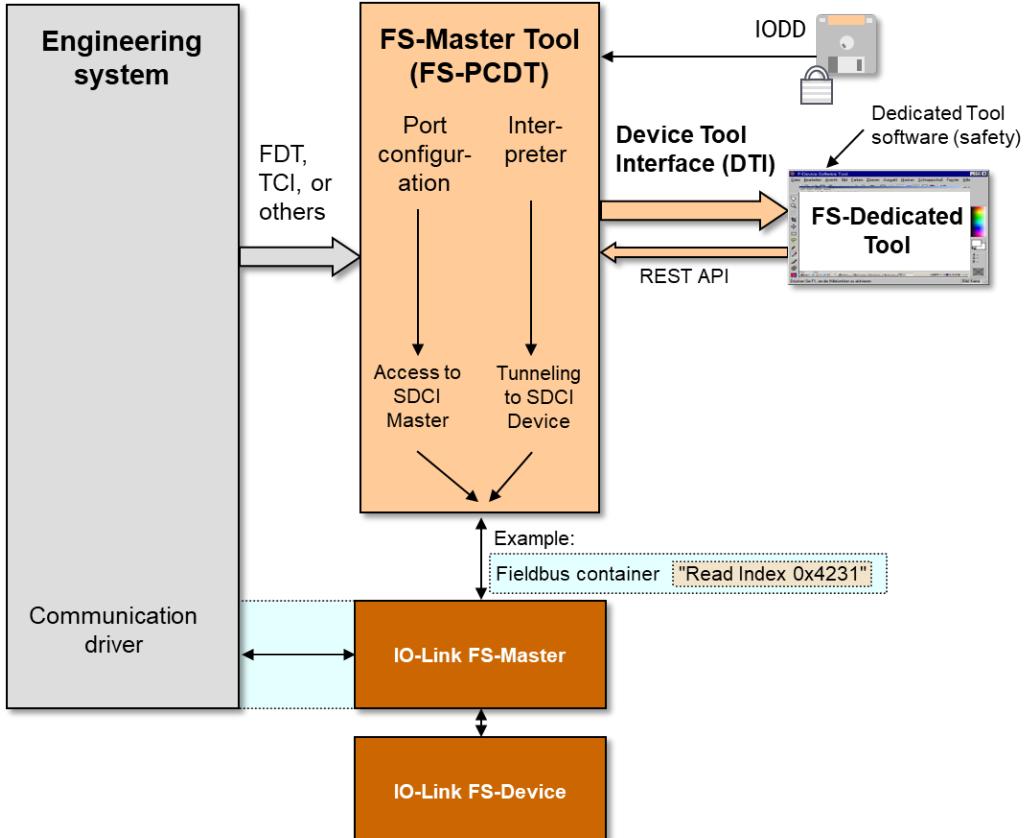

**Figure 57 – Example of a communication hierarchy**

### 11.9.3 Backward channel

An FS-Master vendor does not know in advance which FS-Devices a customer wants to connect to the FS-Master Ports. As a consequence, the fieldbus device description of such an FS-Master can only provide predefined "containers" for the resulting I/O data structure of the FS-Device ensembles connected to the Ports. In functional safety this is even more complicated since the description of the data structures shall be coded and secured.

Because of the variety of different configurations and parameterizations of a particular FS-Device, it usually for example

- requires different I/O data structures to exchange with PLCs or hosts,
- has different reaction times due to configured high or low resolutions, and
- can have different SIL, PL, category, or PFH values impacting the overall safety level of a safety function.

The classic "fieldbus device description" to inform an engineering system is not flexible in this respect. Its advantage is the testability and certification for its interoperability with engineering tools.

Nevertheless, a "backward channel" within the tool interfaces allows for nowadays flexible manufacturing and ease of engineering and commissioning. An example is specified in [10] Clause 4.15.5.

F.3.5 and F.8.4 specify the features for this "backward channel".


## 11.10 Validation

It is the responsibility of the FS-Device designer to specify the necessary verification and validation steps (for example tests; see H.6) within the user/safety manual and/or within the "Dedicated Tool" (IOPD).

## 11.11 Passivation

### 11.11.1 Motivation and means

Figure 58 illustrates the motivation for Port selective passivation. Usually for efficiency reasons, the signals 0 to 7 of FS-Devices connected to Ports are not mapped individually to an FSCP SPDU, but rather packed into one FSCP SPDU. Each of these signals can be assigned to a separate safety function  $n$  to  $n+7$ . If a fault occurs in one of the signal channels, a collective passivation for the entire FSCP SPDU would be necessary causing all safety functions to trip.

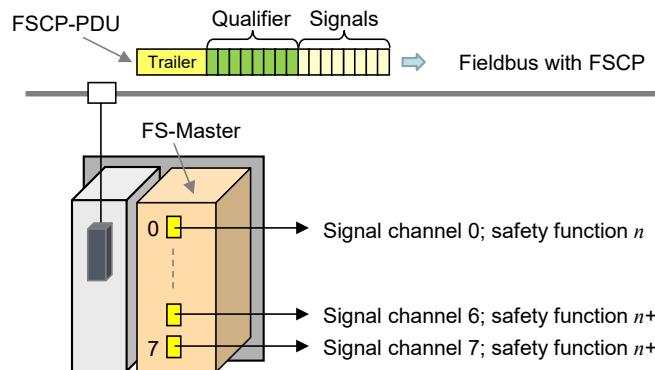

**Figure 58 – Motivation for Port selective passivation**

FSCPs usually provide so-called qualifier bits associated to the signal process data, which enable selectively passivating that particular signal channel and the associated safety function.

Safety of machinery usually requires an operator acknowledgment after repair of a defect signal channel to prevent from automatic restart of a machine. It is not necessary to provide the acknowledgment for each signal channel and it can be one for all channels.

### 11.11.2 Port selective (FS-Master)

In 11.11.1 a use case is described where the signal channel corresponds directly to a particular FS-Device. The qualifier and acknowledgment mechanism shall be implemented within the FS-Master in accordance with the specifications of the particular FSCP.

It can be helpful for the user to provide an indication in each FS-Device that an operator acknowledgment is required prior to a restart of a safety function. CB0 (ChFAckReq) within the Control&MCnt octet (see Table 30) shall be used for that purpose. It is not safety related.

Optionally, in case of FS\_PortMode "FS\_DI" (see 10.4.2), the signal ChFAckReq can be connected separately to the corresponding FS-Device indication (see Clause H.1).


### 11.11.3 Signal selective (FS-Terminal)

Figure 12 shows the use case of an FS-Terminal where an FS-Device provides several signal channels to switching devices such as E-Stop buttons.

For those FS-Devices the design rules in 11.4.9.3 apply. The acknowledgment mechanisms shall be implemented within the safety Process Data.

### 11.11.4 Qualifier settings in case of communication

Figure 59 illustrates the embedding of the qualifier handler in case of FS\_PortModes "SafetyCom" (see 10.4.2). The services/signals "FAULT\_S", "SDset\_S", "ChFAckReq\_S", and "ChFAck\_C" are specified in 11.3.2 and 11.5.2.

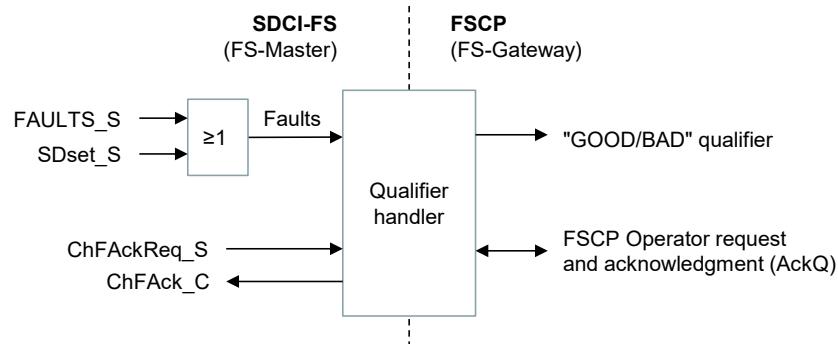

1915

**Figure 59 – Qualifier handler (communication)**

1917 The qualifier bits "GOOD/BAD" shall be set according to the definitions in Table 41 during the  
1918 FSCP mapping procedure.


**Table 41 – Qualifier bits "GOOD/BAD"**

Faults	Qualifier	Signal state
0	GOOD	1
1	BAD	0

1920

### 11.11.5 Qualifier handling in case of FS-DI


1921 Figure 60 illustrates the embedding of the qualifier handler in case of FS\_PortModes "FS\_DI"  
1922 (see 10.4.2). Definitions of Table 41 apply.

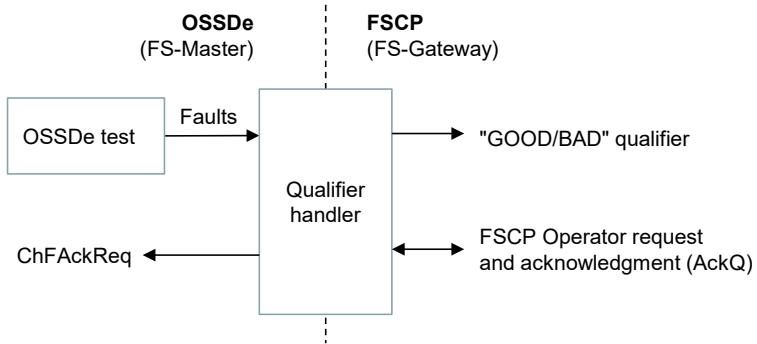

1924

**Figure 60 – Qualifier handler (FS-DI)**

1925 Figure 61 shows the state machine for the behaviour of the qualifier handler (FS-DI).

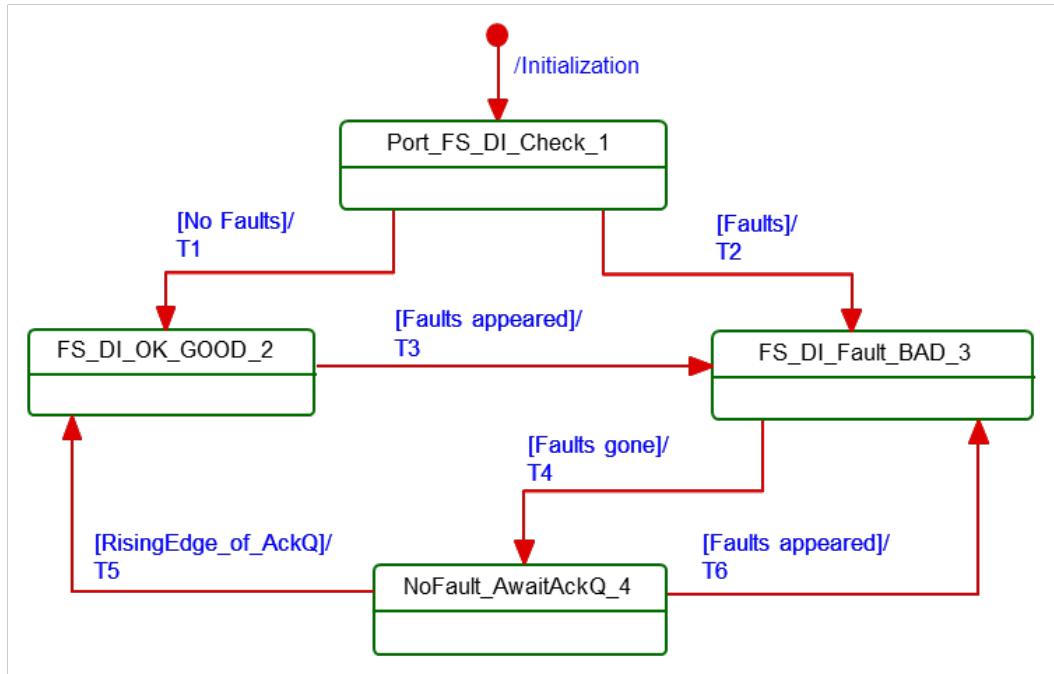

1927

1928

**Figure 61 – Qualifier behaviour per FS-Master Port**

1929

Table 42 shows the state and transition table for the qualifier behaviour.

1930

**Table 42 – State transition table for the qualifier behaviour**

STATE NAME		STATE DESCRIPTION	
Initialization			Use SD, Qualifier = BAD, ChFackReq =0
1 Port_FS_DI_Check	1	2	Perform Port diagnosis to detect Faults
2 FS_DI_OK_GOOD	2	3	Perform Port diagnosis cyclically to detect Faults
3 FS_DI_Fault_BAD	3	4	Perform Port diagnosis cyclically to detect Faults
4 NoFault_AwaitAckQ	4	2	Wait on rising edge of AckQ
TRAN-SITION	SOURCE STATE	TARGET STATE	ACTION
T1	1	2	Use PD, Qualifier = GOOD, AckQ = 0, ChFackReq =0
T2	1	3	Use SD, Qualifier = BAD, AckQ = 0, ChFackReq =0
T3	2	3	Use SD, Qualifier = BAD, AckQ = 0, ChFackReq =0
T4	3	4	Use SD, Qualifier = BAD, AckQ = 0, ChFackReq =1
T5	4	2	Use PD, Qualifier = GOOD, AckQ = 1, ChFackReq =0
T6	4	3	Use SD, Qualifier = BAD, AckQ = 0, ChFackReq =0
INTERNAL ITEMS		DEFINITION	
RisingEdge_of_AckQ	Flag	Means to prevent from permanently actuating the AckQ signal.	
AckQ	Flag	Flag depending on the individual upper-level FSCP system and its mapping.	
Faults	Flag	Any detected fault such as a wire break, short circuit.	
ChFackReq	Flag	Signal set by qualifier handler (see 11.11.2 and H.1)	

1933

1934

**11.12 SCL diagnosis**

1935


The Safety Communication Layer can create its own EventCodes such as CRC error, counter error, or timeout as listed in Clause B.1.

1936

## 1937 12 Functional safe processing (FS-P)

### 1938 12.1 Recommendations for efficient I/O mappings

1939 Figure 62 shows how efficiency can be increased when packing I/O data from the connected  
 1940 safety devices into one FSCP SPDUs instead of several individual FSCP SPDUs. On the left,  
 1941 the bits of safety devices (OSSD) are packed into one FSCP SPDU by the FS-DI module.  
 1942 On the right, the FS-Devices use each an FSCP SPDU through the FS-Master/Gateway (FS-M/G)  
 1943 to transmit a bit. In the middle, an FS-M/G packs several bits into one FSCP SPDU similar to  
 1944 an FS-DI.

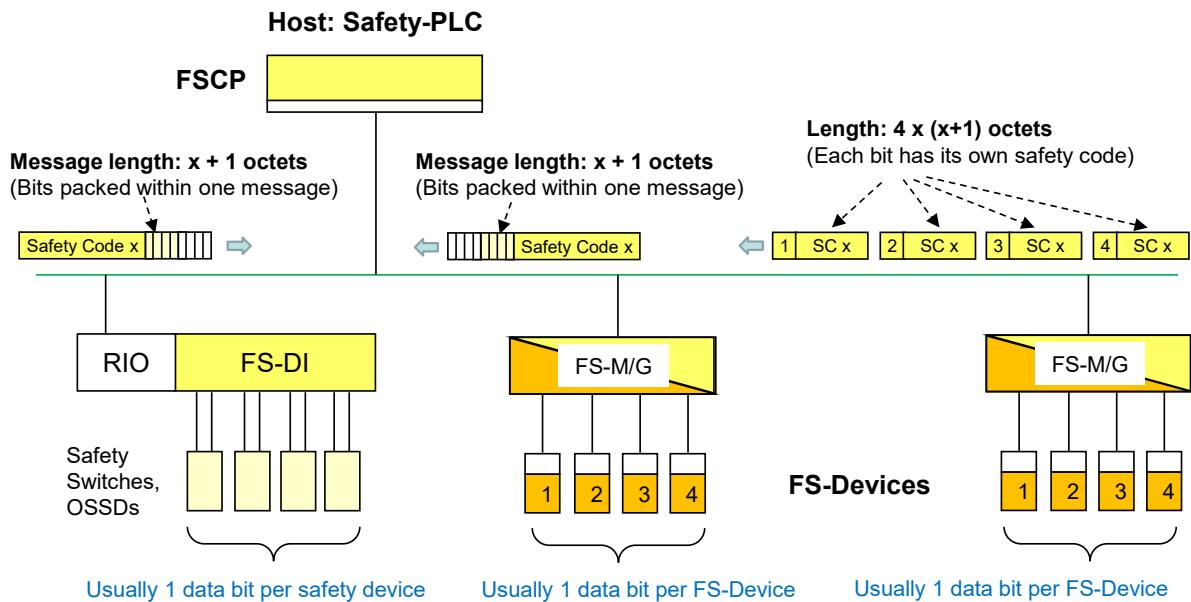

1945 1946 **Figure 62 – Mapping efficiency issues**

1947 The FS I/O data structure shall be created as a multiple of 16 bits.

### 1948 12.2 Embedded FS controller

1949 Specification and implementation of an embedded FS controller as described in 4.2 and Figure  
 1950 1 to provide "local" safety functions on SDCI-FS level are manufacturer's responsibility and not  
 1951 standardized.

1952  
1953  
1954  
1955

## Annex K (normative)

### Extensions to parameters

1956

#### K.1 Indices and parameters for SDCI-FS

1957 The Index range reserved for SDCI-FS includes 255 Indices from 0x4200 to 0x42FF.

1958 Table A.1 shows the specified Indices for SDCI profiles, the protocol parameters (FSP) of SDCI-FS, comprising authenticity, protocol, I/O data structure records, and auxiliary parameters as well as the total reserved range for SDCI-FS, and the second range of Indices for SDCI profiles.

1961 Hint: the rules for parameter checks according to 11.3.4 in IEC 61131-9 apply.

1962

**Table A.1 – Indices for SDCI-FS**

Index (dec)	Sub index	Object name	Access	Length	Data type	M/O/C	Purpose/reference
...							
0x4000 to 0x41FF		Profile specific Indices					For example: Smart sensors
<b>Authenticity (11 octets)</b>							
0x4200 (16896)	1	FSP_Authenticity_1	R/W	4 octets	UIntegerT	M	"A-Code" from the upper-level FSCP system; see A.2.1
	2	FSP_Authenticity_2	R/W	4 octets	UIntegerT	M	Extended "A-Code" from the upper-level FSCP system
	3	FSP_Port	R/W	1 octet	UIntegerT	M	PortNumber identifying the particular FS-Device; see A.2.2
	4	FSP_Authent CRC	R/W	2 octets	UIntegerT	M	CRC-16 across authenticity parameters; see A.2.3
<b>Protocol (12 octets)</b>							
0x4201 (16897)	1	FSP_ProtVersion	R/W	1 octet	UIntegerT	M	Protocol version: 0x01; see A.2.4
	2	FSP_ProtMode	R/W	1 octet	UIntegerT	M	Protocol modes, e.g. 16/32 bit CRC; see A.2.5
	3	FSP_Watchdog	R/W	2 octets	UIntegerT	M	Monitoring of I/O update; 1 to 65 535 ms; see A.2.6
	4	FSP_IO_StructCRC	R/W	2 octets	UIntegerT	M	CRC-16 signature across I/O structure description block; see A.2.7
	5	FSP_TechParCRC	R/W	4 octets	UIntegerT	M	Securing code across FST (technology specific parameter); see A.2.8
	6	FSP_ProtParCRC	R/W	2 octets	UIntegerT	M	CRC-16 across protocol parameters; see A.2.9
<b>Verification Record (23 octets)</b>							
0x4202 (16898)		FSP_VerifyRecord	W	23 octets	RecordT	M	FS-Master sends this verification record consisting of authenticity and protocol parameters at PREOPERATE. This Index is hidden to the user; see A.2.10
<b>Auxiliary parameters</b>							
0x4210 (16912)		FSP_TimeToReady	R	2 octets	UIntegerT	M	Time to Ready pulse; 1 to 32 767 (in 10 ms), see A.2.11

Index (dec)	Sub index	Object name	Access	Length	Data type	M/O/C	Purpose/reference
0x4211 (16913)		FSP_MinShutdownTime	R	2 octets	UIntegerT	M	Minimum time for the FS-Device to shut down after Port Power off; 100 to 1 000 (in 10 ms), see A.2.12
0x4212 (16914)		FSP_ParamDescCRC	R	4 octets	UIntegerT	M	CRC-32 signature securing authenticity, protocol, and FS I/O structure description within IODD; see A.2.15
0x4213 (16915)		FSP_WCDT	R	2 octets	UIntegerT	M	Worst-case delay time; 1 to 32 767 (in ms), see A.2.13 and H.6
0x4214 (16916)		FSP_OFDT	R	2 octets	UIntegerT	M	One fault delay time; 1 to 32 767 (in ms), see A.2.14 and H.6
0x4215 (16917) to 0x42FF (17151)		Reserved for SDI-FS					
0x4300 to 0xFFFF		Profile specific Indices					For example: BLOB and Firmware update
...							
Key	M = mandatory; O = optional; C = conditional						

1963

## 1964 K.2 Parameters in detail

### 1965 K.2.1 FSP\_Authenticity

1966 During off-line commissioning of an SDI-FS project, the default value of this parameter is "0".  
 1967 During on-line commissioning, the user acquires the FSCP authenticity ("A-Code") from the FS-Master via SMI service and propagates it to the FS-Device within an entire record as described  
 1968 in 10.4.3.1. The FS-Master Tool shall only transfer entire authenticity blocks to the FS-Device  
 1969 with correct CRC signature values such that the FS-Device can check plausibility and  
 1970 correctness (see A.2.3).

1972 In case the system is armed (FSP\_TechParCRC ≠ "0") the FS-Device compares at each start-up (DS\_Change or PortPowerOffOn) its locally stored values with the values of the FSP\_VerifyRecord to detect any misconnection (incorrect Port or FS-Master), see Annex G.

1975 Some FSCPs provide extended authenticity. In those cases, the extended code shall be included in this parameter.

1977 The parameters FSP\_Authenticity\_1 and FSP\_Authenticity\_2 can be different per port. These  
 1978 parameters are to identify each FS-Master port in an application. Responsible for the correct  
 1979 routing from the FSCP to the FS-Master port is the gateway application inside the FS-Master.

1980 Padding bits and octets shall be filled with "0".

### 1981 K.2.2 FSP\_Port

1982 The FS-Master Tool identifies the FS-Master PortNumber of the attached FS-Device and stores  
 1983 it in this parameter. Storage and checking of the parameter by the FS-Device corresponds to  
 1984 A.2.1 and A.2.3. Numbering starts at "1". Thus, the FS-Device shall not accept a "0".

1985 Default PortNumber in IODD is "0" and means PortNumber of a particular Device has not been  
 1986 assigned yet.

1987 The port number is the physical port number of the FS-Master where the FS-Device is attached.

1988 **K.2.3 FSP\_AuthentCRC**

1989 The FS-Master Tool shall only transfer entire authenticity blocks to the FS-Device including  
1990 FSP\_Authenticity and FSP\_Port (see Table A.1).

1991 For the CRC signature calculation of the entire authenticity block, the CRC-16 in Table D.1 shall  
1992 be used. This CRC polynomial has a Hamming distance of  $\geq 6$  for lengths  $\leq 16$  octets. A seed  
1993 value "0" shall be used (see D.3.6).

1994 **K.2.4 FSP\_ProtVersion**

1995 Table A.2 shows the coding of FSP\_ProtVersion.

1996 **Table A.2 – Coding of protocol version**

Value	Definition
0x00	Not permitted
0x01	This protocol version
0x02 to 0xFF	Reserved

1997 **K.2.5 FSP\_ProtMode**

1998 Table A.3 shows the coding of FSP\_ProtMode. The "test mirrors" are used by testers.

1999 **Table A.3 – Coding of protocol mode**

Value	Definition
0x00	Not permitted
0x01	0 to 3 octets of FS I/O Process Data; CRC-16
0x02	0 to 25 octets of FS I/O Process Data; CRC-32
0x03 to 0xF8	Reserved
0xF9	Test mirror in case of CRC-32 (reserved for test)
0xFA	Test mirror in case of CRC-16 (reserved for test)
0xFB to 0xFF	Reserved

2000 It is highly recommended that the CRC-32 is chosen (coding value 0x02), also for devices with  
2001 up to 3 octets due to the enhancement of the IEC 61784-3.

2003 **K.2.6 FSP\_Watchdog**

2004 The FS-Device designer determines the I/O update time and uses it as default value of this  
2005 parameter within the IODD. The I/O update time is the worst case time between the reception  
2006 of a safety PDU with a new MCount value and the provisioning of the response safety PDU with  
2007 the appropriate DCount value.

2008 With the help of the parameter default value (I/O update time), the transmission times of the  
2009 safety PDUs, FS-Master processing times and IO-Link transmission times, the FS-Master Tool  
2010 can estimate the total time and suggest the value of the "FSP\_Watchdog" parameter.

2011 The value range is 1 to 65 535 (measured in ms). A value of "0" is not permitted. The SCL of  
2012 the FS-Device is responsible to check the validity at start-up and to create an error in case (see  
2013 Table B.1).

2014 **K.2.7 FSP\_IO\_StructCRC**

2015 An IODD-based non-safety viewer can be used to calculate this 16-bit CRC signature across  
2016 the FS I/O structure description within the IODD during the development phase. The algorithm  
2017 for the calculation is shown in Annex D. A seed value "0" shall be used (see D.3.6).

2018 The safety-related interpreter of the FS-Master Tool transfers the entire instance data together  
2019 with the CRC signature to the FS I/O data mapper as shown in 10.4.3.1.

2020 Table A.4 shows Version "1" of the generic FS I/O data structure description for FS-Devices.  
 2021 With the help of this table, individual instances of FS-Device I/O Process Data can be created  
 2022 via IODD and, amongst others, used for an automatic mapping of SDCI-FS data to FSCP safety  
 2023 data.

2024

**Table A.4 – Generic FS I/O data structure description**

Item name	Item length	Definition
IO_DescVersion	1 octet	Version of this generic structure description: 0x01
InputDataRange	1 octet	Length in octets of the entire FS input Process Data including the 4 or 6 octets respectively for the safety code (Control/Status, PortNumber, and CRC-16/32)
TotalOfInBits	1 octet	Number of the entire set of input BooleanT (bits)
TotalOfInOctets	1 octet	Number of octets with input BooleanT (including unfilled octets)
TotalOfInInt16	1 octet	Number of input IntegerT(16)
TotalOfInInt32	1 octet	Number of input IntegerT(32)
OutputDataRange	1 octet	Length in octets of the entire FS output Process Data including the 4 or 6 octets respectively for the safety code (Control/Status, PortNumber, and CRC-16/32)
TotalOfOutBits	1 octet	Number of the entire set of output BooleanT (bits)
TotalOfOutOctets	1 octet	Number of octets with output BooleanT (including unfilled octets)
TotalOfOutInt16	1 octet	Number of output IntegerT(16)
TotalOfOutInt32	1 octet	Number of output IntegerT(32)
FSP_IO_StructCRC	2 octets	CRC-16 signature value across all items (see Annex D.1)

2025


2026 Figure A.1 shows the instance of the FS I/O data description of the example in Figure A.2.

IO_DESCVERSION	01	0x01
INPUT_DATA_RANGE	10	0x0A
TOTAL_OF_INBITS	13	0x0D
TOTAL_OF_INOCTETS	02	0x02
TOTAL_OF_ININT16	01	0x01
TOTAL_OF_ININT32	00	0x00
OUTPUT_DATA_RANGE	06	0x06
TOTAL_OF_OUTBITS	00	0x00
TOTAL_OF_OUTOCTETS	00	0x00
TOTAL_OF_OUTINT16	00	0x00
TOTAL_OF_OUTINT32	00	0x00
FSP_IO_STRUCTCRC	39464	0x9A28

2027

**Figure A.1 – Instance of an FS I/O data description**

2028 Figure A.2 shows an example with FS input Process Data and no FS output Process Data.

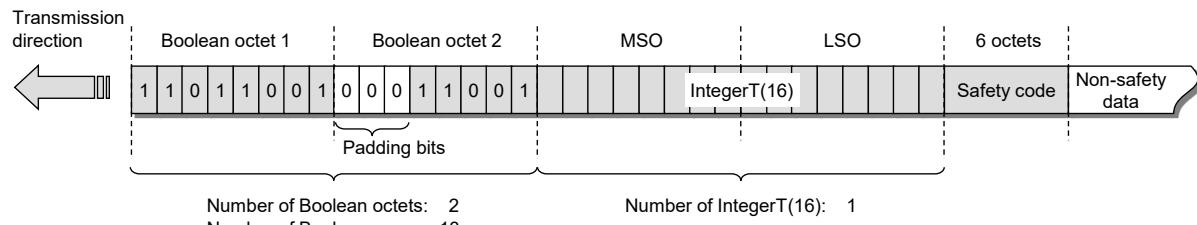

2030

**Figure A.2 – Example FS I/O data structure with non-safety data**

**K.2.8 FSP\_TechParCRC**

This document specifies two basic methods for the assignment of technology specific parameters (FST). The FS-Device designer is responsible for the selection of the securing method.

The method in 11.7.8 is based on IODD and suggests using one of the CRC generator polynomials in Table D.1. If calculation of the CRC signature value results in "0", a "1" shall be used.

The method in 11.7.9 depends on an existing FS-Device tool (Dedicated Tool). Whatever method is used, the tool shall display a securing code after verification and validation that can be copied and pasted into the FSP\_TechParCRC parameter entry field.

During commissioning a value of "0" can be entered to allow for certain behavior at start-ups of the FS-Device (see 10.4.3.1). During production, this value shall be ≠ "0".

For technology specific parameter block transfers > 232 octets, the SMI\_PortCmd service CMD = "0" (DeviceParBatch) specified in IEC 61131-9 can be used.

**K.2.9 FSP\_ProtParCRC**

The FS-Master Tool shall only transfer entire protocol blocks to the FS-Device including all protocol parameters (see Table A.1). For the CRC signature calculation of the entire protocol block, the CRC-16 in Table D.1 shall be used. This CRC polynomial has a Hamming distance of ≥ 6 for lengths ≤ 16 octets. A seed value "0" shall be used (see D.3.6).

**K.2.10 FSP\_VerifyRecord**

A record consisting of the authenticity and protocol parameters is transferred via the service "SMI\_PortConfiguration" (see 10.2.1 and 10.3.3) and stored within the Configuration Manager of an FS-Master. At start-up during PREOPERATE, the FS-Master forwards this verification record in write only manner to a "hidden" Index in the FS-Device (see 11.7.4). The FS-Device uses this diversly handled record for verification of authenticity, protocol, I/O structure, and technology parameters. This takes place during PREOPERATE after a "DS\_Change" (see Figure 31 and IEC 61131-9) whenever an FS-Device has been replaced and parameter have been restored through Data Storage mechanisms. It also takes place after Port power OFF/ON during commissioning through SMI\_PortPowerOffOn (see IEC 61131-9:2022 [24], 11.2.14 and Clause E.9). In OPERATE the FSP\_VerifyRecord is not allowed and be declined with "Service temporarily not available" (0x8022).

The record shall be transferred as an entity. Subindex access is not permitted. Index 0x4202 (16898) shall be "hidden" to the user; that is, it shall not be described within the IODD.

**K.2.11 FSP\_TimeToReady**

The FS-Device designer measures/determines the time from power-on to the appearance of the Ready pulse (see 5.3.3 and  $t_{2R}$  in Table 6) and assigns the value to FSP\_TimeToReady in the IODD of the FS-Device (see E.5.8).

NOTE The value is related to the parameter "Time delay before availability" in [7] or [11].

Values greater than 5 s leads to restricted FS-Master behavior, for example no automatic Device detection.

**K.2.12 FSP\_MinShutDownTime**

The FS-Device designer measures/determines the minimum time required to shut down after Port power off prior to a restart and assigns the value to FSP\_MinShutDownTime in the IODD of the FS-Device (see Annex E.5.8).

**K.2.13 FSP\_WCDT**


The FS-Device designer measures/determines the "Worst-Case Delay Time" values as defined in H.6. Several different values are possible since FS-Devices can be configured via technology parameters, for example high resolution may lead to longer and low resolution to shorter times. When reading this parameter, the FS-Device will provide a value corresponding to its current parameterization.

2080 **K.2.14 FSP\_OFDT**

2081 The FS-Device designer measures/determines the "One Fault Delay Time" values as defined  
 2082 in H.6. Several different values are possible. When reading this parameter, the FS-Device will  
 2083 provide a value corresponding to its current parameterization.

2084 **K.2.15 FSP\_ParamDescCRC**

2085 The purpose of this parameter is to secure the relevant descriptions of safety parameters within  
 2086 the IODD (see E.5.6) against data falsification as shown in Figure A.3.

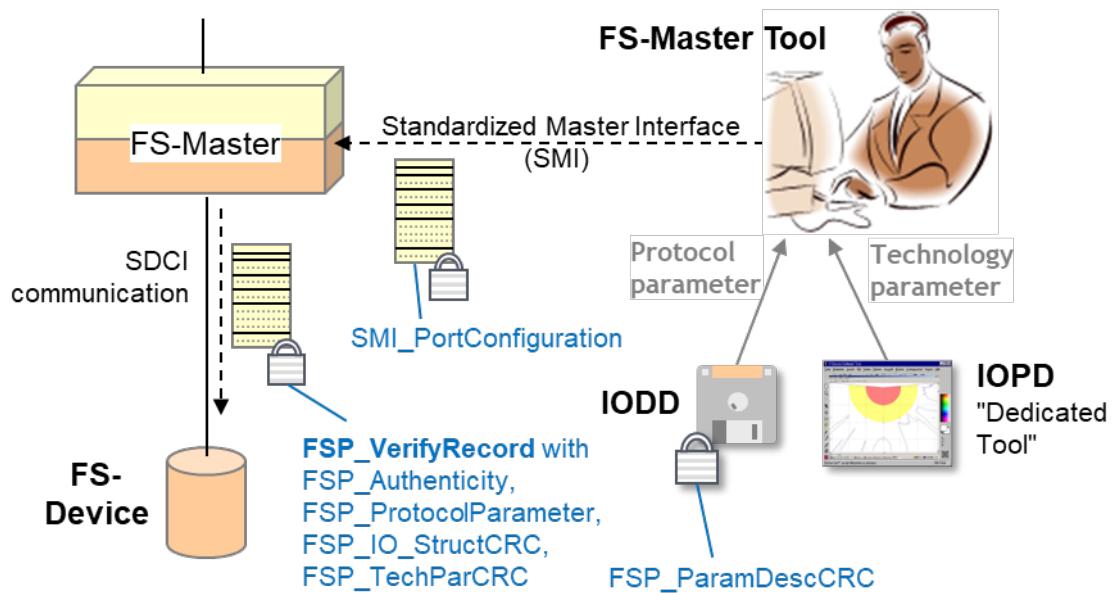

2087

2088

**Figure A.3 – Securing of safety parameters**

2089  
2090  
2091  
2092  
**Annex L**  
(normative)

## Extensions to EventCodes

2093 **L.1 Additional FS-Device EventCodes**

2094 The FS-Device shall send events in case of error according to Table B.1. They are conveyed by the  
2095 SMI\_DeviceEvent service.

2096 **Table B.1 – FS-Device SCL specific EventCodes**

EventCode	Definition and recommended maintenance action	FS-Device status value	TYPE
0xB000	Transmission error (CRC signature)	2	Notification
0xB001	Transmission error (Counter)	2	Notification
0xB002	Transmission error (Timeout)	3	Error
0xB003	Unexpected authentication code	3	Error
0xB004	Unexpected authentication Port	3	Error
0xB005	Incorrect FSP_AuthentCRC	3	Error
0xB006	Incorrect FSP_ProtParCRC	3	Error
0xB007	Incorrect FSP_TechParCRC	3	Error
0xB008	Incorrect FSP_IO_StructCRC	3	Error
0xB009	Watchdog time out of specification (e.g. "0")	3	Error
0xB00A	No FSP_VerifyRecord received (triggered after transition to OPERATE)	3	Error
0xB00B to 0xB0FF	Reserved: do not use number; do not evaluate number	–	–

2097  
2098 Usually, "CRC signature" and/or "Counter" transmission errors are caused by seriously falsified  
2099 SDCI messages with SPDUs due to heavy interferences. There is nothing to repair and an  
2100 operator acknowledgment is sufficient. This very unlikely warning should inform the operator  
2101 and the responsible production manager about possible changes within a machine requiring an  
2102 inspection according to the safety manual (see Clause H.6).

2103 **L.2 Additional Port EventCodes**

2104 The Safety Communication Layer (SCL) within an FS-Master can create its own EventCodes as  
2105 shown in Table B.2. They are conveyed by the SMI\_PortEvent service (see IEC 61131-9).

2106 **Table B.2 – FS-Master SCL specific EventCodes**

EventCode	Definition and recommended maintenance action	TYPE
0x2000	Transmission error (CRC signature or Counter if 0x2001 is not used)	Notification
0x2001	Transmission error (Counter) [optional]	Notification
0x2002	Transmission error (Timeout)	Error
0x2003	Unexpected authentication code	Error
0x2004	Unexpected authentication port	Error
0x2005	Incorrect FSP_AuthentCRC	Error
0x2006	Incorrect FSP_ProtParCRC	Error
0x2007	ISDU error (FSP_VerifyRecord)	Error
0x2008	Reserved	–
0x2009	Watchdog time out of specification (e.g. "0")	Error

EventCode	Definition and recommended maintenance action	TYPE
0x200A to 0x20EF	Reserved: do not use number; do not evaluate number	–
0x20F0 to 0x20FF	Reserved: do not use number; do not evaluate number	–

2107  
2108  
2109  
2110

## Annex M (normative)

### Extensions to Data Types

2111

#### M.1 Data types for SDCI-FS

2112 Table C.1 shows the available data types in SDCI-FS for cyclic exchange of Process Data for  
2113 safety functions (see 11.4.9.2).

2114

**Table C.1 – Data types for SDCI-FS**

Data type	Coding	Length	See IEC 61131-9:2022	Device example
BooleanT/bit	BooleanT ("packed form" for efficiency, no WORD structures); assignment of signal names to bits is possible.	1 bit	F.2.2; Table F.22 and Figure F.9	Proximity switch
IntegerT(16)	IntegerT (enumerated or signed)	2 octets	F.2.4; Table F.4, Table F.7, and Figure F.3	Protection fields of laser scanner
IntegerT(32)	IntegerT (enumerated or signed)	4 octets	F.2.4; Table F.4, Table F.6, and Figure F.3	Encoder or length measurement ( $\approx \pm 2$ km, resolution 1 $\mu$ m)

2115

2116

#### M.2 BooleanT (bit)

2117 A BooleanT represents a data type that can have only two different values i.e. TRUE and  
2118 FALSE. The data type is specified in Table C.2.

2119

**Table C.2 – BooleanT for SDCI-FS**

Data type name	Value range	Resolution	Length
BooleanT	TRUE / FALSE	-	1 bit

2120

2121 SDCI-FS uses solely the so-called packed form via RecordT as shown in Table C.3.


2122

**Table C.3 – Example of BooleanT within a RecordT**

Subindex	Offset	Data items	Data Type	Name/symbol
1	0	TRUE	BooleanT	Proximity_1
2	1	FALSE	BooleanT	Proximity_2
3	2	FALSE	BooleanT	EmergencyStop_1
4	3	TRUE	BooleanT	EmergencyStop_2
5	4	TRUE	BooleanT	EmergencyStop_3

2123

2124 Figure C.1 demonstrates an example of a BooleanT data structure. Padding bits are "0".

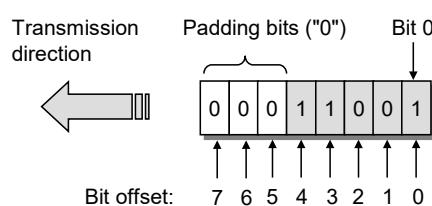

**Figure C.1 – Example of a BooleanT data structure**

2127 Only RecordT data structures of 8-bit length are permitted. Longer data structures shall use  
 2128 multiple RecordT data structures (see Clause C.5).

2129 NOTE Data structures longer than 8 bit can cause mapping problems with upper-level FSCP systems (see 3.5.2).

### 2130 M.3 IntegerT (16)

2131 An IntegerT(16) is representing a signed number depicted by 16 bits. The number is  
 2132 accommodated within the octet container 2 and right aligned and extended correctly signed to  
 2133 the chosen number of bits. The data type is specified in Table C.4 for singular use. SN  
 2134 represents the sign with "0" for all positive numbers and zero, and "1" for all negative numbers.  
 2135 Padding bits are filled with the content of the sign bit (SN).

2136 **Table C.4 – IntegerT(16)**

Data type name	Value range	Resolution	Length
IntegerT(16)	- $2^{15}$ to $2^{15} - 1$	1	2 octets
NOTE 1 High order padding bits are filled with the value of the sign bit (SN).			
NOTE 2 Most significant octet (MSO) sent first (lowest respective octet number in Table C.5).			

2137

2138 The coding of IntegerT(16) is shown in Table C.5.

2139 **Table C.5 – IntegerT(16) coding**

Bit	7	6	5	4	3	2	1	0	Container
Octet 1	SN	$2^{14}$	$2^{13}$	$2^{12}$	$2^{11}$	$2^{10}$	$2^9$	$2^8$	2 octets
Octet 2	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$	

2140

### 2141 M.4 IntegerT (32)

2142 An IntegerT(32) is representing a signed number depicted by 32 bits. The number is  
 2143 accommodated within the octet container 4 and right aligned and extended correctly signed to  
 2144 the chosen number of bits. The data type is specified in Table C.6 for singular use. SN  
 2145 represents the sign with "0" for all positive numbers and zero, and "1" for all negative numbers.  
 2146 Padding bits are filled with the content of the sign bit (SN).

2147 **Table C.6 – IntegerT(32)**

Data type name	Value range	Resolution	Length
IntegerT(32)	- $2^{31}$ to $2^{31} - 1$	1	4 octets
NOTE 1 High order padding bits are filled with the value of the sign bit (SN).			
NOTE 2 Most significant octet (MSO) sent first (lowest respective octet number in Table C.7).			

2148

2149 The coding of IntegerT(32) is shown in Table C.7

2150 **Table C.7 – IntegerT(32) coding**


Bit	7	6	5	4	3	2	1	0	Container
Octet 1	SN	$2^{30}$	$2^{29}$	$2^{28}$	$2^{27}$	$2^{26}$	$2^{25}$	$2^{24}$	4 octets
Octet 2	$2^{23}$	$2^{22}$	$2^{21}$	$2^{20}$	$2^{19}$	$2^{18}$	$2^{17}$	$2^{16}$	
Octet 3	$2^{15}$	$2^{14}$	$2^{13}$	$2^{12}$	$2^{11}$	$2^{10}$	$2^9$	$2^8$	
Octet 4	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$	

2151 **M.5 Safety Code**

2152 Size of the Safety Code as shown in Figure C.2 and Figure C.3 can be identified by the

- 2153 • Parameter "FSP\_ProtMode" (see Table A.1), and
- 2154 • FS I/O structure description (see Table A.1).

2155 Thus, the overall I/O data structure can be identified even if there are non-safety related I/O  
2156 data associated with the SPDU.

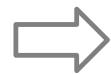CRC signature	Control&MCnt	PortNum	FS-PDout	From FS-Master:
Signature across FS-Output data, PortNum, and Control & counting	Including 3 bit counter	FS-Master port number	0 to 3 octets, or 0 to 25 octets	
2/4 octets	1 octet	1 octet	3/25 octets	

Safety code

2157

2158 **Figure C.2 – Safety Code of an output message**

2159

From FS-Device:	FS-PDin	PortNum	Status&DCnt	CRC signature
	0 to 3 octets, or 0 to 25 octets	FS-Master port number inverted	Including 3 bit counter inverted	Signature across FS-Input data, PortNum, and Status & counting mirror
	3/25 octets	1 octet	1 octet	2/4 octets

Safety code

2160

2161 **Figure C.3 – Safety Code of an input message**

2162

2163  
2164  
2165  
2166                   **Annex N**  
                          (normative)

2167                   **CRC generator polynomials**

2168                   **N.1 Overview of CRC generator polynomials**

2169 Hamming distance and properness for all required data lengths are important characteristics to  
2170 select a particular generator polynomial.

2171 If the generator polynomial  $g(x) = p(x)*(1 + x)$  is used, where  $p(x)$  is a primitive polynomial of  
2172 degree  $(r - 1)$ , then the maximum total block length is  $2^{(r - 1)} - 1$ , and the code is able to detect  
2173 single, double, triple and any odd number of errors (see [12]).

2174 If properness is approved, the residual error probability for the approved data length is  $2^{-r}$ .

2175 It shall be prohibited that the CRC generator polynomial used in the underlying transmission  
2176 systems, for example SDCI, matches the CRC generator polynomial used for SDCI-FS.

2177 Table D.1 shows the CRC-16 and CRC-32 generator polynomials in use for SDCI-FS:

2178                   **Table D.1 – CRC generator polynomials for SDCI-FS**

CRC-16/32 polynomial ("Normal" representation)	Data length (bits)	Hamming distance	Properness	Reference	Remark
0x4EAB	≤ 128	≥ 6	≤ 7 octets	[13]	Suitable for functional safety
0xF4ACFB13	≤ 32768	≥ 6	≤ 128 octets	[13]	
	≤ 65534	≥ 4			
NOTE Representation: "Normal": high order bit omitted					

2179  
2180 The CRC-16 can be used

- 2181     • to secure cyclic Process Data exchange with a total safety PDU length of up to 7 octets,  
2182       i.e. 3 octets for safety Process Data and 4 octets of safety code, and  
2183     • to secure the transfer of up to 16 octets of FSP parameters at start-up or restart.

2184  
2185 The CRC-32 can be used


- 2186     • to secure cyclic Process Data exchange with a total safety PDU length of up to 32 octets,  
2187       i.e. 25 octets for safety Process Data (see 11.4.4), and 6 octets of safety code, and  
2188     • to secure the transfer and data integrity of the entire FST parameter set.

2189 Additional parameters and assumptions for the calculation of residual error probabilities/rates  
2190 can be found in 11.4.7.

2191                   **N.2 Residual error probabilities**

2192 Figure D.1 shows the results of residual error probability (REP) calculations over bit error  
2193 probabilities (BEP) for safety PDU lengths from 3 to 7 octets.

2194 The REP is less than  $0,9 \times 10^{-9}$  for BEPs less than the required  $10^{-2}$  at a length of 7 octets.

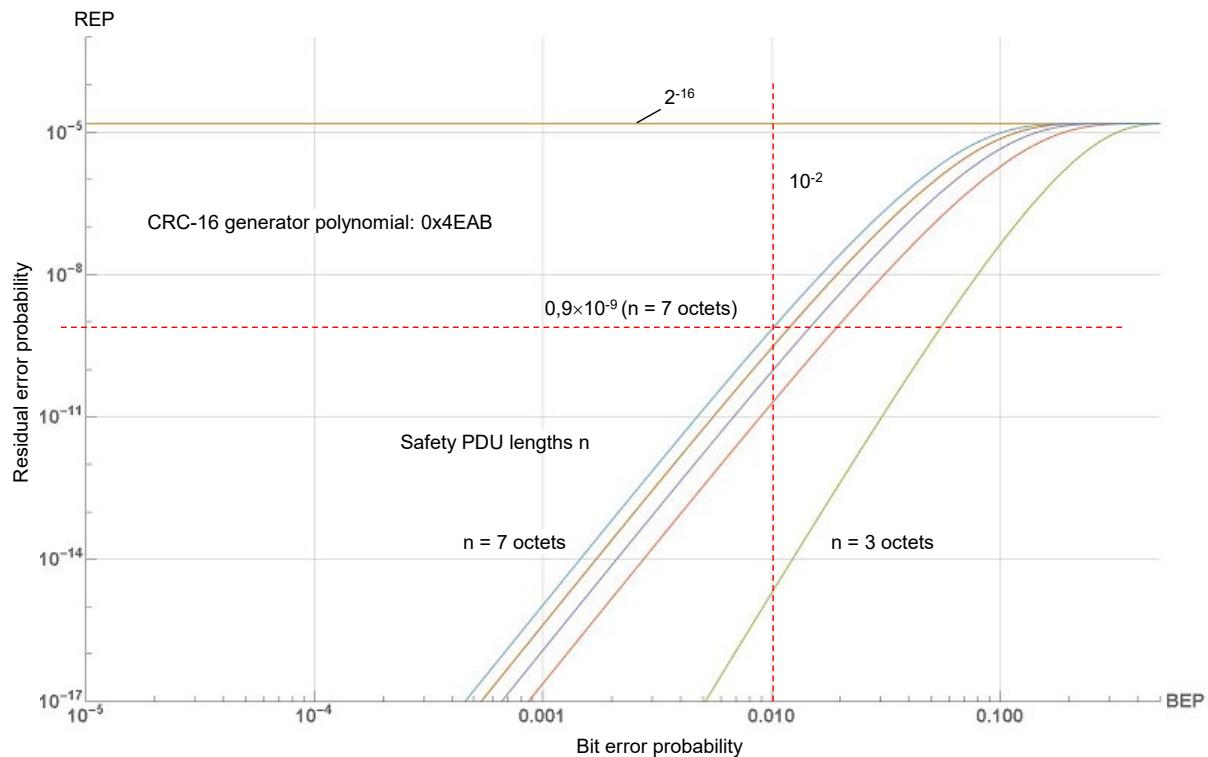


2195

2196

**Figure D.1 – CRC-16 generator polynomial**

2197 Figure D.2 shows the results of residual error probability (REP) calculations over bit error  
 2198 probabilities (BEP) for safety PDU lengths from 5 to 128 octets.

2199 The REP is less than  $0.5 \times 10^{-10}$  for BEPs less than the required  $10^{-2}$  at a length of 26 octets.

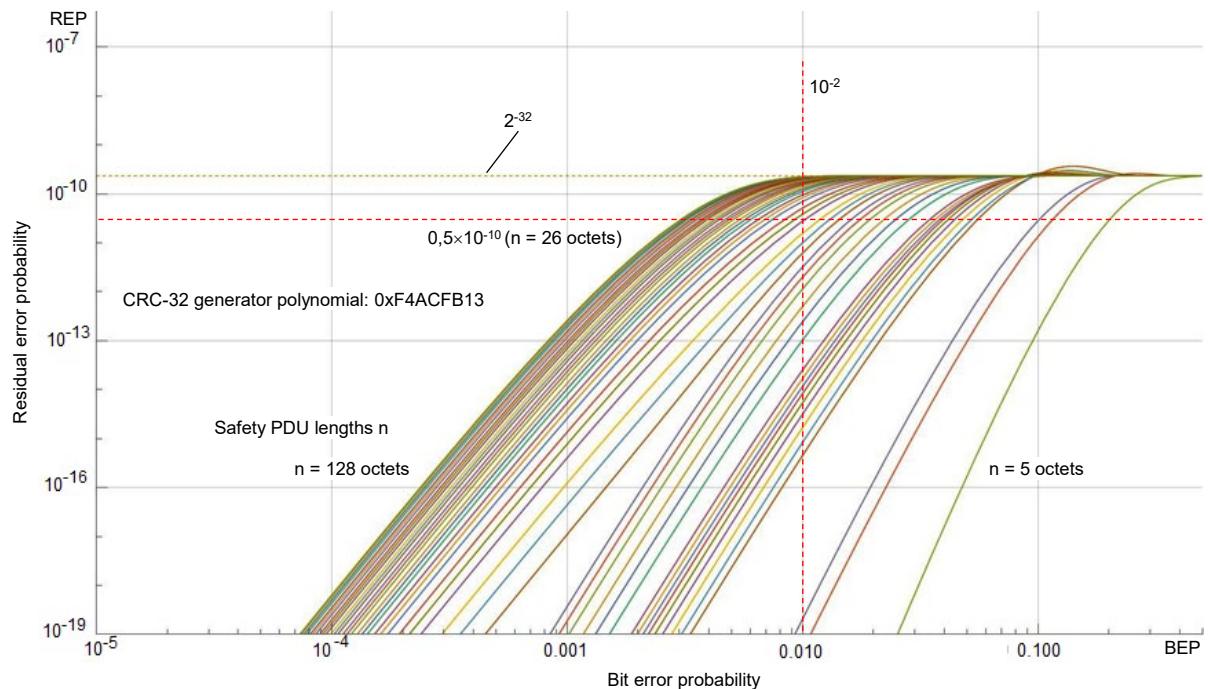

2200

2201

**Figure D.2 – CRC-32 generator polynomial**

2202 **N.3 Implementation considerations**

2203 **N.3.1 Overview**

2204 The designer has two choices to implement the CRC signature calculation. One is based on an  
 2205 algorithm using XOR and shift operations while the other is faster using octet shifts and lookup  
 2206 tables.

2207 **N.3.2 Bit shift algorithm (16 bit)**

2208 For the 16-bit CRC signature, the value 0x4EAB is used as the generator polynomial. The  
 2209 number of data bits may be odd or even. The value generated after the last octet corresponds  
 2210 to the CRC signature to be transferred.

2211 Figure D.3 shows the algorithm for the innermost loop in "C" programming language.

```
void crc16_calc(unsigned char x, unsigned long *r)
{
    int i;
    for (i = 1; i <= 8; i++)
        if ((bool)(*r & 0x8000) != (bool)(x & 0x80))
            /* XOR = 1 → shift and process polynomial */
            *r = (*r << 1) ^ 0x4EAB;
        else
            /* XOR = 0 → shift only */
            *r = *r << 1;
        x = x << 1;
    /* for */
}
```

2212 **Figure D.3 – Bit shift algorithm in "C" language (16 bit)**

2213 The variables used in Figure D.3 are specified in Table D.2.

2214 **Table D.2 – Definition of variables used in Figure D.3**

Variable	Definition
x	Data Octet
*r	Dereferenced pointer to CRC signature
i	Bitcount 1 to 8

2216

2217 **N.3.3 Lookup table (16 bit)**

2218 The corresponding function in "C" language is shown in Figure D.4. This function is faster.  
 2219 However, the lookup table requires memory space.

```
r = crctab16 [((r >> 8) ^ *q++) & 0xff] ^(r << 8)
```

2220 **Figure D.4 – CRC-16 signature calculation using a lookup table**

2221 The variables used in Figure D.4 are specified in Table D.3.

2222 **Table D.3 – Definition of variables used in Figure D.4**

Variable	Definition
r	CRC signature
q	q represents the pointer to the actual octet value requiring CRC calculation. After reading the value this pointer shall be incremented for the next octet via q++.

2224

2225 The function in Figure D.4 uses the lookup in Table D.4.

2226 **Table D.4 – Lookup table for CRC-16 signature calculation**

CRC-16 lookup table (0 to 255)							
0000	4EAB	9D56	D3FD	7407	3AAC	E951	A7FA
E80E	A6A5	7558	3BF3	9C09	D2A2	015F	4FF4
9EB7	D01C	03E1	4D4A	EAB0	A41B	77E6	394D
76B9	3812	EBEF	A544	02BE	4C15	9FE8	D143
73C5	3D6E	EE93	A038	07C2	4969	9A94	D43F
9BCB	D560	069D	4836	EFCC	A167	729A	3C31
ED72	A3D9	7024	3E8F	9975	D7DE	0423	4A88
057C	4BD7	982A	D681	717B	3FD0	EC2D	A286
E78A	A921	7ADC	3477	938D	DD26	0EDB	4070
0F84	412F	92D2	DC79	7B83	3528	E6D5	A87E
793D	3796	E46B	AAC0	0D3A	4391	906C	DEC7
9133	DF98	0C65	42CE	E534	AB9F	7862	36C9
944F	DAE4	0919	47B2	E048	AEE3	7D1E	33B5
7C41	32EA	E117	AFBC	0846	46ED	9510	DBBB
0AF8	4453	97AE	D905	7EFF	3054	E3A9	AD02
E2F6	AC5D	7FA0	310B	96F1	D85A	0BA7	450C
81BF	CF14	1CE9	5242	F5B8	BB13	68EE	2645
69B1	271A	F4E7	BA4C	1DB6	531D	80E0	CE4B
1F08	51A3	825E	CCF5	6B0F	25A4	F659	B8F2
F706	B9AD	6A50	24FB	8301	CDAA	1E57	50FC
F27A	BCD1	6F2C	2187	867D	C8D6	1B2B	5580
1A74	54DF	8722	C989	6E73	20D8	F325	BD8E
6CCD	2266	F19B	BF30	18CA	5661	859C	CB37
84C3	CA68	1995	573E	F0C4	BE6F	6D92	2339
6635	289E	FB63	B5C8	1232	5C99	8F64	C1CF
8E3B	C090	136D	5DC6	FA3C	B497	676A	29C1
F882	B629	65D4	2B7F	8C85	C22E	11D3	5F78
108C	5E27	8DDA	C371	648B	2A20	F9DD	B776
15F0	5B5B	88A6	C60D	61F7	2F5C	FCA1	B20A
FDFE	B355	60A8	2E03	89F9	C752	14AF	5A04
8B47	C5EC	1611	58BA	FF40	B1EB	6216	2CBD
6349	2DE2	FE1F	B0B4	174E	59E5	8A18	C4B3

NOTE This table contains 16-bit values in hexadecimal representation for each value (0 to 255) of the argument a in the function crctab16 [a]. The table should be used in ascending order from top left (0) to bottom right (255).

2227

2228 **N.3.4 Bit shift algorithm (32 bit)**

2229 For the 32-bit CRC signature, the value 0xF4ACFB13 is used as the generator polynomial. The  
2230 number of data bits may be odd or even. The value generated after the last octet corresponds  
2231 to the CRC signature to be transferred.

2232 Figure D.5 shows the algorithm for the innermost loop in "C" programming language.

2233

```

void crc32_calc(unsigned char x, unsigned long *r)
{
    int i;
    for (i = 1; i <= 8; i++)
        if ((bool)(*r & 0x80000000) != (bool)(x & 0x80))
            /* XOR = 1 → shift and process polynomial */
            *r = (*r << 1) ^ 0xF4ACFB13;
        else
            /* XOR = 0 → shift only */
            *r = *r << 1;
        x = x << 1;
    /* for */
}

```

2234

**Figure D.5 – Bit shift algorithm in "C" language (32 bit)**

2236 The variables used in Figure D.5 are specified in Table D.5.

**Table D.5 – Definition of variables used in Figure D.5**

Variable	Definition
x	Data Octet
*r	Dereferenced pointer to CRC signature
i	Bit count 1 to 8

2238

**N.3.5 Lookup table (32 bit)**2240 The corresponding function in "C" language is shown in Figure D.6. This function is faster.  
2241 However, the lookup table requires memory space.

```
r = crctab32 [((r >> 24) ^ *q++) & 0xff] ^(r << 8)
```

2242

**Figure D.6 – CRC-32 signature calculation using a lookup table**

2244 The variables used in Figure D.6 are specified in Table D.6.

**Table D.6 – Definition of variables used in Figure D.4**

Variable	Definition
r	CRC signature
q	q represents the pointer to the actual octet value requiring CRC calculation. After reading the value this pointer shall be incremented for the next octet via q++.

2246

2247 The function in Figure D.6 uses the lookup table in Table D.7.

**Table D.7 – Lookup table for CRC-32 signature calculation**

CRC-32 lookup table (0 to 255)							
00000000	F4ACFB13	1DF50D35	E959F626	3BEA1A6A	CF46E179	261F175F	D2B3EC4C
77D434D4	8378CFC7	6A2139E1	9E8DC2F2	4C3E2EBE	B892D5AD	51CB238B	A567D898
EFA869A8	1B0492BB	F25D649D	06F19F8E	D44273C2	20EE88D1	C9B77EF7	3D1B85E4
987C5D7C	6CD0A66F	85895049	7125AB5A	A3964716	573ABC05	BE634A23	4ACFB130
2BFC2843	DF50D350	36092576	C2A5DE65	10163229	E4BAC93A	0DE33F1C	F94FC40F
5C281C97	A884E784	41DD11A2	B571EAB1	67C206FD	936EFDEE	7A370BC8	8E9BF0DB
C45441EB	30F8BAF8	D9A14CDE	2D0DB7CD	FFBE5B81	0B12A092	E24B56B4	16E7ADA7

CRC-32 lookup table (0 to 255)							
B380753F	472C8E2C	AE75780A	5AD98319	886A6F55	7CC69446	959F6260	61339973
57F85086	A354AB95	4A0D5DB3	BEA1A6A0	6C124AEC	98BEB1FF	71E747D9	854BBCCA
202C6452	D4809F41	3DD96967	C9759274	1BC67E38	EF6A852B	0633730D	F29F881E
B850392E	4CFCC23D	A5A5341B	5109CF08	83BA2344	7716D857	9E4F2E71	6AE3D562
CF840DFA	3B28F6E9	D27100CF	26DDFBDC	F46E1790	00C2EC83	E99B1AA5	1D37E1B6
7C0478C5	88A883D6	61F175F0	955D8EE3	47EE62AF	B34299BC	5A1B6F9A	AEB79489
0BD04C11	FF7CB702	16254124	E289BA37	303A567B	C496AD68	2DCF5B4E	D963A05D
93AC116D	6700EA7E	8E591C58	7AF5E74B	A8460B07	5CEAF014	B5B30632	411FFD21
E47825B9	10D4DEAA	F98D288C	0D21D39F	DF923FD3	2B3EC4C0	C26732E6	36CBC9F5
AFF0A10C	5B5C5A1F	B205AC39	46A9572A	941ABB66	60B64075	89EFB653	7D434D40
D82495D8	2C886ECB	C5D198ED	317D63FE	E3CE8FB2	176274A1	FE3B8287	0A977994
4058C8A4	B4F433B7	5DADC591	A9013E82	7BB2D2CE	8F1E29DD	6647DFFB	92EB24E8
378CFC70	C3200763	2A79F145	DED50A56	0C66E61A	F8CA1D09	1193EB2F	E53F103C
840C894F	70A0725C	99F9847A	6D557F69	BFE69325	4B4A6836	A2139E10	56BF6503
F3D8BD9B	07744688	EE2DB0AE	1A814BBD	C832A7F1	3C9E5CE2	D5C7AAC4	216B51D7
6BA4E0E7	9F081BF4	7651EDD2	82FD16C1	504EFA8D	A4E2019E	4DBBF7B8	B9170CAB
1C70D433	E8DC2F20	0185D906	F5292215	279ACE59	D336354A	3A6FC36C	CEC3387F
F808F18A	0CA40A99	E5FDFCBF	115107AC	C3E2EBE0	374E10F3	DE17E6D5	2ABB1DC6
8FDCC55E	7B703E4D	9229C86B	66853378	B436DF34	409A2427	A9C3D201	5D6F2912
17A09822	E30C6331	0A559517	FEF96E04	2C4A8248	D8E6795B	31BF8F7D	C513746E
6074ACF6	94D857E5	7D81A1C3	892D5AD0	5B9EB69C	AF324D8F	466BBBA9	B2C740BA
D3F4D9C9	275822DA	CE01D4FC	3AAD2FEF	E81EC3A3	1CB238B0	F5EBCE96	01473585
A420ED1D	508C160E	B9D5E028	4D791B3B	9FCAF777	6B660C64	823FFA42	76930151
3C5CB061	C8F04B72	21A9BD54	D5054647	07B6AA0B	F31A5118	1A43A73E	EEE5C2D
4B8884B5	BF247FA6	567D8980	A2D17293	70629EDF	84CE65CC	6D9793EA	993B68F9

NOTE This table contains 32-bit values in hexadecimal representation for each value (0 to 255) of the argument a in the function crctab32 [a]. The table should be used in ascending order from top left (0) to bottom right (255).

2249

### 2250 N.3.6 Seed values

2251 The algorithm for example in Figure D.3 does not mention explicitly any initial value for the CRC  
 2252 signature variable in "\*r". It is implicitly assumed to be "0" by default. This initial value is  
 2253 sometimes called "seed value" in literature.

2254 In 11.4.7 a seed value of "1" is required for the cyclic data exchange of safety PDUs. The reason  
 2255 for that is the possibility for the FS-PDout or FS-PDin data to become completely "0". Since it  
 2256 is a property of CRC-signatures for leading zeros in data strings not to be secured by CRC  
 2257 signatures whenever the seed value is "0", the requirement in 11.4.6 is justified. Any value  
 2258 instead of "0" could be used. However, a "1" is sufficient and faster since all the operations then  
 2259 are shifting and only the last one consists of shifting and XOR processing.

2260 In A.2.3, A.2.9, A.2.7, E.5.1 and E.5.6 , the seed value can be "0" since there are no leading  
 2261 zeros within the data strings.

2262 Publicly available CRC signature calculators can be found in [14].

### 2263 N.3.7 Octet order for CRC calculation

2264 The order of octets for the CRC calculation of the SPDU shall start with the seed value followed  
 2265 by all other octets in the transmission order (see 3.5.2, Figure C.2, and Figure C.3).

2266  
2267                   **Annex O**  
2268                   (normative)

2269                   **IODD extensions**

2270

2271                   **O.1 General**

2272       The IODD of FS-Devices requires extensions for particular FSP parameters and a securing  
2273       mechanism to protect the content of IODD files from being falsified as mentioned in 11.7.1.

2274       In addition, some of the parameters specified in IEC 61131-9 shall be mandatory instead of  
2275       optional for this SDCL extension/profile (see E.3).

2276                   **O.2 Schema**

2277       There are no extensions required to the existing IODD schema.

2278       NOTE The IODD schema is outside the scope of IEC 61131-9. It is described in [15].

2279                   **O.3 IODD constraints**

2280                   **O.3.1 General rules**

2281       Basis for the IODD in SDCL-FS are the definitions of the Common Profile in [16].

2282       All parameters refer to IEC 61131-9. As a general rule, all parameters with Read/Write (R/W)  
2283       access shall provide a default value within the IODD (for FSP parameters see E.5.2).

2284                   **O.3.2 Description of the IODD structure**

2285       The structure of the IODD of an FS-Device is defined within the XML snippet file "IODD-  
2286       Snippets-IOLS\_V1.1.4.xml". The following XML code shows the content of this file:

```

2287 <?xml version="1.0" encoding="UTF-8"?>
2288 <IODDProfileDefinitions xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
2289   xmlns="http://www.io-link.com/IODD/2010/10">
2290   <DocumentInfo version="V1.1.4" releaseDate="2024-09-10" copyright="Copyright 2024, IO-Link
2291   Community"/>
2292   <SupportedProfiles profileCharacteristic="16385" profileClassName="IO-Link Safety"
2293   profilePrefixes="FSP, FST" reservedIndexRange="16896..16898, 16912, 16914..16916"
2294   reservedEvents="45056..45066" requiredProfile="16384">
2295     <ProfileVariant id="PR_IOLS" profileId="16385" name="IO-Link Safety"/>
2296   </SupportedProfiles>
2297   <DatatypeCollection>
2298     <Datatype id="D_FSP_Authenticity" xsi:type="RecordT" bitLength="88"
2299     subindexAccessSupported="false">
2300       <RecordItem subindex="1" bitOffset="56">
2301         <SimpleDatatype xsi:type="UIntegerT" bitLength="32"/>
2302         <Name textId="TN_V_FSP_Authenticity_1"/>
2303         <Description textId="TD_V_FSP_Authenticity_1"/>
2304       </RecordItem>
2305       <RecordItem subindex="2" bitOffset="24">
2306         <SimpleDatatype xsi:type="UIntegerT" bitLength="32"/>
2307         <Name textId="TN_V_FSP_Authenticity_2"/>
2308         <Description textId="TD_V_FSP_Authenticity_2"/>
2309       </RecordItem>
2310       <RecordItem subindex="3" bitOffset="16">
2311         <SimpleDatatype xsi:type="UIntegerT" bitLength="8"/>
2312         <Name textId="TN_V_FSP_Port"/>
2313         <Description textId="TD_V_FSP_Port"/>
2314       </RecordItem>
2315       <RecordItem subindex="4" bitOffset="0">
2316         <SimpleDatatype xsi:type="UIntegerT" bitLength="16"/>
2317         <Name textId="TN_V_FSP_AuthentCRC"/>
2318         <Description textId="TD_V_FSP_AuthentCRC"/>
2319       </RecordItem>
2320     </Datatype>
2321     <Datatype id="D_FSP_Protocol" xsi:type="RecordT" bitLength="96"
2322     subindexAccessSupported="false">
```

```
2323 <RecordItem subindex="1" bitOffset="88">
2324   <SimpleDatatype xsi:type="UIntegerT" bitLength="8">
2325     <SingleValue value="1"/>
2326   </SimpleDatatype>
2327   <Name textId="TN_V_FSP_ProtVersion"/>
2328   <Description textId="TD_V_FSP_ProtVersion"/>
2329 </RecordItem>
2330 <RecordItem subindex="2" bitOffset="80">
2331   <SimpleDatatype xsi:type="UIntegerT" bitLength="8">
2332     <!-- Which of these SingleValues is supported is device specific. Only one shall be
2333 referenced. -->
2334   <SingleValue value="1" checkElement="minOccurs 0">
2335     <Name textId="TN_SV_FSP_ProtMode_crc16"/>
2336   </SingleValue>
2337   <SingleValue value="2" checkElement="minOccurs 0">
2338     <Name textId="TN_SV_FSP_ProtMode_crc32"/>
2339   </SingleValue>
2340 </SimpleDatatype>
2341   <Name textId="TN_V_FSP_ProtMode"/>
2342   <Description textId="TD_V_FSP_ProtMode"/>
2343 </RecordItem>
2344 <RecordItem subindex="3" bitOffset="64">
2345   <SimpleDatatype xsi:type="UIntegerT" bitLength="16">
2346     <!-- Which ValueRange is supported is device specific (but the lowerValue must be >0)
2347 -->
2348   <ValueRange lowerValue="#tbd 1..65535 #" upperValue="#tbd 2..65535 #"/>
2349 </SimpleDatatype>
2350   <Name textId="TN_V_FSP_Watchdog"/>
2351   <Description textId="TD_V_FSP_Watchdog"/>
2352 </RecordItem>
2353 <RecordItem subindex="4" bitOffset="48">
2354   <SimpleDatatype xsi:type="UIntegerT" bitLength="16"/>
2355   <Name textId="TN_V_FSP_IO_StructCRC"/>
2356   <Description textId="TD_V_FSP_IO_StructCRC"/>
2357 </RecordItem>
2358 <RecordItem subindex="5" bitOffset="16">
2359   <SimpleDatatype xsi:type="UIntegerT" bitLength="32"/>
2360   <Name textId="TN_V_FSP_TechParCRC"/>
2361   <Description textId="TD_V_FSP_TechParCRC"/>
2362 </RecordItem>
2363 <RecordItem subindex="6" bitOffset="0">
2364   <SimpleDatatype xsi:type="UIntegerT" bitLength="16"/>
2365   <Name textId="TN_V_FSP_ProtParCRC"/>
2366   <Description textId="TD_V_FSP_ProtParCRC"/>
2367 </RecordItem>
2368 </Datatype>
2369 <Datatype id="D_FSP_PI" xsi:type="RecordT" bitLength="#tbd#"
2370 subindexAccessSupported="false">
2371   <!-- Technology specific safety process data have subindex 1..126 -->
2372   <!-- Datatype order for subindices is: boolean, integer16, integer32 -->
2373   <!-- Boolean array -->
2374   <!-- There may be no gaps between the booleans, but the last octet may contain less than
2375 eight booleans. -->
2376   <RecordItem subindex="#tbd 1..126 #" bitOffset="#tbd#" checkElement="minOccurs 0">
2377     <SimpleDatatype xsi:type="BooleanT">
2378       <SingleValue value="false" checkElement="minOccurs 0">
2379         <Name textId="TN_SV_FST_" checkAttributes="startsWith textId"/>
2380       </SingleValue>
2381       <SingleValue value="true" checkElement="minOccurs 0">
2382         <Name textId="TN_SV_FST_" checkAttributes="startsWith textId"/>
2383       </SingleValue>
2384     </SimpleDatatype>
2385     <Name textId="TN_V_FST_" checkAttributes="startsWith textId"/>
2386     <Description textId="TD_V_FST_" checkAttributes="startsWith textId"/>
2387   </RecordItem>
2388   <!-- Integer16 values -->
2389   <!-- Integer values always are aligned to byte borders. -->
2390   <RecordItem subindex="#tbd 1..126 #" bitOffset="#tbd#" checkElement="minOccurs 0">
2391     <SimpleDatatype xsi:type="IntegerT" bitLength="16">
2392       <SingleValue value="#tbd#" checkElement="minOccurs 0">
2393         <Name textId="TN_SV_FST_" checkAttributes="startsWith textId"/>
2394       </SingleValue>
2395       <ValueRange lowerValue="#tbd#" upperValue="#tbd#" checkElement="minOccurs 0"/>
2396     </SimpleDatatype>
2397     <Name textId="TN_V_FST_" checkAttributes="startsWith textId"/>
2398     <Description textId="TD_V_FST_" checkAttributes="startsWith textId"/>
2399   </RecordItem>
2400   <!-- Integer32 values -->
```

```

2401    <!-- Integer values always are aligned to byte borders. -->
2402    <RecordItem subindex="#tbd 1..126 #" bitOffset="#tbd#" checkElement="minOccurs 0">
2403        <SimpleDatatype xsi:type="IntegerT" bitLength="32">
2404            <SingleValue value="#tbd#" checkElement="minOccurs 0">
2405                <Name textId="TN_SV_FST_" checkAttributes="startsWith textId"/>
2406            </SingleValue>
2407            <ValueRange lowerValue="#tbd#" upperValue="#tbd#" checkElement="minOccurs 0"/>
2408        </SimpleDatatype>
2409        <Name textId="TN_V_FST_" checkAttributes="startsWith textId"/>
2410            <Description textId="TD_V_FST_" checkAttributes="startsWith textId"/>
2411    </RecordItem>
2412    <!-- Safety Code has fixed subindex 127 -->
2413    <RecordItem subindex="127" bitOffset="#tbd#">
2414        <SimpleDatatype xsi:type="OctetStringT" fixedLength="#tbd 4, 6 #"/>
2415        <Name textId="TN_V_FSP_SafetyCode"/>
2416        <Description textId="TD_V_FSP_SafetyCode"/>
2417    </RecordItem>
2418    <!-- Non-safety process data has subindex 128..255 -->
2419    <RecordItem subindex="#tbd 128..255 #" bitOffset="#tbd#" checkElement="minOccurs 0">
2420        <DatatypeRef datatypeId="D_" checkElement="minOccurs 0" checkAttributes="startsWith
2421 datatypeId"/>
2422        <SimpleDatatype xsi:type="any" checkElement="minOccurs 0" checkAttributes="option
2423 bitLength, option fixedLength">
2424            <SingleValue value="false" checkElement="minOccurs 0">
2425                <Name textId="TN_SV_" checkAttributes="startsWith textId"/>
2426            </SingleValue>
2427            <ValueRange lowerValue="#tbd#" upperValue="#tbd#" checkElement="minOccurs 0"/>
2428        </SimpleDatatype>
2429        <Name textId="TN_V_" checkAttributes="startsWith textId"/>
2430            <Description textId="TD_V_" checkAttributes="startsWith textId"/>
2431    </RecordItem>
2432 </Datatype>
2433 <Datatype id="D_FSP_PO" xsi:type="RecordT" bitLength="#tbd#"
2434 subindexAccessSupported="false">
2435     <!-- Technology specific safety process data have subindex 1..126 -->
2436     <!-- Datatype order for subindices is: boolean, integer16, integer32 -->
2437     <!-- Boolean array -->
2438     <!-- There may be no gaps between the booleans, but the last octet may contain less than
2439 eight booleans. -->
2440     <RecordItem subindex="#tbd 1..126 #" bitOffset="#tbd#" checkElement="minOccurs 0">
2441         <SimpleDatatype xsi:type="BooleanT">
2442             <SingleValue value="false" checkElement="minOccurs 0">
2443                 <Name textId="TN_SV_FST_" checkAttributes="startsWith textId"/>
2444             </SingleValue>
2445             <SingleValue value="true" checkElement="minOccurs 0">
2446                 <Name textId="TN_SV_FST_" checkAttributes="startsWith textId"/>
2447             </SingleValue>
2448         </SimpleDatatype>
2449         <Name textId="TN_V_FST_" checkAttributes="startsWith textId"/>
2450         <Description textId="TD_V_FST_" checkAttributes="startsWith textId"/>
2451     </RecordItem>
2452     <!-- Integer16 values -->
2453     <!-- Integer values always are aligned to byte borders. -->
2454     <RecordItem subindex="#tbd 1..126 #" bitOffset="#tbd#" checkElement="minOccurs 0">
2455         <SimpleDatatype xsi:type="IntegerT" bitLength="16">
2456             <SingleValue value="#tbd#" checkElement="minOccurs 0">
2457                 <Name textId="TN_SV_FST_" checkAttributes="startsWith textId"/>
2458             </SingleValue>
2459             <ValueRange lowerValue="#tbd#" upperValue="#tbd#" checkElement="minOccurs 0"/>
2460         </SimpleDatatype>
2461         <Name textId="TN_V_FST_" checkAttributes="startsWith textId"/>
2462         <Description textId="TD_V_FST_" checkAttributes="startsWith textId"/>
2463     </RecordItem>
2464     <!-- Integer32 values -->
2465     <!-- Integer values always are aligned to byte borders. -->
2466     <RecordItem subindex="#tbd 1..126 #" bitOffset="#tbd#" checkElement="minOccurs 0">
2467         <SimpleDatatype xsi:type="IntegerT" bitLength="32">
2468             <SingleValue value="#tbd#" checkElement="minOccurs 0">
2469                 <Name textId="TN_SV_FST_" checkAttributes="startsWith textId"/>
2470             </SingleValue>
2471             <ValueRange lowerValue="#tbd#" upperValue="#tbd#" checkElement="minOccurs 0"/>
2472         </SimpleDatatype>
2473         <Name textId="TN_V_FST_" checkAttributes="startsWith textId"/>
2474         <Description textId="TD_V_FST_" checkAttributes="startsWith textId"/>
2475     </RecordItem>
2476     <!-- Safety Code has fixed subindex 127 -->
2477     <RecordItem subindex="127" bitOffset="#tbd#">
2478         <SimpleDatatype xsi:type="OctetStringT" fixedLength="#tbd 4, 6 #"/>

```

```
2479      <Name textId="TN_V_FSP_SafetyCode"/>
2480      <Description textId="TD_V_FSP_SafetyCode"/>
2481    </RecordItem>
2482    <!-- Non-safety process data has subindex 128..255 -->
2483    <RecordItem subindex="#tbd 128..255 #" bitOffset="#tbd#" checkElement="minOccurs 0">
2484      <DatatypeRef datatypeId="D_" checkElement="minOccurs 0" checkAttributes="startsWith
datatypeId"/>
2485      <SimpleDatatype xsi:type="any" checkElement="minOccurs 0" checkAttributes="option
bitLength, option fixedLength">
2486        <SingleValue value="false" checkElement="minOccurs 0">
2487          <Name textId="TN_SV_" checkAttributes="startsWith textId"/>
2488        </SingleValue>
2489        <ValueRange lowerValue="#tbd#" upperValue="#tbd#" checkElement="minOccurs 0"/>
2490      </SimpleDatatype>
2491      <Name textId="TN_V_" checkAttributes="startsWith textId"/>
2492      <Description textId="TD_V_" checkAttributes="startsWith textId"/>
2493    </RecordItem>
2494  </Datatype>
2495  <!-- generic datatype as placeholder for manufacturer specific data types -->
2496  <Datatype id="D_" xsi:type="any" checkAttributes="option bitLength, option fixedLength,
option encoding, option subindexAccessSupported, option count, startsWith id"
checkElement="minOccurs 0, atLeast">
2497    </Datatype>
2498  </DatatypeCollection>
2499  <VariableCollection checkElement="atLeast">
2500    <StdVariableRef id="V_SystemCommand" checkElement="atLeast">
2501      <StdSingleValueRef value="128" checkElement="maxOccurs 0"/>
2502      <StdSingleValueRef value="130" checkElement="maxOccurs 0"/>
2503    </StdVariableRef>
2504    <StdVariableRef id="V_ProcessDataInput"/>
2505    <StdVariableRef id="V_ProcessDataOutput"/>
2506    <Variable index="16896" id="V_FSP_Authenticity" accessRights="rw"
profileConstraints="PR_IOLS">
2507      <DatatypeRef datatypeId="D_FSP_Authenticity"/>
2508      <RecordItemInfo subindex="1" defaultValue="0"/>
2509      <RecordItemInfo subindex="2" defaultValue="0"/>
2510      <RecordItemInfo subindex="3" defaultValue="0"/>
2511      <RecordItemInfo subindex="4" defaultValue="0"/>
2512      <Name textId="TN_V_FSP_Authenticity"/>
2513      <Description textId="TD_V_FSP_Authenticity"/>
2514    </Variable>
2515    <Variable index="16897" id="V_FSP_Protocol" accessRights="rw" profileConstraints="PR_IOLS">
2516      <DatatypeRef datatypeId="D_FSP_Protocol"/>
2517      <!-- FSP_ProtVersion: 1= valid -->
2518      <RecordItemInfo subindex="1" defaultValue="1"/>
2519      <!-- FSP_ProtMode: 1 (16 bit CRC) or 2 (32 bit CRC)= valid -->
2520      <RecordItemInfo subindex="2" defaultValue="#tbd 1, 2 #"/>
2521      <!-- FSP_Watchdog: 1 .. 65535 = valid -->
2522      <RecordItemInfo subindex="3" defaultValue="#tbd 1..65535 #"/>
2523      <!-- FSP_IO_StructCRC: = valid -->
2524      <RecordItemInfo subindex="4" defaultValue="#tbd 1..65535 #"/>
2525      <!-- FSP_TechParCRC: 0= invalid -->
2526      <RecordItemInfo subindex="5" defaultValue="#tbd 1..4294967295 #"/>
2527      <!-- FSP_ProtParCRC: 0= invalid -->
2528      <RecordItemInfo subindex="6" defaultValue="#tbd 1..65535 #"/>
2529      <Name textId="TN_V_FSP_Protocol"/>
2530      <Description textId="TD_V_FSP_Protocol"/>
2531    </Variable>
2532    <!-- Note: Variable FSP_VerifyRecord (index="16898") shall not be described in the IODD. -->
2533    <Variable id="V_FSP_TimeToReady" index="16912" accessRights="ro" defaultValue="#tbd 1..65535
#"
profileConstraints="PR_IOLS">
2534      <!-- resolution 10 ms -->
2535      <Datatype xsi:type="UIntegerT" bitLength="16"/>
2536      <Name textId="TN_V_FSP_TimeToReady"/>
2537      <Description textId="TD_V_FSP_TimeToReady"/>
2538    </Variable>
2539    <Variable id="V_FSP_MinShutDownTime" index="16913" accessRights="ro" defaultValue="#tbd
100..1000 #"
profileConstraints="PR_IOLS">
2540      <!-- resolution 10 ms -->
2541      <Datatype xsi:type="UIntegerT" bitLength="16"/>
2542      <Name textId="TN_V_FSP_MinShutDownTime"/>
2543      <Description textId="TD_V_FSP_MinShutDownTime"/>
2544    </Variable>
2545    <Variable id="V_FSP_ParamDescCRC" index="16914" accessRights="ro" defaultValue="#tbd#"
profileConstraints="PR_IOLS">
2546      <Datatype xsi:type="UIntegerT" bitLength="32"/>
2547      <Name textId="TN_V_FSP_ParamDescCRC"/>
2548      <Description textId="TD_V_FSP_ParamDescCRC"/>
```

```

2557     </Variable>
2558     <Variable id="V_FSP_WCDT" index="16915" accessRights="ro" defaultValue="#tbd 1..32767 #"
2559     profileConstraints="PR_IOLS">
2560         <!-- in ms -->
2561         <Datatype xsi:type="UIntegerT" bitLength="16"/>
2562         <Name textId="TN_V_FSP_WCDT"/>
2563         <Description textId="TD_V_FSP_WCDT"/>
2564     </Variable>
2565     <Variable id="V_FSP_OFDT" index="16916" accessRights="ro" defaultValue="#tbd 1..32767 #"
2566     profileConstraints="PR_IOLS">
2567         <!-- in ms -->
2568         <Datatype xsi:type="UIntegerT" bitLength="16"/>
2569         <Name textId="TN_V_FSP_OFDT"/>
2570         <Description textId="TD_V_FSP_OFDT"/>
2571     </Variable>
2572     </VariableCollection>
2573     <ProcessDataCollection>
2574         <ProcessData id="P_FSP_" checkElement="minOccurs 1" checkAttributes="startsWith id">
2575             <Condition variableId="#tbd#" subindex="#tbd#" value="#tbd#" checkElement="minOccurs 0"
2576             checkAttributes="option subindex"/>
2577             <ProcessDataIn id="PI_FSP_" bitLength="#tbd 32..256 #" checkAttributes="startsWith id">
2578                 <DatatypeRef datatypeId="D_FSP_PI"/>
2579                 <Name textId="TN_PI_FSP_" checkAttributes="startsWith textId"/>
2580             </ProcessDataIn>
2581             <ProcessDataOut id="PO_FSP_" bitLength="#tbd 32..256 #" checkAttributes="startsWith id">
2582                 <DatatypeRef datatypeId="D_FSP_PO"/>
2583                 <Name textId="TN_PO_FSP_" checkAttributes="startsWith textId"/>
2584             </ProcessDataOut>
2585         </ProcessData>
2586     </ProcessDataCollection>
2587     <EventCollection checkElement="atLeast">
2588         <Event code="45056" type="Notification">
2589             <Name textId="TN_EV_FSP_TransmissionError_CRCSignature"/>
2590         </Event>
2591         <Event code="45057" type="Notification">
2592             <Name textId="TN_EV_FSP_TransmissionError_Counter"/>
2593         </Event>
2594         <Event code="45058" type="Error">
2595             <Name textId="TN_EV_FSP_TransmissionError_Timeout"/>
2596         </Event>
2597         <Event code="45059" type="Error">
2598             <Name textId="TN_EV_FSP_UnexpectedAuthenticationCode"/>
2599         </Event>
2600         <Event code="45060" type="Error">
2601             <Name textId="TN_EV_FSP_UnexpectedAuthenticationPort"/>
2602         </Event>
2603         <Event code="45061" type="Error">
2604             <Name textId="TN_EV_FSP_Incorrect_AuthentCRC"/>
2605         </Event>
2606         <Event code="45062" type="Error">
2607             <Name textId="TN_EV_FSP_Incorrect_ProtParCRC"/>
2608         </Event>
2609         <Event code="45063" type="Error">
2610             <Name textId="TN_EV_FSP_Incorrect_TechParCRC"/>
2611         </Event>
2612         <Event code="45064" type="Error">
2613             <Name textId="TN_EV_FSP_Incorrect_IO_StructCRC"/>
2614         </Event>
2615         <Event code="45065" type="Error">
2616             <Name textId="TN_EV_FSP_WatchdogTimeOutOfSpec"/>
2617         </Event>
2618         <Event code="45066" type="Error">
2619             <Name textId="TN_EV_FSP_NoFSVerifyRecord"/>
2620         </Event>
2621     </EventCollection>
2622     <UserInterface checkElement="atLeast">
2623         <ProcessDataRefCollection checkElement="atLeast">
2624             <ProcessDataRef processDataId="PI_FSP_" checkElement="atLeastSequence"
2625             checkAttributes="startsWith processDataId">
2626                 <!-- Space for technology specific functional safety PD Input Data-->
2627                 <ProcessDataRecordItemInfo subindex="#tbd 1..126 #" checkElement="minOccurs 0"
2628                 checkAttributes="option displayFormat, option offset, option gradient, option unitCode"/>
2629                 <!-- Safety Code -->
2630                 <ProcessDataRecordItemInfo subindex="127" displayFormat="Hex"/>
2631                 <!-- Space for technology specific non-safety PD Input Data-->
2632                 <ProcessDataRecordItemInfo subindex="#tbd 128..255 #" checkElement="minOccurs 0"
2633                 checkAttributes="option displayFormat, option offset, option gradient, option unitCode"/>
2634             </ProcessDataRef>

```

```
2635     <ProcessDataRef processDataId="PO_FSP_" checkElement="atLeastSequence"
2636     checkAttributes="startsWith processDataId">
2637         <!-- Space for technology specific functional safety PD Input Data-->
2638         <ProcessDataRecordItemInfo subindex="#tbd 1..126 #" checkElement="minOccurs 0"
2639     checkAttributes="option displayFormat, option offset, option gradient, option unitCode"/>
2640         <!-- Safety Code -->
2641         <ProcessDataRecordItemInfo subindex="127" displayFormat="Hex"/>
2642         <!-- Space for technology specific non-safety PD Input Data-->
2643         <ProcessDataRecordItemInfo subindex="#tbd 128..255 #" checkElement="minOccurs 0"
2644     checkAttributes="option displayFormat, option offset, option gradient, option unitCode"/>
2645     </ProcessDataRef>
2646 </ProcessDataRefCollection>
2647 <MenuCollection checkElement="atLeast">
2648     <Menu id="M_OR_Param" checkElement="atLeastSequence">
2649         <MenuRef menuId="M_OR_Param_" checkElement="minOccurs 0" checkAttributes="startsWith
2650 menuId"/>
2651         <MenuRef menuId="M_OR_FST_Param" checkElement="minOccurs 0"/>
2652         <MenuRef menuId="M_OR_FSP_Param"/>
2653         <MenuRef menuId="M_OMSR_FSP_Param_Aux"/>
2654     </Menu>
2655     <Menu id="M_MSR_Param" checkElement="atLeastSequence">
2656         <MenuRef menuId="M_MSR_Param_" checkElement="minOccurs 0" checkAttributes="startsWith
2657 menuId"/>
2658         <MenuRef menuId="M_MSR_FST_Param" checkElement="minOccurs 0"/>
2659         <MenuRef menuId="M_MSR_FSP_Param"/>
2660         <MenuRef menuId="M_OMSR_FSP_Param_Aux"/>
2661         <MenuRef menuId="M_MSR_CP_Param_GeneralSettings"/>
2662     </Menu>
2663     <Menu id="M_OR_FST_Param" contextConstraints="ParameterMenu" checkElement="minOccurs 0">
2664         <Name textId="TN_M_FST_Param"/>
2665         <MenuRef menuId="M_OR_FST_Param" checkElement="minOccurs 0" checkAttributes="startsWith
2666 menuId"/>
2667         <VariableRef variableId="V_FST_" accessRightRestriction="ro" checkElement="minOccurs 0"
2668     checkAttributes="startsWith variableId, option displayFormat, option offset, option gradient,
2669     option unitCode"/>
2670         <RecordItemRef variableId="V_FST_" subindex="#tbd#" accessRightRestriction="ro"
2671     checkElement="minOccurs 0" checkAttributes="startsWith variableId, option displayFormat, option
2672     offset, option gradient, option unitCode"/>
2673     </Menu>
2674     <Menu id="M_MSR_FST_Param" contextConstraints="ParameterMenu" checkElement="minOccurs 0">
2675         <Name textId="TN_M_FST_Param"/>
2676         <MenuRef menuId="M_MSR_FST_Param" checkElement="minOccurs 0" checkAttributes="startsWith
2677 menuId"/>
2678         <VariableRef variableId="V_FST_" checkElement="minOccurs 0" checkAttributes="startsWith
2679     variableId, option accessRightRestriction, option displayFormat, option offset, option gradient,
2680     option unitCode"/>
2681         <RecordItemRef variableId="V_FST_" subindex="#tbd#" checkElement="minOccurs 0"
2682     checkAttributes="startsWith variableId, option accessRightRestriction, option displayFormat,
2683     option offset, option gradient, option unitCode"/>
2684     </Menu>
2685     <Menu id="M_OR_FSP_Param" contextConstraints="ParameterMenu"
2686     checkElement="atLeastSequence">
2687         <Name textId="TN_M_FSP_Param"/>
2688         <RecordItemRef variableId="V_FSP_Authenticity" subindex="1"
2689     accessRightRestriction="ro"/>
2690         <RecordItemRef variableId="V_FSP_Authenticity" subindex="2"
2691     accessRightRestriction="ro"/>
2692         <RecordItemRef variableId="V_FSP_Authenticity" subindex="3"
2693     accessRightRestriction="ro"/>
2694         <RecordItemRef variableId="V_FSP_Authenticity" subindex="4"
2695     accessRightRestriction="ro"/>
2696         <RecordItemRef variableId="V_FSP_Protocol" subindex="1" accessRightRestriction="ro"/>
2697         <RecordItemRef variableId="V_FSP_Protocol" subindex="2" accessRightRestriction="ro"/>
2698         <RecordItemRef variableId="V_FSP_Protocol" subindex="3" accessRightRestriction="ro"
2699     displayFormat="Dec.0" offset="0.0" gradient="1.0" unitCode="1056"/>
2700         <RecordItemRef variableId="V_FSP_Protocol" subindex="4" accessRightRestriction="ro"/>
2701         <RecordItemRef variableId="V_FSP_Protocol" subindex="5" accessRightRestriction="ro"/>
2702         <RecordItemRef variableId="V_FSP_Protocol" subindex="6" accessRightRestriction="ro"/>
2703     </Menu>
2704     <Menu id="M_MSR_FSP_Param" contextConstraints="ParameterMenu">
2705         <Name textId="TN_M_FSP_Param"/>
2706         <RecordItemRef variableId="V_FSP_Authenticity" subindex="1"/>
2707         <RecordItemRef variableId="V_FSP_Authenticity" subindex="2"/>
2708         <RecordItemRef variableId="V_FSP_Authenticity" subindex="3"/>
2709         <RecordItemRef variableId="V_FSP_Authenticity" subindex="4"/>
2710         <RecordItemRef variableId="V_FSP_Protocol" subindex="1"/>
2711         <RecordItemRef variableId="V_FSP_Protocol" subindex="2"/>
```

```

2712      <RecordItemRef variableId="V_FSP_Protocol" subindex="3" displayFormat="Dec.0"
2713      offset="0.0" gradient="1.0" unitCode="1056"/>
2714      <RecordItemRef variableId="V_FSP_Protocol" subindex="4"/>
2715      <RecordItemRef variableId="V_FSP_Protocol" subindex="5"/>
2716      <RecordItemRef variableId="V_FSP_Protocol" subindex="6"/>
2717    </Menu>
2718    <Menu id="M_OMSR_FSP_Param_Aux" contextConstraints="ParameterMenu">
2719      <Name textId="TN_M_FSP_Param_Aux"/>
2720      <VariableRef variableId="V_FSP_TimeToReady" displayFormat="Dec.0" offset="0.0"
2721      gradient="10.0" unitCode="1056"/>
2722      <VariableRef variableId="V_FSP_MinShutDownTime" displayFormat="Dec.0" offset="0.0"
2723      gradient="10.0" unitCode="1056"/>
2724      <VariableRef variableId="V_FSP_WCDT" displayFormat="Dec.0" offset="0.0" gradient="1.0"
2725      unitCode="1056"/>
2726      <VariableRef variableId="V_FSP_OFDT" displayFormat="Dec.0" offset="0.0" gradient="1.0"
2727      unitCode="1056"/>
2728    </Menu>
2729    <Menu id="M_OMSR_Observe">
2730      <VariableRef variableId="V_ProcessDataInput" contextConstraints="ObservationMenu"/>
2731      <VariableRef variableId="V_ProcessDataOutput" contextConstraints="ObservationMenu"/>
2732    </Menu>
2733  </MenuCollection>
2734  <ObserverRoleMenuSet checkElement="atLeast">
2735    <ParameterMenu menuId="M_OR_Param"/>
2736    <ObservationMenu menuId="M_OMSR_Observe"/>
2737  </ObserverRoleMenuSet>
2738  <MaintenanceRoleMenuSet checkElement="atLeast">
2739    <ParameterMenu menuId="M_MSR_Param"/>
2740    <ObservationMenu menuId="M_OMSR_Observe"/>
2741  </MaintenanceRoleMenuSet>
2742  <SpecialistRoleMenuSet checkElement="atLeast">
2743    <ParameterMenu menuId="M_MSR_Param"/>
2744    <ObservationMenu menuId="M_OMSR_Observe"/>
2745  </SpecialistRoleMenuSet>
2746 </UserInterface>
2747 <ExternalTextCollection>
2748   <PrimaryLanguage xml:lang="en">
2749     <Text id="TN_PI_FSP_" value="PD Input" checkAttributes="startsWith id, startsWith value"/>
2750     <Text id="TN_PO_FSP_" value="PD Output" checkAttributes="startsWith id, startsWith
2751 value"/>
2752     <Text id="TN_V_FSP_SafetyCode" value="FS Safety Code"/>
2753     <Text id="TD_V_FSP_SafetyCode" value="Control/Status octet and CRC."/>
2754     <Text id="TN_V_FSP_Authenticity" value="Authenticity"/>
2755     <Text id="TD_V_FSP_Authenticity" value="Authenticity parameters."/>
2756     <Text id="TN_V_FSP_Authenticity_1" value="FSP_Authenticity_1"/>
2757     <Text id="TD_V_FSP_Authenticity_1" value=""A-Code"; from the upper level FSCP
2758 system."/>
2759     <Text id="TN_V_FSP_Authenticity_2" value="FSP_Authenticity_2"/>
2760     <Text id="TD_V_FSP_Authenticity_2" value="Extended "A-Code"; from the upper level
2761 FSCP system."/>
2762     <Text id="TN_V_FSP_Port" value="FSP_Port"/>
2763     <Text id="TD_V_FSP_Port" value="PortNumber identifying the particular FS-Device."/>
2764     <Text id="TN_V_FSP_AuthentCRC" value="FSP_AuthentCRC"/>
2765     <Text id="TD_V_FSP_AuthentCRC" value="CRC-16 across authenticity parameters."/>
2766     <Text id="TN_V_FSP_Protocol" value="Protocol"/>
2767     <Text id="TD_V_FSP_Protocol" value="Protocol parameters."/>
2768     <Text id="TN_V_FSP_ProtVersion" value="FSP_ProtVersion"/>
2769     <Text id="TD_V_FSP_ProtVersion" value="Protocol version (1=current version)."/>
2770     <Text id="TN_V_FSP_ProtMode" value="FSP_ProtMode"/>
2771     <Text id="TD_V_FSP_ProtMode" value="Protocol mode (1=16 bit CRC, 2=32 bit CRC)"/>
2772     <Text id="TN_SV_FSP_ProtMode_crc16" value="16 bit CRC" checkElement="minOccurs 0"/>
2773     <Text id="TN_SV_FSP_ProtMode_crc32" value="32 bit CRC" checkElement="minOccurs 0"/>
2774     <Text id="TN_V_FSP_Watchdog" value="FSP_Watchdog"/>
2775     <Text id="TD_V_FSP_Watchdog" value="Monitoring of IO update."/>
2776     <Text id="TN_V_FSP_IO_StructCRC" value="FSP_IO_StructCRC"/>
2777     <Text id="TD_V_FSP_IO_StructCRC" value="CRC-16 across IO structure description block."/>
2778     <Text id="TN_V_FSP_TechParCRC" value="FSP_TechParCRC"/>
2779     <Text id="TD_V_FSP_TechParCRC" value="Securing code across FST (technology specific
2780 parameter)."/>
2781     <Text id="TN_V_FSP_ProtParCRC" value="FSP_ProtParCRC"/>
2782     <Text id="TD_V_FSP_ProtParCRC" value="CRC-16 across protocol parameters"/>
2783     <Text id="TN_V_FSP_ParamDescCRC" value="FSP_ParamDescCRC"/>
2784     <Text id="TD_V_FSP_ParamDescCRC" value="CRC-32 signature securing authenticity, protocol,
2785 and FS I/O structure description within IODD."/>
2786     <Text id="TN_V_FSP_TimeToReady" value="Time To Ready"/>
2787     <Text id="TD_V_FSP_TimeToReady" value="The time that is required by the device after power
2788 on in order to be ready for communication."/>
2789     <Text id="TN_V_FSP_MinShutDownTime" value="Minimum shut down time"/>

```

```
2790     <Text id="TD_V_FSP_MinShutDownTime" value="Minimum time to wait after shut down of FS-  
2791 Device."/>  
2792     <Text id="TN_V_FSP_WCDT" value="Worst-case Delay Time"/>  
2793     <Text id="TD_V_FSP_WCDT" value="Time from triggering an FS-Device (sensor) until the  
2794 output shows a corresponding signal change or Process Data change. For an FS-Device (actuator)  
2795 it is the time from signal change or Process Data change to the actuator's safe state."/>  
2796     <Text id="TN_V_FSP_OFDT" value="One Fault Delay Time"/>  
2797     <Text id="TD_V_FSP_OFDT" value="Time from occurrence of a fault within the FS-Device to a  
2798 corresponding signal change or Process Data change"/>  
2799     <Text id="TN_EV_FSP_TransmissionError_CRCSignature" value="Transmission error (CRC  
2800 signature)"/>  
2801     <Text id="TN_EV_FSP_TransmissionError_Counter" value="Transmission error (Counter)"/>  
2802     <Text id="TN_EV_FSP_TransmissionError_Timeout" value="Transmission error (Timeout)"/>  
2803     <Text id="TN_EV_FSP_UnexpectedAuthenticationCode" value="Unexpected authentication code"/>  
2804     <Text id="TN_EV_FSP_UnexpectedAuthenticationPort" value="Unexpected authentication port"/>  
2805     <Text id="TN_EV_FSP_Incorrect_AuthentCRC" value="Incorrect FSP_AuthentCRC"/>  
2806     <Text id="TN_EV_FSP_Incorrect_ProtParCRC" value="Incorrect FSP_ProtParCRC"/>  
2807     <Text id="TN_EV_FSP_Incorrect_TechParCRC" value="Incorrect FSP_TechParCRC"/>  
2808     <Text id="TN_EV_FSP_Incorrect_IO_StructCRC" value="Incorrect FSP_IO_StructCRC"/>  
2809     <Text id="TN_EV_FSP_WatchdogTimeOutOfSpec" value="Watchdog time out of specification"/>  
2810     <Text id="TN_EV_FSP_NoFSVerifyRecord" value="No FS_VerifyRecord received"/>  
2811     <Text id="TN_M_FST_Param" value="FS Technology Parameter"/>  
2812     <Text id="TN_M_FSP_Param" value="FS Protocol Parameter"/>  
2813     <Text id="TN_M_FSP_Param_Aux" value="FS Auxiliary Parameter"/>  
2814     <!-- generic text as placeholder for manufacturer specific texts -->  
2815     <Text id="TN_SV_FST_" value="#tbd#" checkAttributes="startsWith id"  
2816 checkElement="minOccurs 0"/>  
2817     <!-- generic text as placeholder for manufacturer specific texts -->  
2818     <Text id="TN_V_FST_" value="#tbd#" checkAttributes="startsWith id" checkElement="minOccurs  
2819 0"/>  
2820     <!-- generic text as placeholder for manufacturer specific texts -->  
2821     <Text id="TD_V_FST_" value="#tbd#" checkAttributes="startsWith id" checkElement="minOccurs  
2822 0"/>  
2823     <!-- generic text as placeholder for manufacturer specific texts -->  
2824     <Text id="TN_SV_" value="#tbd#" checkAttributes="startsWith id" checkElement="minOccurs  
2825 0"/>  
2826     <!-- generic text as placeholder for manufacturer specific texts -->  
2827     <Text id="TN_V_" value="#tbd#" checkAttributes="startsWith id" checkElement="minOccurs  
2828 0"/>  
2829     <!-- generic text as placeholder for manufacturer specific texts -->  
2830     <Text id="TD_V_" value="#tbd#" checkAttributes="startsWith id" checkElement="minOccurs  
2831 0"/>  
2832     </PrimaryLanguage>  
2833     </ExternalTextCollection>  
2834 </IODDProfileDefinitions>  
2835
```

### 2836 O.3.3 Behaviour of "Reset" SystemCommands in SDCI-FS

2837 Table E.1 shows the specific behaviour of the "reset" SystemCommands in FS-Devices (see  
 2838 IEC 61131-9). None of these SystemCommands is accepted by the FS-Device in "armed" mode.

2839 **Table E.1 – Specific behavior of FS-Device "Reset" SystemCommands**

Command (hex)	Command (dec)	Command name	H/M/O	Definition
...				
0x80	128	Device reset	–	Not permitted for implementation in FS-Device
0x81	129	Application reset	M	Permitted in commissioning mode. Authenticity and Protocol parameters shall not be changed.
0x82	130	Restore factory settings	–	Not permitted for implementation in FS-Device
0x83	131	Back-to-box	M	This command shall only be effective whenever the parameter value of FSP_TechParCRC is "0" (commissioning phase)
...				
Key H = highly recommended; M = mandatory; O = optional				

### 2840 O.3.4 Profile Characteristic

2841 The identifier for the common profile SDCI-FS is 16 385 or 0x4001 (see E.5.8). The function  
 2842 class 0x8020 is reserved for future use.

### 2843 O.3.5 ProcessDataInput and ProcessDataOutput

2844 These variables shall be implemented. The sample IODD in E.5.8 shows details.

## 2845 O.4 IODD conventions

### 2846 O.4.1 Naming

2847 While this document and IEC 61131-9 use "parameter" for any data object of a Device and FS-  
 2848 Device, IODDs in [15] use "variable" instead and thus all those data objects are indicated via  
 2849 the prefix "V\_". The following rules apply:

- 2850 1) Naming of non-safety parameters shall be "V\_xxx". Prefixes "V\_FSP", "V\_FST" shall be  
 2851 omitted for FS-Devices.
- 2852 2) Naming of FST technology safety parameters shall be "V\_FST\_xxx".
- 2853 3) Naming of FSP safety parameters shall be "V\_FSP\_xxx".

2854 These naming conventions shall only be used for SDCI-FS.

### 2855 O.4.2 Process Data (PD)

2856 The following rules apply for Process Data:

- 2857 1) PDin and PDout shall be described as record.
- 2858 4) Subindices shall be used within the records to differentiate between safety PD and non-  
 2859 safety PD.
- 2860 5) Subindices 1 to 126 shall be used to describe safety PD starting with the highest bit  
 2861 offset.
- 2862 6) Safety Code (see C.5) shall not be described in detail within the IODD. However,  
 2863 Subindex 127 shall be used to describe the Safety Code by means of an OctetStringT  
 2864 (4 or 6 octets) as a dummy to indicate the length of the Safety Code.
- 2865 7) Subindices 128 to 255 shall be used to describe non-safety PD.
- 2866 8) Multiple PD structure definitions selected by conditions are not permitted. This does not  
 2867 impact switching of the user interface to display scaling and units, e.g. °C and °F via  
 2868 conditions.

**O.4.3 IODD conventions for user interface**

The following rules apply for user interface:

- 2871 1) The IODD shall contain different headlines (menu IDs) for the parameter block types "FS  
2872 Technology", "FS Protocol", and "FS Auxiliary" in this order.
- 2873 2) FS Technology parameters shall only be referenced in menus marked with the menu ID  
2874 prefix M\_xxx\_FST.
- 2875 3) FS Protocol parameters shall only be referenced in menus marked with the menu ID  
2876 prefix M\_xxx\_FSP.
- 2877 4) NSR parameters shall not be referenced in menus containing FS parameters.
- 2878 5) The prefixes "FSP" and "FST" shall only be used for FS variables. Corresponding menus  
2879 shall be colored in yellow.
- 2880 6) User roles are "Observer", "Maintenance", "Specialist". The menus are organized for the  
2881 "Observer" role (prefix OR) and the combined maintenance and specialist role (prefix  
2882 MSR). Menus covering all user roles are marked with the prefix OMSR. The menu IDs  
2883 shall be structured and named as follows:

2884     M\_OR\_FST\_Param  
2885     M\_MSR\_FST\_Param  
2886     M\_OR\_FSP\_Param  
2887     M\_MSR\_FSP\_Param  
2888     M\_OMSR\_FSP\_Param\_Aux  
2889

**O.4.4 Master Tool features**

2891 The following rules on how to present the IODD to the user are highly recommended:

- 2892 1) IODD interpreter in Master Tools should show headlines not only for PDin and PDout  
2893 but also for SR and NSR PD. These headlines should use yellow colors.
- 2894 2) In case of PD observation via ISDU access the variable names should be the same as  
2895 with cyclic PDs.

**O.5 Securing****O.5.1 General**

2898 An IODD-based non-safety viewer calculates the 32-bit CRC signature across the FSP  
2899 parameter description within the IODD. The algorithm for the calculation is shown in this Annex.  
2900 The safety-related interpreter of the FS-Master Tool checks the correctness of the imported  
2901 IODD data. Parameter names associated to Index/Subindex are known in the interpreter and  
2902 can be checked in a safe manner.

2903 An IODD checker is not safety-related and thus not sufficient.

2904 Only one IODD per DeviceID is permitted. A particular FS-Device (hardware) can have two  
2905 DeviceIDs for example a current DeviceID and a DeviceID of a previous software version.

2906 Figure E.1 shows the algorithm to build the FSP\_ParamDescCRC signature. The algorithm shall  
2907 be used across the Authenticity and the Protocol block (see Table A.1). A seed value "0" shall  
2908 be used (see D.3.6).

1. General rule: All numerical values are serialized in **big-endian octet order** (most significant octet first).
2. Serialize the **Index** (16-bit unsigned integer) of the FS parameter.
3. Serialize the **bitLength** (16-bit unsigned integer) of the RecordT.
4. Sort the **RecordItems** in ascending order by Subindex.
5. For each **RecordItem** (including the last one) serialize:
  - a) The **Subindex** (8-bit unsigned integer)
  - b) The **bitOffset** (16-bit unsigned integer)
  - c) The **Datatype** (8-bit unsigned integer): 1 = UIntegerT(8), 2 = UIntegerT(16), 3 = UIntegerT(32)
  - d) If and only if a **DefaultValue** is given in the IODD: The DefaultValue (8/16/32 bit unsigned integer according to data type).
  - e) If and only if **SingleValues** or a **ValueRange** is given in the IODD: The allowed values. A list of SingleValues is serialized as a sequence of these values, in ascending order. A ValueRange is serialized as the sequence of the minimum and maximum value. Whether SingleValues and/or a ValueRange are allowed depends on the specific RecordItem. See Table E.4.
6. Calculate the 4-octet CRC across the octet stream using the CRC polynomial 0xF4ACFB13.

2909

### Figure E.1 – Algorithm to build the FSP parameter CRC signatures

#### O.5.2 DefaultValues for FSP

The DefaultValues for FSP\_Authenticity1/2, FSP\_Port, FSP\_AuthentCRC shall be "0". The DefaultValues for FSP\_TechParCRC and FSP\_ProtParCRC shall be "Back-To-Box" values. Table E.2 demonstrates the user actions to replace the default values by actual values.

2915 **Table E.2 – User actions to replace DefaultValues**

Parameter	User actions
FSP_Authenticity1/2	During commissioning, the Authenticity values can be acquired from the gateway and displayed by the Master Tool. SCL will not start with the default value.
FSP_Port	The user shall replace the default "0" by an allowed number with the help of the Master Tool during commissioning. SCL will not start with the default value.
FSP_AuthentCRC	Master Tool calculates this CRC signature
FSP_TechParCRC	The user parameterizes the FS-Device during commissioning or maintenance and uses a Dedicated Tool to calculate the actual value (see 11.7.8 and 11.7.9)
FSP_ProtParCRC	Master Tool calculates this CRC signature

2916

#### O.5.3 FSP\_Authenticity

2918 The values of the authenticity parameters cannot be defined within the IODD. They are  
2919 maintained by the FS-Master Tool.

#### O.5.4 FSP\_Protocol

2921 The limited variability of the protocol parameters requires the securing mechanism specified in  
2922 E.5.1.

2923 Table E.3 lists the RecordItems of FSP\_Protocol to be serialized.

2924 **Table E.3 – RecordItems of FSP\_Protocol where allowed values shall be serialized**

RecordItem	Serialized as
FSP_ProtVersion	List of 8-bit unsigned integer containing the allowed values, in ascending order
FSP_ProtMode	List of 8-bit unsigned integer containing the allowed values, in ascending order
FSP_Watchdog	Minimum value and maximum value of the contiguous range of allowed values
Any other	All values according to the data type are allowed, therefore nothing is serialized

2925

### O.5.5 FSP\_IO\_Description

The FSP\_IO\_Description parameters do not require a particular securing mechanism since these instance values are straight forward. The IODD designer can calculate the CRC signature already and place it into the IODD (see A.2.7).

### O.5.6 Sample serialization for FSP\_ParamDescCRC

Table E.4 shows a sample serialization for the calculation of the FSP\_ParamDescCRC signature in E.5.7. A seed value "0" shall be used since there are no leading zeros (see D.3.6).

**Table E.4 – Sample serialization for FSP\_ParamDescCRC**

Offset (hex)	Serialization (hex)	IODD items	Expected values (hex)
0000	42 00	index	42 00 ( $\neq 0$ )
0002	00 58	bitLength of index	00 58
0004	01	subindex	01 ( <i>Authenticity 1</i> )
0005	00 38	bitOffset	00 38
0007	03	xsi:type=UIntegerT, bitLength=32	03
0008	00 00 00 00	RecordItemInfo/@defaultValue	00 00 00 00
000C	02	subindex	02 ( <i>Authenticity 2</i> )
000D	00 18	bitOffset	00 18
000F	03	xsi:type=UIntegerT, bitLength=32	03
0010	00 00 00 00	RecordItemInfo/@defaultValue	00 00 00 00
0014	03	subindex	03 ( <i>Port</i> )
0015	00 10	bitOffset	00 10
0017	01	xsi:type=UIntegerT, bitLength=8	01
0018	00	RecordItemInfo/@defaultValue	00
0019	04	subindex	04 ( <i>AuthentCRC</i> )
001A	00 00	bitOffset	00 00
001C	02	xsi:type=UIntegerT, bitLength=16	02
001D	00 00	RecordItemInfo/@defaultValue	00 00 ( <i>dummy CRC</i> )
001F	42 01	index	42 01
0021	00 60	bitLength of index	00 60
0023	01	subindex	01 ( <i>ProtVersion</i> )
0024	00 58	bitOffset	00 58
0026	01	xsi:type=UIntegerT, bitLength=8	01
0027	01	RecordItemInfo/@defaultValue	01
0028	01	SingleValue/@value	01 ( <i>this document</i> )
0029	02	subindex	02 ( <i>ProtMode</i> )
002A	00 50	bitOffset	00 50
002C	01	xsi:type=UIntegerT, bitLength=8	01
002D	02	RecordItemInfo/@defaultValue	( <i>Vendor defined</i> )
002E	02	SingleValue/@value	02 ( <i>example 32 bit</i> )
002F	03	subindex	03 ( <i>Watchdog</i> )
0030	00 40	bitOffset	00 40
0032	02	xsi:type=UIntegerT, bitLength=16	02
0033	00 64	RecordItemInfo/@defaultValue	( <i>Vendor defined</i> )
0035	00 64	ValueRange/@lowerValue	00 64 ( <i>example: 100</i> )

Offset (hex)	Serialization (hex)	IODD items	Expected values (hex)
0037	13 88	ValueRange/@upperValue	13 88 ( <i>example: 5000</i> )
0039	04	subindex	04 ( <i>IO_StructCRC</i> )
003A	00 30	bitOffset	00 30
003C	02	xsi:type=UIntegerT, bitLength=16	02
003D	9A 28	RecordItemInfo/@defaultValue (see A.2.7)	( <i>Vendor defined</i> )
003F	05	subindex	05 ( <i>TechParCRC</i> )
0040	00 10	bitOffset	00 10
0042	03	xsi:type=UIntegerT, bitLength=32	03
0043	00 00 00 00	RecordItemInfo/@defaultValue	00 00 00 00 ( <i>dummy CRC</i> )
0047	06	subindex	06 ( <i>ProtParCRC</i> )
0048	00 00	bitOffset	00 00
004A	02	xsi:type=UIntegerT, bitLength=16	02
004B	00 00	RecordItemInfo/@defaultValue	00 00 ( <i>dummy CRC</i> )
Calculated 32-bit FSP_ParamDescCRC signature value: 1860635738			See E.5.7

2934

2935 The sample serialization in Table E.4 shows 77 octets to be secured via the CRC-32 polynomial  
 2936 listed in Table D.1. FS-Master Tool shall check the signature after import of the IODD. Only a  
 2937 few values are variable and "*Vendor defined*" (see offsets: 002D, 002E, 0033 to 0037, and  
 2938 003D). FS-Master Tool can compare the remaining values with preset values as an additional  
 2939 safety measure.

2940 The "*dummy CRC*" are placeholders to be replaced by the FS-Master Tool once the user  
 2941 assigned the actual parameter values.

#### 2942    O.5.7    FST and FSP parameters and Data Storage

2943 FST parameters shall be described within the IODD. A "packed" parameter transfer via one  
 2944 ISDU that is not described within the IODD is possible for Data Storage as long as the result in  
 2945 the Device/FS-Device is the same as with discrete ISDUs (see 11.7.6). A manufacturer/vendor  
 2946 is responsible to guarantee this behavior.

2947 FSP parameters (authenticity and protocol) shall be described within the IODD also and are  
 2948 part of Data Storage.

#### 2949    O.5.8    Sample IODD of an FS-Device

2950 The following XML code represents the sample code of an FS-Device IODD. It refers to the  
 2951 Process Data example in Figure A.2. A complete IODD file with name "IO-Link-Safety-V114-  
 2952 20240823-IODD1.1.xml" can be downloaded from the website referenced in Annex I.

2953 This sample IODD contains already calculated CRC signature values:

```

2954 <?xml version="1.0" encoding="utf-8"?>
2955 <IODevice xmlns="http://www.io-link.com/IODD/2010/10"
2956   xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" xsi:schemaLocation="http://www.io-
2957   link.com/IODD/2010/10 IODD1.1.xsd">
2958   <DocumentInfo version="V1.1.4" releaseDate="2024-08-23" copyright="Copyright 2024 IO-Link
2959   Community"/>
2960   <!-- Sample IODD for IODD specification V1.1.4 -->
2961   <ProfileHeader>
2962     <ProfileIdentification>IO Device Profile</ProfileIdentification>
2963     <ProfileRevision>1.1</ProfileRevision>
2964     <ProfileName>Device Profile for IO Devices</ProfileName>
2965     <ProfileSource>IO-Link Consortium</ProfileSource>
2966     <ProfileClassID>Device</ProfileClassID>
2967     <ISO15745Reference>
2968       <ISO15745Part>1</ISO15745Part>
2969       <ISO15745Edition>1</ISO15745Edition>
2970     <ProfileTechnology>IODD</ProfileTechnology>
```

```
2971     </ISO15745Reference>
2972   </ProfileHeader>
2973   <ProfileBody>
2974     <DeviceIdentity vendorId="65535" vendorName="IO-Link Community" deviceId="4609">
2975       <VendorText textId="T_VendorText"/>
2976       <VendorUrl textId="T_VendorUrl"/>
2977       <DeviceName textId="T_DeviceName"/>
2978       <DeviceFamily textId="T_DeviceFamily"/>
2979       <DeviceVariantCollection>
2980         <DeviceVariant productId="Safety114" deviceSymbol="IO-Link-Safety-pic.png"
2981           deviceIcon="IO-Link-Safety-icon.png">
2982           <Name textId="TN_ProductName"/>
2983           <Description textId="TD_ProductDescr"/>
2984         </DeviceVariant>
2985       </DeviceVariantCollection>
2986     </DeviceIdentity>
2987     <DeviceFunction>
2988       <Features blockParameter="true" dataStorage="true" profileCharacteristic="16384 16385">
2989         <SupportedAccessLocks parameter="false" dataStorage="false"
2990           localParameterization="false" localUserInterface="false"/>
2991       </Features>
2992     <DatatypeCollection>
2993       <!-- ===== Process Data ===== -->
2994       <!-- ===== Datatype id="D_FSP_PI" xsi:type="RecordT" bitLength="112" -->
2995       <Datatype id="D_FSP_PI" xsi:type="RecordT" bitLength="112"
2996         subindexAccessSupported="false">
2997           <!-- Technology specific safety process data have subindex 1..126 -->
2998           <!-- Datatype order for subindices is: boolean, integer16, integer32 -->
2999           <!-- Boolean array -->
3000           <!-- There may be no gaps between the booleans, but the last octet may contain less
3001             than eight booleans. -->
3002           <RecordItem subindex="1" bitOffset="104">
3003             <SimpleDatatype xsi:type="BooleanT">
3004               <SingleValue value="false">
3005                 <Name textId="TN_SV_FST_X_State_inactive"/>
3006               </SingleValue>
3007               <SingleValue value="true">
3008                 <Name textId="TN_SV_FST_X_State_active"/>
3009               </SingleValue>
3010             </SimpleDatatype>
3011             <Name textId="TN_V_FST_X_State_1"/>
3012             <Description textId="TD_V_FST_X_State"/>
3013           </RecordItem>
3014           <RecordItem subindex="2" bitOffset="105">
3015             <SimpleDatatype xsi:type="BooleanT">
3016               <SingleValue value="false">
3017                 <Name textId="TN_SV_FST_X_State_inactive"/>
3018               </SingleValue>
3019               <SingleValue value="true">
3020                 <Name textId="TN_SV_FST_X_State_active"/>
3021               </SingleValue>
3022             </SimpleDatatype>
3023             <Name textId="TN_V_FST_X_State_2"/>
3024             <Description textId="TD_V_FST_X_State"/>
3025           </RecordItem>
3026           <RecordItem subindex="3" bitOffset="106">
3027             <SimpleDatatype xsi:type="BooleanT">
3028               <SingleValue value="false">
3029                 <Name textId="TN_SV_FST_X_State_inactive"/>
3030               </SingleValue>
3031               <SingleValue value="true">
3032                 <Name textId="TN_SV_FST_X_State_active"/>
3033               </SingleValue>
3034             </SimpleDatatype>
3035             <Name textId="TN_V_FST_X_State_3"/>
3036             <Description textId="TD_V_FST_X_State"/>
3037           </RecordItem>
3038           <RecordItem subindex="4" bitOffset="107">
3039             <SimpleDatatype xsi:type="BooleanT">
3040               <SingleValue value="false">
3041                 <Name textId="TN_SV_FST_X_State_inactive"/>
3042               </SingleValue>
3043               <SingleValue value="true">
3044                 <Name textId="TN_SV_FST_X_State_active"/>
3045               </SingleValue>
3046             </SimpleDatatype>
3047             <Name textId="TN_V_FST_X_State_4"/>
```

```
3049      <Description textId="TD_V_FST_X_State"/>
3050  </RecordItem>
3051  <RecordItem subindex="5" bitOffset="108">
3052    <SimpleDatatype xsi:type="BooleanT">
3053      <SingleValue value="false">
3054        <Name textId="TN_SV_FST_X_State_inactive"/>
3055      </SingleValue>
3056      <SingleValue value="true">
3057        <Name textId="TN_SV_FST_X_State_active"/>
3058      </SingleValue>
3059    </SimpleDatatype>
3060    <Name textId="TN_V_FST_X_State_5"/>
3061    <Description textId="TD_V_FST_X_State"/>
3062  </RecordItem>
3063  <RecordItem subindex="6" bitOffset="109">
3064    <SimpleDatatype xsi:type="BooleanT">
3065      <SingleValue value="false">
3066        <Name textId="TN_SV_FST_X_State_inactive"/>
3067      </SingleValue>
3068      <SingleValue value="true">
3069        <Name textId="TN_SV_FST_X_State_active"/>
3070      </SingleValue>
3071    </SimpleDatatype>
3072    <Name textId="TN_V_FST_X_State_6"/>
3073    <Description textId="TD_V_FST_X_State"/>
3074  </RecordItem>
3075  <RecordItem subindex="7" bitOffset="110">
3076    <SimpleDatatype xsi:type="BooleanT">
3077      <SingleValue value="false">
3078        <Name textId="TN_SV_FST_X_State_inactive"/>
3079      </SingleValue>
3080      <SingleValue value="true">
3081        <Name textId="TN_SV_FST_X_State_active"/>
3082      </SingleValue>
3083    </SimpleDatatype>
3084    <Name textId="TN_V_FST_X_State_7"/>
3085    <Description textId="TD_V_FST_X_State"/>
3086  </RecordItem>
3087  <RecordItem subindex="8" bitOffset="111">
3088    <SimpleDatatype xsi:type="BooleanT">
3089      <SingleValue value="false">
3090        <Name textId="TN_SV_FST_X_State_inactive"/>
3091      </SingleValue>
3092      <SingleValue value="true">
3093        <Name textId="TN_SV_FST_X_State_active"/>
3094      </SingleValue>
3095    </SimpleDatatype>
3096    <Name textId="TN_V_FST_X_State_8"/>
3097    <Description textId="TD_V_FST_X_State"/>
3098  </RecordItem>
3099  <RecordItem subindex="9" bitOffset="96">
3100    <SimpleDatatype xsi:type="BooleanT">
3101      <SingleValue value="false">
3102        <Name textId="TN_SV_FST_X_State_inactive"/>
3103      </SingleValue>
3104      <SingleValue value="true">
3105        <Name textId="TN_SV_FST_X_State_active"/>
3106      </SingleValue>
3107    </SimpleDatatype>
3108    <Name textId="TN_V_FST_X_State_9"/>
3109    <Description textId="TD_V_FST_X_State"/>
3110  </RecordItem>
3111  <RecordItem subindex="10" bitOffset="97">
3112    <SimpleDatatype xsi:type="BooleanT">
3113      <SingleValue value="false">
3114        <Name textId="TN_SV_FST_X_State_inactive"/>
3115      </SingleValue>
3116      <SingleValue value="true">
3117        <Name textId="TN_SV_FST_X_State_active"/>
3118      </SingleValue>
3119    </SimpleDatatype>
3120    <Name textId="TN_V_FST_X_State_10"/>
3121    <Description textId="TD_V_FST_X_State"/>
3122  </RecordItem>
3123  <RecordItem subindex="11" bitOffset="98">
3124    <SimpleDatatype xsi:type="BooleanT">
3125      <SingleValue value="false">
3126        <Name textId="TN_SV_FST_X_State_inactive"/>
```

```
3127      </SingleValue>
3128      <SingleValue value="true">
3129          <Name textId="TN_SV_FST_X_State_active"/>
3130      </SingleValue>
3131  </SimpleDatatype>
3132      <Name textId="TN_V_FST_X_State_11"/>
3133      <Description textId="TD_V_FST_X_State"/>
3134  </RecordItem>
3135  <RecordItem subindex="12" bitOffset="99">
3136      <SimpleDatatype xsi:type="BooleanT">
3137          <SingleValue value="false">
3138              <Name textId="TN_SV_FST_X_State_inactive"/>
3139          </SingleValue>
3140          <SingleValue value="true">
3141              <Name textId="TN_SV_FST_X_State_active"/>
3142          </SingleValue>
3143  </SimpleDatatype>
3144      <Name textId="TN_V_FST_X_State_12"/>
3145      <Description textId="TD_V_FST_X_State"/>
3146  </RecordItem>
3147  <RecordItem subindex="13" bitOffset="100">
3148      <SimpleDatatype xsi:type="BooleanT">
3149          <SingleValue value="false">
3150              <Name textId="TN_SV_FST_X_State_inactive"/>
3151          </SingleValue>
3152          <SingleValue value="true">
3153              <Name textId="TN_SV_FST_X_State_active"/>
3154          </SingleValue>
3155  </SimpleDatatype>
3156      <Name textId="TN_V_FST_X_State_13"/>
3157      <Description textId="TD_V_FST_X_State"/>
3158  </RecordItem>
3159  <!-- Integer16 values -->
3160  <!-- Integer values always are aligned to byte borders. -->
3161  <RecordItem subindex="14" bitOffset="80">
3162      <SimpleDatatype xsi:type="IntegerT" bitLength="16"/>
3163      <Name textId="TN_V_FST_X_Integer16Value"/>
3164      <Description textId="TD_V_FST_X_Integer16Value"/>
3165  </RecordItem>
3166  <!-- Safety Code has fixed subindex 127 -->
3167  <RecordItem subindex="127" bitOffset="32">
3168      <SimpleDatatype xsi:type="OctetStringT" fixedLength="6"/>
3169      <Name textId="TN_V_FSP_SafetyCode"/>
3170      <Description textId="TD_V_FSP_SafetyCode"/>
3171  </RecordItem>
3172  <!-- Non-safety process data has subindex 128..255 -->
3173  <RecordItem subindex="128" bitOffset="0">
3174      <SimpleDatatype xsi:type="UIntegerT" bitLength="32"/>
3175      <Name textId="TN_V_X_Revolutions"/>
3176      <Description textId="TD_V_X_Revolutions"/>
3177  </RecordItem>
3178  </Datatype>
3179  <Datatype id="D_FSP_PO" xsi:type="RecordT" bitLength="48"
3180 subindexAccessSupported="false">
3181      <!-- Technology specific safety process data have subindex 1..126 -->
3182      <!-- Datatype order for subindices is: boolean, integer16, integer32 -->
3183      <!-- Safety Code has fixed subindex 127 -->
3184  <RecordItem subindex="127" bitOffset="0">
3185      <SimpleDatatype xsi:type="OctetStringT" fixedLength="6"/>
3186      <Name textId="TN_V_FSP_SafetyCode"/>
3187      <Description textId="TD_V_FSP_SafetyCode"/>
3188  </RecordItem>
3189  <!-- Non-safety process data has subindex 128..255 -->
3190  </Datatype>
3191  <!-- ===== -->
3192  <!-- ===== IOL-S Authenticity Record ===== -->
3193  <!-- ===== -->
3194  <Datatype id="D_FSP_Authenticity" xsi:type="RecordT" bitLength="88"
3195 subindexAccessSupported="false">
3196      <RecordItem subindex="1" bitOffset="56">
3197          <SimpleDatatype xsi:type="UIntegerT" bitLength="32"/>
3198          <Name textId="TN_V_FSP_Authenticity_1"/>
3199          <Description textId="TD_V_FSP_Authenticity_1"/>
3200  </RecordItem>
3201  <RecordItem subindex="2" bitOffset="24">
3202      <SimpleDatatype xsi:type="UIntegerT" bitLength="32"/>
3203      <Name textId="TN_V_FSP_Authenticity_2"/>
3204      <Description textId="TD_V_FSP_Authenticity_2"/>
```

```

3205      </RecordItem>
3206      <RecordItem subindex="3" bitOffset="16">
3207          <SimpleDatatype xsi:type="UIntegerT" bitLength="8"/>
3208          <Name textId="TN_V_FSP_Port"/>
3209          <Description textId="TD_V_FSP_Port"/>
3210      </RecordItem>
3211      <RecordItem subindex="4" bitOffset="0">
3212          <SimpleDatatype xsi:type="UIntegerT" bitLength="16"/>
3213          <Name textId="TN_V_FSP_AuthentCRC"/>
3214          <Description textId="TD_V_FSP_AuthentCRC"/>
3215      </RecordItem>
3216      </Datatype>
3217      <!-- ===== -->
3218      <!-- ===== IOL-S Protocol Record ===== -->
3219      <!-- ===== -->
3220      <Datatype id="D_FSP_Protocol" xsi:type="RecordT" bitLength="96"
3221 subindexAccessSupported="false">
3222          <RecordItem subindex="1" bitOffset="88">
3223              <SimpleDatatype xsi:type="UIntegerT" bitLength="8">
3224                  <SingleValue value="1"/>
3225              </SimpleDatatype>
3226              <Name textId="TN_V_FSP_ProtVersion"/>
3227              <Description textId="TD_V_FSP_ProtVersion"/>
3228          </RecordItem>
3229          <RecordItem subindex="2" bitOffset="80">
3230              <SimpleDatatype xsi:type="UIntegerT" bitLength="8">
3231                  <!-- Which of these SingleValues is supported is device specific. Only one shall
3232 be referenced. -->
3233                  <!--SingleValue value="1">
3234                  <Name textId="TN_SV_FSP_ProtMode_crc16"/>
3235              </SingleValue-->
3236                  <SingleValue value="2">
3237                      <Name textId="TN_SV_FSP_ProtMode_crc32"/>
3238                  </SingleValue>
3239              </SimpleDatatype>
3240              <Name textId="TN_V_FSP_ProtMode"/>
3241              <Description textId="TD_V_FSP_ProtMode"/>
3242          </RecordItem>
3243          <RecordItem subindex="3" bitOffset="64">
3244              <SimpleDatatype xsi:type="UIntegerT" bitLength="16">
3245                  <!-- Which ValueRange is supported is device specific (but the lowerValue must be
3246 >0) -->
3247                  <ValueRange lowerValue="100" upperValue="5000"/>
3248              </SimpleDatatype>
3249              <Name textId="TN_V_FSP_Watchdog"/>
3250              <Description textId="TD_V_FSP_Watchdog"/>
3251          </RecordItem>
3252          <RecordItem subindex="4" bitOffset="48">
3253              <SimpleDatatype xsi:type="UIntegerT" bitLength="16"/>
3254              <Name textId="TN_V_FSP_IO_StructCRC"/>
3255              <Description textId="TD_V_FSP_IO_StructCRC"/>
3256          </RecordItem>
3257          <RecordItem subindex="5" bitOffset="16">
3258              <SimpleDatatype xsi:type="UIntegerT" bitLength="32"/>
3259              <Name textId="TN_V_FSP_TechParCRC"/>
3260              <Description textId="TD_V_FSP_TechParCRC"/>
3261          </RecordItem>
3262          <RecordItem subindex="6" bitOffset="0">
3263              <SimpleDatatype xsi:type="UIntegerT" bitLength="16"/>
3264              <Name textId="TN_V_FSP_ProtParCRC"/>
3265              <Description textId="TD_V_FSP_ProtParCRC"/>
3266          </RecordItem>
3267          </Datatype>
3268          <!-- ===== -->
3269          <!-- Device specific data types ===== -->
3270          <!-- ===== -->
3271      </DatatypeCollection>
3272      <VariableCollection>
3273          <StdVariableRef id="V_DirectParameters_1"/>
3274          <StdVariableRef id="V_SystemCommand">
3275              <StdSingleValueRef value="129"/>
3276              <StdSingleValueRef value="131"/>
3277          </StdVariableRef>
3278          <StdVariableRef id="V_VendorName" defaultValue="IO-Link Community"/>
3279          <StdVariableRef id="V_VendorText" defaultValue="http://www.io-link.com"/>
3280          <StdVariableRef id="V_ProductName" defaultValue="IO-Link Safety Device 114 - 01"/>
3281          <StdVariableRef id="V_ProductID" defaultValue="Safety114"/>

```

```
3282      <StdVariableRef id="V_ProductText" defaultValue="Sample IODD for a device with IO-Link  
3283 Safety"/>  
3284      <StdVariableRef id="V_SerialNumber"/>  
3285      <StdVariableRef id="V_HardwareRevision"/>  
3286      <StdVariableRef id="V_FirmwareRevision"/>  
3287      <StdVariableRef id="V_ApplicationSpecificTag" excludedFromDataStorage="false"  
3288 defaultValue="****"/>  
3289      <StdVariableRef id="V_DeviceStatus"/>  
3290      <StdVariableRef id="V_DetailedDeviceStatus" fixedLengthRestriction="4"/>  
3291      <StdVariableRef id="V_ProcessDataInput"/>  
3292      <StdVariableRef id="V_ProcessDataOutput"/>  
3293      <!-- ===== -->  
3294      <!-- Common Profile ===== -->  
3295      <!-- ===== -->  
3296      <Variable id="V_CP_FunctionTag" index="25" accessRights="rw"  
3297 excludedFromDataStorage="false" defaultValue="****">  
3298          <Datatype xsi:type="StringT" fixedLength="32" encoding="UTF-8"/>  
3299          <Name textId="TN_V_CP_FunctionTag"/>  
3300          <Description textId="TD_V_CP_FunctionTag"/>  
3301      </Variable>  
3302      <Variable id="V_CP_LocationTag" index="26" accessRights="rw"  
3303 excludedFromDataStorage="false" defaultValue="****">  
3304          <Datatype xsi:type="StringT" fixedLength="32" encoding="UTF-8"/>  
3305          <Name textId="TN_V_CP_LocationTag"/>  
3306          <Description textId="TD_V_CP_LocationTag"/>  
3307      </Variable>  
3308      <!-- ===== -->  
3309      <!-- IO-Link Safety Profile ===== -->  
3310      <!-- ===== -->  
3311      <Variable index="16896" id="V_FSP_Authenticity" accessRights="rw">  
3312          <DatatypeRef datatypeId="D_FSP_Authenticity"/>  
3313          <RecordItemInfo subindex="1" defaultValue="0"/>  
3314          <RecordItemInfo subindex="2" defaultValue="0"/>  
3315          <RecordItemInfo subindex="3" defaultValue="0"/>  
3316          <RecordItemInfo subindex="4" defaultValue="0"/>  
3317          <Name textId="TN_V_FSP_Authenticity"/>  
3318          <Description textId="TD_V_FSP_Authenticity"/>  
3319      </Variable>  
3320      <Variable index="16897" id="V_FSP_Protocol" accessRights="rw">  
3321          <DatatypeRef datatypeId="D_FSP_Protocol"/>  
3322          <!-- FSP_ProtVersion: 1= valid -->  
3323          <RecordItemInfo subindex="1" defaultValue="1"/>  
3324          <!-- FSP_ProtMode: 1 (16 bit CRC) or 2 (32 bit CRC)= valid -->  
3325          <RecordItemInfo subindex="2" defaultValue="2"/>  
3326          <!-- FSP_Watchdog: 1 .. 65535 = valid -->  
3327          <RecordItemInfo subindex="3" defaultValue="100"/>  
3328          <!-- FSP_IO_StructCRC: = valid -->  
3329          <RecordItemInfo subindex="4" defaultValue="39464"/>  
3330          <!-- FSP_TechParCRC: 0= invalid -->  
3331          <RecordItemInfo subindex="5" defaultValue="1005197930"/>  
3332          <!-- FSP_ProtParCRC: 0= invalid -->  
3333          <RecordItemInfo subindex="6" defaultValue="6123"/>  
3334          <Name textId="TN_V_FSP_Protocol"/>  
3335          <Description textId="TD_V_FSP_Protocol"/>  
3336      </Variable>  
3337      <!-- Note: Variable FSP_VerifyRecord (index="16898") shall not be describedin the IODD.  
3338 -->  
3339      <Variable id="V_FSP_TimeToReady" index="16912" accessRights="ro" defaultValue="10">  
3340          <!-- resolution 10 ms -->  
3341          <Datatype xsi:type="UIntegerT" bitLength="16"/>  
3342          <Name textId="TN_V_FSP_TimeToReady"/>  
3343          <Description textId="TD_V_FSP_TimeToReady"/>  
3344      </Variable>  
3345      <Variable id="V_FSP_MinShutDownTime" index="16913" accessRights="ro" defaultValue="100">  
3346          <!-- resolution 10 ms -->  
3347          <Datatype xsi:type="UIntegerT" bitLength="16"/>  
3348          <Name textId="TN_V_FSP_MinShutDownTime"/>  
3349          <Description textId="TD_V_FSP_MinShutDownTime"/>  
3350      </Variable>  
3351      <Variable id="V_FSP_ParamDescCRC" index="16914" accessRights="ro"  
3352 defaultValue="908490345">  
3353          <Datatype xsi:type="UIntegerT" bitLength="32"/>  
3354          <Name textId="TN_V_FSP_ParamDescCRC"/>  
3355          <Description textId="TD_V_FSP_ParamDescCRC"/>  
3356      </Variable>  
3357      <Variable id="V_FSP_WCDT" index="16915" accessRights="ro" defaultValue="10">  
3358          <!-- in ms -->  
3359          <Datatype xsi:type="UIntegerT" bitLength="16"/>
```

```

3360      <Name textId="TN_V_FSP_WCDT"/>
3361      <Description textId="TD_V_FSP_WCDT"/>
3362    </Variable>
3363    <Variable id="V_FSP_OFDT" index="16916" accessRights="ro" defaultValue="10">
3364      <!-- in ms -->
3365      <Datatype xsi:type="UIntegerT" bitLength="16"/>
3366      <Name textId="TN_V_FSP_OFDT"/>
3367      <Description textId="TD_V_FSP_OFDT"/>
3368    </Variable>
3369    <!-- ===== -->
3370    <!-- Device specific variables ===== -->
3371    <!-- ===== -->
3372    <!-- Non-Safety (Standard) Parameter example -->
3373    <Variable index="64" id="V_X_NonSafetyParameter" accessRights="rw" defaultValue="123">
3374      <Datatype xsi:type="IntegerT" bitLength="16"/>
3375      <Name textId="TN_V_X_NonSafetyParameter"/>
3376      <Description textId="TD_V_X_NonSafetyParameter"/>
3377    </Variable>
3378    <!-- FS Technology Parameter example -->
3379    <Variable index="65" id="V_FST_X_DiscrepancyTime" accessRights="rw" defaultValue="0">
3380      <Datatype xsi:type="UIntegerT" bitLength="16"/>
3381      <Name textId="TN_V_FST_X_DiscrepancyTime"/>
3382      <Description textId="TD_V_FST_X_DiscrepancyTime"/>
3383    </Variable>
3384    <Variable index="66" id="V_FST_X_Filter" accessRights="rw" defaultValue="4">
3385      <Datatype xsi:type="UIntegerT" bitLength="16"/>
3386      <Name textId="TN_V_FST_X_Filter"/>
3387      <Description textId="TD_V_FST_X_Filter"/>
3388    </Variable>
3389  </VariableCollection>
3390  <ProcessDataCollection>
3391    <ProcessData id="P_FSP_ProcessData">
3392      <ProcessDataIn id="PI_FSP_Pdin" bitLength="112">
3393        <DatatypeRef datatypeId="D_FSP_PI"/>
3394        <Name textId="TN_PI_FSP_Pdin"/>
3395      </ProcessDataIn>
3396      <ProcessDataOut id="PO_FSP_PDout" bitLength="48">
3397        <DatatypeRef datatypeId="D_FSP_PO"/>
3398        <Name textId="TN_PO_FSP_PDout"/>
3399      </ProcessDataOut>
3400    </ProcessData>
3401  </ProcessDataCollection>
3402  <EventCollection>
3403    <Event code="45056" type="Notification">
3404      <Name textId="TN_EV_FSP_TransmissionError_CRCSignature"/>
3405    </Event>
3406    <Event code="45057" type="Notification">
3407      <Name textId="TN_EV_FSP_TransmissionError_Counter"/>
3408    </Event>
3409    <Event code="45058" type="Error">
3410      <Name textId="TN_EV_FSP_TransmissionError_Timeout"/>
3411    </Event>
3412    <Event code="45059" type="Error">
3413      <Name textId="TN_EV_FSP_UnexpectedAuthenticationCode"/>
3414    </Event>
3415    <Event code="45060" type="Error">
3416      <Name textId="TN_EV_FSP_UnexpectedAuthenticationPort"/>
3417    </Event>
3418    <Event code="45061" type="Error">
3419      <Name textId="TN_EV_FSP_Incorrect_AuthentCRC"/>
3420    </Event>
3421    <Event code="45062" type="Error">
3422      <Name textId="TN_EV_FSP_Incorrect_ProtParCRC"/>
3423    </Event>
3424    <Event code="45063" type="Error">
3425      <Name textId="TN_EV_FSP_Incorrect_TechParCRC"/>
3426    </Event>
3427    <Event code="45064" type="Error">
3428      <Name textId="TN_EV_FSP_Incorrect_IO_StructCRC"/>
3429    </Event>
3430    <Event code="45065" type="Error">
3431      <Name textId="TN_EV_FSP_WatchdogTimeOutOfSpec"/>
3432    </Event>
3433    <Event code="45066" type="Error">
3434      <Name textId="TN_EV_FSP_NoFSVerifyRecord"/>
3435    </Event>
3436  </EventCollection>
3437  <UserInterface>
```

```
3438     <ProcessDataRefCollection>
3439         <ProcessDataRef processDataId="PI_FSP_PDin">
3440             <!-- Space for technology specific functional safety PD Input Data-->
3441             <ProcessDataRecordItemInfo subindex="1"/>
3442             <ProcessDataRecordItemInfo subindex="2"/>
3443             <ProcessDataRecordItemInfo subindex="3"/>
3444             <ProcessDataRecordItemInfo subindex="4"/>
3445             <ProcessDataRecordItemInfo subindex="5"/>
3446             <ProcessDataRecordItemInfo subindex="6"/>
3447             <ProcessDataRecordItemInfo subindex="7"/>
3448             <ProcessDataRecordItemInfo subindex="8"/>
3449             <ProcessDataRecordItemInfo subindex="9"/>
3450             <ProcessDataRecordItemInfo subindex="10"/>
3451             <ProcessDataRecordItemInfo subindex="11"/>
3452             <ProcessDataRecordItemInfo subindex="12"/>
3453             <ProcessDataRecordItemInfo subindex="13"/>
3454             <ProcessDataRecordItemInfo subindex="14" displayFormat="Dec.2" gradient="0.01"
3455             unitCode="1342"/>
3456             <!-- Safety Code -->
3457             <ProcessDataRecordItemInfo subindex="127" displayFormat="Hex"/>
3458             <!-- Space for technology specific non-safety PD Input Data-->
3459             <ProcessDataRecordItemInfo subindex="128" displayFormat="Dec.3" gradient="0.001"
3460             unitCode="1009"/>
3461         </ProcessDataRef>
3462         <ProcessDataRef processDataId="PO_FSP_PDout">
3463             <!-- Space for technology specific functional safety PD Output Data-->
3464             <!-- Safety Code -->
3465             <ProcessDataRecordItemInfo subindex="127" displayFormat="Hex"/>
3466             <!-- Space for technology specific non-safety PD Output Data-->
3467         </ProcessDataRef>
3468     </ProcessDataRefCollection>
3469     <MenuCollection>
3470         <Menu id="M_MSR_Ident">
3471             <VariableRef variableId="V_VendorName"/>
3472             <VariableRef variableId="V_VendorText"/>
3473             <VariableRef variableId="V_ProductName"/>
3474             <VariableRef variableId="V_ProductText"/>
3475             <VariableRef variableId="V_ProductID"/>
3476             <VariableRef variableId="V_SerialNumber"/>
3477             <VariableRef variableId="V_HardwareRevision"/>
3478             <VariableRef variableId="V_FirmwareRevision"/>
3479             <VariableRef variableId="V_ApplicationSpecificTag"/>
3480             <VariableRef variableId="V_CP_FunctionTag"/>
3481             <VariableRef variableId="V_CP_LocationTag"/>
3482         </Menu>
3483         <Menu id="M_OR_Ident">
3484             <VariableRef variableId="V_VendorName"/>
3485             <VariableRef variableId="V_VendorText"/>
3486             <VariableRef variableId="V_ProductName"/>
3487             <VariableRef variableId="V_ProductText"/>
3488             <VariableRef variableId="V_ProductID"/>
3489             <VariableRef variableId="V_SerialNumber"/>
3490             <VariableRef variableId="V_HardwareRevision"/>
3491             <VariableRef variableId="V_FirmwareRevision"/>
3492             <VariableRef variableId="V_ApplicationSpecificTag" accessRightRestriction="ro"/>
3493             <VariableRef variableId="V_CP_FunctionTag" accessRightRestriction="ro"/>
3494             <VariableRef variableId="V_CP_LocationTag" accessRightRestriction="ro"/>
3495         </Menu>
3496         <Menu id="M_OMSR_Observe">
3497             <VariableRef variableId="V_ProcessDataInput"/>
3498             <VariableRef variableId="V_ProcessDataOutput"/>
3499         </Menu>
3500         <Menu id="M_MSR_Param">
3501             <MenuRef menuId="M_MSR_Param_NonSafety"/>
3502             <MenuRef menuId="M_MSR_FST_Param"/>
3503             <MenuRef menuId="M_MSR_FSP_Param"/>
3504             <MenuRef menuId="M_OMSR_FSP_Param_Aux"/>
3505             <MenuRef menuId="M_MSR_CP_Param_GeneralSettings"/>
3506         </Menu>
3507         <Menu id="M_OR_Param">
3508             <MenuRef menuId="M_OR_Param_NonSafety"/>
3509             <MenuRef menuId="M_OR_FST_Param"/>
3510             <MenuRef menuId="M_OR_FSP_Param"/>
3511             <MenuRef menuId="M_OMSR_FSP_Param_Aux"/>
3512         </Menu>
3513         <Menu id="M_MSR_Param_NonSafety">
3514             <Name textId="TN_M_Param_NonSafety"/>
3515             <VariableRef variableId="V_X_NonSafetyParameter" unitCode="1056"/>
```

```

3516     </Menu>
3517     <Menu id="M_OR_Param_NonSafety">
3518         <Name textId="TN_M_Param_NonSafety"/>
3519         <VariableRef variableId="V_X_NonSafetyParameter" accessRightRestriction="ro"/>
3520     </Menu>
3521     <Menu id="M_MSR_FST_Param">
3522         <Name textId="TN_M_FST_Param"/>
3523         <VariableRef variableId="V_FST_X_DiscrepancyTime" unitCode="1056"/>
3524         <VariableRef variableId="V_FST_X_Filter" unitCode="1056"/>
3525     </Menu>
3526     <Menu id="M_OR_FST_Param">
3527         <Name textId="TN_M_FST_Param"/>
3528         <VariableRef variableId="V_FST_X_DiscrepancyTime" accessRightRestriction="ro"
3529             unitCode="1056"/>
3530         <VariableRef variableId="V_FST_X_Filter" accessRightRestriction="ro"
3531             unitCode="1056"/>
3532     </Menu>
3533     <Menu id="M_MSR_FSP_Param">
3534         <Name textId="TN_M_FSP_Param"/>
3535         <RecordItemRef variableId="V_FSP_Authenticity" subindex="1"/>
3536         <RecordItemRef variableId="V_FSP_Authenticity" subindex="2"/>
3537         <RecordItemRef variableId="V_FSP_Authenticity" subindex="3"/>
3538         <RecordItemRef variableId="V_FSP_Authenticity" subindex="4"/>
3539         <RecordItemRef variableId="V_FSP_Protocol" subindex="1"/>
3540         <RecordItemRef variableId="V_FSP_Protocol" subindex="2"/>
3541         <RecordItemRef variableId="V_FSP_Protocol" subindex="3" displayFormat="Dec.0"
3542             offset="0.0" gradient="1.0" unitCode="1056"/>
3543         <RecordItemRef variableId="V_FSP_Protocol" subindex="4"/>
3544         <RecordItemRef variableId="V_FSP_Protocol" subindex="5"/>
3545         <RecordItemRef variableId="V_FSP_Protocol" subindex="6"/>
3546     </Menu>
3547     <Menu id="M_OR_FSP_Param">
3548         <Name textId="TN_M_FSP_Param"/>
3549         <RecordItemRef variableId="V_FSP_Authenticity" subindex="1"
3550             accessRightRestriction="ro"/>
3551         <RecordItemRef variableId="V_FSP_Authenticity" subindex="2"
3552             accessRightRestriction="ro"/>
3553         <RecordItemRef variableId="V_FSP_Authenticity" subindex="3"
3554             accessRightRestriction="ro"/>
3555         <RecordItemRef variableId="V_FSP_Authenticity" subindex="4"
3556             accessRightRestriction="ro"/>
3557         <RecordItemRef variableId="V_FSP_Protocol" subindex="1"
3558             accessRightRestriction="ro"/>
3559         <RecordItemRef variableId="V_FSP_Protocol" subindex="2"
3560             accessRightRestriction="ro"/>
3561         <RecordItemRef variableId="V_FSP_Protocol" subindex="3" accessRightRestriction="ro"
3562             displayFormat="Dec.0" offset="0.0" gradient="1.0" unitCode="1056"/>
3563         <RecordItemRef variableId="V_FSP_Protocol" subindex="4"
3564             accessRightRestriction="ro"/>
3565         <RecordItemRef variableId="V_FSP_Protocol" subindex="5"
3566             accessRightRestriction="ro"/>
3567         <RecordItemRef variableId="V_FSP_Protocol" subindex="6"
3568             accessRightRestriction="ro"/>
3569     </Menu>
3570     <Menu id="M_OMSR_FSP_Param_Aux">
3571         <Name textId="TN_M_FSP_Param_Aux"/>
3572         <VariableRef variableId="V_FSP_TimeToReady" displayFormat="Dec.0" offset="0.0"
3573             gradient="10.0" unitCode="1056"/>
3574         <VariableRef variableId="V_FSP_MinShutDownTime" displayFormat="Dec.0" offset="0.0"
3575             gradient="10.0" unitCode="1056"/>
3576         <VariableRef variableId="V_FSP_WCDT" displayFormat="Dec.0" offset="0.0"
3577             gradient="1.0" unitCode="1056"/>
3578         <VariableRef variableId="V_FSP_OFDT" displayFormat="Dec.0" offset="0.0"
3579             gradient="1.0" unitCode="1056"/>
3580     </Menu>
3581     <Menu id="M_MSR_CP_Param_GeneralSettings">
3582         <Name textId="TN_M_CP_Param_GeneralSettings"/>
3583         <VariableRef variableId="V_SystemCommand">
3584             <Button buttonValue="129">
3585                 <Description textId="TD_STD_SystemCommand_ApplicationReset"/>
3586             </Button>
3587         </VariableRef>
3588     </Menu>
3589     <Menu id="M_MSR_Diag">
3590         <MenuRef menuId="M_OMSR_CP_Diag_DeviceStatusInfo"/>
3591         <MenuRef menuId="M_MSR_CP_Diag_ServiceFunctions"/>
3592     </Menu>
3593     <Menu id="M_OR_Diag">

```



```

3671      <Text id="TD_STD_SystemCommand_BackToBox" value="The parameter of the device are set to
3672      factory default values and communication will be inhibited until the next power cycle. Note:
3673      Directly detach the device from the master port!"/>
3674      <!-- ===== Common Profile ===== -->
3675      <!-- ===== IO-Link Safety Profile ===== -->
3676
3677      <Text id="TN_V_CP_FunctionTag" value="Function Tag"/>
3678      <Text id="TD_V_CP_FunctionTag" value="Possibility to mark a device with function-specific
3679      information."/>
3680      <Text id="TN_V_CP_LocationTag" value="Location Tag"/>
3681      <Text id="TD_V_CP_LocationTag" value="Possibility to mark a device with location-specific
3682      information."/>
3683      <Text id="TN_M_CP_Diag_DeviceStatusInfo" value="Device Status Information"/>
3684      <Text id="TN_M_CP_Diag_ServiceFunctions" value="Service Functions"/>
3685      <Text id="TN_M_CP_Param_GeneralSettings" value="General Settings"/>
3686      <!-- ===== IO-Link Safety Profile ===== -->
3687      <!-- ===== FSP ===== -->
3688
3689      <Text id="TN_V_FSP_Authenticity" value="Authenticity"/>
3690      <Text id="TD_V_FSP_Authenticity" value="Authenticity parameters."/>
3691      <Text id="TN_V_FSP_Authenticity_1" value="FSP_Authenticity_1"/>
3692      <Text id="TD_V_FSP_Authenticity_1" value=""A-Code" from the upper level FSCP
3693      system."/>
3694      <Text id="TN_V_FSP_Authenticity_2" value="FSP_Authenticity_2"/>
3695      <Text id="TD_V_FSP_Authenticity_2" value="Extended "A-Code" from the upper level
3696      FSCP system."/>
3697      <Text id="TN_V_FSP_Port" value="FSP_Port"/>
3698      <Text id="TD_V_FSP_Port" value="PortNumber identifying the particular FS-Device."/>
3699      <Text id="TN_V_FSP_AuthentCRC" value="FSP_AuthentCRC"/>
3700      <Text id="TD_V_FSP_AuthentCRC" value="CRC-16 across authenticity parameters."/>
3701      <Text id="TN_V_FSP_Protocol" value="Protocol"/>
3702      <Text id="TD_V_FSP_Protocol" value="Protocol parameters."/>
3703      <Text id="TN_V_FSP_ProtVersion" value="FSP_ProtVersion"/>
3704      <Text id="TD_V_FSP_ProtVersion" value="Protocol version (1=current version)."/>
3705      <Text id="TN_V_FSP_ProtMode" value="FSP_ProtMode"/>
3706      <Text id="TD_V_FSP_ProtMode" value="Protocol mode (1=16 bit CRC, 2=32 bit CRC)"/>
3707      <!--Text id="TN_SV_FSP_ProtMode_crc16" value="16 bit CRC"-->
3708      <Text id="TN_SV_FSP_ProtMode_crc32" value="32 bit CRC"/>
3709      <Text id="TN_V_FSP_Watchdog" value="FSP_Watchdog"/>
3710      <Text id="TD_V_FSP_Watchdog" value="Monitoring of IO update."/>
3711      <Text id="TN_V_FSP_IO_StructCRC" value="FSP_IO_StructCRC"/>
3712      <Text id="TD_V_FSP_IO_StructCRC" value="CRC-16 across IO structure description block."/>
3713      <Text id="TN_V_FSP_TechParCRC" value="FSP_TechParCRC"/>
3714      <Text id="TD_V_FSP_TechParCRC" value="Securing code across FST (technology specific
3715      parameter.)"/>
3716      <Text id="TN_V_FSP_ProtParCRC" value="FSP_ProtParCRC"/>
3717      <Text id="TD_V_FSP_ProtParCRC" value="CRC-16 across protocol parameters"/>
3718      <Text id="TN_V_FSP_ParamDescCRC" value="FSP_ParamDescCRC"/>
3719      <Text id="TD_V_FSP_ParamDescCRC" value="CRC-32 signature securing authenticity, protocol,
3720      and FS I/O structure description within IODD."/>
3721      <Text id="TN_V_FSP_TimeToReady" value="Time To Ready"/>
3722      <Text id="TD_V_FSP_TimeToReady" value="The time that is required by the device after power
3723      on in order to be ready for communication."/>
3724      <Text id="TN_V_FSP_MinShutDownTime" value="Minimum shut down time"/>
3725      <Text id="TD_V_FSP_MinShutDownTime" value="Minimum time to wait after shut down of FS-
3726      Device."/>
3727      <Text id="TN_V_FSP_WCDT" value="Worst-case Delay Time"/>
3728      <Text id="TD_V_FSP_WCDT" value="Time from triggering an FS-Device (sensor) until the
3729      output shows a corresponding signal change or Process Data change. For an FS-Device (actuator)
3730      it is the time from signal change or Process Data change to the actuator's safe state."/>
3731      <Text id="TN_V_FSP_OFDT" value="One Fault Delay Time"/>
3732      <Text id="TD_V_FSP_OFDT" value="Time from occurrence of a fault within the FS-Device to a
3733      corresponding signal change or Process Data change"/>
3734      <Text id="TN_EV_FSP_TransmissionError_CRCSignature" value="Transmission error (CRC
3735      signature)"/>
3736      <Text id="TN_EV_FSP_TransmissionError_Counter" value="Transmission error (Counter)"/>
3737      <Text id="TN_EV_FSP_TransmissionError_Timeout" value="Transmission error (Timeout)"/>
3738      <Text id="TN_EV_FSP_UnexpectedAuthenticationCode" value="Unexpected authentication code"/>
3739      <Text id="TN_EV_FSP_UnexpectedAuthenticationPort" value="Unexpected authentication port"/>
3740      <Text id="TN_EV_FSP_Incorrect_AuthentCRC" value="Incorrect FSP_AuthentCRC"/>
3741      <Text id="TN_EV_FSP_Incorrect_ProtParCRC" value="Incorrect FSP_ProtParCRC"/>
3742      <Text id="TN_EV_FSP_Incorrect_TechParCRC" value="Incorrect FSP_TechParCRC"/>
3743      <Text id="TN_EV_FSP_Incorrect_IO_StructCRC" value="Incorrect FSP_IO_StructCRC"/>
3744      <Text id="TN_EV_FSP_WatchdogTimeOutOfSpec" value="Watchdog time out of specification"/>
3745      <Text id="TN_EV_FSP_NoFSVerifyRecord" value="No FS_VerifyRecord received"/>
3746      <Text id="TN_M_FST_Param" value="FS Technology Parameter"/>
3747      <Text id="TN_M_FSP_Param" value="FS Protocol Parameter"/>
3748      <Text id="TN_M_FSP_Param_Aux" value="FS Auxiliary Parameter"/>

```

```
3749      <!-- ===== IO-Link Non-Safety Parameter ===== -->
3750      <!-- ===== IO-Link Safety FS Technology Parameter ===== -->
3751      <!-- ===== IO-Link Safety FS Process Data ===== -->
3752      <Text id="TN_V_X_NonSafetyParameter" value="Sample Non-Safety Parameter"/>
3753      <Text id="TD_V_X_NonSafetyParameter" value="Configures any functionality of the device
3754 which is not relevant for the safety function."/>
3755      <!-- ===== IO-Link Safety FS Process Data ===== -->
3756      <!-- ===== IO-Link Safety FS Technology Parameter ===== -->
3757      <!-- ===== IO-Link Non-Safety Parameter ===== -->
3758      <Text id="TN_V_FST_X_DiscrepancyTime" value="Discrepancy Time"/>
3759      <Text id="TD_V_FST_X_DiscrepancyTime" value="Defines the functional safety relevant value
3760 for the technology specific discrepancy time."/>
3761      <Text id="TN_V_FST_X_Filter" value="Filter"/>
3762      <Text id="TD_V_FST_X_Filter" value="Defines the functional safety relevant value for the
3763 technology specific signal filter setting."/>
3764      <!-- ===== IO-Link Safety FS Process Data ===== -->
3765      <!-- ===== IO-Link Safety FS Technology Parameter ===== -->
3766      <!-- ===== IO-Link Safety FS Process Data ===== -->
3767      <Text id="TN_PI_FSP_PDin" value="PD Input"/>
3768      <Text id="TN_PO_FSP_PDout" value="PD Output"/>
3769      <!-- IO-Link Safety FS Process Data -->
3770      <Text id="TN_V_FSP_SafetyCode" value="FS Safety Code"/>
3771      <Text id="TD_V_FSP_SafetyCode" value="Control/Status octet and CRC."/>
3772      <!-- IO-Link Safety FS Process Input Data -->
3773      <Text id="TN_V_FST_X_State_1" value="FS-PD Boolean State 1"/>
3774      <Text id="TN_V_FST_X_State_2" value="FS-PD Boolean State 2"/>
3775      <Text id="TN_V_FST_X_State_3" value="FS-PD Boolean State 3"/>
3776      <Text id="TN_V_FST_X_State_4" value="FS-PD Boolean State 4"/>
3777      <Text id="TN_V_FST_X_State_5" value="FS-PD Boolean State 5"/>
3778      <Text id="TN_V_FST_X_State_6" value="FS-PD Boolean State 6"/>
3779      <Text id="TN_V_FST_X_State_7" value="FS-PD Boolean State 7"/>
3780      <Text id="TN_V_FST_X_State_8" value="FS-PD Boolean State 8"/>
3781      <Text id="TN_V_FST_X_State_9" value="FS-PD Boolean State 9"/>
3782      <Text id="TN_V_FST_X_State_10" value="FS-PD Boolean State 10"/>
3783      <Text id="TN_V_FST_X_State_11" value="FS-PD Boolean State 11"/>
3784      <Text id="TN_V_FST_X_State_12" value="FS-PD Boolean State 12"/>
3785      <Text id="TN_V_FST_X_State_13" value="FS-PD Boolean State 13"/>
3786      <Text id="TD_V_FST_X_State" value="Indicates the state of the boolean status data."/>
3787      <Text id="TN_SV_FST_X_State_inactive" value="Inactive"/>
3788      <Text id="TN_SV_FST_X_State_active" value="Active"/>
3789      <Text id="TN_V_FST_X_Integer16Value" value="FS-PD Integer 16 Value"/>
3790      <Text id="TD_V_FST_X_Integer16Value" value="Shows the FS-measurement value."/>
3791      <!-- IO-Link Safety non Safety Process Input Data -->
3792      <Text id="TN_V_X_Revolutions" value="Revolutions"/>
3793      <Text id="TD_V_X_Revolutions" value="Shows a non-safety measurement value."/>
3794      <!-- ===== Device specific menu ===== -->
3795      <!-- ===== Device specific menu ===== -->
3796      <!-- ===== Device specific menu ===== -->
3797      <Text id="TN_M_Param_NonSafety" value="Non-Safety (Standard) Parameter"/>
3798      </PrimaryLanguage>
3799      </ExternalTextCollection>
3800      <Stamp crc="1871096113"><Checker name="IODD-Checker V1.1.12 Beta 7"
3801 version="V1.1.12.7"/></Stamp>
3802  </IODevice>
```

3803  
3804  
3805  
3806                   **Annex P**  
3807                   (normative)

3808                   **Device tool Interface (DTI) for SDCI**

3809                   **P.1 Purpose of DTI**

3810                  For integration of SDCI Devices in a Master Tool, IODD files provided by the Device  
3811                  manufacturer shall be used. Syntax and semantics of these files are standardized (see [15])  
3812                  such that the Devices can be integrated independently from the vendor/manufacturer.

3813                  However, functional safety requires a software tool for e.g. parameter setting and validation, at  
3814                  least as a complement to the IODD method.

3815                  This Device Tool – or Dedicated Tool shall communicate with its Device and is responsible for  
3816                  the data integrity according to IEC 62061. In the following, the term "Dedicated Tool" is used  
3817                  synonym to the term "Device Tool".

3818                  Without a standardized software interface between the Master Tool and the Dedicated Tool, the  
3819                  user would be forced:

- 3820                  • to know which Dedicated Tool is required for a particular Device,  
3821                  • to enter the communication parameters of the Device both in the Master Tool and in the  
3822                  Dedicated Tool and to keep the parameters consistent,  
3823                  • to store consistent configuration and parameterization data from both the Master Tool  
3824                  and the Dedicated Tool at one single place to archive project data.

3825                  In addition,

- 3826                  • in the case of an Online Channel, the Device manufacturer needs to implement the  
3827                  communication functionality for each supported communication system like a field bus  
3828                  system, including the problem of nested communication whenever the target Device is  
3829                  in a different network.

3830                  The solution for these requirements is the Device Tool Interface (DTI) technology specified  
3831                  herein after.

3832                  For Master Tools supporting IO-Link Safety, the complete implementation of the DTI including  
3833                  online channel is mandatory. For IO-Link Safety Devices and the associated Dedicated Tool  
3834                  the online channel is optional.

3835                  In the case that the IO-Link Safety Device supports parametrization with safety related  
3836                  technology parameters, the manufacturer of the IO-Link Safety Device shall provide a Dedicated  
3837                  Tool according to this specification.

3838                   **P.2 DTI Overview**

3839                  The Device Tool Interface (DTI) consists of two parts according to Figure 57:

- 3840                  • An Invocation Interface between Master Tool and Dedicated Tool including a backward  
3841                  interface between Master Tool and Dedicated Tool ("Backchannel");  
3842                  • A Communication Interface for online communication between Dedicated Tool and a  
3843                  Device via a Master Tool based on a REST-API.

3844                   **P.2.1 Functions and Elements of the Invocation Interface**

- 3845                  • A Master Tool which is supposed to be already installed on a PC running a current  
3846                  Microsoft Windows operating system.

- 3846     • A Device, configured with the help of the corresponding IODD file of the Device  
3847        manufacturer. Configuration includes assignment of Port addresses and adjustment of  
3848        the Device parameters as defined in the IODD.
- 3849     • Association of Dedicated Tool identification with SDCI Device identification.
- 3850     • DTI specific mechanisms allowing the Master Tool to find the matching Dedicated Tool  
3851        for a given Device. These mechanisms may include for example, in the context menu of  
3852        a selected Device in the Master Tool, an entry that can be used to invoke the Dedicated  
3853        Tool.
- 3854     • Identification of the selected Device by the Dedicated Tool on its activation.
- 3855     • Establishing communication with the matching Device and assign parameter values  
3856        without the need to provide address information and alike. Assigned values may be  
3857        returned to the Master Tool using the back channel.
- 3858     • Mechanisms to store and maintain Device data objects (project data).

## 3859   **P.2.2 Functions and elements of the Communication Interface**

- 3860     • A Master Tool providing access to a related SDCI Device implementing the SMI  
3861        interface.
- 3862     • A Master Tool acting as a local HTTP server implementing a REST-API.
- 3863     • A Dedicated Tool acting as HTTP client that connects to respective server.
- 3864     • REST-API functionality that allows the Dedicated Tool to read and write SDCI  
3865        parameters and to observe process data.

## 3866   **P.2.3 Security**


3867   As a Master Tool developer implementing this API, restrict the REST port so that it will only  
3868   communicate with clients on localhost/127.0.0.1. This can be done through the selected  
3869   webserver.

## 3870   **P.3 Dedicated Tool Invocation interface**

### 3871   **P.3.1 Overview**

3872   The invocation interface is used to transfer information from the representation of the Device in  
3873   the Master Tool to the Dedicated Tool. To achieve a high flexibility and to be able to identify  
3874   different versions of the interface, both the description of the Dedicated Tool capabilities and  
3875   the invocation parameters are exchanged in XML format.

3876   Figure F.1 shows the principle of the DTI invocation interface part.

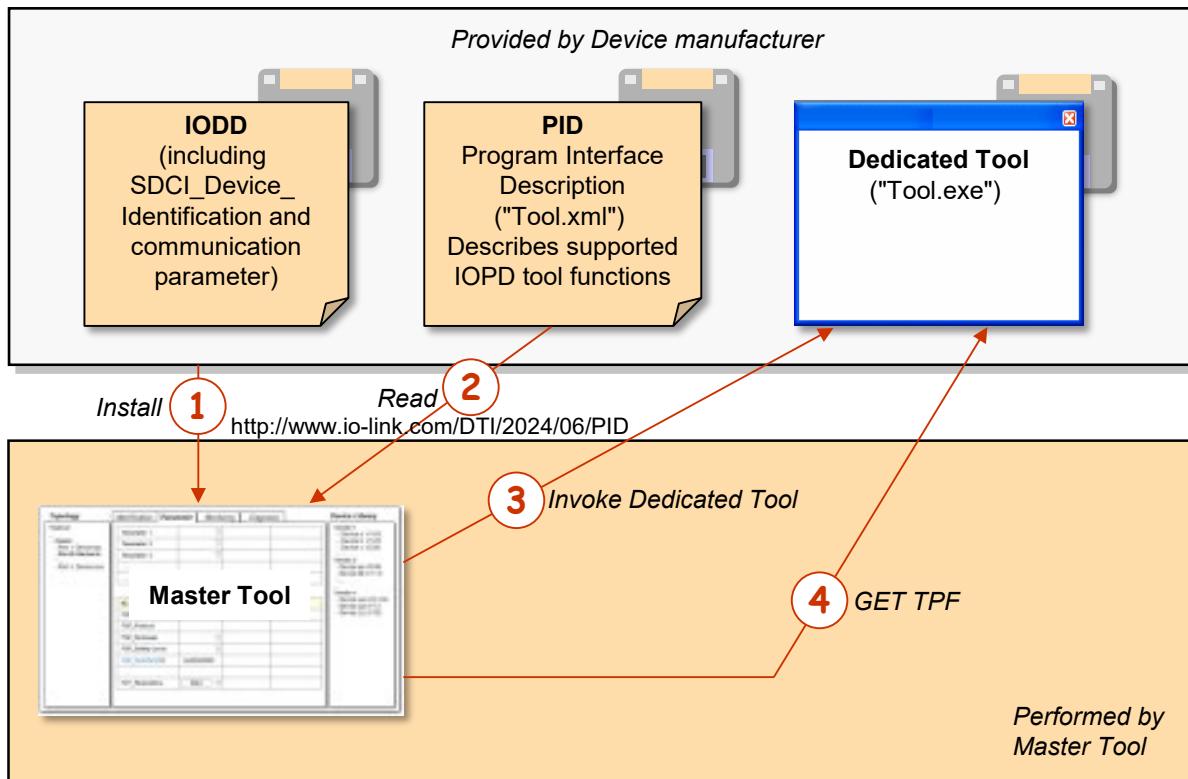

**Figure F.1 – Principle of DTI invocation interface**

The mechanism visualized in Figure F.1 requires that the Master Tool and all used Dedicated Tools exist on one PC.

For invocation of the Dedicated Tool the following steps are required:


- (1) The Master Tool imports the IODD. The Device is configured, and communication settings are made. With the help of SDCI Device Identification data, the Master Tool can address the installed Dedicated Tool and the "Program Interface Description" (PID) file. Annex F.3.2 describes this procedure in detail.
- (2) The Master Tool reads the content of the PID file. This file contains information about the interface version and the supported tool functions. The structure of the PID file is described in Annex F.3.3.
- (3) The Master Tool launches the Dedicated Tool and passes configuration parameters for the REST-API as described in Annex F.5.
- (4) The Dedicated Tool issues a GET request to receive the TPF.

### **P.3.2 Detection of Dedicated Tool**

#### **P.3.2.1 Registry structure**

DTI uses for identification of the type of an SDCI Device, a specific, unique, and unambiguous SDCI "Device-Identifier" in the PC system registry and within the Temporary Parameter File (TPF).

Figure F.2 shows the structure of the DTI part of the registry. Each class in the diagram represents a registry key. Each attribute in the diagram represents a string value of the registry key. The semantics of the attributes is defined in Table F.1 and Table F.2.

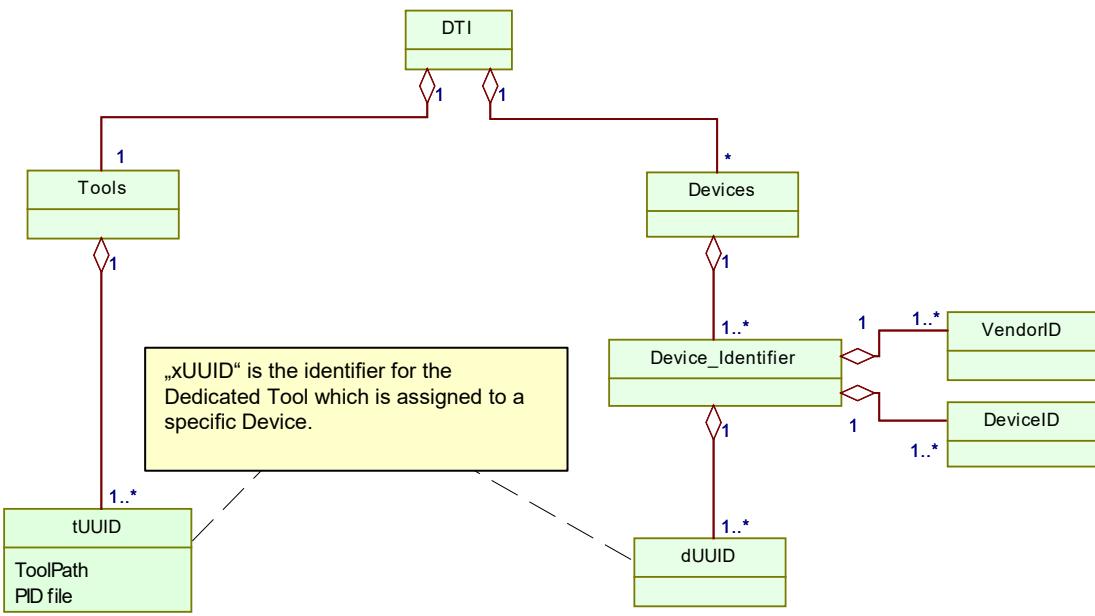

3902 Since for an SDCI Device\_Identifier an unlimited number of "UUID" elements can be inserted,  
 3903 the Master Tool shall handle all tools of these "UUID" elements.

### 3904 P.3.2.2 Dedicated Tool specific registry entries

3905 Each version of a Dedicated Tool is represented by one UUID in the system registry.

3906 The installation program of a Dedicated Tool (32 bit or 64 bit) shall insert this UUID as key  
 3907 under its appropriate registry path:

3908 [HKEY\\_LOCAL\\_MACHINE\SOFTWARE\IO-Link Community\DTI\Tools](#) or


3909 [HKEY\\_LOCAL\\_MACHINE\SOFTWARE\Wow6432Node\IO-Link Community\DTI\Tools](#)

3910 A Master Tool shall check both registry paths.

3911 Within this key, two attributes with string values shall be used:

- 3912 • "PID-file", containing the absolute path and name of the installed PID file, and
- 3913 • "AppPath", containing the absolute path and name of the executable Dedicated Tool  
 3914 file including its file extension (.exe).

3915 Figure F.3 illustrates registry entries for Devices and tools.

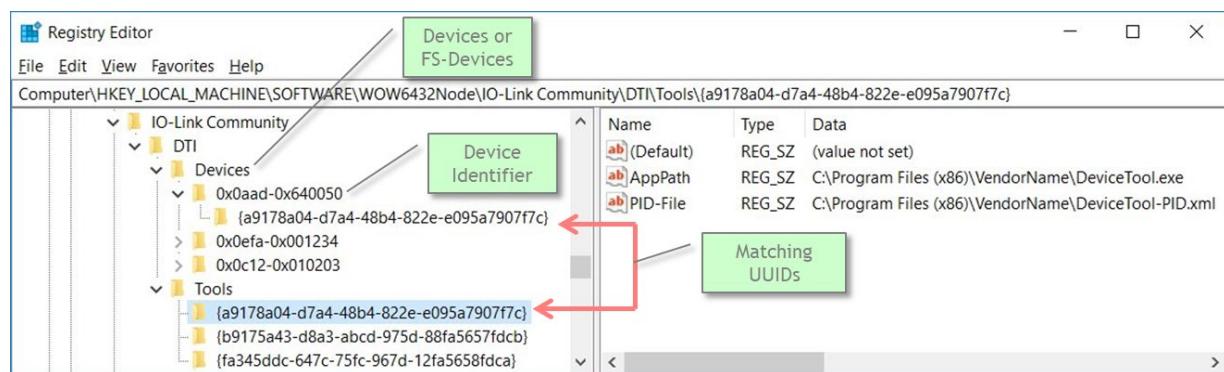

3917 **Figure F.3 – Example of a DTI registry**

3918 If different versions of a Dedicated Tool for the same Device type exist (same Device Identifier),  
3919 each version requires a separate UUID in the registry. In the PID files of the Dedicated Tools ,  
3920 different version information shall be provided in the attribute "ToolDescription" of the element  
3921 "ToolDescription" (see Table F.1). This leads to multiple items in the context menu of the Master  
3922 Tool, differing in the description text.

3923 NOTE The advantage of a separate entry of the "ToolPath" keyword is a simpler installation procedure for the  
3924 Dedicated Tool. It can install the PID file without a need to modify this file.

3925 The installation program of a Dedicated Tool shall also insert each UUID as key under the  
3926 registry path

3927 [HKEY\\_LOCAL\\_MACHINE\SOFTWARE\IO-Link Community\DTI\Devices<Device Identifier>](#)

3928 Devices are identified unambiguously via the following items:

- 3929     • VendorID (assigned by SDCI support organization, see Annex I);  
3930     • DevicelD (assigned by Device/FS-Device manufacturer).

3931 This information is part of the IO Device Description (IODD), which allows the Master Tool to  
3932 work with the Device (data, parameter) without establishing an online connection to the Device.  
3933 The IDs can be found at the following locations within an IODD:

- 3934 a) //ISO15745Profile/ProfileBody/DevicelDentity/@vendorId;  
3935 b) //ISO15745Profile/ProfileBody/DevicelDentity/@devicelD.

3936 With the help of the registry, the Master Tool can read the required information about the  
3937 Dedicated Tool. Location and structure for the entries shall be commonly agreed upon.

3938 All entries shall be provided by the Dedicated Tool under the following registry path:

3939 [HKEY\\_LOCAL\\_MACHINE\SOFTWARE\IO-Link Community\DTI\Devices](#)

3940 Within this path one or more keys can be inserted with the following field structure:

3941 0xvvvv-0xddddddd

3942 The meaning of the fields is:

3943 vvvv: Four-character VendorID in hexadecimal coding

3944 dddddd: Six-character DevicelD in hexadecimal coding.

3945 The question mark character "?" can be used in the DevicelD as wildcard to replace one single  
3946 character. The number of question marks is only limited by the size of the field. If wildcards are  
3947 used, the Dedicated Tool is responsible for the check whether it supports the selected object.

3948 The assignment to the tool is made by a string value within this key. The UUID shall be used  
3949 as name for the string value. The number of string values is not limited, which in turn means an  
3950 unlimited number of tools that can be assigned to the same Device.

3951 Examples for valid keys (see Figure F.3):


3952 0xA99-0x00880D     The tool can be launched in the context of a Device with a DevicelD  
3953                        0x00880D from the vendor with the VendorID 0xA99.

3954 0xF3B-0x002B??     The tool can be started in the context of Devices with a DevicelD in the  
3955                        range of 0x002B00 to 0x002BFF from the vendor with the VendorID  
3956                        0xF3B.

### 3957 **P.3.2.3 Processing of the Registry Data**

3958 The installation program of the Dedicated Tool is responsible to insert the keys in the system  
3959 registry as defined in Annex F.3.2.2.

3960 Figure F.4 shows an activity diagram illustrating the detection of a Dedicated Tool in the registry  
 3961 via SDCI "Device\_Identifier".

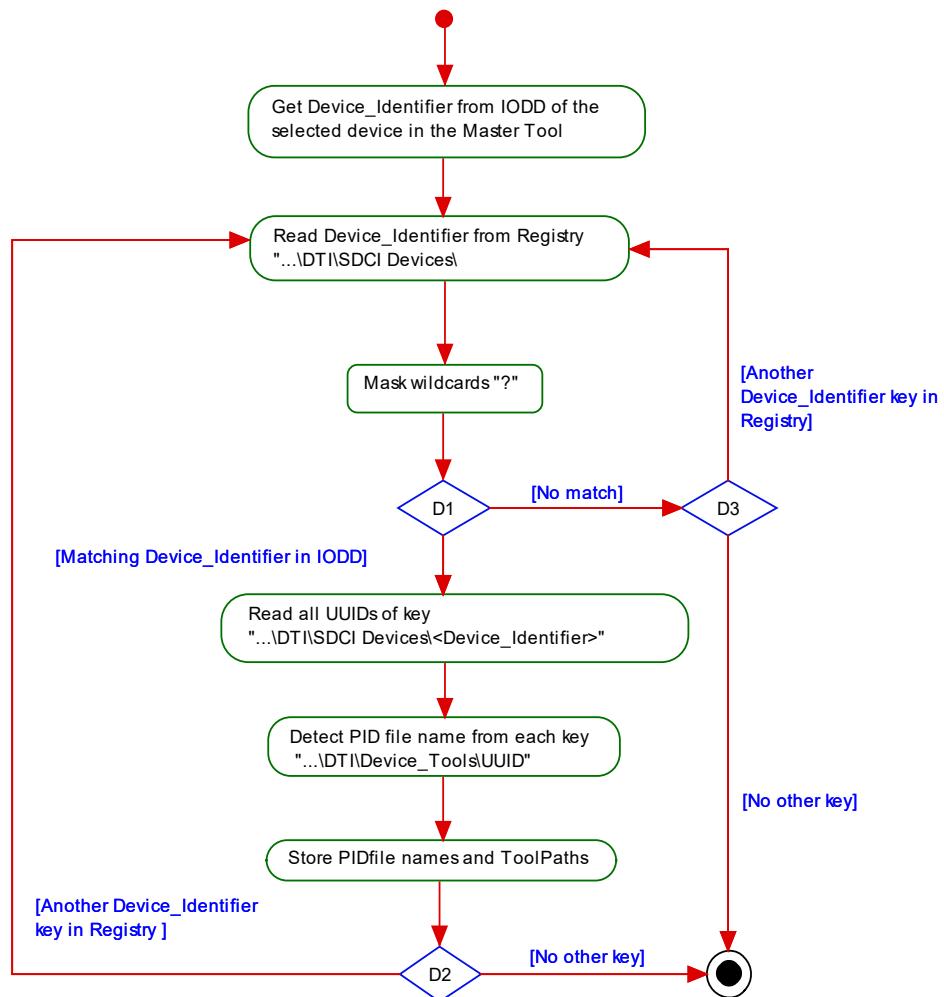

3962

3963

**Figure F.4 – Detection of a Dedicated Tool in registry**

3964 NOTE All registry keys in Figure F.4 are relative to the path HKEY\_LOCAL\_MACHINE\SOFTWARE\IO-Link  
 3965 Community.

3966 In a first step, the Master Tool gets the Device\_Identifier from the IODD of the selected object  
 3967 in the Master Tool. Then all sub keys in the system registry path ...\\DTI\\Devices shall be  
 3968 compared with this Device\_Identifier. If a sub key matches (excepting wildcards), the UUID sub  
 3969 key of this key is used to find the PID file name in the registry path  
 3970 DTI\\Dedicated\_Tools\\<UUID>. Since the same PID file name can be found in different locations  
 3971 in the registry, the context menu of the Master Tool shall only show the Dedicated Tools with  
 3972 different PID file names. As a last step, the information in the PID file is used to build the menu  
 3973 items of the Master Tool (Figure F.5).


### 3974 **P.3.3 Program Interface Description – PID**

#### 3975 **P.3.3.1 General**

3976 The Program Interface Description (PID) file describes the properties of the Dedicated Tool and  
 3977 contains data which are required by the Master Tool to build menu items in its graphical user  
 3978 interface (GUI). The PID file is an XML document. The corresponding XML schema is defined  
 3979 in F.8.2. UTF-8 shall be used for character encoding.

3980 This PID file shall be provided by the manufacturer of a Device/Dedicated Tool and installed by  
 3981 the installation program associated with the Dedicated Tool. This installation program shall also  
 3982 insert the name and installation path in the system registry (see F.3.2).

3983 The PID file allows the Master Tool to extend its GUI menu structure by the name of the  
 3984 Dedicated Tool such that the user is able to launch the Dedicated Tool for example from the  
 3985 context menu of a selected Device as illustrated exemplary in Figure F.5.

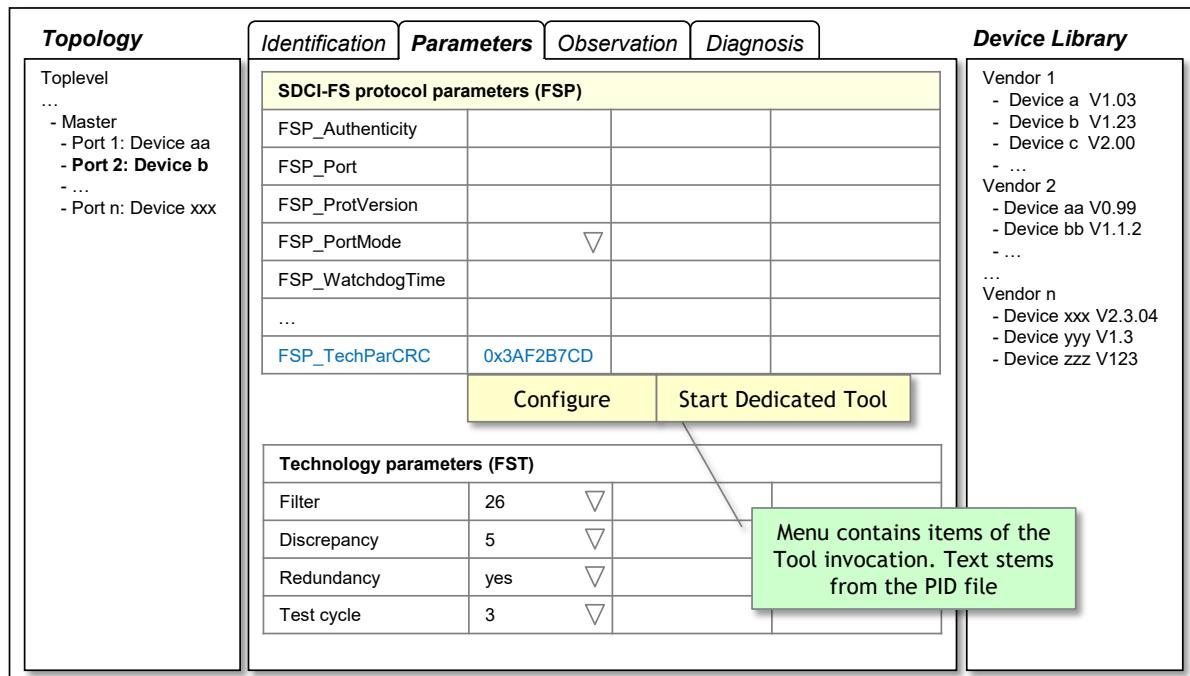

3986

3987

**Figure F.5 – Menu for Dedicated Tool invocation**

3988

### P.3.3.2 Structure of the PID file

3989  
3990

The PID file is an XML based document. Its XML schema is shown in Figure F.9. Namespace URI for this file is <http://www.io-link.com/DTI/2024/06/PID>.

3991  
3992

The elements of Figure F.9 are specified in Table F.1. The column "SV" indicates the schema version a particular attribute has been introduced.

3993

**Table F.1 – Description of PID file elements**

Element	Attribute	Type	M/O	SV	Description
ProgramInterface	–	–	M	1.0	Root element
DocumentInfo	–	–	M	1.0	Meta information about the PID file
	Version	xsd:string	M	1.0	Contains the schema version of PID interface definition. Also determines the newest TPF version supported by this tool.  The value shall comply with the following regular expression: \\d+(\\.\\d+)*  In this version, the string "1.1" shall be used.
General	–	–	M	1.0	General information about the Dedicated Tool
	VendorName	xsd:string	M	1.0	Contains the name of the Device vendor
ToolDescription	–	–	1..n	1.0	Is used to define language dependent text information for description of the Dedicated Tool. A ToolDescription element in English language is mandatory.
	xml:lang	xsd:language	M	1.0	Defines the language of the text. The "2-letter coding" or the "3-letter

Element	Attribute	Type	M/O	SV	Description
					coding" as defined in ISO 639 shall be used.
	ToolName	xsd:string	M	1.0	Describes the function of the Dedicated Tool. This text shall be used to extend the GUI menu items of the Master Tool. Default element in English language shall always be present.
	ToolDescription	xsd:string	O	1.0	Contains a short description of the Dedicated Tool.

### 3994 P.3.3.3 Example PID file

3995 The following XML code shows an example content of a PID file.

```

3996 <?xml version="1.0" encoding="UTF-8"?>
3997 <ProgramInterface xmlns="http://www.io-link.com/DTI/2024/06/PID"
3998   xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" xmlns:prim="http://www.io-
3999   link.com/DTI/2024/06/Primitives" xsi:schemaLocation="http://www.io-link.com/DTI/2024/06/PID DTI-
4000   PID1.0.xsd">
4001   <DocumentInfo version="V1.0"/>
4002   <General vendorName="IO-LinkCompany">
4003     <ToolDescription name="Configure THC" description="IO-Link-16 Safety Device" lang="en"/>
4004     <ToolDescription name="Konfiguriere THC" description="IO-Link-16 Safety Device" lang="de"/>
4005   </General>
4006 </ProgramInterface>
```

### 4007 P.3.4 Temporary Parameter File – TPF

#### 4008 P.3.4.1 General

4009 Due to the large number of parameters to be transferred from the Master Tool to the Dedicated  
4010 Tool, all required parameters are included into an XML format, called Temporary Parameter  
4011 File (TPF).

4012 The XML schema for the TPF is defined in F.8.3. For character encoding, UTF-8 shall be used.  
4013 The Master Tool shall use the newest TPF schema version supported by both the Master Tool  
4014 and the Dedicated Tool.

#### 4015 P.3.4.2 Structure of a TPF

4016 The structure of the TPF is defined by the XML schema shown in Figure F.10. This schema is  
4017 built in a generic manner, which means, a new parameter does not require the schema itself to  
4018 be updated. Thus, new parameters can be introduced without a new definition of the TPF  
4019 structure.

4020 The Master Tool uses the TPF to transfer all readable parameters (read/write and read only) to  
4021 the Dedicated Tool.

4022 Namespace URI for this file is <http://www.io-link.com/DTI/2024/06/TPF>. The elements of the  
4023 XML schema in Figure F.10 are specified in Table F.2. The column "SV" indicates the schema  
4024 version a particular attribute has been introduced.

4025 **Table F.2 – Elements of a TPF**

Element	Attribute	Type	M/O	SV	Description
InvocationInterface	–	–	M	1.0	Root element
General	–	–	M	1.0	General information about the TPF file
	schemaPath	xsd:string	M	1.0	This attribute defines the path where the schema of the TPF/PID file are stored. • This schema files shall be installed on

Element	Attribute	Type	M/O	SV	Description
					<p>this path by the Master Tool</p> <ul style="list-style-type: none"> <li>The path does not change during runtime of the Master Tool</li> <li>The path can be used from a Dedicated Tool to initialize the XML parser.</li> </ul> <p>NOTE Even if no schema validation is used, some XML parsers need the location of the schema files for initialization. In this case, a Dedicated Tool does not need to install an own set of schema files – it should use the schema files in the path defined by this attribute.</p>
	projectRelatedPath	xsd:string	M	1.0	<p>The attribute "ProjectRelatedPath" contains information about a directory which is assigned to the project context of the Master Tool. A Dedicated Tool should use this path for storage of its Device data. The format and structure of this data is defined by the Dedicated Tool itself. Within this directory, additional subdirectories can be created.</p> <p>The Master Tool is responsible to keep all data in the directory tree in its project context. That means, if the project is copied or archived, also this data shall be copied or archived.</p> <p>The attribute "ProjectRelatedPath" contains a unique path (directory) for each combination of Master project and DTI Dedicated Tool. For example, different directories are used for the same tool, if two Master Tool projects are used. The file name in "ProjectRelatedPath" shall consist of the drive letter and an absolute path expression.</p> <p>Alternatively, the UNC notation can be used</p>

Element	Attribute	Type	M/O	SV	Description
					instead of the drive letter.
	portName	xsd:string	M	1.0	Name of used FS-Master Port
	portId	xsd:string	M	1.0	ID of used FS-Master Port 1 to n
	masterName	xsd:string	M	1.0	User defined name of FS-Master
	displayNameES	xsd:string	M	1.0	Display name of the Master Tool in the language specified in attribute "currentLanguage". The Dedicated Tool can use this name in error messages or user dialogs to provide more understandable texts.
	currentLanguage	xsd:string	M	1.0	Defines which language shall be used by the Dedicated Tool for TPF. The "2-letter coding" or the "3-letter coding" as defined in ISO 639 can be used. If a Dedicated Tool does not support the selected language, the tool shall use its default language.
DeviceItem	–	–	M	1.0	Used to describe the Device selected in the ES.
	vendorId	xsd:string	M	1.0	See IEC 61131-9
	productId	xsd:string	M	1.0	See IEC 61131-9
	deviceID	xsd:string	M	1.0	See IEC 61131-9
	usedConfigFileCRC	xsd:string	M	1.0	IODD stamp
	usedConfigFile	xsd:string	M	1.0	The keyword usedConfigFile contains the file name of the used description file (e.g. IODD). The file name shall consist of the drive letter, an absolute path expression and the file extension. Alternatively, the UNC notation can be used instead of the drive letter. The Dedicated Tool is not allowed to modify the content of the description file.
	reference	xsd:string	M	1.0	Used to identify FS-Device within engineering project
	ClientID	xsd:string	M	1.0	ClientID
	DeviceInstanceldent	xsd:string	M	1.0	uniquely identifies the one instance of a Device.

Element	Attribute	Type	M/O	SV	Description
VariableInstanceData	–	–	M	1.0	Element "VariableInstanceData" is a container for "Variable" elements (= parameter).
Variable	–	–	1 to n	1.0	Contains information about a variable.
	variableId	xsd:string	M	1.0	Contains the parameter ID
Item	–	–	1 to n	1.0	Contains information about a Subindex of a variable.
	subindex	xsd:string	M	1.0	See IEC 61131-9
	value	xsd:string	M	1.0	Contains the parameter value. In absence of a parameter-specific rule for the representation of the value: Numerical values shall use the decimal coding without left-hand zeros. Negative values shall have a hyphen (ASCII 45 dec) prefix. Separator for floating point values is a dot (ASCII 46 dec). Other separators are not permitted.
	state	xsd:string	M	1.0	Contains parameter status

4026

### 4027 P.3.4.3 Example of a TPF

4028 The following XML code shows the content of an exemplary TPF file.

```

4029 <?xml version="1.0" encoding="UTF-8"?>
4030 <InvocationInterface xmlns="http://www.io-link.com/DTI/2024/06/TPF"
4031   xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" xmlns:prim="http://www.io-
4032   link.com/DTI/2024/06/Primitives" xsi:schemaLocation="http://www.io-link.com/DTI/2024/06/TPF DTI-
4033   TPF1.0.xsd">
4034   <General currentLanguage="en" projectRelatedPath="\\ServerName\ShareName\Projects"
4035     masterId="444444" masterName="CPU-1" portId="1" portName="P1-4" schemaPath="d:\dti\schema"
4036     displayNameEs="MyMTName"/>
4037   <DeviceItem reference="Project1/Network2/Device3/1897212" vendorId="335" ClientID="1"
4038     deviceId="6553616" productId="SafetyDeviceVariant" usedConfigFile="d:\IODDfiles\IO-Link-
4039     SafetyDevice-20170225-IODD1.1.xml" usedConfigFileCRC="1946410459"
4040     DeviceInstanceId="DeviceInstant">
4041     <VariableInstanceData>
4042       <Variable variableId="V_DirectParameters_1">
4043         <Item subindex="0" state="valid" value="" />
4044         <Item subindex="1" state="valid" value="" />
4045         <Item subindex="2" state="valid" value="" />
4046         <Item subindex="3" state="valid" value="" />
4047         <Item subindex="4" state="valid" value="" />
4048         <Item subindex="5" state="valid" value="17" />
4049         <Item subindex="6" state="valid" value="" />
4050         <Item subindex="7" state="valid" value="" />
4051         <Item subindex="8" state="valid" value="" />
4052         <Item subindex="9" state="valid" value="" />
4053         <Item subindex="10" state="valid" value="" />
4054         <Item subindex="11" state="valid" value="" />
4055         <Item subindex="12" state="valid" value="" />
4056         <Item subindex="13" state="valid" value="" />
4057         <Item subindex="14" state="valid" value="" />
4058         <Item subindex="15" state="valid" value="" />
4059       </Variable>
4060       <Variable variableId="V_DeviceAccessLocks">
```

```
4061      <Item subindex="1" state="valid" value="false"/>
4062      <Item subindex="2" state="valid" value="false"/>
4063    </Variable>
4064    <Variable variableId="V_VendorName">
4065      <Item subindex="0" state="valid" value="IO-Link Community"/>
4066    </Variable>
4067    <Variable variableId="V_VendorText">
4068      <Item subindex="0" state="valid" value="http://www.io-link.com"/>
4069    </Variable>
4070    <Variable variableId="V_ProductName">
4071      <Item subindex="0" state="valid" value="SafetyDevice"/>
4072    </Variable>
4073    <Variable variableId="V_ProductID">
4074      <Item subindex="0" state="valid" value="SafetyDeviceVariant"/>
4075    </Variable>
4076    <Variable variableId="V_ProductText">
4077      <Item subindex="0" state="valid" value="Sample IO-Link Safety"/>
4078    </Variable>
4079    <Variable variableId="V_SerialNumber">
4080      <Item subindex="0" state="valid" value=""/>
4081    </Variable>
4082    <Variable variableId="V_HardwareRevision">
4083      <Item subindex="0" state="valid" value=""/>
4084    </Variable>
4085    <Variable variableId="V_FirmwareRevision">
4086      <Item subindex="0" state="valid" value=""/>
4087    </Variable>
4088    <Variable variableId="V_ApplicationSpecificTag">
4089      <Item subindex="0" state="valid" value="IO-Link Safety"/>
4090    </Variable>
4091    <Variable variableId="V_ErrorCount">
4092      <Item subindex="0" state="valid" value=""/>
4093    </Variable>
4094    <Variable variableId="V_DeviceStatus">
4095      <Item subindex="0" state="valid" value=""/>
4096    </Variable>
4097    <Variable variableId="V_DetailedDeviceStatus">
4098      <Item subindex="1" state="valid" value=""/>
4099      <Item subindex="2" state="valid" value=""/>
4100      <Item subindex="3" state="valid" value=""/>
4101      <Item subindex="4" state="valid" value=""/>
4102      <Item subindex="5" state="valid" value=""/>
4103      <Item subindex="6" state="valid" value=""/>
4104      <Item subindex="7" state="valid" value=""/>
4105      <Item subindex="8" state="valid" value=""/>
4106    </Variable>
4107    <Variable variableId="V_ProcessDataInput">
4108      <Item subindex="1" state="valid" value=""/>
4109      <Item subindex="2" state="valid" value=""/>
4110      <Item subindex="3" state="valid" value=""/>
4111      <Item subindex="4" state="valid" value=""/>
4112      <Item subindex="5" state="valid" value=""/>
4113      <Item subindex="6" state="valid" value=""/>
4114      <Item subindex="7" state="valid" value=""/>
4115      <Item subindex="8" state="valid" value=""/>
4116      <Item subindex="9" state="valid" value=""/>
4117      <Item subindex="10" state="valid" value=""/>
4118      <Item subindex="11" state="valid" value=""/>
4119      <Item subindex="12" state="valid" value=""/>
4120      <Item subindex="13" state="valid" value=""/>
4121      <Item subindex="14" state="valid" value=""/>
4122      <Item subindex="127" state="valid" value=""/>
4123      <Item subindex="128" state="valid" value=""/>
4124    </Variable>
4125    <Variable variableId="V_NonSafetyParameter">
4126      <Item subindex="0" state="valid" value="0"/>
4127    </Variable>
4128    <Variable variableId="V_FST_DiscrepancyTime">
4129      <Item subindex="0" state="valid" value="0"/>
4130    </Variable>
4131    <Variable variableId="V_FST_Filter">
4132      <Item subindex="0" state="valid" value="0"/>
4133    </Variable>
4134    <Variable variableId="V_FSP_Authenticity">
4135      <Item subindex="1" state="valid" value="0"/>
4136      <Item subindex="2" state="valid" value="0"/>
4137      <Item subindex="3" state="valid" value="0"/>
4138      <Item subindex="4" state="valid" value="0"/>
```

```

4139      </Variable>
4140      <Variable variableId="V_FSP_Protocol">
4141          <Item subindex="1" state="valid" value="0"/>
4142          <Item subindex="2" state="valid" value="1"/>
4143          <Item subindex="3" state="valid" value="100"/>
4144          <Item subindex="4" state="valid" value="444"/>
4145          <Item subindex="5" state="valid" value="0"/>
4146          <Item subindex="6" state="valid" value="0"/>
4147      </Variable>
4148      <Variable variableId="V_FSP_ParamDescCRC">
4149          <Item subindex="0" state="valid" value="444"/>
4150      </Variable>
4151  </VariableInstanceData>
4152 </DeviceItem>
4153 </InvocationInterface>
4154

```

### 4155 P.3.5 Temporary Backchannel File – TBF

#### 4156 P.3.5.1 General

4157 The Dedicated Tool sends the TBF via a POST request to the Master Tool either automatically  
4158 or upon User request.

#### 4159 P.3.5.2 Structure of the TBF

4160 The Dedicated Tool uses the TBF to transfer the results to the Master Tool. At least the  
4161 TechParCRC shall be included. In case read/write parameters are changed, they shall be  
4162 included in the TBF. Read only parameters shall not be included.

4163 The XML schema Figure F.11. This schema is built in a generic manner, which means, a new  
4164 parameter does not require the schema itself to be updated. Thus, new parameters can be  
4165 introduced without a new definition of the TBF structure.

4166 Namespace URI for this file is <http://www.io-link.com/DTI/2024/06/TBF>. The elements of Figure  
4167 F.11 are specified in Table F.3. The column "SV" indicates the schema version a particular  
4168 attribute has been introduced.

4169 **Table F.3 – Elements of the TBF**

Element	Attribute	Type	M/O	SV	Description
ReturnInterfaceRequest/ ReturnInterfaceResponse	–	–	M	1.0	Root element
VariableInstanceData	–	–	M	1.0	The element "VariableInstanceData" is a container for "Variable" elements (= parameter).
Variable	–	–	1 to n	1.0	Contains information about a variable.
	variableId	xsd:string	M	1.0	Contains the parameter ID
Item	–	–	1 to n	1.0	Contains information about a Subindex of a variable.
	subindex	xsd:string	M	1.0	See IEC 61131-9
	value	xsd:string	M	1.0	Contains the parameter value. In absence of a parameter-specific rule for the representation of the value: Numerical values shall use the decimal coding without left-hand zeros. Negative values shall have a hyphen (ASCII 45 dec) prefix. Separator for floating point values is a dot (ASCII 46 dec). Other separators are not permitted.
	state	xsd:string	M	1.0	Contains parameter status

### 4171 P.3.5.3 Example of a TBF ReturnInterfaceRequest

4172 The following XML shows the content of an exemplary TBF with a ReturnInterfaceRequest. The  
 4173 ReturnInterfaceRequest is returned from the Master Tool to the Dedicated Tool in the response  
 4174 to a TBF POST. <?xml version="1.0" encoding="UTF-8"?>.

```

4175 <?xml version="1.0" encoding="UTF-8"?>
4176 <ReturnInterfaceRequest xmlns="http://www.io-link.com/DTI/2024/06/TBF"
4177   xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" xmlns:prim="http://www.io-
4178   link.com/DTI/2024/06/Primitives" xsi:schemaLocation="http://www.io-link.com/DTI/2024/06/TBF DTI-
4179   TBF1.0.xsd">
4180   <VariableInstanceData>
4181     <Variable variableId="V_DeviceAccessLocks">
4182       <Item subindex="1" state="valid" value="false"/>
4183       <Item subindex="2" state="valid" value="false"/>
4184     </Variable>
4185     <Variable variableId="V_ApplicationSpecificTag">
4186       <Item subindex="0" state="valid" value="IO-Link Safety"/>
4187     </Variable>
4188     <Variable variableId="V_NonSafetyParameter">
4189       <Item subindex="0" state="valid" value="0"/>
4190     </Variable>
4191     <Variable variableId="V_FST_DiscrepancyTime">
4192       <Item subindex="0" state="valid" value="0"/>
4193     </Variable>
4194     <Variable variableId="V_FST_Filter">
4195       <Item subindex="0" state="valid" value="0"/>
4196     </Variable>
4197     <Variable variableId="V_FSP_Authenticity">
4198       <Item subindex="1" state="valid" value="0"/>
4199       <Item subindex="2" state="valid" value="0"/>
4200       <Item subindex="3" state="valid" value="0"/>
4201       <Item subindex="4" state="valid" value="0"/>
4202     </Variable>
4203     <Variable variableId="V_FSP_Protocol">
4204       <!-- (subindex 1) : FSP_ProtVersion -->
4205       <Item subindex="1" state="valid" value="0x01"/>
4206       <!-- (subindex 2) : FSP_ProtMode 0..25 octects-->
4207       <Item subindex="2" state="valid" value="0x02"/>
4208       <!-- (subindex 3) : FSP_Watchdog -->
4209       <Item subindex="3" state="valid" value="500"/>
4210       <!-- (subindex 4) : FSP_IO_Struct_CRC /placeholder value-->
4211       <Item subindex="4" state="valid" value="0x87654321"/>
4212       <!-- (subindex 5) : FSP_TechParCRC /placeholder value-->
4213       <Item subindex="5" state="valid" value="0x12345678"/>
4214       <!-- (subindex 6) : FSP_ProtParCRC /placeholder value-->
4215       <Item subindex="6" state="valid" value="0x23456789"/>
4216     </Variable>
4217     <Variable variableId="V_FSP_ParamDescCRC">
4218       <!-- (subindex 0) : FSP_ParamDescCRC /placeholder value-->
4219       <Item subindex="0" state="valid" value="0x87654321"/>
4220     </Variable>
4221   </VariableInstanceData>
4222 </ReturnInterfaceRequest>
```

### 4223 P.3.5.4 Example of a TBF ReturnInterfaceResponse

4224 The following XML shows another content of an exemplary TBF. The ReturnInterfaceResponse  
 4225 is returned from the Master Tool to the Dedicated Tool in the response to a TBF POST.

```

4226 <?xml version="1.0" encoding="UTF-8"?>
4227 <ReturnInterfaceResponse xmlns="http://www.io-link.com/DTI/2024/06/TBF"
4228   xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" xmlns:prim="http://www.io-
4229   link.com/DTI/2024/06/Primitives" xsi:schemaLocation="http://www.io-link.com/DTI/2024/06/TBF DTI-
4230   TBF1.0.xsd">
4231   <Response value="true"/>
4232 </ReturnInterfaceResponse>
```

4233 **P.3.6 Invocation behaviour**

4234 **P.3.6.1 Conventions on Dedicated Tool invocation**

4235 When the Dedicated Tool is invoked, it should pass named parameters like this:

4236 --Port 80 --DeviceInstanceIdent 778

4237  
4238 In the example --Port specifies the REST Service port number and --DeviceInstanceIdent  
4239 specifies the unique the Device instance. If the DeviceInstanceIdent contains "blank" characters  
4240 they should be enclosed in quotes ("").

4241 It is not required for the invoking Master Tool to monitor the status of the launched Dedicated  
4242 Tools. Even in case an instance of a Dedicated Tool is already running, the Master Tool will  
4243 generate a new Dedicated Tool invocation whenever the user launches the same tool again.

4244 Therefore, it is the task of the Dedicated Tool to handle multiple invocations. Table F.4 lists  
4245 invocation cases and possible behaviours.

4246

**Table F.4 – Invocation cases and behaviours**

Case	Behaviour
Dedicated Tool is launched once	No conflicts
Dedicated Tool is already running and works on the same Device instance as in a prior session.	<ul style="list-style-type: none"> <li>– The tool should be brought to the foreground of the GUI desktop</li> <li>– Invocation of another instance of the Dedicated Tool shall be avoided</li> </ul>
Dedicated Tool is already running and works on another Device instance as provided by the DTI call. The provided DeviceInstanceIdent is <i>known</i> in the Dedicated Tool.	<p>The behaviour depends on the design of the Dedicated Tool:</p> <ul style="list-style-type: none"> <li>– Another tool instance is launched and opens its Device data</li> <li>– The active GUI is brought to the foreground of the desktop in order to show the Device data of the selected Device</li> </ul>
Dedicated Tool is already running and works on another Device instance as provided by the DTI call. The provided DeviceInstanceIdent is <i>not known</i> in the Dedicated Tool.	<p>The behaviour depends on the design of the Dedicated Tool:</p> <ul style="list-style-type: none"> <li>– Another tool instance is launched and creates a new Device instance</li> <li>– The active GUI is brought to the foreground of the desktop in order to create a new Device instance of the selected Device</li> </ul>

4247 If a Dedicated Tool is invoked via DTI, this tool should not call another Dedicated Tool because  
4248 the Communication Interface cannot interconnect (no nested communication defined for a DTI  
4249 Communication Interface).

4250

**P.3.6.2 Handling of the TPF**

4251 When the Dedicated Tool is invoked, it will use the REST service to GET the TPF (as described  
4252 in the IO-Link-DTI-openapi.yaml file). The Dedicated Tool will handle any error codes from the  
4253 Web server or when processing the TPF.

4254

**P.4 Device data objects (DDO)**


4255

**P.4.1 General**

4256 There are scenarios, where parameter instance data for a certain project are created off-site,  
4257 for example via a "USB Master" tool enhanced for SDCL-FS, which can be mailed to a facility  
4258 where they are imported into the engineering tool of the overall automation project. These data  
4259 are called Device Data Objects (DDO). Figure F.6 shows such a scenario. In essence, DDO are  
4260 used to export/import parameter instance data of Devices from one Master Tool to the other.

4261

A TPF usually contains already those instance data. Thus, in principle, a DDO consists of TPF  
4262 data and the associated IODD for consistency reasons.

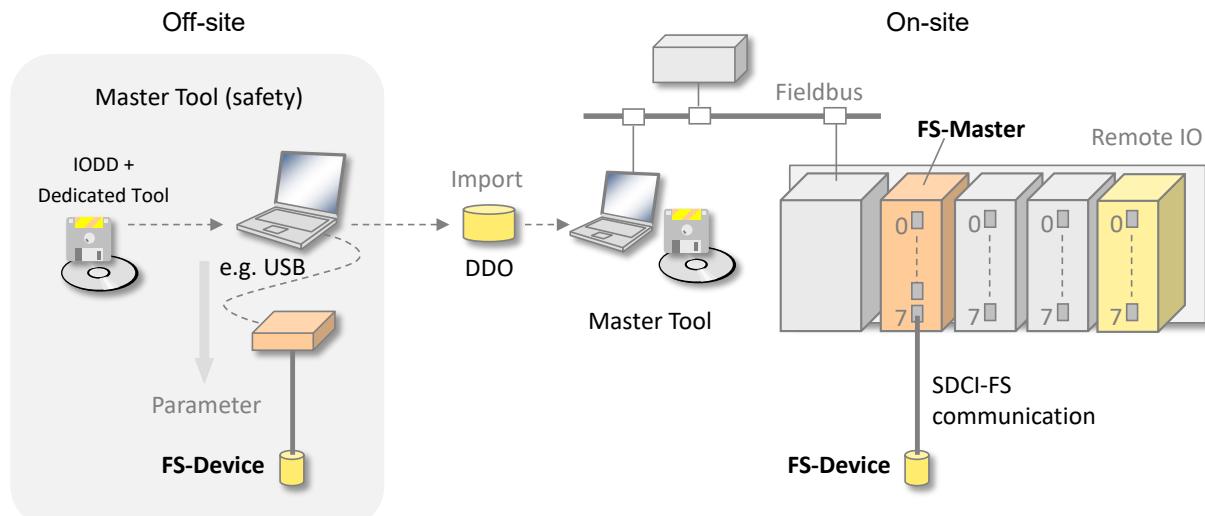

4263

4264

**Figure F.6 – Purpose of Device data objects (DDO)****P.4.2 Structure of DDO package**

4266 A Master Tool creates a DDO package as zip archive consisting of the TPF as defined in F.3.4  
 4267 and the corresponding IODD together with its associated files, such as icons, pictures, and alike  
 4268 (see [15]). The archive file name extension shall be "iolddo". The name of the archive file can  
 4269 be chosen freely.

**P.5 Communication Interface****P.5.1 General**


4272 As already explained in Clause F.1, there is no seamless communication solution for stand-  
 4273 alone Dedicated Tools such as "Dedicated Tools" for functional safety in SDI so far. The only  
 4274 possibility in the past has been a separate point-to-point communication connection, for  
 4275 example RS232, USB, or alike, between a Device and a PC running the Dedicated Tool  
 4276 software. Each of these connections requires appropriate driver software with different  
 4277 programming API for the Device and for the different PC communication interfaces.

4278 This leads to the problem that a Dedicated Tool either can work only with one well-defined  
 4279 communication interface or that the Dedicated Tool has to implement different APIs for Device  
 4280 driver integration.

4281 Another problem in a plant is that the network structure often requires communication across  
 4282 network boundaries (Routing). Due to the many fieldbuses and different communication  
 4283 protocols, it is very cumbersome to achieve an integrated network with routing functions for  
 4284 Dedicated Tools down to the associated Device (see Figure F.7).

4285 The second major part of DTI solves two problems:

- 4286 • All Devices/FS-Devices and their Dedicated Tools can rely on one well-defined  
 4287 communication interface.
- 4288 • The chosen communication technology (REST-Service) solves the routing problem  
 4289 across network boundaries.

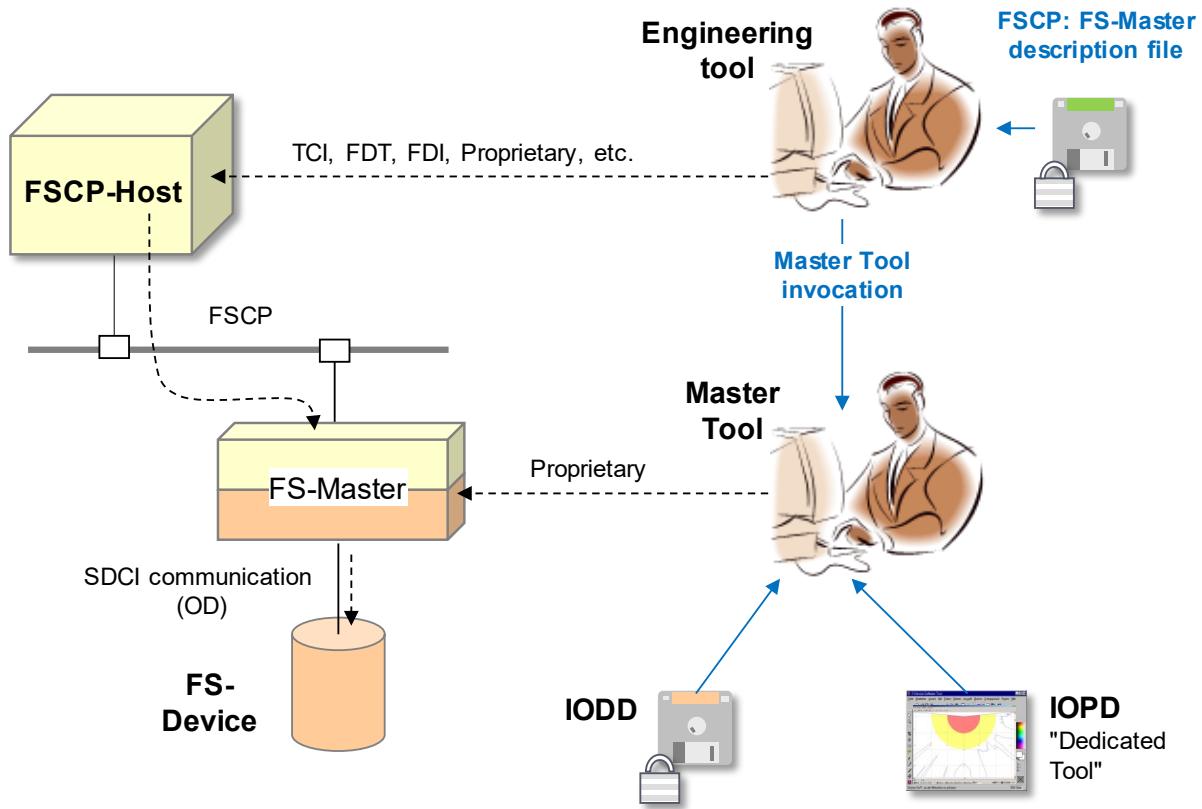

4290


4291 **Figure F.7 – Communication routes between Dedicated Tool and Device**4292 **P.5.2 Principle of DTI communications**

4293 The communication interface consists of a REST service which provides a unique interface  
 4294 (API) to the Dedicated Tool. This REST service can provide communication functionality for  
 4295 different field busses and proprietary network protocols. The Master Tool passes the  
 4296 communication parameters (i.e. DeviceInstanceIdent and REST Service Port number) which  
 4297 are necessary to establish a connection to the Dedicated Tool when it is invoked.

4298 Figure F.7 shows fieldbus or proprietary networks between the PC and the Device. Figure 57  
 4299 shows the mapping to software and communication drivers for the field bus. This routing  
 4300 information is generated by the Engineering System and transferred.

4301 When the Master Tool invokes the Dedicated tool, it passes a DeviceInstanceIdent as reference  
 4302 to the Dedicated Tool. This reference is forwarded from the Dedicated Tool to the Master Tool  
 4303 in every request to allow the Master Tool to address the corresponding IO-Link Safety Device.

4304 Figure F.8 shows the relationships between the components involved.

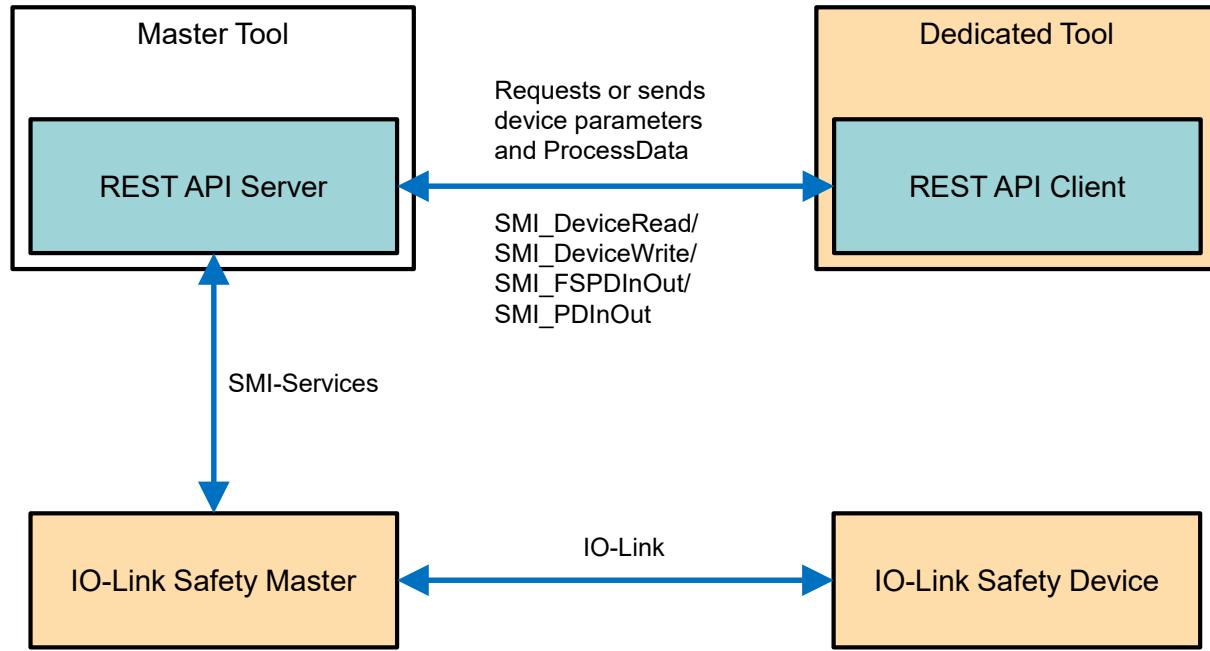**Figure F.8 – REST API Communication**

4307 It is always possible for a Dedicated Tool to use its native communication interfaces (for  
4308 example serial RS232) as an alternative besides the Communication Interface.

### 4309 **P.5.3 Definition of the Communication Interface**

4310 The communication interface consists of a REST-API implemented by the Master Tool and  
4311 described in the 'IO-Link-DTI-openapi.yaml' file (see <http://www.io-link.com/DTI/2024/06/IO-Link-DTI-openapi.yaml>).

### 4313 **P.5.1 Description of the Communication Interface**

4314 If a Dedicated Tool needs to read/write parameters to/from its Device, or read the Process Data,  
4315 the Dedicated Tool can POST a Device Tool Query (DTQ) to the REST Service. The REST  
4316 Service will respond with a Master Tool Response (MTR) as shown in more in F.8.

### 4317 **P.6 Reaction on incorrect tool behaviour**

4318 Table F.5 describes the system reaction if a Master Tool or Dedicated Tool works incorrectly.

**Table F.5 – Reaction on incorrect tool behaviour**

Fault	Description	System reaction
XML structure of PID file not valid	The PID file of a Dedicated Tool does not validate with the XML Schema in F.8.1	The Master Tool should only show an error message if required schema elements or attributes are missing. All unknown elements or attributes shall be ignored.
XML structure of TPF file not valid	The TPF file generated by the Master Tool does not validate with the XML Schema in F.8.3	The Dedicated Tool should only show an error message if required schema elements or attributes are missing. All unknown elements or attributes shall be ignored.
Dedicated Tool cannot be invoked	When the operation system is instructed to create a new process (tool invocation) the function returns an error code. Reason could be that the path of the exe file in the system registry is incorrect.	Master Tool shall show an error message (tool cannot be invoked) with the name and path of the exe file.
DeviceInstanceldent not valid	The Master Tool issues an incorrect DeviceInstanceldent	The Dedicated Tool should respond with an error message.

Fault	Description	System reaction
Timeout after invocation of the Dedicated Tool	The Dedicated Tool shall request the TPF within a maximum of 10 s.	In case of timeout the Master Tool will report a timeout error and terminate the connection to the Dedicated Tool.
Timeout on REST API requests for TPF, TBF and Process Data requests	The Master Tool shall respond within 2 s.	In case of timeout the Dedicated Tool will report a timeout error and terminate the connection to the Master Tool.
Timeout on REST API requests for ISDU	The Master Tool shall respond within 7s.	In case of timeout the Dedicated Tool will report a timeout error and terminate the connection to the Master Tool.
HTTP errors	Handling of HTTP errors / status	The standard HTTP status/error codes will be used by the REST Service.
SMI based errors	Negative SMI response	Issues in the IO-Link XML content will be handled by the error mechanism of the SMI Services.

## 4320 P.7 Compatibility

### 4321 P.7.1 Schema validation

4322 XML documents can easily be validated with the help of standard parsers and schema files. If  
 4323 the structure of an XML document does not follow the rules defined in the corresponding  
 4324 schema, the XML parser rejects the document. This is not very practical if tools with different  
 4325 versions of DTI files shall work together since a newer XML document cannot be processed by  
 4326 previous software.

4327 To implement a robust model, the Master Tool and the Dedicated Tools shall ignore any XML  
 4328 attributes or elements not recognizable in a valid XML document. This means that XML schema  
 4329 validation shall not be used. The schema files in Annex F.8 are for information purposes only.

4330 The installation program of the Dedicated Tool can always install the newest PID file version.  
 4331 The Master Tool shall ignore any unknown XML attributes or elements.

### 4332 P.7.2 Version policy

4333 If it is necessary to modify the structure definition of a TPF with the result that a new version of  
 4334 the invocation interface is defined, the Master Tool shall ensure that the right version of the  
 4335 TPF is created. That means it shall use an earlier version of the structure if the Dedicated Tool  
 4336 is only able to support the earlier version.

4337 The version attribute in the DocumentInfo Element of the PID file identifies the latest xml version  
 4338 of the Dedicated Tool. See Annex F.3.3 for details.

4339 If a Dedicated Tool supports a newer version than the Master Tool, the Master Tool uses its  
 4340 newest TPF version. In this case the Dedicated Tool shall work with the old schema version.


## 4341 P.8 Schema definitions for PID, TPF and TBF

### 4342 P.8.1 General

4343 The schema definitions in this Annex F.8 are for information only (see Annex F.7.1).

### 4344 P.8.2 Schema of the PID

4345 Figure F.9 shows the XML schema of the Program Interface Description file.

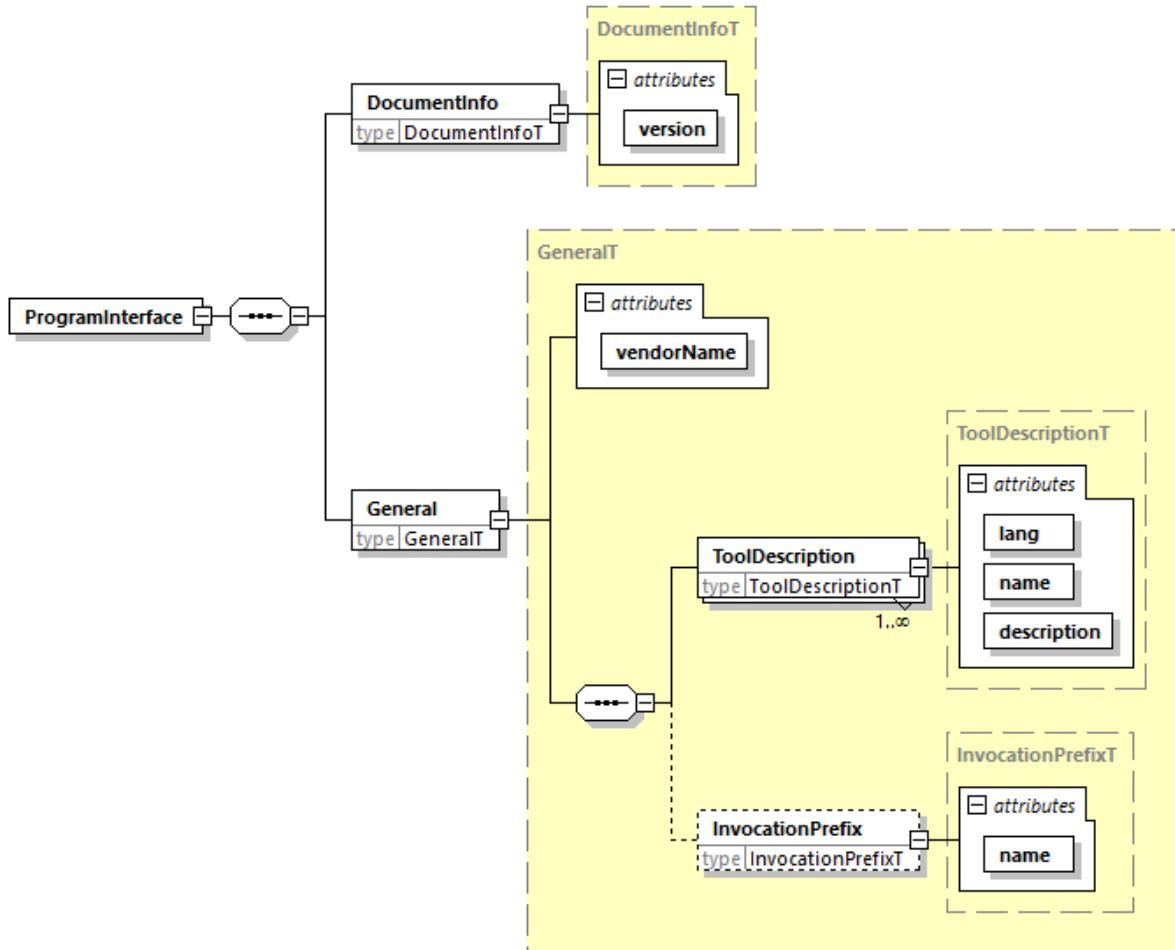

4346

4347

**Figure F.9 – XML schema of the PID file**

4348 Figure F.9 is based on the following XML schema description code:

```

4349 <?xml version="1.0" encoding="UTF-8"?>
4350 <xsd:schema xmlns="http://www.io-link.com/DTI/2024/06/PID" xmlns:prim="http://www.io-
4351 link.com/DTI/2024/06/Primitives" xmlns:xsd="http://www.w3.org/2001/XMLSchema"
4352 targetNamespace="http://www.io-link.com/DTI/2024/06/PID" elementFormDefault="qualified"
4353 attributeFormDefault="unqualified" version="1.0">
4354   <xsd:import namespace="http://www.w3.org/XML/1998/namespace"/>
4355   <xsd:import namespace="http://www.io-link.com/DTI/2024/06/Primitives" schemaLocation="DTI-
4356 Primitives1.0.xsd"/>
4357   <xsd:complexType name="DocumentInfoT">
4358     <xsd:attribute name="version" use="required">
4359       <xsd:simpleType>
4360         <xsd:restriction base="xsd:string">
4361           <xsd:pattern value="V\d+(\.\d+){1,7}" />
4362         </xsd:restriction>
4363       </xsd:simpleType>
4364     </xsd:attribute>
4365   </xsd:complexType>
4366   <xsd:complexType name="ToolDescriptionT">
4367     <xsd:attribute name="lang" type="xsd:string" use="required"/>
4368     <xsd:attribute name="name" type="xsd:string" use="required"/>
4369     <xsd:attribute name="description" type="xsd:string" use="required"/>
4370   </xsd:complexType>
4371   <xsd:complexType name="GeneralT">
4372     <xsd:sequence>
4373       <xsd:element name="ToolDescription" type="ToolDescriptionT" maxOccurs="unbounded"/>
4374     </xsd:sequence>
4375     <xsd:attribute name="vendorName" type="xsd:string" use="required"/>
4376   </xsd:complexType>
4377   <xsd:element name="ProgramInterface">
4378     <xsd:complexType>
4379       <xsd:sequence>
4380         <xsd:element name="DocumentInfo" type="DocumentInfoT"/>

```


```

4381     <xsd:element name="General" type="GeneralT"/>
4382     </xsd:sequence>
4383   </xsd:complexType>
4384 </xsd:element>
4385 </xsd:schema>

```

### P.8.3 Schema of the TPF

Figure F.10 shows the XML schema of the Temporary Parameter File.

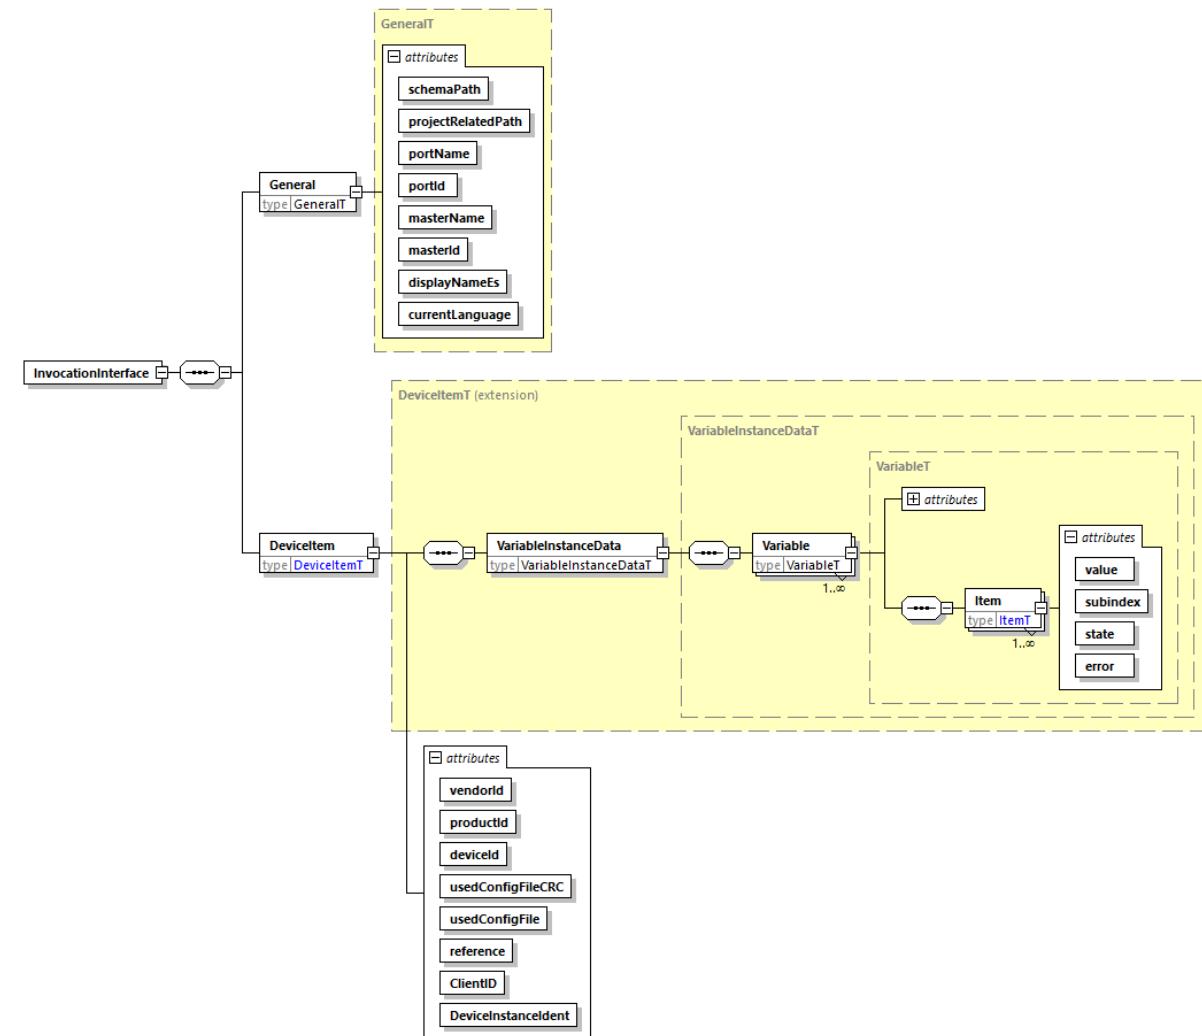

4388

**Figure F.10 – XML schema TPF**

4390 Figure F.10 is based on the following XML code:

```


4391 <?xml version="1.0" encoding="UTF-8"?>
4392 <xsd:schema xmlns="http://www.io-link.com/DTI/2024/06/TPF" xmlns:prim="http://www.io-
4393 link.com/DTI/2024/06/Primitives" xmlns:xsd="http://www.w3.org/2001/XMLSchema"
4394 targetNamespace="http://www.io-link.com/DTI/2024/06/TPF" elementFormDefault="qualified"
4395 attributeFormDefault="unqualified" version="1.0">
4396   <xsd:import namespace="http://www.io-link.com/DTI/2024/06/Primitives" schemaLocation="DTI-
4397 Primitives1.0.xsd"/>
4398   <xsd:complexType name="VariableInstanceDataT">
4399     <xsd:sequence>
4400       <xsd:element name="Variable" type="VariableT" maxOccurs="unbounded"/>
4401     </xsd:sequence>
4402   </xsd:complexType>
4403   <xsd:complexType name="VariableT">
4404     <xsd:sequence>
4405       <xsd:element name="Item" maxOccurs="unbounded">
4406         <xsd:complexType>
4407           <xsd:complexContent>
4408             <xsd:extension base="ItemT">
4409               <xsd:attribute name="value" type="xsd:string" use="required"/>
4410               <xsd:attribute name="subindex" type="xsd:unsignedByte" use="required"/>

```

```
4411      <xsd:attribute name="state" use="required">
4412          <xsd:simpleType>
4413              <xsd:restriction base="xsd:string">
4414                  <xsd:enumeration value="invalid"/>
4415                  <xsd:enumeration value="valid"/>
4416          </xsd:restriction>
4417      </xsd:simpleType>
4418  </xsd:attribute>
4419  </xsd:extension>
4420  </xsd:complexContent>
4421 </xsd:complexType>
4422 </xsd:element>
4423 </xsd:sequence>
4424 <xsd:attribute name="variableId" type="prim:IdT" use="required"/>
4425 </xsd:complexType>
4426 <xsd:complexType name="ItemT">
4427 <xsd:element name="InvocationInterface">
4428     <xsd:complexType>
4429         <xsd:sequence>
4430             <xsd:element name="General" type="GeneralT"/>
4431             <xsd:element name="DeviceItem"/>
4432         <xsd:complexType>
4433             <xsd:complexContent>
4434                 <xsd:extension base="DeviceItemT">
4435                     <xsd:attribute name="vendorId" type="xsd:unsignedShort" use="required"/>
4436                     <xsd:attribute name="productId" type="xsd:string" use="required"/>
4437                     <xsd:attribute name="deviceId" use="required">
4438                         <xsd:simpleType>
4439                             <xsd:restriction base="xsd:unsignedInt">
4440                                 <xsd:maxInclusive value="16777215"/>
4441                         </xsd:restriction>
4442                     </xsd:simpleType>
4443                 </xsd:attribute>
4444                 <xsd:attribute name="usedConfigFileCRC" type="xsd:int" use="required"/>
4445                 <xsd:attribute name="usedConfigFile" type="xsd:string" use="required"/>
4446                 <xsd:attribute name="reference" type="xsd:string" use="required"/>
4447                 <xsd:attribute name="ClientID" type="xsd:byte" use="required"/>
4448                 <xsd:attribute name="DeviceInstanceId" type="xsd:string" use="required"/>
4449             </xsd:extension>
4450             </xsd:complexContent>
4451         </xsd:complexType>
4452     </xsd:element>
4453     </xsd:sequence>
4454   </xsd:complexType>
4455 </xsd:element>
4456 <xsd:complexType name="GeneralT">
4457     <xsd:attribute name="schemaPath" type="xsd:string" use="required"/>
4458     <xsd:attribute name="projectRelatedPath" type="xsd:string" use="required"/>
4459     <xsd:attribute name="portName" type="xsd:string" use="required"/>
4460     <xsd:attribute name="portId" type="xsd:unsignedByte" use="required"/>
4461     <xsd:attribute name="masterName" type="xsd:string" use="required"/>
4462     <xsd:attribute name="masterId" type="xsd:int" use="required"/>
4463     <xsd:attribute name="displayNameEs" type="xsd:string" use="required"/>
4464     <xsd:attribute name="currentLanguage" type="xsd:string" use="required"/>
4465     <!-- IOLink -->
4466 </xsd:complexType>
4467 <xsd:complexType name="DeviceItemT">
4468     <xsd:sequence>
4469         <xsd:element name="VariableInstanceData" type="VariableInstanceDataT"/>
4470     </xsd:sequence>
4471 </xsd:complexType>
4472 </xsd:schema>
```

4473 **P.8.4 Schema of the TBF**

4474 Figure F.11 shows the XML schema of the Temporary Backchannel File.

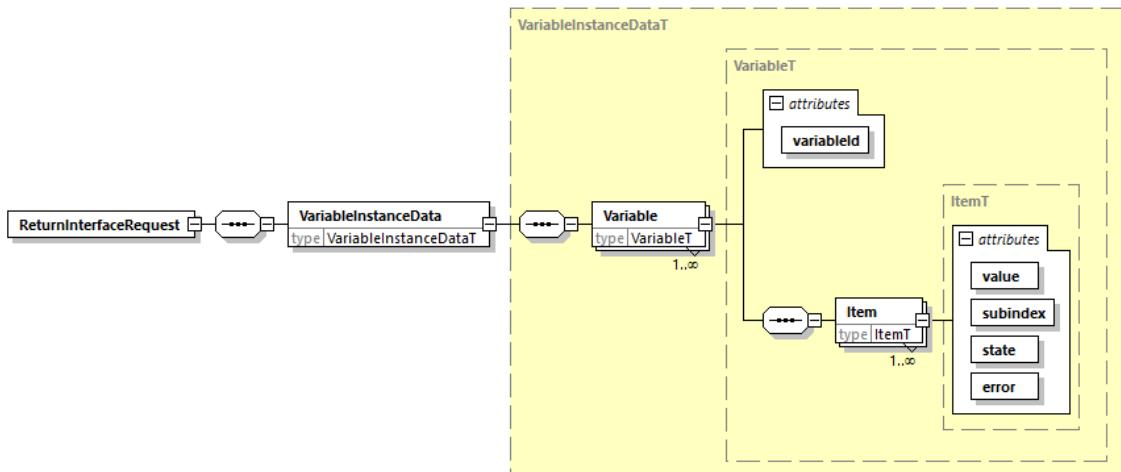

4475

**Figure F.11 – XML schema of a TBF**

4477 Figure F.11 is based on the following XML code:

```

4478 <?xml version="1.0" encoding="UTF-8"?>
4479 <xsd:schema xmlns="http://www.io-link.com/DTI/2024/06/TBF" xmlns:prim="http://www.io-
4480 link.com/DTI/2024/06/Primitives" xmlns:xsd="http://www.w3.org/2001/XMLSchema"
4481 targetNamespace="http://www.io-link.com/DTI/2024/06/TBF" elementFormDefault="qualified"
4482 attributeFormDefault="unqualified" version="1.0">
4483   <xsd:import namespace="http://www.io-link.com/DTI/2024/06/Primitives" schemaLocation="DTI-
4484 Primitives1.0.xsd"/>
4485   <xsd:complexType name="VariableInstanceDataT">
4486     <xsd:sequence>
4487       <xsd:element name="Variable" type="VariableT" maxOccurs="unbounded"/>
4488     </xsd:sequence>
4489   </xsd:complexType>
4490   <xsd:complexType name="VariableT">
4491     <xsd:sequence>
4492       <xsd:element name="Item" type="ItemT" maxOccurs="unbounded"/>
4493     </xsd:sequence>
4494     <xsd:attribute name="variableId" type="xsd:string" use="required"/>
4495   </xsd:complexType>
4496   <xsd:complexType name="ItemT">
4497     <xsd:attribute name="value" type="xsd:string" use="required"/>
4498     <xsd:attribute name="subindex" type="xsd:unsignedByte" use="required"/>
4499     <xsd:attribute name="state" use="required">
4500       <xsd:simpleType>
4501         <xsd:restriction base="xsd:string">
4502           <xsd:enumeration value="valid"/>
4503           <xsd:enumeration value="invalid"/>
4504         </xsd:restriction>
4505       </xsd:simpleType>
4506     </xsd:attribute>
4507   </xsd:complexType>
4508   <xsd:complexType name="ResponseT">
4509     <xsd:attribute name="value" type="xsd:boolean" use="required"/>
4510   </xsd:complexType>
4511   <xsd:element name="ReturnInterfaceRequest">
4512     <xsd:complexType>
4513       <xsd:sequence>
4514         <xsd:element name="VariableInstanceData" type="VariableInstanceDataT"/>
4515       </xsd:sequence>
4516     </xsd:complexType>
4517   </xsd:element>
4518   <xsd:element name="ReturnInterfaceResponse">
4519     <xsd:complexType>
4520       <xsd:sequence>
4521         <xsd:element name="Response" type="ResponseT"/>
4522       </xsd:sequence>
4523     </xsd:complexType>
4524   </xsd:element>
4525 </xsd:schema>
```

#### 4526 P.8.5 Schema of DTI primitives


4527 The DTI primitives used for PID, TPF and TBF are defined in the XML code as follows:

```

4528 <?xml version="1.0" encoding="UTF-8"?>
4529 <xsd:schema xmlns="http://www.io-link.com/DTI/2024/06/Primitives"
4530   xmlns:xsd="http://www.w3.org/2001/XMLSchema" targetNamespace="http://www.io-
4531   link.com/DTI/2024/06/Primitives">
4532   <xsd:annotation>
4533     <xsd:documentation>In this schema, only the necessary types and attributes for DTI are used
4534     from the Common Primitives Schema.</xsd:documentation>
4535     <xsd:appinfo>
4536       <schemainfo versiondate="20240620"/>
4537     </xsd:appinfo>
4538   </xsd:annotation>
4539   <!-- SIMPLE TYPES -->
4540   <xsd:simpleType name="IdT">
4541     <xsd:annotation>
4542       <xsd:documentation>Base Type for Object identifiers</xsd:documentation>
4543     </xsd:annotation>
4544     <xsd:restriction base="xsd:string"/>
4545   </xsd:simpleType>
4546   <xsd:simpleType name="GuidT">
4547     <xsd:annotation>
4548       <xsd:documentation>GUID</xsd:documentation>
4549     </xsd:annotation>
4550     <xsd:restriction base="xsd:string">
4551       <xsd:pattern value="\{[0-9A-Fa-f]\{8\}\-[0-9A-Fa-f]\{4\}\-[0-9A-Fa-f]\{4\}\-[0-
4552       9A-Fa-f]\{12\}\}" />
4553       <xsd:pattern value="[0-9A-Fa-f]\{8\}\-[0-9A-Fa-f]\{4\}\-[0-9A-Fa-f]\{4\}\-[0-9A-
4554       Fa-f]\{12\}" />
4555     </xsd:restriction>
4556   </xsd:simpleType>
4557   <!--
4558   <!-- COMPLEX TYPES -->
4559   <!-- Main Types -->
4560   <xsd:complexType name="DocumentT">
4561     <xsd:annotation>
4562       <xsd:documentation>Type for all top level elements</xsd:documentation>
4563     </xsd:annotation>
4564     <xsd:sequence>
4565       <xsd:element name="DocumentInfo" type="DocumentInfoT"/>
4566     </xsd:sequence>
4567   </xsd:complexType>
4568   <xsd:complexType name="DocumentInfoT">
4569     <xsd:attribute name="Version" type="xsd:string" use="required" fixed="1.1"/>
4570   </xsd:complexType>
4571   <!-- ELEMENT DECLARATIONS -->
4572   <!--
4573   <!-- Text Definition Elements-->
4574   <xsd:complexType name="ObjectT">
4575     <xsd:annotation>
4576       <xsd:documentation>Base type</xsd:documentation>
4577     </xsd:annotation>
4578   </xsd:complexType>
4579   <xsd:complexType name="FeatureT">
4580     <xsd:annotation>
4581       <xsd:documentation>Base type</xsd:documentation>
4582     </xsd:annotation>
4583     <xsd:attribute name="Name" type="xsd:string" use="optional"/>
4584   </xsd:complexType>
4585 </xsd:schema>
```

#### 4586 P.9 Schema Definitions of the Communication Interface

4587 The schema definitions of the Communication Interface provide a rule set to convert the 4 SMI  
4588 Services DeviceWrite, DeviceRead, PDInOut (see IO-Link Interface and System specification,  
4589 chapter 11) and FSPDInOut (see 10.3.8) into an XML notation.

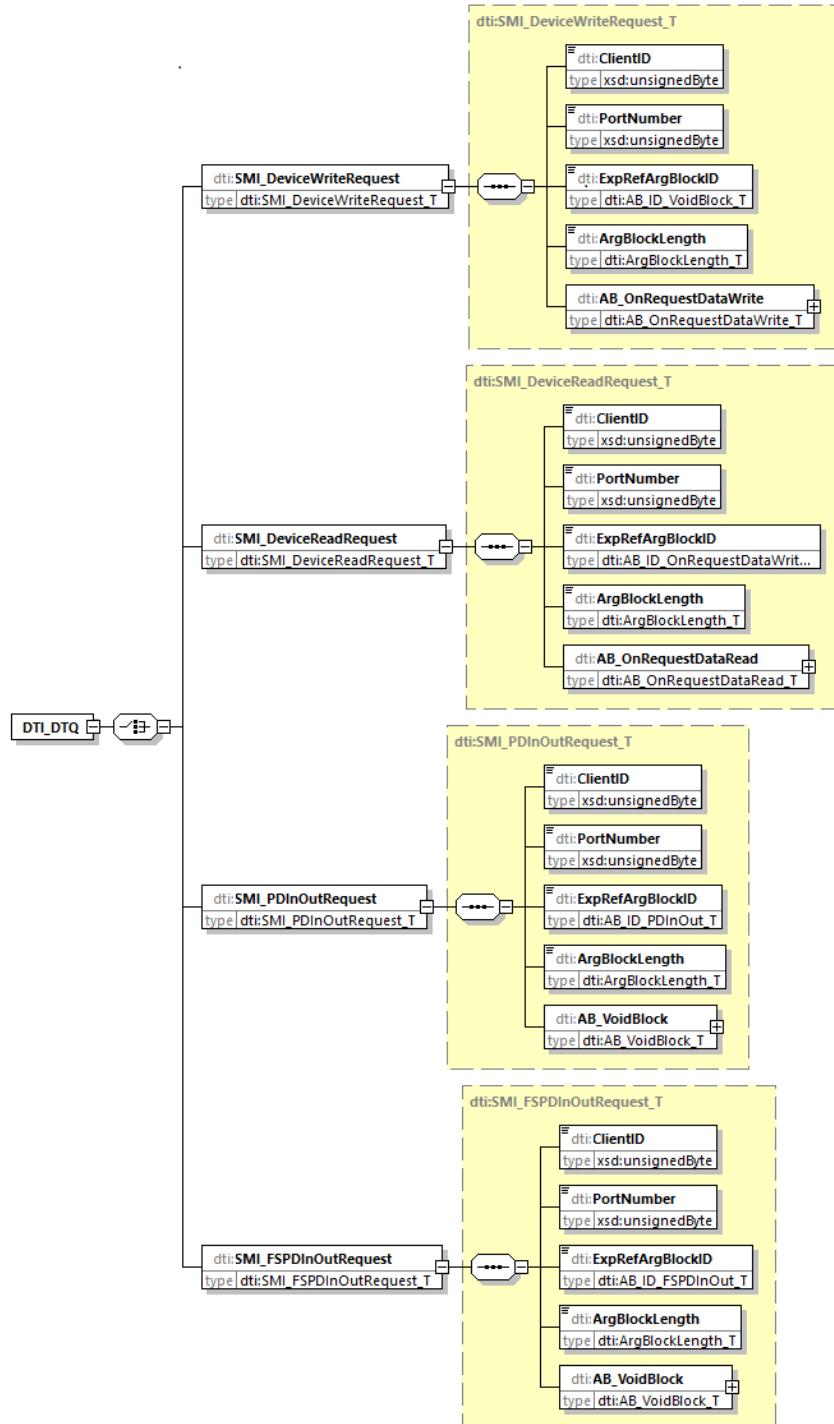


4590

4591

**Figure F.12 – XML Schema DTI\_DTQ**

4592 The Dedicated Tool issues an HTTP POST request to the Master Tool (see F.5) that contains a  
 4593 Device Tool Query element “DTI\_DTQ” as shown in Figure F.12. The Master Tool responds with a  
 4594 Master Tool Response element “DTI\_MTR” (see Figure F.13).

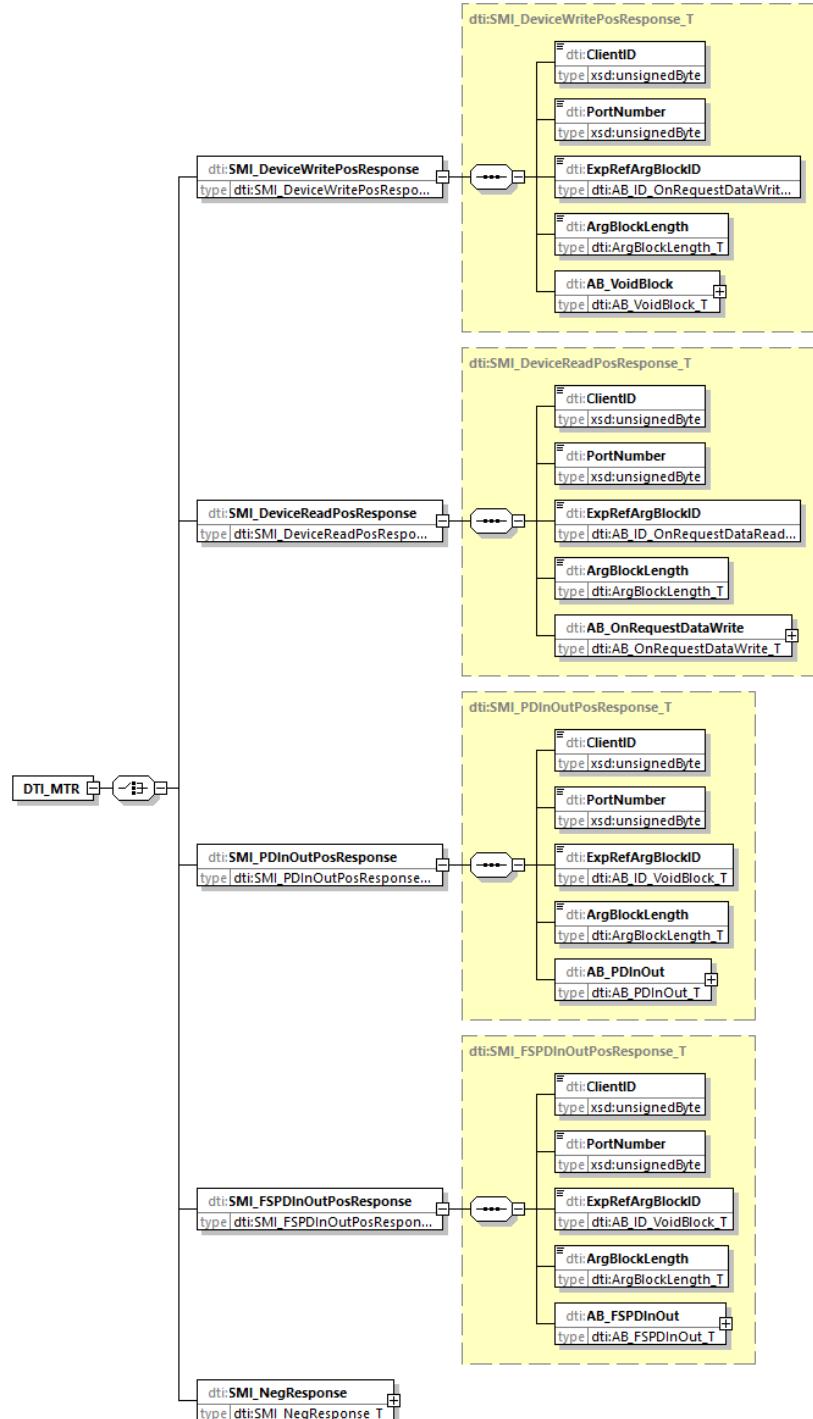


4595

4596

**Figure F.13 – DTI\_MTR response**

Both the DTI\_DTQ and the DTI\_MTR elements contain the SMI service parameters ClientID, PortNumber, ExpRefArgBlockID, the ArgBlockLength and as last element the ArgBlock representation itself. In case that the Device Tool Query “DTI\_DTQ” can't be answered as expected the DTI\_MTR element may contain a negative response “SMI\_NegResponse” element (see Figure F.14).

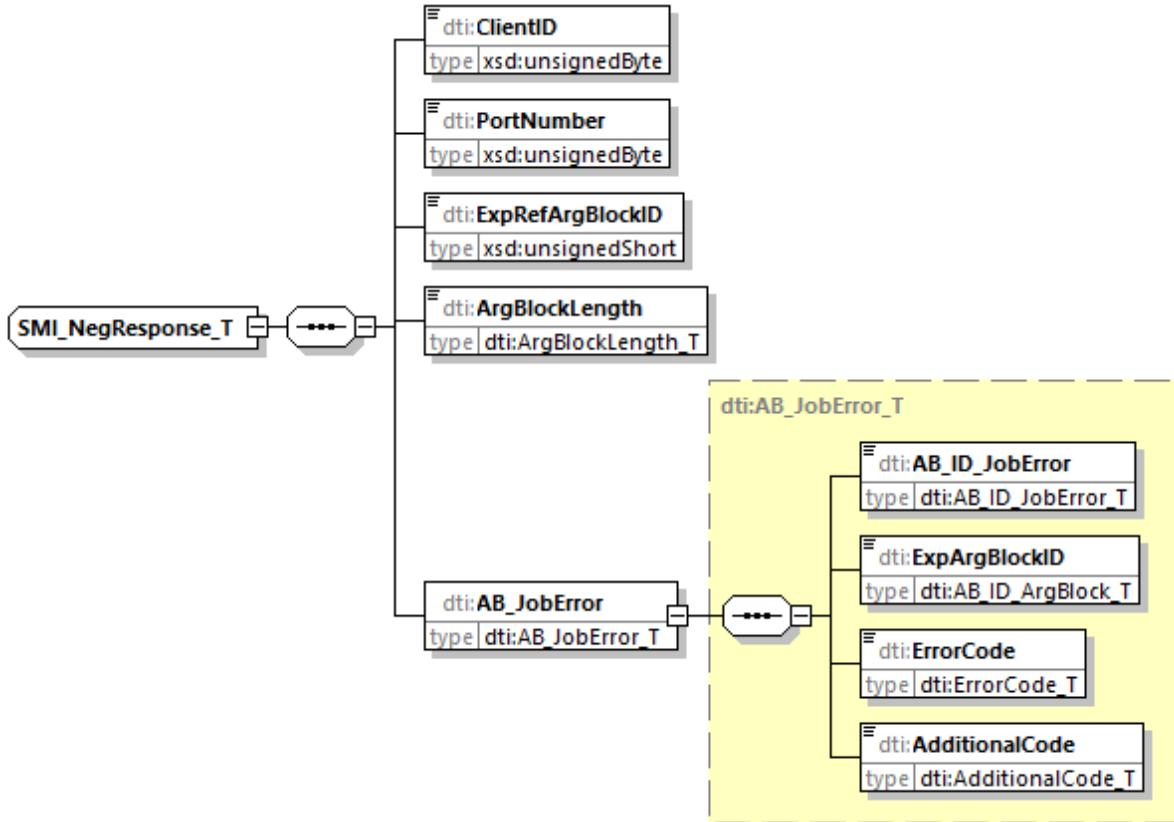

4602

4603

**Figure F.14 – DTI\_MTR negative response**

4604 Details on the XML coding of the DTI\_DTQ respectively the DTI\_MTR coding are given in the  
4605 following XML schema definitions.

#### P.9.1 Schema for DTI\_DTQ

```

4607 <?xml version="1.0" encoding="UTF-8"?>
4608 <xsd:schema xmlns:xsd="http://www.w3.org/2001/XMLSchema" xmlns:dti="http://www.io-
4609 link.com/DTI/2024/06/RestCommands" targetNamespace="http://www.io-
4610 link.com/DTI/2024/06/RestCommands" elementFormDefault="qualified">
4611   <xsd:include schemaLocation="IOL_DTI_BaseTypes.xsd"/>
4612   <xsd:complexType name="SMI_DeviceWriteRequest_T">
4613     <xsd:sequence>
4614       <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4615       <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4616       <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4617       <xsd:element name="ExpRefArgBlockID" type="dti:AB_ID_VoidBlock_T"/>
4618       <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4619       <xsd:element name="AB_OnRequestDataWrite" type="dti:AB_OnRequestDataWrite_T"/>
4620     </xsd:sequence>
4621   </xsd:complexType>
4622   <xsd:complexType name="SMI_DeviceReadRequest_T">
4623     <xsd:sequence>
4624       <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4625       <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4626       <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4627       <xsd:element name="ExpRefArgBlockID" type="dti:AB_ID_OnRequestDataWrite_T"/>
4628       <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4629       <xsd:element name="AB_OnRequestDataRead" type="dti:AB_OnRequestDataRead_T"/>
4630     </xsd:sequence>
4631   </xsd:complexType>
4632   <xsd:complexType name="SMI_PDInOutRequest_T">
4633     <xsd:sequence>
4634       <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4635       <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4636       <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4637       <xsd:element name="ExpRefArgBlockID" type="dti:AB_ID_PDInOut_T"/>
4638       <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4639       <xsd:element name="AB_VoidBlock" type="dti:AB_VoidBlock_T"/>
4640     </xsd:sequence>

```

```

4641 </xsd:complexType>
4642 <xsd:complexType name="SMI_FSPDInOutRequest_T">
4643   <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4644   <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4645   <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4646   <xsd:element name="ExpRefArgBlockID" type="dti:AB_ID_FSPDInOut_T"/>
4647   <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4648   <xsd:element name="AB_VoidBlock" type="dti:AB_VoidBlock_T"/>
4649 
4650   </xsd:sequence>
4651 </xsd:complexType>
4652 <xsd:element name="DTI_DTQ">
4653   <xsd:complexType>
4654     <xsd:choice>
4655       <xsd:element name="SMI_DeviceWriteRequest" type="dti:SMI_DeviceWriteRequest_T"/>
4656       <xsd:element name="SMI_DeviceReadRequest" type="dti:SMI_DeviceReadRequest_T"/>
4657       <xsd:element name="SMI_PDIOutRequest" type="dti:SMI_PDIOutRequest_T"/>
4658       <xsd:element name="SMI_FSPDInOutRequest" type="dti:SMI_FSPDInOutRequest_T"/>
4659     </xsd:choice>
4660   </xsd:complexType>
4661 </xsd:element>
4662 </xsd:schema>
```

## P.9.2 Schema for DTI\_MTR

```

4663 <?xml version="1.0" encoding="UTF-8"?>
4664 <xsd:schema xmlns:xsd="http://www.w3.org/2001/XMLSchema" xmlns:dti="http://www.io-
4665 link.com/DTI/2024/06/RestCommands" targetNamespace="http://www.io-
4666 link.com/DTI/2024/06/RestCommands" elementFormDefault="qualified">
4667   <xsd:include schemaLocation="IOI_DTI_BaseTypes.xsd"/>
4668   <xsd:complexType name="SMI_DeviceWritePosResponse_T">
4669     <xsd:sequence>
4670       <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4671       <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4672       <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4673       <xsd:element name="ExpRefArgBlockID" type="dti:AB_ID_OnRequestDataWrite_T"/>
4674       <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4675       <xsd:element name="AB_VoidBlock" type="dti:AB_VoidBlock_T"/>
4676 
4677     </xsd:sequence>
4678   </xsd:complexType>
4679   <xsd:complexType name="SMI_DeviceReadPosResponse_T">
4680     <xsd:sequence>
4681       <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4682       <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4683       <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4684       <xsd:element name="ExpRefArgBlockID" type="dti:AB_ID_OnRequestDataRead_T"/>
4685       <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4686       <xsd:element name="AB_OnRequestDataWrite" type="dti:AB_OnRequestDataWrite_T"/>
4687 
4688     </xsd:sequence>
4689   </xsd:complexType>
4690   <xsd:complexType name="SMI_PDIOutPosResponse_T">
4691     <xsd:sequence>
4692       <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4693       <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4694       <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4695       <xsd:element name="ExpRefArgBlockID" type="dti:AB_ID_VoidBlock_T"/>
4696       <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4697       <xsd:element name="AB_PDIOut" type="dti:AB_PDIOut_T"/>
4698 
4699     </xsd:sequence>
4700   </xsd:complexType>
4701   <xsd:complexType name="SMI_FSPDInOutPosResponse_T">
4702     <xsd:sequence>
4703       <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4704       <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4705       <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4706       <xsd:element name="ExpRefArgBlockID" type="dti:AB_ID_VoidBlock_T"/>
4707       <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4708       <xsd:element name="AB_FSPDInOut" type="dti:AB_FSPDInOut_T"/>
4709 
4710     </xsd:sequence>
4711   </xsd:complexType>
4712   <xsd:complexType name="SMI_NegResponse_T">
4713     <xsd:sequence>
4714       <!-- Elements ClientID, PortNumber, and ArgBlockLength not checked by schema validator -->
4715       <xsd:element name="ClientID" type="xsd:unsignedByte"/>
4716       <xsd:element name="PortNumber" type="xsd:unsignedByte"/>
4717       <xsd:element name="ExpRefArgBlockID" type="xsd:unsignedShort"/>
4718       <xsd:element name="ArgBlockLength" type="dti:ArgBlockLength_T"/>
4719       <xsd:element name="AB_JobError" type="dti:AB_JobError_T"/>
4720 
4721     </xsd:sequence>
```

```

4718  </xsd:complexType>
4719  <xsd:element name="DTI_MTR">
4720    <xsd:complexType>
4721      <xsd:choice>
4722        <xsd:element name="SMI_DeviceWritePosResponse" type="dti:SMI_DeviceWritePosResponse_T"/>
4723        <xsd:element name="SMI_DeviceReadPosResponse" type="dti:SMI_DeviceReadPosResponse_T"/>
4724        <xsd:element name="SMI_PDIInOutPosResponse" type="dti:SMI_PDIInOutPosResponse_T"/>
4725        <xsd:element name="SMI_FSPDInOutPosResponse" type="dti:SMI_FSPDInOutPosResponse_T"/>
4726        <xsd:element name="SMI_NegResponse" type="dti:SMI_NegResponse_T"/>
4727      </xsd:choice>
4728    </xsd:complexType>
4729  </xsd:element>
4730</xsd:schema>

```

### P.9.3 Schema for DTI Online Channel Base Types

```

4731
4732  <?xml version="1.0" encoding="UTF-8"?>
4733  <xsd:schema xmlns:xsd="http://www.w3.org/2001/XMLSchema" xmlns:dti="http://www.io-
4734  link.com/DTI/2024/06/RestCommands" targetNamespace="http://www.io-
4735  link.com/DTI/2024/06/RestCommands" elementFormDefault="qualified">
4736    <!-- General types -->
4737    <xsd:simpleType name="ArgBlockLength_T">
4738      <xsd:restriction base="xsd:unsignedShort">
4739        <xsd:minInclusive value="2"/>
4740      </xsd:restriction>
4741    </xsd:simpleType>
4742    <xsd:simpleType name="PDIInOutLength_T">
4743      <xsd:restriction base="xsd:unsignedByte">
4744        <xsd:minInclusive value="0"/>
4745        <xsd:maxInclusive value="32"/>
4746      </xsd:restriction>
4747    </xsd:simpleType>
4748    <xsd:simpleType name="FSPDInOutLength_T">
4749      <xsd:restriction base="xsd:unsignedByte">
4750        <xsd:minInclusive value="0"/>
4751        <xsd:maxInclusive value="32"/>
4752      </xsd:restriction>
4753    </xsd:simpleType>
4754    <xsd:complexType name="OctetString_T">
4755      <xsd:sequence minOccurs="0" maxOccurs="unbounded">
4756        <xsd:element name="Octet" type="xsd:unsignedByte"/>
4757      </xsd:sequence>
4758    </xsd:complexType>
4759    <xsd:simpleType name="ErrorCode_T">
4760      <xsd:restriction base="xsd:unsignedByte">
4761        <xsd:enumeration value="64"/>
4762        <xsd:enumeration value="128"/>
4763      </xsd:restriction>
4764    </xsd:simpleType>
4765    <xsd:simpleType name="AdditionalCode_T">
4766      <xsd:restriction base="xsd:unsignedByte"/>
4767    </xsd:simpleType>
4768    <!-- ArgBlock ID types and their restrictions -->
4769    <xsd:simpleType name="AB_ID_ArgBlock_T">
4770      <xsd:restriction base="xsd:unsignedShort">
4771        <xsd:minInclusive value="1"/>
4772      </xsd:restriction>
4773    </xsd:simpleType>
4774    <xsd:simpleType name="AB_ID_VoidBlock_T">
4775      <xsd:restriction base="dti:AB_ID_ArgBlock_T">
4776        <xsd:enumeration value="65520"/>
4777        <!-- 0xFFFF0 -->
4778      </xsd:restriction>
4779    </xsd:simpleType>
4780    <xsd:simpleType name="AB_ID_OnRequestDataWrite_T">
4781      <xsd:restriction base="dti:AB_ID_ArgBlock_T">
4782        <xsd:enumeration value="12288"/>
4783        <!-- 0x3000 -->
4784      </xsd:restriction>
4785    </xsd:simpleType>
4786    <xsd:simpleType name="AB_ID_OnRequestDataRead_T">
4787      <xsd:restriction base="dti:AB_ID_ArgBlock_T">
4788        <xsd:enumeration value="12289"/>
4789        <!-- 0x3001 -->
4790      </xsd:restriction>
4791    </xsd:simpleType>
4792    <xsd:simpleType name="AB_ID_PDIInOut_T">
4793      <xsd:restriction base="dti:AB_ID_ArgBlock_T">
4794        <xsd:enumeration value="4099"/>

```

```

4795      <!-- 0x1003 -->
4796      </xsd:restriction>
4797  </xsd:simpleType>
4798  <xsd:simpleType name="AB_ID_FSPDInOut_T">
4799    <xsd:restriction base="dti:AB_ID_ArgBlock_T">
4800      <xsd:enumeration value="4355"/>
4801      <!-- 0x1103 -->
4802    </xsd:restriction>
4803  </xsd:simpleType>
4804  <xsd:simpleType name="AB_ID_JobError_T">
4805    <xsd:restriction base="dti:AB_ID_ArgBlock_T">
4806      <xsd:enumeration value="65535"/>
4807      <!-- 0xFFFF -->
4808    </xsd:restriction>
4809  </xsd:simpleType>
4810  <!-- ArgBlock types -->
4811  <xsd:complexType name="AB_VoidBlock_T">
4812    <xsd:sequence>
4813      <xsd:element name="AB_VoidBlockID" type="dti:AB_ID_VoidBlock_T"/>
4814    </xsd:sequence>
4815  </xsd:complexType>
4816  <xsd:complexType name="AB_OnRequestDataWrite_T">
4817    <xsd:sequence>
4818      <xsd:element name="AB_ID_OnRequestDataWrite" type="dti:AB_ID_OnRequestDataWrite_T"/>
4819      <xsd:element name="Index" type="xsd:unsignedShort"/>
4820      <xsd:element name="Subindex" type="xsd:unsignedByte"/>
4821      <xsd:element name="OnRequestData" type="dti:OctetString_T"/>
4822    </xsd:sequence>
4823  </xsd:complexType>
4824  <xsd:complexType name="AB_OnRequestDataRead_T">
4825    <xsd:sequence>
4826      <xsd:element name="AB_ID_OnRequestDataRead" type="dti:AB_ID_OnRequestDataRead_T"/>
4827      <xsd:element name="Index" type="xsd:unsignedShort"/>
4828      <xsd:element name="Subindex" type="xsd:unsignedByte"/>
4829      <!-- ArgBlock 0x3001 is Index only -->
4830    </xsd:sequence>
4831  </xsd:complexType>
4832  <xsd:complexType name="AB_PDIInOut_T">
4833    <xsd:sequence>
4834      <xsd:element name="AB_ID_PDIInOut" type="dti:AB_ID_PDIInOut_T"/>
4835      <xsd:element name="PQI" type="xsd:unsignedByte"/>
4836      <xsd:element name="OE" type="xsd:unsignedByte"/>
4837      <xsd:element name="InputDataLength" type="dti:PDINotLength_T"/>
4838      <xsd:element name="PDI" type="dti:OctetString_T"/>
4839      <xsd:element name="OutputDataLength" type="dti:PDINotLength_T"/>
4840      <xsd:element name="PDO" type="dti:OctetString_T"/>
4841    </xsd:sequence>
4842  </xsd:complexType>
4843  <xsd:complexType name="AB_FSPDInOut_T">
4844    <xsd:sequence>
4845      <xsd:element name="AB_ID_FSPDInOut" type="dti:AB_ID_FSPDInOut_T"/>
4846      <xsd:element name="PQI" type="xsd:unsignedByte"/>
4847      <xsd:element name="OE" type="xsd:unsignedByte"/>
4848      <xsd:element name="SPDUIInLength" type="dti:FSPDInOutLength_T"/>
4849      <xsd:element name="PDILength" type="dti:PDINotLength_T"/>
4850      <xsd:element name="SPDUIIn" type="dti:OctetString_T"/>
4851      <xsd:element name="PDI" type="dti:OctetString_T"/>
4852      <xsd:element name="SPDUOutLength" type="dti:FSPDInOutLength_T"/>
4853      <xsd:element name="PDOLength" type="dti:PDINotLength_T"/>
4854      <xsd:element name="SPDUOut" type="dti:OctetString_T"/>
4855      <xsd:element name="PDO" type="dti:OctetString_T"/>
4856    </xsd:sequence>
4857  </xsd:complexType>
4858  <xsd:complexType name="AB_JobError_T">
4859    <xsd:sequence>
4860      <xsd:element name="AB_ID_JobError" type="dti:AB_ID_JobError_T"/>
4861      <xsd:element name="ExpArgBlockID" type="dti:AB_ID_ArgBlock_T"/>
4862      <xsd:element name="ErrorCode" type="dti:ErrorCode_T"/>
4863      <xsd:element name="AdditionalCode" type="dti:AdditionalCode_T"/>
4864    </xsd:sequence>
4865  </xsd:complexType>
4866 </xsd:schema>

```

## P.10 Yaml file IO-Link DTI OPENAPI

4868 The Yaml file below (see <https://yaml.org/> for more information on Yaml) contains the formal  
 4869 description of the REST API.

```
4870 openapi: 3.0.0
4871 info:
4872   title: IO-Link DTI REST API
4873   description: |-
4874     This describes the IO-Link REST API for communication between the Master Tool and a
4875     Dedicated Tool.
4876
4877     Security Note: As a Master Tool developer implementing this API, restrict the REST port so
4878     that it will only communicate with clients on localhost/127.0.0.1. This can be done through the
4879     selected webserver.
4880
4881     Invocation interface - pass the REST Service Port number and the DeviceInstanceIdent as
4882     command line parameters when invoking the Dedicated Tool.
4883
4884     The standard HTTP status/error codes will be used by the REST Service.
4885     Issues in the IO-Link XML content will be handled by the error mechanism of the SMI
4886     Services.
4887
4888     Refer to the relevant sections of Annex F or www.io-link.com for the schema definitions for
4889     the TPF, TBF, DTI_DTQ and DTI_MTR.
4890
4891   contact:
4892     email: info@io-link.com
4893   license:
4894     name: Apache 2.0
4895     url: http://www.apache.org/licenses/LICENSE-2.0.html
4896     version: 1.0.0
4897   servers:
4898     - url: http://127.0.0.1
4899
4900 paths:
4901   /tpf/{DeviceInstanceIdent}:
4902     get:
4903       summary: Get TPF by DeviceInstanceIdent
4904       description: Returns a TPF in XML format for the DeviceInstanceIdent parameter.
4905       parameters:
4906         - name: DeviceInstanceIdent
4907           in: path
4908           description: DeviceInstanceIdent of the device
4909           required: true
4910           schema:
4911             type: string
4912       responses:
4913         '200':
4914           description: successful operation that returns a TPF in XML format
4915           content:
4916             application/xml:
4917               schema:
4918                 type: object
4919                 properties:
4920                   InvocationInterface:
4921                     type: object
4922         '400':
4923           description: Bad request
4924
4925   /tbf/{DeviceInstanceIdent}:
4926     post:
4927       summary: posts a TBF
4928       description: Posts a TBF to the Master Tool REST service with updated parameters and/or
4929       the TechParCRC.
4930       parameters:
4931         - name: DeviceInstanceIdent
4932           in: path
4933           description: DeviceInstanceIdent of the device
4934           required: true
4935           schema:
4936             type: string
4937       requestBody:
4938         required: true
4939         content:
4940           application/xml:
4941             schema:
4942               type: object
4943               properties:
4944                 ReturnInterfaceRequest:
4945                   type: object
4946       responses:
4947         '200':
```

```
4948         description: successful operation, TBF posted and response is a
4949     ReturnInterfaceResponse
4950         content:
4951             application/xml:
4952                 schema:
4953                     type: object
4954                     properties:
4955                         ReturnInterfaceResponse:
4956                             type: object
4957             '400':
4958                 description: Bad request
4959
4960
4961 /OnlineChannel/{DeviceInstanceId}:
4962 post:
4963     summary: Posts xml containing the Device Tool Query (DTQ).
4964     description: Post xml to the Master Tool for writing/reading parameters/process data
4965     to/from the IO-Link device.
4966     parameters:
4967         - name: DeviceInstanceId
4968             in: path
4969             description: DeviceInstanceId of the device
4970             required: true
4971             schema:
4972                 type: string
4973     requestBody:
4974         content:
4975             application/xml:
4976                 schema:
4977                     type: object
4978                     properties:
4979                         DTI_DTQ:
4980                             type: object
4981     responses:
4982     '200':
4983         description: successful operation, Master Tool Response (MTR) returned
4984         content:
4985             application/xml:
4986                 schema:
4987                     type: object
4988                     properties:
4989                         DTI_MTR:
4990                             type: object
4991     '400':
4992         description: Bad request
```

4993  
4994  
4995  
4996

## Annex Q (normative)

### Main scenarios of SDCI-FS

4997

#### **Q.1 Overview**

4998 Table G.1 shows main scenarios, the initial key parameters, and the associated system  
 4999 activities. Its purpose is to provide a brief overview and it contains references to clauses with  
 5000 detailed descriptions. The following scenarios and rules apply regardless of the actual mode of  
 5001 the master (standard IO-Link mode (IOL\_AUTOSTART or IOL\_MANUAL), or SAFETYCOM).

5002

**Table G.1 – Main scenarios of SDCI-FS**


Scenario	Initial parameters	System activities
OSSD operation (on FS-DI or FS-Master)  See Figure G.1	Authenticity = 0 Port = 0 FSP_TechParCRC ≠ 0 (factory settings)	<ol style="list-style-type: none"> <li>1. Modify FST parameter via tool (e.g. "USB Master"; option; see off-site commissioning in IEC 61131-9) and IODD</li> <li>2. Adapt FSP_TechParCRC (see 11.7.8) using "Dedicated Tool"</li> <li>3. FS-Device evaluates validity of technology parameters (FST) via FSP_TechParCRC at STARTUP</li> <li>4. Plug, validate &amp; play (default)</li> </ol>
Commissioning (Test = monitored operation)  See Figure G.1	Authenticity = 0 Port = 0 FSP_TechParCRC ≠ 0 (factory settings)	<ol style="list-style-type: none"> <li>1. Set FSP_TechParCRC = 0 temporarily (FS-Device and FSP_Verify-Record) via FS-Master Tool</li> <li>2. Assign Authenticity and Port to FS-Device via FS-Master Tool and via Authenticity record</li> <li>3. Assign FSP parameter via FS-Master Tool and assign FSP_VerifyRecord to FS-Master (see 9.4.2 "Local modifications")</li> <li>4. PowerOFF/ON FS-Device (reset) for a duration of at least the time defined by auxiliary parameter FSP_MinShutDownTime (see A.2.12)</li> <li>5. FS-Master transfers FSP_VerifyRecord to FS-Device (see A.2.10 and 10.4.3.1)</li> <li>6. Run in test mode (Verification: Authenticity + FSP_TechParCRC compared; Data Storage disabled)</li> <li>7. FST parameter can now be modified (also standard parameter, but no FSP parameter) and are valid without power cycle.</li> <li>8. FS-Master Tool and FS-Master are responsible to indicate test mode and/or to prevent from running in test mode w/o tool connection. For this purpose, the FS-Master shall store the Port configuration with FSP_TechParCRC = "0" in a volatile manner. Thus, after restart of the FS-Master ("power cycle") w/o tool, the FS-Device will not receive a valid Port configuration and will not perform safety communication. Changes of FSP-Parameter require a power cycle of the device.</li> </ol>
Commissioning to Armed and Validate  See Figure G.1	Authenticity = FSCP ("A-Code", NOTE) Port = Port number FSP_TechParCRC = 0	<ol style="list-style-type: none"> <li>1. Assign actual FSP_TechParCRC (FS-Device and FSP_VerifyRecord) via FS-Master Tool</li> <li>2. Transfer FSP Parameter records to FS-Master, secured by FSP_ProtParCRC via FS-Master Tool (SMI service)</li> <li>3. Port restart after Port configuration (see IEC 61131-9)</li> <li>4. Upload parameters to Data Storage (FSP and FST) in PREOPERATE, see "Backup/Restore" in IEC 61131-9</li> <li>5. FS-Master transfers FSP_VerifyRecord to FS-Device (see A.2.10)</li> <li>6. Run in armed mode (Verification: Authenticity + FSP_TechParCRC compared), see 11.7.6</li> <li>7. Validation according to safety manual of FS-Device. (Standard parameter could be changed in Armed Mode, but no FSP or FST parameter)</li> </ol>
Armed to Commissioning	Authenticity = FSCP ("A-Code", NOTE) Port = Port number FSP_TechParCRC ≠ 0	<ol style="list-style-type: none"> <li>1. Set FSP_TechParCRC = 0 temporarily (FS-Device and FSP_Verify-Record) via FS-Master Tool</li> <li>2. Follow activity 4. to activity 8. in scenario "Commissioning"</li> </ol>

Scenario	Initial parameters	System activities
Replacement by FS-Device with factory settings w/o tools	Authenticity = 0 Port = 0 FSP_TechParCRC ≠ 0	<ol style="list-style-type: none"> <li>Download and adopt parameters from Data Storage (FSP and FST) if Authenticity and Port = 0 (see 12.5.1 and 12.5.2 in IEC 61131-9)</li> <li>Run in armed mode (Verification: Authenticity + FSP_TechParCRC compared), see 11.7.6 and A.2.10</li> <li>Validation according to safety manual of FS-Device.</li> </ol>
Misconnection of configured FS-Devices	Authenticity = FSCP ("A-Code", NOTE) Port = Port number FSP_TechParCRC ≠ 0	<ol style="list-style-type: none"> <li>No adoption of downloaded parameters from Data Storage (FSP and FST) since Authenticity and Port ≠ "0" in FS-Device</li> <li>SCL not started (Verification: Authenticity + FSP_TechParCRC compared), see 11.7.6 and A.2.10</li> <li>Error message: "Misconnection" (0xB003 or 0xB004, see Annex B).</li> </ol>
Connection to a master in standard IO-Link mode (without transmission of FSP_Verify-Record)	Don't care	<ol style="list-style-type: none"> <li>Parameter rules do not depend on the IO-Link mode. For this reason, all of the above rules apply, and parameter can be changed under these restrictions.</li> </ol>
NOTE "A-Code" refers to IEC 61784-3:2021		

5003

## 5004 Q.2 Sequence chart of commissioning

5005 Sequence chart in Figure G.1 illustrates major activities during commissioning of an FS-Device  
 5006 with factory settings. First phase is the test phase of FS-Device and safety functions while in  
 5007 monitored operation by personnel. Second phase comprises arming of Port and corresponding  
 5008 FS-Device as well as validation of the safety function according to safety manuals.

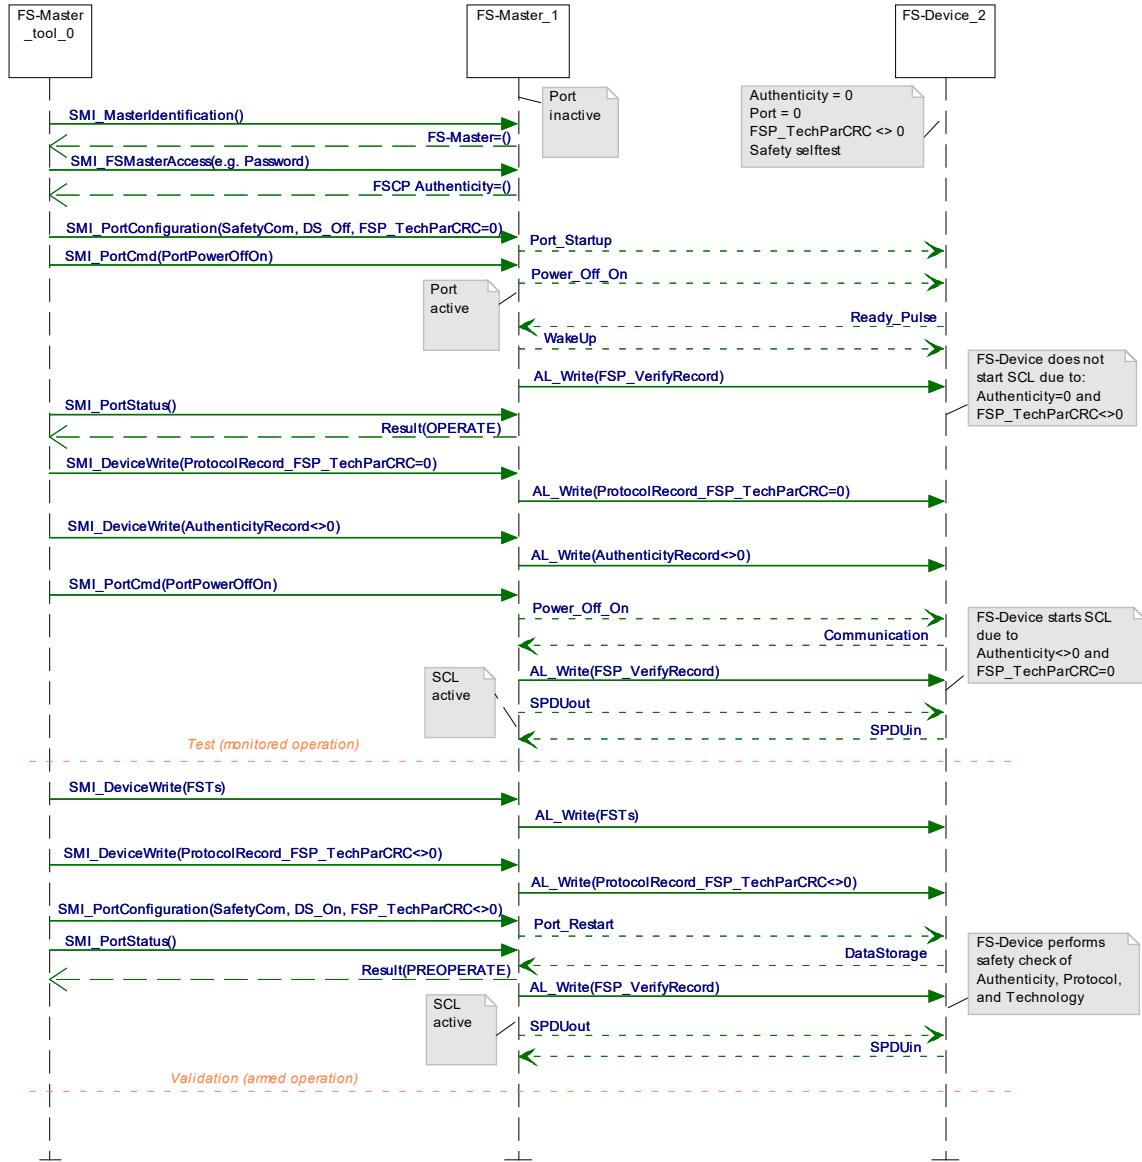


5009

5010 **Figure G.1 – Commissioning with test and armed operation**

5011

5012 **Q.3 Sequence chart of replacement**


5013 Sequence chart in Figure G.2 illustrates major activities after an FS-Device replacement by one  
 5014 with factory settings.

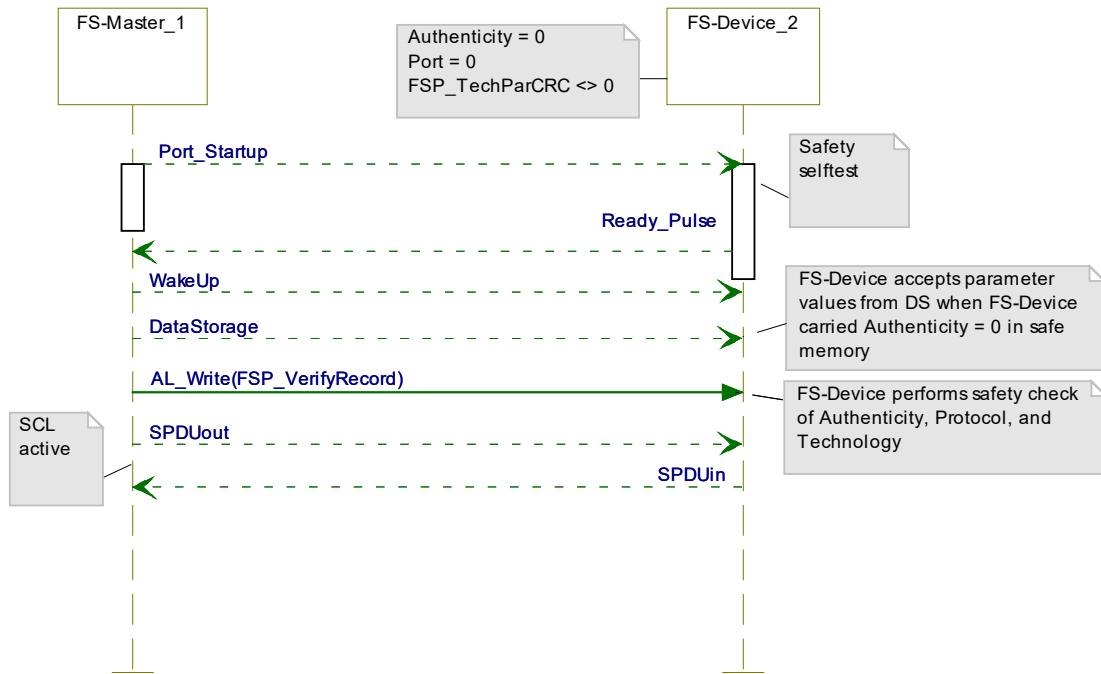

5015  
 5016 **Figure G.2 – FS-Device replacement**

5017 **Q.4 Sequence chart of misconnection**

5018 Sequence chart in Figure G.3 illustrates major activities after an FS-Device replacement by one  
 5019 with other parameters than factory settings.

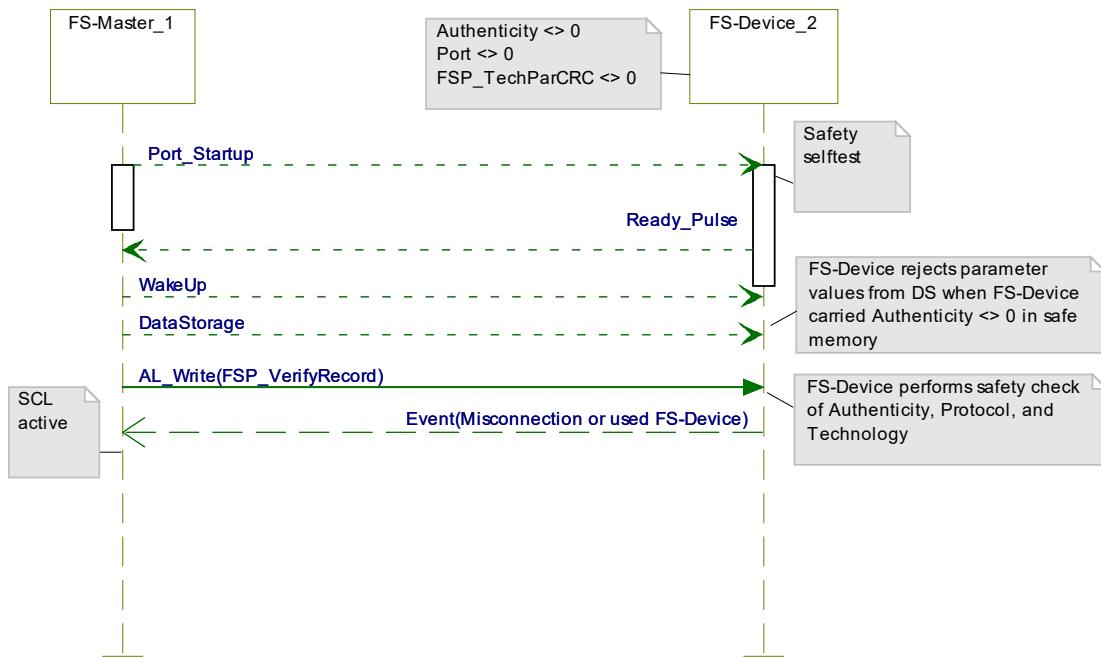

5020  
 5021 **Figure G.3 – FS-Device misconnection**

5022  
5023  
5024  
5025

## Annex R (normative)

### System requirements

5026

#### R.1 Indicators

5027

##### R.1.1 General

5028 Indicators for FS-Devices are not mandatory since for example proximity sensors may be too  
5029 small for LEDs (light emitting diode).

5030 FS-Masters and FS-Devices may be used in a mix of different technologies such as

- 5031 • Fieldbus safety modules for inputs (e.g. F-DI module) or outputs (e.g. F-DO module),
- 5032 • Safety devices such as light curtains connected to fieldbuses via FSCPs,
- 5033 • SDCI Masters and Devices.

5034 Thus, it is the designer's responsibility to layout the indication of the signal status, modes, or  
5035 operations for FS-Masters and FS-Devices.

5036

##### R.1.2 FS-DI

5037 In case an FS-Master Port is running in FS-DI mode it behaves similar to an F-DI module port.  
5038 One possibility of indication is using the same indication as with the SIO mode.

5039

##### R.1.3 Safety communication

5040 In case an FS-Master Port is running in SCL mode, the normal non-safety operation indication  
5041 can also be used.

5042

##### R.1.4 Acknowledgment request

5043 A machine is not allowed to restart automatically after a stop. Usually, after repair or clearance,  
5044 the signal/service "ChFAckReq" is switched ON as specified in 11.11.4 and 11.11.5. It is highly  
5045 recommended to indicate this signal on an FS-Master Port and optionally on FS-Devices where  
5046 it is likely to cause a trip due to high frequency or duration of exposure to a safety function.

5047

## R.2 Installation guidelines, electrical safety, and security

5048 SDCI installation guidelines shall be considered (see [19]).

5049 Only FS-Masters and FS-Devices providing a short form functional safety assessment report  
5050 according to IEC 61508 or ISO 13849-1 together with a certificate of the assessment body are  
5051 permitted. The short form report shall indicate all considered clauses and paragraphs of the  
5052 used relevant standards and the corresponding assessment results.

5053 Wireless connection between FS-Master and FS-Device is only permitted if interdependency  
5054 with other wireless connections can be precluded, for example via inductive couplers.

5055 No components in the link between FS-Master and FS-Device are permitted that are storing,  
5056 inserting, or delaying messages.

5057 Manufacturer/vendor of FS-Masters and/or FS-Devices shall define installation constraints for  
5058 the operation of OSSD devices or FS-Devices in OSSDe mode within their safety manuals.

5059 Requirements of IEC 61010-2-201 and IEC 60204-1 with respect to electrical safety  
5060 (SELV/PELV) shall be observed.

5061 The zones and conduit concept of IEC 62443 applies for security and/or the rules of the  
5062 applicable FSCP system.

**R.3 Safety function response time**

5064 Safety manuals of FS-Master shall provide information on how to determine the safety function  
5065 response time for FS-DI and for communication modes (see Clause H.6).

**R.4 Duration of demands**

5067 Short demands of FS-Devices may not trip a safety function due to its chain of independent  
5068 communication cycles across the network. Therefore, a demand shall last for at least two SCL  
5069 (SPDU) cycles.

**R.5 Maintenance and repair**

5071 FS-Devices can be replaced at runtime. Restart of the corresponding safety function is only  
5072 permitted if there is no hazardous process state, after validation of the safety function(s), and  
5073 after an operator acknowledgment.

**R.6 Safety manual**

5075 FS-Masters and FS-Devices shall provide safety manuals according to the relevant national  
5076 and international standards, for example IEC 61784-3:2021.

5077 Manufacturer/vendor of FS-Masters and/or FS-Devices shall specify appropriate mitigation  
5078 means in the safety manual for the deployment of SDCI-FS components in harsh industrial  
5079 environment such as in EMC zones B and C according to IEC 61131-2.

5080 Manufacturer/vendor of FS-Masters and/or FS-Devices shall define all constraints for the  
5081 operation of OSSD devices or FS-Devices in OSSDe mode within their safety manuals.

5082 Manufacturer/vendor of FS-Masters and/or FS-Devices shall define all constraints for the  
5083 operation of FS-Devices in communication mode within their safety manuals such as limitations  
5084 with respect to storing elements, inductive or optical couplers, and alike.

5085 Manufacturer/vendor of FS-Masters and/or FS-Devices shall define the maintenance rules with  
5086 respect to the PFH-Monitor (see Table 40).

5087 Manufacturer/vendor of FS-Devices shall provide the "worst case delay time" (WCDT) value.  
5088 WCDT is defined as the time from triggering an FS-Device (sensor) until its output shows a  
5089 corresponding signal change or Process Data change under worst case conditions. For an FS-  
5090 Device (actuator) it is the time from signal change or Process Data change to the actuator's  
5091 safe state.

5092 Manufacturer/vendor of FS-Devices shall provide the "one fault delay time" (OFDT) value. The  
5093 definition of OFDT is similar to WCDT, however in case of a fault within the FS-Device at the  
5094 time of triggering. Therefore, the value of OFDT is greater than the value of WCDT.

5095 Manufacturer/vendor of FS-Masters shall provide information on how to determine the safety  
5096 function response time as specified in IEC 61784-3:2021 using WCDTs and considering  
5097 OFDTs.

5098  
5099  
5100  
5101  
5102

**Annex S**  
**(informative)**

**Information for test and assessment  
of SDCI-FS components**

5103 Information about test laboratories, which test and validate the conformance of SDCI-FS  
5104 products such as FS-Masters and FS-Devices with IEC 61139-2 can be obtained from the  
5105 National Committees of the IEC or from the following organization:

5106 IO-Link Community  
5107 Ohiostraße 8  
5108 76149 Karlsruhe  
5109 GERMANY  
5110  
5111 Phone: +49 721 9861 970  
5112 Fax: +49 721 9861 9711  
5113 E-Mail: info@io-link.com  
5114 URL: <https://www.io-link.com/>

5115


5116

## Bibliography

5117 [1] ISO/IEC 19505-2:2012, *Information technology – Object Management Group Unified*  
5118 *Modeling Language (OMG UML) – Part 2: Superstructure*5119 [2] Bruce P. Douglass, *Real Time UML – Advances in the UML for Real-Time Systems*, 3rd  
5120 Edition, Addison-Wesley, ISBN 0-321-16076-25121 [3] Chris Rupp, Stefan Queins, die SOPHISTen, *UML 2 glasklar – Praxiswissen für die UML-*  
5122 *Modellierung*. Hanser-Verlag, 2012, ISBN 978-3-446-43057-05123 [4] IEC/TR 62390, *Common Automation Device – Profile Guideline*5124 [5] IEC 60947-5-5, *Low-voltage switchgear and controlgear – Part 5-5: Control circuit*  
5125 *devices and switching elements – Electrical emergency stop device with mechanical*  
5126 *latching function*5127 [6] ZVEI|RECOMMENDATION 2022.01 Position Paper CB24I, Classification of Binary 24V  
5128 Interfaces – Functional Safety aspects covered by dynamic testing:  
5129 [https://www.zvei.org/fileadmin/user\\_upload/Presse\\_und\\_Medien/Publikationen/2022/Ja](https://www.zvei.org/fileadmin/user_upload/Presse_und_Medien/Publikationen/2022/Ja)  
5130 [nuar/24\\_V\\_INTERFACES/24V-Interfaces.pdf](#)5131 [7] IEC 60947-5-2, *Low-voltage switchgear and controlgear – Part 5-2: Control circuit*  
5132 *devices and switching elements – Proximity switches*5133 [8] IO-Link Community, *IO-Link Safety (Single Platform) – Requirements, Use Cases, and*  
5134 *Concept Baseline*, V1.0, November 2014, Order No. 10.0625135 [9] IEC 62769 series: *Field Device Integration (FDI)*5136 [10] FDT Joint Interest Group, *FDT 2.0 – Specification*, V1.0, Order No. 0001-0008-0005137 [11] IEC 60947-5-6, *Low-voltage switchgear and controlgear – Part 5-6: Control circuit*  
5138 *devices and switching elements – DC interface for proximity sensors and switching*  
5139 *amplifiers (NAMUR)*5140 [12] Philip Koopman, *Cyclic Redundancy Code (CRC) Polynomial Selection for Embedded*  
5141 *Networks*, The International Conference on Dependable Systems and Networks, DSN-  
5142 20045143 [13] Philip Koopman, Best CRC Polynomials, <https://users.ece.cmu.edu/~koopman/crc/>  
5144 (Date: 29-Jan-2017)5145 [14] CRC signature calculator for a seed value of "0":  
5146 <https://www.ghsi.de/pages/subpages/Online%20CRC%20Calculation/index.php?Polyno>  
5147 5339%20m=1010011101010111&Message=1%0D%0A (Date: 05-Apr-2018)5148 [15] IO-Link Community, *IO Device Description (IODD)*, V1.1.3, January 2021, Order No.  
5149 10.0125150 [16] IO-Link Community, *IO-Link Common Profile*, V1.1, December 2021, Order No. 10.0725151 [17] IEC 62453 series: *Field device tool (FDT) interface specification*5152 [18] FDT Joint Interest Group, *FDT for IO-Link – Annex to FDT Specification – Based on FDT*  
5153 *Specification Version 1.2.1*, V1.0, Order No. 0002-0013-0005154 [19] IO-Link Community, *IO-Link Design Guideline*, V1.0, November 2016, Order No. 10.9125155 [20] IEC 60947-5-3, *Low-voltage switchgear and controlgear – Part 5-3: Control circuit*  
5156 *devices and switching elements – Requirements for proximity devices with defined*  
5157 *behaviour under fault conditions*

- 5158 [21] IEC 61076-2-113, *Connectors for electronic equipment – Product requirements – Part*  
5159 *2-113: Circular connectors – Detail specification for connectors with M12 screw locking*  
5160 *with power and signal contacts for data transmission with frequency up to 100 MHz*
- 5161 [22] IEC 61508-4:2010, *Functional safety of electrical/electronic/programmable electronic*  
5162 *safety-related systems – Part 4: Definitions and abbreviations*
- 5163 [23] ISO 14119:2013, *Safety of machinery – Interlocking devices associated with guards –*  
5164 *Principles for design and selection*
- 5165 [24] IEC 61131-9:2022, *Programmable controllers – Part 9: Single-drop digital*  
5166 *communication interface for small sensors and actuators (SDCI)*

5167

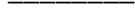



© Copyright by:

IO-Link Community  
c/o PROFIBUS Nutzerorganisation e.V.  
Ohiostraße 8  
76149 Karlsruhe  
Germany  
Phone: +49 (0) 721 / 98 61 97 0  
Fax: +49 (0) 721 / 98 61 97 11  
e-mail: [info@io-link.com](mailto:info@io-link.com)  
<http://www.io-link.com/>



**IO-Link**